

VANKYO

CUSTOMER SUPPORT

North America support@vankyo.com
United Kingdom support.uk@vankyo.com

VANKYO

MATRIXPAD S7/S8

USER GUIDE

Please read this instruction thoroughly before using this product and keep it for future reference.

V3.01

English01-15

ENGLISH

1

2

3

4

5

6

7

8

9

10

11

12

1

2

3

4

5

6

7

8

9

10

11

12

1. Back Camera

2. Micro USB Port

3. MicroSD Card Slot

4. NULL

5. Headphone Jack

6. Front-facing Camera

7. Volume +

8. Volume -

9. Power On/Off

10. Reset

11. Microphone

12. Speaker

1. Back Camera

2. Micro USB Port

3. MicroSD Card Slot

4. NULL

5. Headphone Jack

6. Front-facing Camera

7. Volume +

8. Volume -

9. Power On/Off

10. Reset

11. Microphone

12. Speaker

Note: SIM-CARD slot is UNAVAILABLE.

EN

GETTING STARTED

Power On/Off

* Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.
* Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Power off** to turn off the tablet.
* Press and hold the power button for 10s to do a forced reboot when it's frozen.

Battery

* A rechargeable Li-ion battery is installed in the tablet.
* We suggest you drain the battery completely once a month if only use your tablet occasionally.
* DO NOT dispose of tablet in a fire.

Sleep Mode

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is ON; press again to wake it up.

Tip

Go to **Settings** > **Display** > **Sleep** to set the time of entering the **Sleep Mode**.

Screenshot

* Press the Volume- button and the **Power On/Off** button together to capture a picture.
* Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Screenshot** to capture a screenshot.

HOME SCREEN

Icons on the Bottom Menu

1. Back

2. Home Screen

3. Recent Activities

Home Settings, Widgets and Wallpapers

Tap and hold the empty section of a Home screen, **Home settings**, **Widgets** and **Wallpapers** will be displayed.

EN

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access **Quick Settings**.

Wi-Fi

Do not disturb

Turn on/off the Auto-rotate of the screen

Airplane Mode

Eye comfort

Network & internet

Connected devices

Apps & notifications

EN

Network & internet

Connected devices

Apps & notifications

EN

Battery

Display

Scheduled power on/off

Navigation bar

Audio profiles

Storage

Security & location

EN

Accounts

Accessibility

Digital Wellbeing & parental controls

Google

System

EN

NETWORK CONNECTION

Wi-Fi Connection

1. Tap **Network & internet** and turn on the Wi-Fi. All the Wi-Fi connections available will be listed.

2. Select your Wi-Fi and input the correct password.

EN

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen.

2. Log into your google account, search and download the App you need.

App Management

Move the App

Remove the App from the Home screen

Uninstall the App

Clear the Cache of the App

EN

USB computer connection

Connecting to an External Device

1. Install a microSD card into the microSD card slot and go to **Quick Settings**.

2. Tap **SET UP**.

3. Set the microSD card as a portable storage by selecting **Portable storage**. Enter microSD Card storage to move files between the card and tablet.

EN

How will you use this SD card?

Use for extra storage

Use for portable storage

EN

TRUBLESHOOTING

Q1. The tablet doesn't power on.

Q2. The tablet doesn't charge.

Q3. Error message occurs during the operation.

Q4. The tablet cannot be detected by the computer.

Q5. The tablet cannot connect to the Wi-Fi.

Q6. The storage space of the tablet is not enough.

Q7. The tablet comes with scratches on the screen.

EN

Q8. The screen is unresponsive.

FCC Statement

NOTE:

EN

IC statement

EN

CAUTION

RECYCLING

EN

RECYCLING

EN

RECYCLING