



FLOATING TUNES

Inflatable Floating Bluetooth Speakers



SKU: 344344

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

1

Getting Started

- Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Inflatable Floating Bluetooth Speaker
- USB charging cable
- Air pump
- Instruction Manual

Key Features


- Inflatable Floating Bluetooth Speaker
- Rechargeable floating speaker, pair it with any Bluetooth device and play your favorite tunes to enjoy your party
- Can be used as floating speaker at beach or pool or tub
- Wireless speaker can be removed to make it a cup-holder
- Air pump & micro USB cable included
- IP67 rated

Safety Instructions

- Keep the unit away from heat sources.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Dry your hands and speaker before charging.

2

Description of Parts

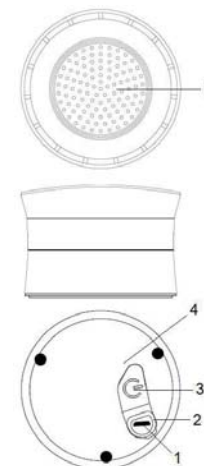

Number	Description
1	Charging Port (inside)
2	Rubber Cover (for water resistant)
3	Power ON/OFF/Play/Pause/Phone Button
4	LED Indicator
5	Speaker/Built-in Microphone

INSTRUCTIONS FOR USE

Inflating the Plastic Hug

Inflate the Plastic Hug completely by the included air pump.

Charging the Bluetooth Speaker

For best results, fully charge the unit before use.

- Plug the Micro USB end of the included USB charging cable into the charging port of the speaker. Plug the other end into a USB port on your computer or suitable USB power source.

3

2. LED Indicator turns RED while charging, and turns off when fully charged

Note: Before using the unit for the first time, please charge it for around 1-2 hours or until the LED Indicator turns off.

Turn On/Off the Speaker

Press and hold the Power ON/OFF button for 2-3 seconds to turn on/off the unit.

Pairing your device with the Speaker –

Your **Bluetooth Speaker** can stream wireless audio from any Bluetooth enabled device within the range of up to 10 meters. Simply follow the below steps.

1. Press and hold the Power ON/OFF button for 2-3 seconds to turn on/off the unit.
2. An indication tone would be heard, and the LED will flash blue rapidly, indicating that the speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. Bluetooth Speaker would appear as “Floating Fun”, in the list of searched devices. Select it from the available list of devices.
6. If required, enter the password ‘0000’ to confirm pairing.
7. Once paired successfully, another indication tone would be heard, and blue LED light will stay on.
8. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Adjust volume from the source device.
Pause	Playing music	Short press Play/Pause button once to pause music
Play	Pause	Short press Play/Pause button once to resume music

Please Note

- ☒ Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- ☒ Certain functions and indication tone maybe vary depending on your mobile phone.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result.

Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version: 4.2

Speaker size: Dia. 74.6mm x 53mm H

Speaker weight: ~138g

Power input: DC 5V

Charging time: 1-2 hours

Play time: up to 2 hours (moderate volume)

Bluetooth range: 10m

Built-In Rechargeable Lithium Battery: 3.7V 400mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge battery.
Sound distortion	Volume level too high	Decrease the volume.

Information on Disposal for Users of WEEE

The wheelie bin symbol on the product(s) and / or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.

Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point

Produced in PRC for

The Range

Plymouth

PL6 SZD



FCC ID: 2AVHG-344344

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.