

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

### To install Kies (PC Sync) Kies

1. Download the latest version of Kies from the Samsung website ([www.samsungmobile.com](http://www.samsungmobile.com)) and install it on your PC.
2. In Menu mode, select **Settings** → **Wireless and network** → **USB settings** → **Samsung Kies**.
3. Using a PC data cable, connect your device to your PC.  
Refer to the Kies help for more information.

Samsung GALAXY **Tab** **GT-P1010**  
user manual



# Using this manual

Congratulations on your purchase of the Samsung P1010. This powerful, “go anywhere” device, puts the best of the web and mobile computing at your fingertips in a lightweight, highly versatile platform that fits your active lifestyle. Built on the Google Android operating system, the P1010 gives you access to thousands of useful and entertaining applications to enrich your mobile web experience.

With integrated wireless access and a responsive touch screen, you can read books and newspapers on the go; stay up-to-date on the latest news, sports, and weather; manage your multimedia and business files; and browse the web for maps, business locations, and more.

## Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this user manual may differ in appearance from the actual product.
- Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to [www.samsungmobile.com](http://www.samsungmobile.com) for the latest version of the user manual.

- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system.
- Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications.
- Samsung is not liable for performance issues or incompatibilities caused by user editing of registry settings.
- You may upgrade your mobile device's software by accessing [www.samsungmobile.com](http://www.samsungmobile.com).
- Sound sources, wallpapers, and images provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website [opensource.samsung.com](http://opensource.samsung.com).
- Please keep this manual for future reference.

## Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



**Warning**—situations that could cause injury to yourself or others



**Caution**—situations that could cause damage to your device or other equipment



**Note**—notes, usage tips, or additional information



**Refer to**—pages with related information; for example: ► p.12 (represents “see page 12”)



**Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Settings** → **Wireless and network** (represents **Settings**, followed by **Wireless and network**)



**Square brackets**—device keys; for example: [⏻] (represents the Power key)

## Copyright

Copyright © 2010 Samsung Electronics

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

## Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- The Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™, and Google Talk™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Windows Media Player® is a registered trademark of Microsoft Corporation.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

- DivX®, DivX Certified®, and associated logos are trademarks of DivX, Inc. and are used under license. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274



- All other trademarks and copyrights are the property of their respective owners.



## ABOUT DIVX VIDEO

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

DivX Certified® to play DivX® video up to HD 720p, including premium content

May play DivX® video up to HD 1080p  
(LCD resolution : 1024x600)

## ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu.

Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

# Contents

## Assembling ..... 8

Unpack ..... 8

Charge the battery ..... 8

Insert a memory card (optional) ..... 9

## Getting started ..... 11

Turn your device on and off ..... 11

Get to know your device ..... 11

Use the touch screen ..... 14

Get to know the home screen ..... 15

Access applications ..... 16

Customise your device ..... 17

Enter text ..... 19

## Web ..... 22

Browser ..... 22

Readers Hub ..... 25

News and Weather ..... 25

Samsung Apps ..... 25

Market ..... 26

YouTube ..... 26

Media Hub ..... 27

Daily Briefing ..... 27

Maps ..... 28

Latitude ..... 28

Places ..... 29

Navigation ..... 29

Google Search ..... 29

## Communication ..... 30

Google Mail ..... 30

Email ..... 31

Talk ..... 32

## Entertainment ..... 33

Music Player ..... 33

Camera ..... 34

Video ..... 39

Gallery ..... 40

## Personal information ..... 41

Contacts ..... 41

Calendar ..... 42

Memo ..... 43

## Connectivity ..... 44

PC connections ..... 44

Wi-Fi ..... 45

Bluetooth ..... 46

AllShare ..... 47

GPS ..... 48

TV connections (TV out mode) ..... 49

## Tools ..... 50

eBook ..... 50

ThinkFree Office ..... 51

My files ..... 51

Digital Frame ..... 52

Alarm Clock ..... 53

Task Manager ..... 54

World Clock ..... 54

Voice Search ..... 54

|                           |           |
|---------------------------|-----------|
| <b>Settings</b>           | <b>55</b> |
| Access the Settings menu  | 55        |
| Wireless and network      | 55        |
| Sound settings            | 55        |
| Display settings          | 56        |
| Location and security     | 56        |
| Applications              | 57        |
| Accounts and sync         | 57        |
| Privacy                   | 57        |
| SD card and phone storage | 57        |
| Search                    | 58        |
| Locale and text           | 58        |
| Voice input and output    | 59        |
| Accessibility             | 59        |
| Date and time             | 60        |
| About phone               | 60        |

|                           |           |
|---------------------------|-----------|
| <b>Troubleshooting</b>    | <b>61</b> |
| <b>Safety precautions</b> | <b>63</b> |
| <b>Index</b>              | <b>69</b> |

# Assembling

## Unpack

Check your product box for the following items:

- Mobile device
- USB power adapter
- PC data cable
- Headset
- Quick start guide



Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.



- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.
- You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

## Charge the battery

Your device has a built-in battery. Before using the device for the first time, you must charge the battery.



 
Use only Samsung-approved chargers. Unauthorised chargers can cause batteries to explode or damage your device.



- Charge the battery only with the supplied charger. You cannot charge the battery with the PC data cable.
- When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon  will also be empty and turn red. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.

1

Connect the PC data cable to the USB power adapter and then plug the end of the PC data cable into the multifunction jack.

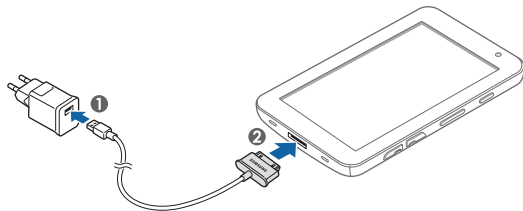

 Improperly connecting the travel adapter can cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

2 Plug the USB power adapter into a power outlet.

-  • You can use the device while it is charging, but it may take longer to fully charge the battery.
- While the device is charging, the touch screen and the touch keys may not function due to an unstable power supply. If this happens, unplug the USB power adapter from the power outlet or unplug the PC data cable from the device.
- While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
- If your device is not charging properly, bring your device and the charger to a Samsung Service Centre.

3 When the battery is fully charged (the battery icon is no longer moving), unplug the USB power adapter and PC data cable from the device and then from the power outlet.

-  To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.


## Insert a memory card (optional)

 To store additional files, you must insert a memory card. Your device accepts microSD™ or microSDHC™ memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type).

 Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.

-  • Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- When you insert a memory card in your device, the file directory of the memory card will appear in the external\_sd folder under the internal memory.

- 1 Open the cover to the memory card slot.
- 2 Insert a memory card with the gold-coloured contacts facing down.

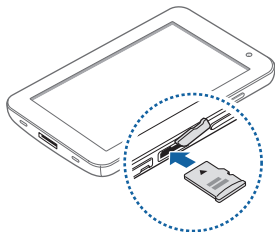

- 3 Push the memory card in the memory card slot until it locks in place.
- 4 Close the memory card cover.

## ➤ Remove the memory card

Before removing a memory card, first unmount it for safe removal.

- 1 In Menu mode, select **Settings** → **SD card and phone storage** → **Unmount SD card**.
- 2 Open the memory card cover.

- 3 Push the memory card gently until it disengages from the device.
- 4 Pull the memory card out of the memory card slot.

⚠ Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

## ➤ Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In Menu mode, select **Settings** → **SD card and phone storage** → **Unmount SD card** → **Format SD card** → **Format SD card** → **Erase everything**.

⚠ Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

# Getting started

## Turn your device on and off

To turn on your device,

- 1 Press and hold [⏻].
- 2 If you turn on your device for the first time, follow the on-screen instructions to set up your device.

To turn off your device, press and hold [⏻] and then select **Power off** → **Yes**.

## › Switch to Flight mode

In Flight mode, you can disable all wireless connections and use non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

 
To activate or deactivate Flight mode, press and hold [⏻] and then select **Flight mode**.

## › Switch to Silent mode

- Press and hold [⏻] and then select **Silent mode**.
- Open the shortcuts panel from the top of the screen and select **Silent**.

## Get to know your device

### › Device layout

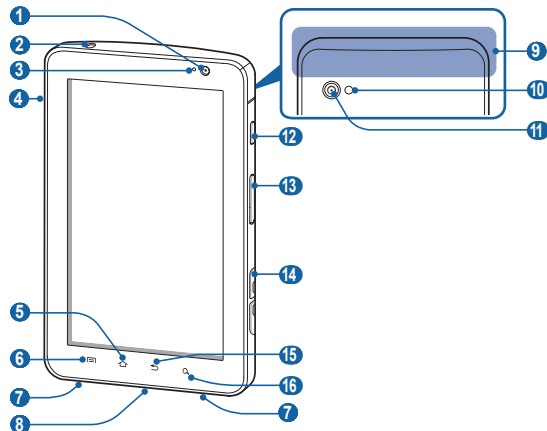

| Number | Function           |
|--------|--------------------|
| 1      | Front camera lens  |
| 2      | Headset jack       |
| 3      | Light sensor       |
| 4      | Mouthpiece         |
| 5      | Home key           |
| 6      | Menu key           |
| 7      | Speaker            |
| 8      | Multifunction jack |
| 9      | Internal antenna   |
| 10     | Flashbulb          |
| 11     | Rear camera lens   |
| 12     | Power key          |
| 13     | Volume key         |
| 14     | Memory card slot   |
| 15     | Back key           |
| 16     | Search key         |

## > Keys

| Key                                                                               | Function                                                                                                                                                     |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Power<br>Turn on the device (press and hold); Access the quick menus (press and hold); Lock the touch screen.                                                |
|  | Volume<br>Adjust the device's volume.                                                                                                                        |
|  | Menu<br>Open a list of options available on the current screen.                                                                                              |
|  | Home<br>Return to the home screen; Open the list of recent applications (press and hold).                                                                    |
|  | Back<br>Return to the previous screen.                                                                                                                       |
|  | Search<br>Open the Google search application; Open the search input window while using some applications; Launch the voice command feature (press and hold). |

## Indicator icons



Icons shown on the display may vary depending on your region or service provider.

| Icon | Definition                  |
|------|-----------------------------|
|      | No signal                   |
|      | Signal strength             |
|      | WLAN activated              |
|      | Bluetooth activated         |
|      | Bluetooth headset connected |
|      | Receiving GPS data          |
|      | Synchronised with the web   |
|      | Uploading data              |
|      | Downloading data            |
|      | Connected to PC             |
|      | New email message           |
|      | Alarm activated             |
|      | Event notification          |

| Icon | Definition                               |
|------|------------------------------------------|
|      | Roaming (outside of normal service area) |
|      | Silent mode activated                    |
|      | Vibration mode activated in Silent mode  |
|      | Flight mode activated                    |
|      | Music playback in progress               |
|      | Error occurred or caution required       |
|      | Battery power level <sup>1</sup>         |
|      | Unable to charge                         |
|      | Current time                             |

1. If you use a charger that is not approved by Samsung, this indicator will not appear.

## Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.



- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

You can control your touch screen with the following actions:

- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.

- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos.

### › Rotate the touch screen

Your device has a built-in motion sensor that detects its orientation. If you rotate the device, the interface will automatically rotate according to the orientation.

To set the interface to keep the orientation, open the shortcuts panel from the top of the screen and select **Orientation lock**.

### › Lock or unlock the touch screen

When you do not use the device for a specified period, your device turns off the touch screen and automatically locks the touch screen to prevent any unwanted device operations. To manually lock the touch screen, press [⓪].

To unlock, turn on the screen by pressing [⓪], and drag  right until it reaches the dot. If you set a screen lock, you need to enter your PIN or password, or draw a pattern. ► p. 18

## Get to know the home screen

When the device is in Idle mode, you will see the home screen. From the home screen, you can view your device's status and access Menu mode. Scroll left or right to a panel of the home screen.



The above screen may differ depending on your region or service provider.

| Number | Function                                                                           |
|--------|------------------------------------------------------------------------------------|
| 1      | Display indicator icons and your device's current status.                          |
| 2      | Search the web with the Google Search widget.                                      |
| 3      | Launch applications with shortcuts.                                                |
| 4      | Open the web browser.                                                              |
| 5      | Access Menu mode.                                                                  |
| 6      | Select a dot at the top of the screen to move to the corresponding panel directly. |
| 7      | Launch the email application.                                                      |

### › Add items to the home screen

You can customise the home screen by adding shortcuts to applications or items in applications, widgets, or folders.

To add an item to the home screen,

- 1 In Idle mode, press [] → **Add**.
- 2 Select an item category.
  - **Widgets:** Add widgets. Widgets are small applications that provide convenient functions and information on your idle screen.

- **Shortcuts:** Add shortcuts to items, such as applications, bookmarks, and contacts.
- **Folders:** Create a new folder or add folders for your contacts.
- **Wallpapers:** Set a background image.

3 Select an item to add to the home screen.

## ➤ Move items on the home screen

1 Tap and hold an item to move until the item appears gray.

2 Drag the item to the location you want.

## ➤ Remove items from the home screen

1 Tap and hold an item to remove.  
The trash bin appears at the bottom of the home screen.

2 Drag the item to the trash bin.

3 When the item and the trash bin turn red, release the item.

## ➤ Add a shortcut to an application

1 In Menu mode, tap and hold an application icon. The shortcut icon for the application is added to the home screen.

2 Move the icon to the location you want or move it to another panel of the home screen.

## ➤ Use the shortcuts panel

In Idle mode or while using an application, tap the indicator icons area and drag your finger down to open the shortcuts panel. To hide the list, drag the bottom of the list up.

You can view the device's current status and use the following options:

- **Wi-Fi:** Activate or deactivate the WLAN feature.
- **Bluetooth:** Activate or deactivate the Bluetooth feature.
- **GPS:** Activate or deactivate the GPS feature.
- **Silent:** Activate or deactivate Silent mode.
- **Orientation lock:** Activate or deactivate the rotation lock.



Available options may vary depending on your region or service provider.

## Access applications

1 In Idle mode, select **Applications** to access Menu mode.

2 Scroll left or right to another menu screen.

3 Select an application.

4 Press [↩] to return to the previous screen; Press [⬆] to return to the home screen.

## › Organise applications

You can reorganise the applications in the application list by changing their order.

- 1 In Menu mode, press [≡] → **Edit**.
- 2 Tap and hold an application.
- 3 Drag the application icon to the location you want.
- 4 Press [≡] → **Save**.

## › Access recent applications

- 1 Press and hold [⬅] to open the list of applications you have accessed recently.
- 2 Select an application.

## › Use the task manager

Your device is a multitasking device. It can run more than one application at the same time. However, multitasking may cause hang-ups, freezing, memory problems, or additional power consumption. To avoid these problems, end unnecessary programs using the task manager.

- 1 In Menu mode, select **Task Manager** → **Active applications**.
- 2 To close an application, select **End**.  
To close all active applications, select **End all**.

## Customise your device

Get more from your device by customising it to match your preferences.

### › Change the language of the display

- 1 In Menu mode, select **Settings** → **Locale and text** → **Select locale**.
- 2 Select a language you want.

### › Set the current time and date

- 1 In Menu mode, select **Settings** → **Date and time**.
- 2 Select your time zone, set the time and date, and change other options.

### › Select a wallpaper for the home screen

- 1 In Idle mode, press [≡] → **Wallpaper**.
  - 2 Select an image folder → an image.
  - 3 Select **Save** or **Set wallpaper**.
-  Samsung is not responsible for any use of default images or wallpapers provided on your device.

### › Activate animation for switching windows

You can set a transition effect between windows while using the device.

- 1 In Menu mode, select **Settings** → **Display settings** → **Animation**.
- 2 Select an animation option.

## ► Adjust the brightness of the display

- 1 In Menu mode, select **Settings** → **Display settings** → **Brightness**.
  - 2 Clear the check box next to **Automatic brightness**.
  - 3 Drag the slider to adjust the level of brightness.
  - 4 Select **OK**.
-  The brightness level of the display will affect how quickly the device consumes battery power.

## ► Set a screen lock

You can lock the touch screen with an unlock pattern or password to prevent unauthorised people from using the device without your permission.

- 
- Once you set a screen lock, your device will require an unlock code each time you turn it on or unlock the touch screen.
  - If you forget your PIN or password, bring your device to a Samsung Service Centre to reset it. Before bringing your device to a Samsung Service Centre, remember to make backup copies of all important data stored on your device.
  - Samsung is not responsible for any loss of security codes or private information or other damages caused by illegal software.

## Set an unlock pattern

- 1 In Menu mode, select **Settings** → **Location and security** → **Set screen lock** → **Pattern**.
- 2 See the on-screen instructions and example patterns and select **Next** (if necessary).
- 3 Draw a pattern by dragging your finger to connect at least 4 dots.
- 4 Select **Continue**.
- 5 Draw the pattern again to confirm.
- 6 Select **Confirm**.

## Set an unlock PIN code

- 1 In Menu mode, select **Settings** → **Location and security** → **Set screen lock** → **PIN**.
- 2 Enter a new PIN (numeric) and select **Continue**.
- 3 Enter the PIN again and select **OK**.

## Set an unlock password

- 1 In Menu mode, select **Settings** → **Location and security** → **Set screen lock** → **Password**.
- 2 Enter a new password (alphanumeric) and select **Continue**.
- 3 Enter the password again and select **OK**.

## Enter text

You can enter text by selecting characters on the virtual keypad.

-  You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.  
► p. 58

### ► Change the text input method

Tap and hold the text input field and select **Input method** → a text input method (Swype or Samsung keypad).

 
### ► Enter text using the Swype keyboard

- 1 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen.
- 2 Continue until you have finished the word.



- 3 Release the finger on the last character.
  - 4 When the word displays correctly, select  to insert a space. If the correct word does not display, select an alternative word from the list that appears.
  - 5 Repeat steps 1-4 to complete your text.
-  You can also tap the keys to enter text.
- You can tap and hold a key to enter characters on the upper half of the key. When you tap and hold a key until the character list appears, you can enter special characters, symbols, and numbers.

You can also use the following keys:

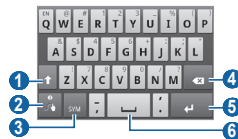


| Number | Function                                                               |
|--------|------------------------------------------------------------------------|
| 1      | Change case.                                                           |
| 2      | Access the Swype tip screen; Open the help information (tap and hold). |
| 3      | Switch between Symbol mode and ABC/Number mode.                        |
| 4      | Delete characters.                                                     |

| Number | Function          |
|--------|-------------------|
| 5      | Start a new line. |
| 6      | Insert a space.   |

## ► Enter text using the Samsung keypad

 Enter text by selecting alphanumeric keys and you can use the following keys:

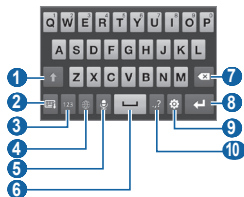

| Number | Function                                        |
|--------|-------------------------------------------------|
| 1      | Change case.                                    |
| 2      | Hide the keypad.                                |
| 3      | Switch between Number/Symbol mode and ABC mode. |


| Number | Function                                                                                                                                                                                                                                                                                       |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4      | Change the input language; This icon is available only when you set more than 2 languages for text input.<br>► p. 59                                                                                                                                                                           |
| 5      | Enter text by voice; This icon is available only when you activate the voice input feature for the Samsung keypad.<br>► p. 59<br> This feature may be unavailable depending on the selected input language. |
| 6      | Insert a space.                                                                                                                                                                                                                                                                                |
| 7      | Clear your input.                                                                                                                                                                                                                                                                              |
| 8      | Start a new line.                                                                                                                                                                                                                                                                              |
| 9      | Access the keypad settings; Change the text input method (tap and hold).                                                                                                                                                                                                                       |
| 10     | Enter frequently used symbols.                                                                                                                                                                                                                                                                 |

## ► Copy and paste text

 While you are entering text, you can use the copy and paste feature to use text in other applications.

- 1 Place the cursor where you want to start.
- 2 Tap and hold the text input field.
- 3 Select **Select text** from the option list.

- 4 Tap on the place where you want to end.
- 5 Tap and hold the highlighted text.
- 6 Select **Copy** to copy, or **Cut** to cut the text onto the clipboard.
- 7 In another application, tap and hold the text input field.
- 8 Select **Paste** to insert the text from the clipboard into the text field.

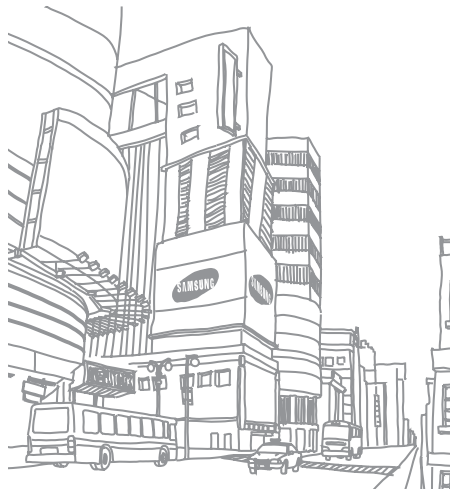

# Web

Web services require a data connection. Contact your operator to choose the best data plan.

## Browser

Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading data. For details, contact your service provider.
- The web browser menu may be labelled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

### › Browse web pages

- 1 In Menu mode, select **Browser** to launch your homepage.
- To access a specific web page, select the URL input field, enter the web address of the web page, and select .

2 Navigate web pages with the following keys:



The above screen may differ depending on your region or service provider.

| Number | Function                                                                                                                                                                       |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | Move backward or forward to web pages in history; View the recent internet history (tap and hold).                                                                             |
| 2      | Reload the current web page; While the device is loading web pages, this icon changes to  . |
| 3      | Open a new window or switch between the currently open windows.                                                                                                                |
| 4      | Open a list of saved bookmarks, frequently visited pages, and recent internet history.                                                                                         |

While browsing the web page, use the following options:

- To bookmark the current web page, press [≡] → **Add bookmark**.
- To search for text on the web page, press [≡] → **Find on page**.
- To view the items downloaded from the web, press [≡] → **Download manager**.
- To adjust the brightness of the screen, press [≡] → **Brightness setting**.
- To customise browser settings, press [≡] → **Settings**.
- To print the current web page or screen via a connected printer, press [≡] → **More** → **Print**. Your device is compatible only with Samsung printers.
- To send the web address of the web page to others, press [≡] → **More** → **Share page**.
- To view page details, press [≡] → **More** → **Page info**.

## ➤ Search for information by voice



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Browser**.
- 2 Select the URL input field.
- 3 Select  and say a keyword into your device's microphone.  
The device searches for information and web pages related with the keyword.

## ➤ Open multiple pages

You can open multiple pages and switch back and forth between them.

- 1 In Menu mode, select **Browser**.
- 2 Select .  
 The number displayed on the icon means the currently open windows. You can have up to 8 windows.
- 3 Select  to open a new window.
- 4 Access another web page on the new window.
- 5 To switch back and forth between currently open windows, select  and select a web page to retrieve.

## ➤ Bookmark your favourite web pages

If you know the web address of the web page, you can manually add a bookmark.

### Add a bookmark

- 1 In Menu mode, select **Browser**.
- 2 Press [≡] → **Add bookmark**.
- 3 Enter a page title and a web address.  
To bookmark the web page you were viewing, skip to step 5.

4 Select the **Default** drop-down menu and select a bookmark folder (if necessary).

5 Select **OK**.

To use bookmark options, select  → **Bookmarks**, and tap and hold a bookmark:

- To open the web page in the current window, select **Open**.
- To open the web page in a new window, select **Open in new window**.
- To add the bookmark shortcut to the home screen, select **Add shortcut to Home**.
- To send the web address of the web page to others, select **Share link**.
- To copy the web address of the web page, select **Copy link URL**.
- To use the web page as your homepage of the browser, select **Set as homepage**.
- To delete the bookmark, select **Delete bookmark**.

## Edit bookmarks

To create a new bookmark folder,

1 In Menu mode, select **Browser**.

2 Select  → **Bookmarks** → **Edit** → **New folder**.

3 Enter a name for the bookmark folder and select **OK**.

To delete bookmark folders or bookmarked web pages,

1 In Menu mode, select **Browser**.

2 Select  → **Bookmarks** → **Edit** → **Delete**.

3 Select bookmark folders or bookmarked web pages, and select **Delete** → **Delete**.

## ➤ Add an RSS feed address

1 In Menu mode, select **Browser**.

2 Move to a web page that has an RSS feed.

3 Select  in the URL input field.

4 Select an RSS feed to add.

5 Subscribe to the RSS feed.

When the subscribed feed is updated, you are notified of the update.

## ➤ Access frequently visited pages or recent history

1 In Menu mode, select **Browser**.

2 Select  → **Most visited** or **History**.

3 Select a web page to access.

## Readers Hub

Learn to use the integrated readers hub for accessing various reading materials.



Some features may be currently unavailable.

- 1 In Menu mode, select **Readers Hub**.
- 2 If you are launching this application for the first time, read the disclaimer information and select **Accept**.
- 3 Select an image of reading material.
- 4 Search for and download reading material from the online store.

## News and Weather

Learn to view the weather information and read top news and other news articles.

### ► View the weather information

- 1 In Menu mode, select **News and Weather**.
- 2 Select **Weather** at the top of the screen.  
Your device searches for your current location and displays the weather information.



You can change the location to view the weather information in another region. Press [≡] → **Settings** → **Weather settings** and clear the check box next to **Use my location**. Then select a location in **Set location**.

### ► Read news articles

- 1 In Menu mode, select **News and Weather**.
  - 2 Select a news topic at the top of the screen.
  - 3 Select an article to open.
-  To add news topics, press [≡] → **Settings** → **News settings** → **Select news topics**.

## Samsung Apps

Samsung Apps allows you to simply and easily download an abundance of applications directly to your device. Featuring a wealth of games, news, reference, social networking, navigation, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience.

Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better.



- The feature may be unavailable depending on your region or service provider.
- For details, please visit [www.samsungapps.com](http://www.samsungapps.com).

- 1 In Menu mode, select **Samsung Apps**.
- 2 Search for and download applications as desired.

## Market

Based on the Android platform, your device's functionality can be extended by installing additional applications. Android Market provides you an easy and quick way to shop for games and mobile applications.



- This feature may be unavailable depending on your region or service provider.
- Your device will save user files from downloaded applications to the internal memory.

### ➤ Download and install an application

- 1 In Menu mode, select **Market**.
- 2 If you are launching this application for the first time, read the terms and conditions and select **Accept**.
- 3 Select an item category → an item.
- 4 Select **Install** (for free items) or **Buy**.  
If you select **Install**, select **OK** to download the item immediately.  
If you select **Buy**, you need to enter your credit card information. Follow the on-screen instructions.

### ➤ Uninstall an application

- 1 In Menu mode, select **Market**.
- 2 Press [≡] → **Downloads**.
- 3 Select the item you want to delete.
- 4 Select **Uninstall** → **OK**.

## YouTube

YouTube is a free online video streaming service. Learn to view and upload videos via YouTube.



- This feature may be unavailable depending on your region or service provider.

### ➤ Watch videos

- 1 In Menu mode, select **YouTube**.
- 2 Select a video from the list.
- 3 Rotate the device anti-clockwise to landscape view.

4 Control playback with the following keys:



| Number | Function                                         |
|--------|--------------------------------------------------|
| 1      | Move to a point of the file by dragging the bar. |
| 2      | Change the quality of the display.               |

## › Upload videos

- 1 In Menu mode, select **YouTube**.
- 2 Press [F1] → **Upload** and select a video. Skip to 8.  
If you want to upload new videos, select  to turn on the camera.
- 3 Rotate the device anti-clockwise to landscape view.
- 4 Aim the lens at the subject and make any adjustments.
- 5 Select  to start recording.
- 6 Select  to stop recording.

- 7 Select **Save** to upload the video that you have recorded.
- 8 Enter your user name and password and select **Sign in** (if necessary).
- 9 Enter details of the upload and select **Upload**.

## Media Hub

Learn to use the integrated media hub to access various multimedia. In Menu mode, select **Media Hub**.



Some features may be currently unavailable.

## Daily Briefing

Learn to get weather forecast, stock information, news, and schedules for today.

### › Customise daily briefing settings

- 1 In Menu mode, select **Daily Briefing**.
- 2 Press [F1] → **Settings** → a briefing service.
- 3 Adjust the following settings to customise the daily briefing screens:

| Option       | Function                             |
|--------------|--------------------------------------|
| Select city  | Add cities for weather forecast.     |
| Select stock | Add companies for stock information. |

| Option              | Function                                                                            |
|---------------------|-------------------------------------------------------------------------------------|
| Widget auto refresh | Set the daily briefing screens to be automatically updated with latest information. |
| Widget auto scroll  | Set the daily briefing widget to automatically show more information.               |
| Unit                | Select a temperature unit to use for weather forecast.                              |

## › View daily briefing

- 1 In Menu mode, select **Daily Briefing**.
- 2 Select  to refresh the information.
- 3 Scroll left or right to view information.

## Maps

Learn to use Google Maps™ to find your location, search the map for streets, cities, or countries, and get directions.

### › Search for a specific location

- 1 In Menu mode, select **Maps**.  
The map will display your current location.
- 2 Press [] → **Search**.

- 3 Enter a keyword for the location and select .
  - To search for a location by voice, select .
  - To zoom in or out, select  or .
  - To add layers to the map, press [] → **Layers** → an option.

### › Get directions to a specific destination

- 1 In Menu mode, select **Maps**.
- 2 Press [] → **Directions**.
- 3 Enter the addresses of the starting location and the ending location.  
To enter an address from your contact list or point the location on the map, select  → **Contacts** or **Point on map**.
- 4 Select a travel method (car, bus, or walk) and select **Go**.
- 5 Select a travel route to view details of your trip (if necessary).
- 6 Select **Show on map**.
- 7 When you are finished, press [] → **More** → **Clear Map**.

## Latitude

Learn to share your location with your friends and view friends' locations via Google Latitude™.



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Latitude**.  
The device automatically joins Latitude.
- 2 Press [≡] → **Add friends** → **Select from Contacts** or **Add via email address**.
- 3 Select friends you want to add or enter an email address, and select **Add friends** → **Yes**.  
When your friend accepts your invitation, you can share locations.
- 4 Press [≡] → **See map**.  
Your friends' locations are marked with their photos on the map.

## Places



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Places**.
- 2 Select a category.  
Your device searches for places around your current location that are related to the category.
- 3 Select a place name to view its details.
- 4 To view the place on the map, select .  
To view the route to the place, select .

## Navigation

Learn to use the GPS navigation system to find and show your destination with voice guidance.



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Navigation**.
- 2 Enter your destination by using one of the following methods:
  - **Speak Destination:** Speak your destination such as "Navigate to *destination*."
  - **Type Destination:** Enter your destination with the virtual keypad.
  - **Contacts:** Select your destination from addresses of your contacts.
  - **Starred Items:** Select your destination from the list of your starred places.
- 3 Select **Install** to use voice-guided navigation.
- 4 To end the navigation, press [≡] → **Exit Navigation**.

## Google Search

You can search for applications in your device and specific data on the web.

- 1 In Menu mode, select **Google Search**.
- 2 Enter a letter or a word of the data to search.
- 3 Select the item's name you want to access.

# Communication

## Google Mail

You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and unread messages display in bold. If you have labelled a messages, its label appears in a coloured rectangle on the message.



- This feature may be unavailable depending on your region or service provider.
- This Google Mail menu may be labelled differently depending on your service provider.

### ➤ Send an email message

- 1 In Menu mode, select **Google Mail**.
- 2 Press [≡] → **Compose**.
- 3 Enter a name or address in the recipient field.
- 4 Enter a subject and message.
- 5 To attach an image file, press [≡] → **Attach** → a file.
- 6 Press [≡] → **Send** to send the message.

### ➤ View an email message

- 1 In Menu mode, select **Google Mail**.
- 2 Select an email message.

From the message view, use the following options:

- To reply to the message, select ↩.
- To reply to the message including all recipients, select ◀ → **Reply all**.
- To forward the message to other people, select ◀ → **Forward**.
- To add a star to the message, select ☆.
- To view an attachment, select **Preview**. To save it to your device, select **Download**.
- To archive the message, select **Archive**.
- To delete the message, select **Delete**.
- To move to the previous or next message, select ◀ or ▶.

### ➤ Organise email by labels

You can organise your email by labelling your messages or adding stars to mark important messages. You can sort messages by label filter.

#### Add a label to a message

- 1 From the Inbox screen, tap and hold a message.
- 2 Select **Change labels**.
- 3 Select a label to add and select **OK**.

## Add a star to a message

- 1 From the Inbox screen, tap and hold a message.
- 2 Select **Add star**. The star icon next to the message is activated.

## Filter messages

- 1 From the Inbox screen, press [≡] → **Go to labels**.
- 2 Select the label of the messages you want to view.

## Email

Learn to send or view email messages via your personal or company email account.

### ➤ Set up an email account

- 1 In Menu mode, select **Email**.
- 2 Enter your email address and password.
- 3 Select **Next** (for general email accounts) or **Manual setup** (for other company email accounts).
- 4 Follow the on-screen instructions.
- 5 To add more email accounts, press [≡] → **Account manager** → **Add account** and repeat steps 2-4 above.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts; Select an account name at the top left of the screen and select one you want to retrieve messages from.

### ➤ Send an email message

- 1 In Menu mode, select **Email** → an email account.
- 2 Select .
- 3 Add recipients of your message.
  - Enter email addresses manually, separating them with a semicolon or a comma.
  - Select email addresses from the lists by selecting .
- 4 Select the Cc/Bcc field and add more recipients.
- 5 Select the subject field and enter a subject.
- 6 Select the text input field and enter your email text.
- 7 Select **Attach** and attach a file.

You can attach media files, contacts, or location information.

8 Select **Send** to send the message.



If you are offline or outside your service area, the message will be held in the outbox until you are online and in your service area.

## › View an email message

When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline.

1 In Menu mode, select **Email** → an email account.

2 Select  to update the message list.

3 Select an email message.

From the message view, use the following options:

- To move to the previous or next message, select  or .
- To move the message to another folder, select .
- To delete the message, select .
- To reply to the message, select  → **Reply**.
- To forward the message to other people, select  → **Forward**.
- To create a new message, select .
- To view an attachment, tap the attachment area. To save it to your device, select .
- To print the message via a connected printer, press [F1] → **Print**. Your device is compatible only with Samsung printers.

## Talk

Learn to chat with friends and family via Google Talk™.



This feature may be unavailable depending on your region or service provider.

## › Add friends to your friend list

1 In Menu mode, select **Talk**.

The friend list shows all of your Google Talk contacts at a glance.

2 Press [F1] → **Add friend**.

3 Enter an email address of the friend and select **Send invitation**.

When your friend accepts the invitation, the friend is added to your friend list.

## › Start a chat

1 In Menu mode, select **Talk**.

2 Select a friend from the friend list. The chat screen opens.

3 Enter your message and select **Send**.  
To insert emoticons, press [F1] → **More** → **Insert smiley**.

4 To switch between active chats, press [F1] → **Switch chats**.

5 To end the chat, press [F1] → **End chat**.

# Entertainment

## Music Player

Learn to listen to your favourite music while on the go with the music player.

### ► Add music files to your device

Start by transferring files to your device or memory card:

- Download from the wireless web. ► p. 22
- Download from a PC with the optional Samsung Kies. ► p. 44
- Receive via Bluetooth. ► p. 47
- Copy to your memory card. ► p. 44
- Synchronise with Windows Media Player 11. ► p. 44

### ► Play music

 
After transferring music files to your device or memory card,

1 In Menu mode, select **Music Player**.

2 Select a music category.

3 Select a music file.

4 Control playback with the following keys:

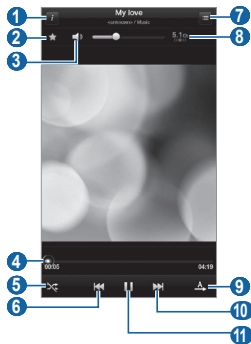

| Number | Function                                                    |
|--------|-------------------------------------------------------------|
| 1      | View file details.                                          |
| 2      | Set the file as your favourite track.                       |
| 3      | Adjust the volume.                                          |
| 4      | Move to a point of the file by dragging or tapping the bar. |
| 5      | Activate Shuffle mode.                                      |

| Number | Function                                                                                                                     |
|--------|------------------------------------------------------------------------------------------------------------------------------|
| 6      | Skip backward; Scan backward in a file (tap and hold).                                                                       |
| 7      | Open the music list.                                                                                                         |
| 8      | Activate the 5.1 channel surround sound system.                                                                              |
| 9      | Change the repeat mode (off, repeating one file, or repeating all files).                                                    |
| 10     | Skip forward; Scan forward in a file (tap and hold).                                                                         |
| 11     | Pause playback; Select  to resume playback. |

## ► Create a playlist

- 1 In Menu mode, select **Music Player** → **Playlists**.
- 2 Press [] → **New playlist**.
- 3 Enter a title for your new playlist and select **Done**.
- 4 Select **Add music**.
- 5 Select the files you want to include and select **Add**.

During playback, you can add files to a playlist by pressing [] → **Add to playlist**.

## ► Customise music player settings

- 1 In Menu mode, select **Music Player**.
- 2 Press [] → **Settings**.
- 3 Adjust the following settings to customise your music player:

| Option     | Function                                                        |
|------------|-----------------------------------------------------------------|
| Equaliser  | Select a default equaliser type.                                |
| Effect     | Select a sound effect.                                          |
| Music menu | Select music categories to display on the music library screen. |

## Camera

 
Learn how to capture and view photos and videos. You can take photos at resolutions up to 2048 x 1536 pixels (3.2 megapixels) and videos at resolutions of 720 x 480 pixels.



- The camera interface appears only in the landscape orientation.
- The camera automatically turns off when you do not use it for a specified period.
- The memory capacity may differ depending on the shooting scene or shooting conditions.

## ➤ Capture a photo

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Aim the lens at the subject and make any necessary adjustments.

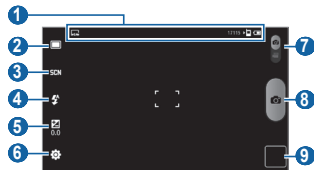

| Number | Function                                                                                                                                                                                                                    |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | Check the camera status and settings. <ul style="list-style-type: none"><li>•  : Resolution</li><li>• 17115 : Number of photos you can take (according to available memory)</li><li>•  : Default storage location</li></ul> |
| 2      | Change the shooting mode.                                                                                                                                                                                                   |
| 3      | Change the scene mode.                                                                                                                                                                                                      |

| Number | Function                                                                                                                           |
|--------|------------------------------------------------------------------------------------------------------------------------------------|
| 4      | Change the flash setting; You can manually turn the flash on or off, or set the camera to automatically use the flash when needed. |
| 5      | Adjust the exposure value.                                                                                                         |
| 6      | Change the camera settings.                                                                                                        |
| 7      | Switch to the camcorder.                                                                                                           |
| 8      | Capture a photo.                                                                                                                   |
| 9      | Open the image viewer to view photos you captured.                                                                                 |

- 4 Select to take a photo.  
The photo is saved automatically.

After taking photos, select the image viewer icon to view the captured photos.

- To view more photos, scroll left or right.
- To zoom in or out, place two fingers on the screen and spread them apart (move your fingers closer together to zoom out) or double-tap the screen.
- To send a photo to others, select **Share**.
- To set a photo as wallpaper or an ID image for a contact, select **Set as**.
- To delete a photo, select **Delete**.

## › Capture a photo by using preset options for various scenes

Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting condition and subjects. For example, when you take photos at night, select the night mode that uses an extended exposure.

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Select  → a scene.
- 4 Make any necessary adjustments.
- 5 Select  to take a photo.

## › Capture a series of photos

You can easily take a series of photos of moving subjects. This is useful when you are photographing children at play or a sporting event.

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Select  → **Continuous**.
- 4 Make any necessary adjustments.
- 5 Tap and hold .  
The camera will continue to take photos until you release the camera shutter.

## › Capture a panoramic photo

You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Select  → **Panorama**.
- 4 Make any necessary adjustments.
- 5 Select  to take the first photo.
- 6 Slowly move the device in any direction and align the green frame with the viewfinder.  
When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
- 7 Repeat step 6 to complete the panoramic photo.

## › Capture a photo in Smile shot mode

Your camera can recognise people's faces and help you take photos of their smiling faces.

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Select  → **Smile shot**.

- 4 Make any necessary adjustments.
- 5 Aim the camera lens at your subject.
- 6 Select .  
Your device recognises people in an image and detects their smiles.  
When the subject smiles, the device automatically takes a photo.

## ► Capture a photo in Self shot mode

You can take photos of yourself conveniently using the front camera lens.

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Select  → **Self-shot**.
- 4 Make any necessary adjustments.
- 5 Select  to take a photo.

## ► Customise camera settings

Before taking a photo, select  → **Image** to access the following options:

| Option        | Function                                                    |
|---------------|-------------------------------------------------------------|
| Resolutions   | Change the resolution option.                               |
| White balance | Adjust the colour balance according to lighting conditions. |

 
| Option        | Function                                             |
|---------------|------------------------------------------------------|
| Effects       | Apply a special effect.                              |
| ISO           | Adjust the sensitivity of the camera imaging sensor. |
| Image quality | Set the quality level for your photos.               |

Before taking a photo, select  → **Setup** to access the following settings:

| Setting       | Function                                                                                                                                                                                                                                                                                                                       |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Review        | Set the camera to display the taken image.                                                                                                                                                                                                                                                                                     |
| GPS           | Set the camera to include location information for your photos.<br> To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. |
| Shutter sound | Set the camera shutter to make a sound when capturing a photo.                                                                                                                                                                                                                                                                 |
| Storage       | Select a memory location for storing captured photos.                                                                                                                                                                                                                                                                          |
| Reset         | Reset camera settings.                                                                                                                                                                                                                                                                                                         |

## Record a video

- 1 In Menu mode, select **Camera** to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Slide  down to switch to the camcorder.
- 4 Aim the lens at the subject and make any necessary adjustments.

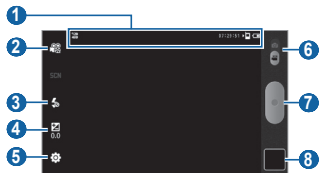

| Number | Function                                                                                                                                                                                                                                                                                                                        |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | Check the camcorder status and settings. <ul style="list-style-type: none"><li>• 720/480 : Resolution</li><li>• 07:29:51: Length of video that can be recorded (according to available memory)</li><li>•  : Default storage location</li></ul> |
| 2      | Change the recording mode (for attaching to a multimedia message or for saving normally).                                                                                                                                                                                                                                       |
| 3      | Change the flash setting.                                                                                                                                                                                                                                                                                                       |

| Number | Function                                           |
|--------|----------------------------------------------------|
| 4      | Adjust the exposure value.                         |
| 5      | Change the camcorder settings.                     |
| 6      | Switch to the camera.                              |
| 7      | Record a video.                                    |
| 8      | Open the image viewer to view videos you recorded. |

5 Select  to start recording.

6 Select  to stop recording.  
The video is saved automatically.



The camera may not be able to properly record videos to a memory card with a slow transfer speed.

After recording videos, select the image viewer icon to view the recorded videos.

- To view more videos, scroll left or right.
- To play a video, select **Play**.
- To send a video to others, select **Share**.
- To delete a video, select **Delete**.

## ► Customise camcorder settings

Before recording a video, select  → **Video** to access the following options:

| Option        | Function                                                    |
|---------------|-------------------------------------------------------------|
| White balance | Adjust the colour balance according to lighting conditions. |
| Effects       | Apply a special effect.                                     |
| Video quality | Set the quality level for your videos.                      |

 
Before recording a video, select  → **Setup** to access the following settings:

| Setting         | Function                                                       |
|-----------------|----------------------------------------------------------------|
| Audio recording | Set whether or not to record audio.                            |
| Review          | Set the camera to display the recorded video.                  |
| Shutter sound   | Set the camera shutter to make a sound when recording a video. |
| Storage         | Select a memory location for storing recorded videos.          |
| Reset           | Reset camcorder settings.                                      |

## Video

Learn to use the video player to play various kinds of videos.

- 1 In Menu mode, select **Video**.
- 2 Select a category at the top of the screen.
- 3 Select a video to play.
- 4 Rotate the device anti-clockwise to landscape view.
- 5 Control playback with the following keys:

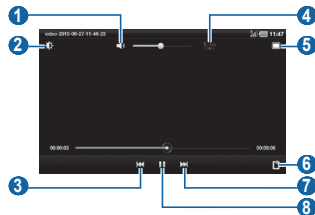

| Number | Function                       |
|--------|--------------------------------|
| 1      | Adjust the volume.             |
| 2      | Adjust the display brightness. |
| 3      | Move to the previous file.     |

| Number | Function                                                                                                                     |
|--------|------------------------------------------------------------------------------------------------------------------------------|
| 4      | Activate the 5.1 channel surround sound system.                                                                              |
| 5      | Change a ratio of the video screen.                                                                                          |
| 6      | Add bookmarks at the point you want.                                                                                         |
| 7      | Move to the next file.                                                                                                       |
| 8      | Pause playback; Select  to resume playback. |

## Gallery

Learn to view photos and play videos saved in your device's memory and memory card.

### ► View a photo

- 1 In Menu mode, select **Gallery**.
  - 2 Select a folder.
  - 3 To change the view mode, select  or  at the top right of the screen.
  - 4 Select a photo (with no icon) to view.
-  You can print photos via a connected printer by pressing [F≡] → **More** → **Print**. Your device is compatible only with Samsung printers. File formats for printing may vary depending on printers.

### ► Play a video

- 1 In Menu mode, select **Gallery**.
- 2 Select a folder.
- 3 To change the view mode, select  or  at the top right of the screen.
- 4 Select a video (with the  icon) to play.
- 5 Rotate the device anti-clockwise to landscape view.
- 6 Control playback with the virtual keys. ► p. 39

# Personal information

## Contacts

Learn to create and manage a list of your personal or business contacts. You can save names, phone numbers, email addresses, birthdays and more for your contacts.

### › Create a contact

- 1 In Menu mode, select **Contacts**.
- 2 Select .
- 3 Select a memory location.  
If you have more than one account, select an account to which you want to add the contact.
- 4 Enter contact information.
- 5 Select **Done** to add the contact to memory.

### › Find a contact

- 1 In Menu mode, select **Contacts**.
- 2 Select the search field and enter the first letters of the name you want.
- 3 Select the contact's name from the contact list.

Once you find a contact, you can use the following options:

- To send an email message, select an email address.
- To edit the contact information, select **Edit**.
- To delete the contact, select **Delete**.

### › Create your namecard

- 1 In Menu mode, select **Contacts**.
- 2 Press [F1] → **My profile**.
- 3 Enter your own personal details.
- 4 Select **Done**.

### › Create a group of contacts

By creating groups of contacts, you can manage multiple contacts and send email to an entire group. Start by creating a group:

- 1 In Menu mode, select **Contacts** → **Groups**.
  - 2 Select .
  - 3 Enter a name for the group.
  - 4 Select **Done**.
-  To add or edit members, press [F1] → **Edit group members**.

## › Import or export contacts

To import contact files (in vcf format) from a memory card to your device,

- 1 In Menu mode, select **Contacts**.
- 2 Press [] → **Import/Export** → **Import from SD card**.
- 3 Select a memory location.  
If you have more than one account, select an account to which you want to add the contact.
- 4 Select an option for importing a single contact file, multiple contact files, or all contact files, and select **OK**.
- 5 Select contact files to import and select **OK**.

To export contacts from your device to a memory card,

- 1 In Menu mode, select **Contacts**.
- 2 Press [] → **Import/Export** → **Export to SD card**.
- 3 Select **OK** to confirm.

## Calendar

Learn to create and manage daily, weekly or monthly events, and set alarms to remind yourself of important events.

### › Change the calendar view

- 1 In Menu mode, select **Calendar**.
- 2 Select a view mode from the top of the calendar.
  - **Day:** Hourly blocks for one full day
  - **Week:** A list of scheduled appointments for the days in one full week
  - **Month:** Daily blocks for the current month
  - **List:** A list of all scheduled appointments

### › Create an event

- 1 In Menu mode, select **Calendar**.
- 2 Select .
- 3 Enter the details of the event as required.
- 4 Select **Done**.

## › View events

To view today's schedule,

- 1 In Menu mode, select **Calendar**.
- 2 Select **Today**.
- 3 Select an event to view its details.

To view events of a specific date,

- 1 In Menu mode, select **Calendar**.
- 2 Select a date on the calendar.  
To move to a specific day by entering a date manually, press [F6] → **Go to**, enter the date by selecting + or -, and select **Set**.
- 3 Select an event to view its details.



You can send the event to others by selecting **Send via** → an option.

## › Stop an event alarm

If you set an alarm for a calendar event, the alarm will sound at the specified time. To snooze or dismiss the reminder, select **Snooze all** or **Dismiss all**.

## Memo

Learn to record important information to save and view at a later date.

### › Create a memo

- 1 In Menu mode, select **Memo**.
- 2 Select
- 3 Enter your memo text.
- 4 Select **Done**.

### › View memos

- 1 In Menu mode, select **Memo**.
- 2 Select a memo to view its details.  

  - You can send the memo to others by pressing [F6] → **Send via** → an option.
  - You can print the memo via a connected printer by pressing [F6] → **Print**. Your device is compatible only with Samsung printers.

# Connectivity

## PC connections

Learn to connect your device to a PC with the supplied PC data cable in various USB connection modes. By connecting the device to a PC, you can synchronise files with Windows Media Player, transfer data to and from your device directly, and use the Samsung Kies program.

### ➤ Connect with Samsung Kies

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website ([www.samsungmobile.com](http://www.samsungmobile.com)).

- 1 In Menu mode, select **Settings** → **Wireless and network** → **USB settings** → **Samsung Kies**.
- 2 Press [] to return to Idle mode.
- 3 Using the PC data cable, connect the multifunction jack on your device to a PC.
- 4 Run Samsung Kies and use wireless connections or copy data and files. Refer to the Samsung Kies help for more information.

### ➤ Synchronise with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

- 1 In Menu mode, select **Settings** → **Wireless and network** → **USB settings** → **Media player**.
- 2 Press [] to return to Idle mode.
- 3 Using the PC data cable, connect the multifunction jack on your device to a PC with Windows Media Player installed.  
When connected, a pop-up window will appear on the PC.
- 4 Open Windows Media Player to synchronise music files.
- 5 Edit or enter your device's name in the pop-up window (if necessary).
- 6 Select and drag the music files you want to the sync list.
- 7 Start synchronisation.

### ➤ Connect as a mass storage device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the file directory of the memory card by using the device as a memory card reader.



The file directory of the memory card will appear as a removable disk, separate from the internal memory.

- 1 If you want to transfer files from or to a memory card, insert a memory card into the device.
  - 2 In Menu mode, select **Settings** → **Wireless and network** → **USB settings** → **Mass storage**.
  - 3 Press [] to return to Idle mode.
  - 4 Using the PC data cable, connect the multifunction jack on your device to a PC.
  - 5 When connected, select **Mount**.
  - 6 Open the folder to view files.
  - 7 Copy files from the PC to the memory card.
  - 8 When you are finished, select **Turn Off**.
- To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.

## Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 a/b/g/n standards.

You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.



Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

### ▶ Activate the WLAN feature

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Wi-Fi settings**.

- 2 Select **Wi-Fi** to activate the WLAN feature.



An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.

### ▶ Find and connect to a WLAN

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Wi-Fi settings**.

The device will automatically search for available WLANs.

- 2 Select a network under **Wi-Fi networks**.
- 3 Enter a password for the network (if necessary).
- 4 Select **Connect**.

## ➤ Add a WLAN manually

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Wi-Fi settings** → **Add Wi-Fi network**.
- 2 Enter the SSID for the network and select the security type.
- 3 Set the security settings depending on the selected security type.
- 4 Select **Save**.

## ➤ Connect to a WLAN using a Wi-Fi Protected Setup (WPS)

You can connect to a secured network by using a WPS button or WPS PIN. To connect to a WLAN with a WPS button,

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Wi-Fi settings** → **WPS button connection**.
- 2 Press a WPS button on the access point within 2 minutes.

To connect to a WLAN with a WPS PIN,

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Wi-Fi settings**.
- 2 Select a network indicated by the WPS icon and select **WPS PIN**.
- 3 On the access point, enter the PIN and press the start button.

## Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 m without requiring a physical connection.

You do not need to line up the devices to beam information with Bluetooth. If the devices are within range of one another, you can exchange information between them even if they are located in different rooms.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.

## ➤ Turn on the Bluetooth wireless feature

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Bluetooth settings**.
- 2 Select **Bluetooth** to turn on the Bluetooth wireless feature.

## ➤ Find and pair with other Bluetooth-enabled devices

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Bluetooth settings** → **Scan devices**.

- 2 Select a device.
- 3 Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **OK**. Alternatively, select **Accept** to match the PIN between your device and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.



Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

## ➤ Send data using the Bluetooth wireless feature

- 1 Select a file or item, such as a contact, calendar event, memo, or media file, from an appropriate application or **My files**.
- 2 Press [≡] → **Share** or **Send via** → **Bluetooth**.
- 3 Search for and paired with a Bluetooth-enabled device.

## ➤ Receive data using the Bluetooth wireless feature

- 1 In Menu mode, select **Settings** → **Wireless and network** → **Bluetooth settings** → **Visible**.  
Your device is visible to other Bluetooth devices for 120 seconds.
- 2 When prompted, enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).

- 3 Select **Accept** to confirm that you are willing to receive data from the device (if necessary).

Received data is saved to the bluetooth folder.

## AllShare

Learn to use the Digital Living Network Alliance (DLNA) service that enables you to share media files between DLNA-enabled devices in your home over a WLAN.

You must first activate the WLAN feature and add a WLAN profile. ► p. 45

## ➤ Customise DLNA settings for sharing media files

To allow other DLNA-enabled devices to access media files on your device, you must activate media sharing.



Some files may not play on the DLNA-enabled devices depending on the devices.

- 1 In Menu mode, select **AllShare**.
- 2 Press [≡] → **Settings**.
- 3 Adjust the following settings to customise the DLNA feature:

| Option            | Function                                                                                |
|-------------------|-----------------------------------------------------------------------------------------|
| Media server name | Enter a name for your device as a media server.                                         |
| Share media       | Turn on video sharing, image sharing, or music sharing with other DLNA-enabled devices. |

| Option                    | Function                                                    |
|---------------------------|-------------------------------------------------------------|
| Access point network      | Select a connection profile to use for DLNA connections.    |
| Upload from other devices | Set whether or not to accept uploads from other devices.    |
| Default memory            | Select a memory location for saving downloaded media files. |

## › Play files on another DLNA-enabled device

- 1 In Menu mode, select **Allshare**.  
Your device automatically searches for DLNA-enabled devices.
  - 2 Select a device as the media server—the one that contains media files—under **Search server**.
  - 3 Select a player—the one that will play the media file—under **Search playback devices**.
  - 4 Select **Next**.
  - 5 Select a media category → a file.
  - 6 Control playback using icons of your device.
-  Playback may be buffered depending on the network connection and the connected server.

## GPS

Your device is equipped with a global positioning system (GPS) receiver. Learn to activate location services.

To receive better GPS signals, avoid using your device in the following conditions:

- between buildings, in tunnels or underground passages, or inside buildings
- in poor weather
- around high voltage or electromagnetic fields



Do not touch the internal antenna area or cover this area with your hands or other objects while using the GPS functions.



This feature may be unavailable depending on your region or service provider.

## › Activate location services

You must activate location services to receive location information and search the map.

- 1 In Menu mode, select **Settings** → **Location and security**.
- 2 Adjust the following settings to activate location services:

| Option                | Function                                                |
|-----------------------|---------------------------------------------------------|
| Use wireless networks | Set to use WLAN for finding your location.              |
| Use GPS satellites    | Set to use the GPS satellite for finding your location. |

## TV connections (TV out mode)

Learn to connect your device to a TV and view the device's interface on the TV screen.

- 1 In Menu mode, select **Settings** → **Display settings** → **TV out**.
- 2 Select **TV system**.
- 3 Select a video encoding system according to your region.

| Option | Function                                                                                                                                                                           |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PAL    | Australia, Austria, Belgium, China, Denmark, England, Finland, Germany, Italy, Kuwait, Malaysia, Netherlands, New Zealand, Norway, Singapore, Spain, Sweden, Switzerland, Thailand |
| NTSC   | Canada, Japan, Korea, Mexico, Taiwan, USA                                                                                                                                          |

 
- 4 Ensure that the TV is on and connect your device to the TV with a TV out cable.

Match the colours at the ends of the TV out cable with those on the TV's A/V ports.

- 5 Switch the TV to External input mode.  
The device interface appears on the TV screen.



- Your files may not display correctly due to differences in video systems or quality of the TV display.
- Bluetooth stereo headsets will not work in TV out mode.

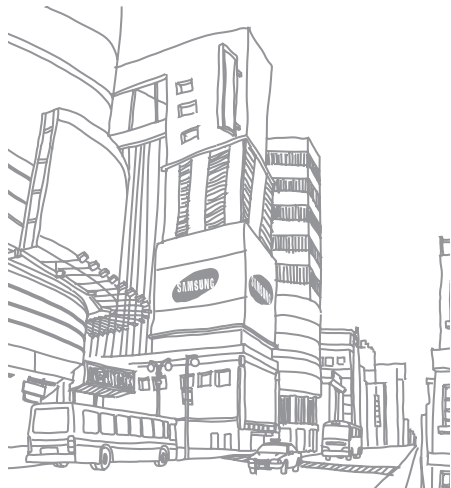

# Tools

## eBook

Learn to open and read book files.

### › Read books

- 1 In Menu mode, select **eBook**.
- 2 Select a book from the bookshelf.
- 3 While reading a book, use the following options:
  - To move pages, drag your finger left or right or tap near the left or right margin of a page.
  - To view the table of contents, bookmarks, or highlights, select .
  - To customise the settings for fonts and brightness, select .
  - To view book details, select .
  - To bookmark the current page, select .
  - To highlight a text, tap and hold a word and select **Highlight** from the pop-up window.

### › Look up a word in the dictionary

- 1 In Menu mode, select **eBook**.
- 2 Open a book.
- 3 Tap and hold a word, and release your finger from the screen when the magnifying glass appears.
- 4 Select **Dictionary** from the pop-up window.

### › Import book files

You can import book files (in epub format) from a memory card.



- Book files must be saved in your memory card.
- DRM-protected book files are not supported.

- 1 In Menu mode, select **eBook**.
- 2 Press [] → **Import**.
- 3 Select book files to import and select **OK**.

## ThinkFree Office

Learn to create and view document files on your device. If you have an account with the ThinkFree web service, you can manage documents online. This application supports the following file formats: txt, doc, docx, xls, xlsx, ppt, pptx, pdf.

### › Create a new document

- 1 In Menu mode, select **ThinkFree Office**.
- 2 If you are launching this application for the first time, read the end user licence agreement and select **Accept**.
- 3 Select **Activate now** → **Close** to activate ThinkFree Office.
- 4 Select **My Docs**.
- 5 Press [≡] → **New** → a document type.
- 6 Enter a name for the document and select **OK**.
- 7 Enter contents in the document by using the tools at the top right of the screen.
- 8 When you are finished, select  on the toolbar.

### › View and edit a document on your device

- 1 In Menu mode, select **ThinkFree Office**.
- 2 Select **My Docs** → a document.
- 3 Select a text encoding type (if necessary).
- 4 View and edit the document as desired.
  - To zoom in or out, use the two finger zoom; Place your two fingers on the screen and slowly pinch or spread apart.
  - To search for text in the document, press [≡] → **Find**.
- 5 When you are finished editing, save the document.

### › Manage documents online

- 1 In Menu mode, select **ThinkFree Office**.
- 2 Select **Online**.
- 3 Enter your user name and password to access your account, and then select **Sign in**.
- 4 View and manage your documents on the server as desired.

## My files

Learn to quickly and easily access all of your images, videos, music, sound clips, and other types of files stored on your device and memory card.

## › Supported file formats

| Type  | Format                                                                                     |
|-------|--------------------------------------------------------------------------------------------|
| Image | bmp, gif, jpg, png                                                                         |
| Video | 3gp, mp4, avi, wmv, flv, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD) |
| Music | mp3, m4a, mp4, 3gp, 3ga, wma, ogg, oga, aac, flac                                          |



- Some file formats are not supported depending on the software of the device.
- If the file size exceeds the available memory, an error can occur when you open files.
- Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented.

## › Open a file

- 1 In Menu mode, select **My files**.
- 2 Select the **Name** drop-down menu and select an option to sort the file list.
- 3 Select a folder.  
To move up one level in the file directory, select .
- 4 Select a file to open.

## › Create a folder

- 1 In Menu mode, select **My files**.
- 2 Press [] → **New folder**.
- 3 Enter a name and select **Done**.

## › Copy or cut files

- 1 In Menu mode, select **My files** → **Select**.
- 2 Select folders or files to copy or cut.
- 3 Select **Copy** or **Cut**.
- 4 Locate a folder and select **Paste**.

## › Delete files

- 1 In Menu mode, select **My files** → **Select**.
- 2 Select folders or files to delete.
- 3 Select **Delete** → **Delete**.

## Digital Frame

You can use your device as a digital frame and view the clock or slideshow, or play music files.

## › View the clock

- 1 In Menu mode, select **Digital Frame**.
- 2 Tap the screen to view the icons.
- 3 Select **Clock**.
- 4 Press [] → **Clock style** to change the clock style.
- 5 Select a clock and select **OK**.

## › View a slideshow

- 1 In Menu mode, select **Digital Frame**.
  - 2 Tap the screen to view the icons.
  - 3 Select **Slideshow**.
  - 4 Press [] → **Add to slideshow**.
  - 5 Select folders and select **Done**.
-  To change the slideshow effect, press [] → **Slideshow effects**.

## › Play music files

- 1 In Menu mode, select **Digital Frame**.
- 2 Tap the screen to view the icons.
- 3 Select **Music** → a music file.

## Alarm Clock

Learn to set and control alarms for important events.

### › Set a new alarm

- 1 In Menu mode, select **Alarm Clock**.
- 2 Select  or press [] → **Add alarm**.
- 3 Set alarm details.
- 4 When you are finished, select **Done**.

### › Stop an alarm

When the alarm sounds,

- Select **Dismiss** to stop the alarm.
- Select **Snooze** to silence the alarm for the snooze period.

### › Delete an alarm

- 1 In Menu mode, select **Alarm Clock**.
- 2 Press [] → **Delete alarm**.
- 3 Select alarms to delete.
- 4 Select **Delete**.



You can delete or deactivate alarms by tapping and holding an alarm and selecting **Delete alarm** or **Deactivate alarm**.

## › Change the clock style

- 1 In Menu mode, select **Alarm Clock**.
- 2 Tap the clock image.
- 3 Drag left or right at the bottom of the screen.
- 4 Select **Set clock style**.

## Task Manager

With the task manager, you can view currently running applications, package size of applications, and memory information, and monitor the RAM memory.

- 1 In Menu mode, select **Task Manager**.
- 2 Use the following options:
  - **Active applications:** View the list of all the applications currently running on your device.
  - **Package:** View the package size of applications installed on your device.
  - **RAM manager:** Check and manage the RAM memory.
  - **Summary:** View the used and available memory on your device and memory card.
  - **Help:** View help information about extending battery life.

## World Clock

Learn to view the time in another region.

- 1 In Menu mode, select **World Clock**.
  - 2 Select  or press [≡] → **Add city**.
  - 3 Enter a city name or select one from the list.  
To select a city in the world map view, select .
  - 4 To add more world clocks, repeat steps 2-3.
-  To apply the summer time to the clocks, press [≡] → **BST settings**.  
When you tap on a clock, the current time of the clock is adjusted forward 1 or 2 hours.

## Voice Search

Learn to search for information on the web by voice.

-  This feature may be unavailable depending on your region or service provider.
- 1 In Menu mode, select **Voice Search**.
  - 2 Say a keyword into the microphone.  
The device searches for information and web pages related to the keyword.

# Settings

## Access the Settings menu

- 1 In Menu mode, select **Settings**.
- 2 Select a setting category and select an option.

## Wireless and network

Change the settings for wireless network connections.

### › Wi-Fi settings

- **Wi-Fi:** Turn the WLAN feature on or off. ► p. 45
- **Network notification:** Set the device to notify you when an open network is available.
- **WPS button connection:** Connect to a WLAN using a Wi-Fi Protected Setup (WPS) button.
- **Add Wi-Fi network:** Add WLAN APs manually.

### › Bluetooth settings

- **Bluetooth:** Turn the Bluetooth wireless feature on or off. ► p. 46
- **Device name:** Set a Bluetooth name for your device.
- **Visible:** Set your device to be visible to other Bluetooth devices.
- **Scan devices:** Search for available Bluetooth devices.

### › USB settings

Activate various USB connection modes when you connect your device to a PC. ► p. 44

## Sound settings

Change the settings for various sounds on your device.

- **Silent mode:** Activate Silent mode to mute all sounds except media sounds and alarm ringtones.
- **Vibrate:** Set when the device will vibrate for various events.
- **Volume:** Adjust the volume level for call ringtones, music and videos, alarm ringtones, device system, and notifications.
- **Notification ringtone:** Select a ringtone to alert you to events, such as incoming messages and missed calls.
- **Audible touch tones:** Set the device to sound when you touch the keys on the dialling screen.
- **Audible selection:** Set the device to sound when you select an application or option on the touch screen.

- **Screen lock sounds:** Set the device to sound when you lock or unlock the touch screen.
- **Haptic feedback:** Set the device to vibrate when you touch the keys.
- **Vibration intensity:** Adjust the vibration intensity of the haptic feedback.

## Display settings

Change the settings for the display.

- **Font style:** Change the font type for the display text. You can download fonts from Android Market by selecting **Get fonts online**.
- **Brightness:** Set the brightness of the display.
- **White colour density:** Adjust the colour density for white tones.
- **Black colour density:** Adjust the colour density for black tones to enhance the image depth.
- **Saturation:** Adjust the colour saturation.
- **Animation:** Set the device to display animation when you switch between windows.
- **Screen timeout:** Set the length of time the device waits before turning off the display's backlight.
- **Power saving mode:** Activate Power saving mode. In Power saving mode, the device saves power by adjusting the white balance and the brightness on the screen.
- **TV out:** Select a video encoding system of your TV for proper TV connections. ► p.49

## Location and security

Change the settings for securing your device and GPS functionality.

- **Use wireless networks:** Set to use WLAN for finding your location.
- **Use GPS satellites:** Set to use the GPS satellite for finding your location.
- **Set screen lock:** Set the unlock security code. When you have set your security code, this option changes to **Change screen lock**.
  - **None:** Disable the screen lock.
  - **Pattern:** Set an unlock pattern to unlock the screen.
  - **PIN:** Set a PIN (numeric) to unlock the screen.
  - **Password:** Set a password (alphanumeric) to unlock the screen.
- **Visible passwords:** By default, the device displays your password as • for security. Set the device to display your password as you enter.
- **Select device administrators:** View device administrators installed on your device. You can activate device administrators to apply new policies to your device.
- **Use secure credentials:** Use certificates and credentials to ensure secure use of various applications.
- **Install encrypted certificates from SD card:** Install encrypted certificates that are stored on a memory card.
- **Set password:** Create and confirm a password for accessing credentials.
- **Clear storage:** Erase the credential contents from the device and reset the password.

## Applications

Change the settings for managing installed applications.

- **Unknown sources:** Select to download applications from any source. If you do not select this option, you can download applications only from Android Market.
- **Manage applications:** Access the list of the applications installed on the device and check the application information. You can also view the applications that are currently running or stored in a memory card.
- **Running services:** View the services you are using and access them to manage.
- **Development:**
  - **USB debugging:** Select to connect your device to a PC by using a PC data cable. This is for application development.
  - **Stay awake:** Set the device's screen to stay on while charging the battery.
  - **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing. This is for application development.
- **Samsung Apps:** Select a network connection (Wi-Fi or packet switched data network) to get notifications for new applications from Samsung Apps.

## Accounts and sync

Change the settings for the auto sync feature or manage accounts for synchronisation.

- **Background data:** Select this setting to use the auto sync feature. The auto sync will run in the background without opening applications and synchronise data.
- **Auto-sync:** Set the device to synchronise contact, calendar, and email data automatically.

## Privacy

- **Back up my settings:** Back up your device's settings to the Google server.
- **Automatic restore:** Set the device to restore applications' data you backed up when they are installed in your device.
- **Factory data reset:** Reset your settings to the factory default values and delete all your data.

## SD card and phone storage

Check memory information of memory cards and your device, and format the external or internal memory.

## Search

Change the Google Search settings.

- **Google search:**
  - **Show web suggestions:** Set the device to display suggestions while you are entering a keyword.
  - **Use My Location:** Set the device to use your current location for Google search and other Google services.
  - **Search history:** Set the device to show the search of your Google account.
  - **Manage search history:** Manage the search history of your Google account.
- **Searchable items:** Select the types of items to include in your search.
- **Clear shortcuts:** Clear the information from recent searches.

## Locale and text

Change the settings for text input.

### › Select locale

Select a display language for all menus and applications.

### › Select input method

Select a default keyboard type for text input.

### › Swype

- **Language:** Select a language to be used for text input.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

- **Word Prediction:** Set the device to predict words according to your input and display word suggestions.
- **Audio feedback:** Set to alert you when there are no alternative words for your input if you double-tap a word.
- **Vibrate on keypress:** Set the device to vibrate when you touch a key.
- **Enable Tip Indicator:** Set to alert you to quick help by blinking the tip indicator.
- **Auto-spacing:** Set the device to automatically insert a space between words.
- **Auto-capitalization:** Set the device to automatically capitalise the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
- **Show complete trace:** Set to display the trace of your dragging on the keyboard.
- **Word Choice Window:** Set how often the word list will display.
- **Speed vs. Accuracy:** Set the balance for the speed and accuracy.
- **Swype help:** Access help information for using the Swype keyboard.
- **Tutorial:** Learn how to enter text faster with the Swype keyboard.
- **Version:** View version information.

## › Samsung keypad

- **Input language:** Select languages to be used for text input.



You cannot enter text in some languages. To enter text, you should change the writing language to one of the supported languages.

- **XT9:** Activate XT9 mode to enter text using Predictive input mode.
- **XT9 advanced settings:** Activate the advanced features of XT9 mode, such as auto completion, auto correction, or auto substitution, and set up your own word list.
- **Automatic full stop:** Set the device to insert a period when you double-tap the space bar.
- **Auto-capitalization:** Set the device to automatically capitalise the first letter after a final punctuation mark, such as a period, question mark, or exclamation mark.
- **Voice input:** Activate the voice input feature to enter text by voice on the Samsung keypad.
- **Tutorial:** Learn how to enter text with the Samsung keypad.

## Voice input and output

Change the settings for the voice recogniser and the text-to-speech feature.

### › Voice recognition settings

- **Language:** Select a language for the Google voice recognition.
- **SafeSearch:** Set the device to filter explicit text and/or images from voice search results.

- **Block offensive words:** Hide offensive words your device recognised from voice search results.

### › Text-to-speech settings

- **Listen to an example:** Listen to the spoken text for an example. Install voice data for using the text-to-speech feature.
- **Always use my settings:** Set the device to use the settings you specify in applications rather than the default settings.
- **Default engine:** Set the speech synthesis engine to be used for spoken text.
- **Install voice data:** Download and install voice data for the text-to-speech feature.
- **Speech rate:** Select a speed for the text-to-speech feature.
- **Language:** Select a language for the text-to-speech feature.
- **Engines:** View the text-to-speech engines downloaded from Android Market.

## Accessibility

Change the settings for accessibility features.

- **Accessibility:** Activate an accessibility application you have downloaded, such as Talkback or Kickback, which provide voice, melody, or vibration feedback.
- **Accessibility services:** Select an accessibility application to use. This option is available only when you downloaded accessibility applications on your device.

 
## Date and time

Access and alter the following settings to control how time and date are displayed on your device:

- **Automatic:** Automatically update the time when you move across time zones.
- **Set date:** Set the current date manually.
- **Select time zone:** Set your home time zone.
- **Set time:** Set the current time manually.
- **Use 24-hour format:** Set to the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

## About phone

Access information about your device, check the device's status, and learn how to use your device.

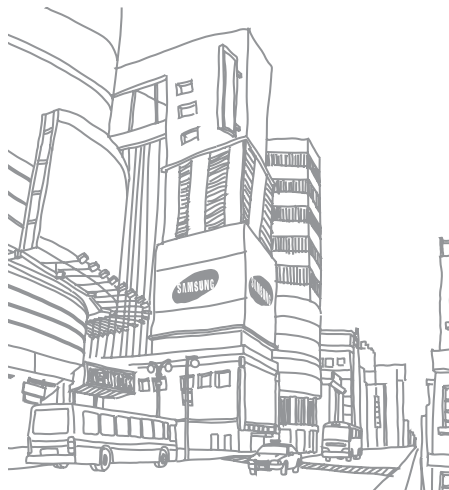

# Troubleshooting

## Your device displays "Service unavailable" or "Network error"

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

## The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Centre.

## Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is still responsive but a program is frozen, close the program using the task manager. If your device is frozen and unresponsive, press and hold [⏻] for 8-10 seconds. The device will reboot automatically.

If this does not solve the problem, perform a factory data reset. In Menu mode, select **Settings** → **Privacy** → **Factory data reset** → **Reset phone** → **Erase everything**.

## The device beeps and the battery icon flashes

Your battery is low. Recharge or replace the battery to continue using the device.

## The battery does not charge properly or the device turns off

If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local ordinances for proper disposal instructions).

## Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

## Error messages appear when launching the camera

Your Samsung mobile device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery.
- Free some memory by transferring files to a PC or deleting files from your device.
- Restart the device.
- If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

## Error messages appear when opening music files

Some music files may not play on your Samsung mobile device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a PC or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your device supports the file type.

## Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve the problem, contact a Samsung Service Centre.

## A connection is not established when you connect the device to a PC

- Ensure that the PC data cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your PC.

# Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

## Warning: Prevent electric shock, fire, and explosion

**Do not use damaged power cords or plugs, or loose electrical sockets**

**Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord**

**Do not bend or damage the power cord**

**Do not use your device while charging or touch your device with wet hands**

**Do not short-circuit the charger or the battery**

**Do not drop or cause an impact to the charger or the battery**

**Do not charge the battery with chargers that are not approved by the manufacturer**

**Do not use your device during a thunderstorm**

Your device may malfunction and your risk of electric shock is increased.

**Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery**

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

**Handle and dispose of batteries and chargers with care**

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.

- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

**Protect the device, batteries, and chargers from damage**

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## Caution: Follow all safety warnings and regulations when using your device in restricted areas

**Turn off your device where prohibited**

Comply with all regulations that restrict the use of a mobile device in a particular area.

**Do not use your device near other electronic devices**

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

**Do not use your device near a pacemaker**

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.

- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

### **Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency**

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

### **If you are using a hearing aid, contact the manufacturer for information about radio interference**

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

### **Turn off the device in potentially explosive environments**

- Turn off your device in potentially explosive environments.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

### **Turn off your device when in an aircraft**

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

### **Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device**

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

## **Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle**

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.

## **Proper care and use of your mobile device**

### **Keep your device dry**

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, turn off your device. Dry your device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer’s warranty.

### **Do not use or store your device in dusty, dirty areas**

Dust can cause your device to malfunction.

### **Do not store your device on slopes**

If your device falls, it can be damaged.

### **Do not store your device in hot or cold areas. Use your device at -20 °C to 45 °C**

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at -20 °C to 45 °C.

### **Do not store your device with such metal objects as coins, keys and necklaces**

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

### **Do not store your device near magnetic fields**

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

### **Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers**

- The battery may leak.
- Your device may overheat and cause a fire.

### **Do not drop your device or cause impacts to your device**

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

### **Do not use a flash close to the eyes of people or animals**

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

### **Ensure maximum battery and charger life**

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

### **Use manufacturer-approved batteries, chargers, accessories and supplies**

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

### **Do not bite or suck on the device or the battery**

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

### **When using the device:**

- Speak directly into the mouthpiece.
- Avoid contact with your device's internal antenna. Touching the antenna may cause the device to transmit more radio frequency than necessary.
- Hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as predictive text), and take frequent breaks.

### **Protect your hearing**



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

### **Use caution when using the device while walking or moving**

Always be aware of your surroundings to avoid injury to yourself or others.

### **Do not carry your device in your back pockets or around your waist**

You can be injured or damage the device if you fall.

### **Do not disassemble, modify, or repair your device**

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

### **Do not paint or put stickers on your device**

Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.

### **When cleaning your device:**

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

### **Do not use the device if the screen is cracked or broken**

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

### **Do not use the device for anything other than its intended use**

### **Avoid disturbing others when using the device in public**

### **Do not allow children to use your device**

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

### **Install mobile devices and equipment with caution**

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

### **Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

### **Handle memory cards with care**

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### **Ensure access to emergency services**

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

### **Be sure to back up important data**

Samsung is not responsible for data loss.

## **Specific Absorption Rate (SAR) certification information**

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was x.xx W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity statement at the back of this manual demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive.



When carrying the product or using it while worn on the body maintain a distance of 5 mm from the body to ensure compliance with RF exposure requirements.

## Correct disposal of this product



(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

## Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.

## Disclaimer

 
Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE

AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

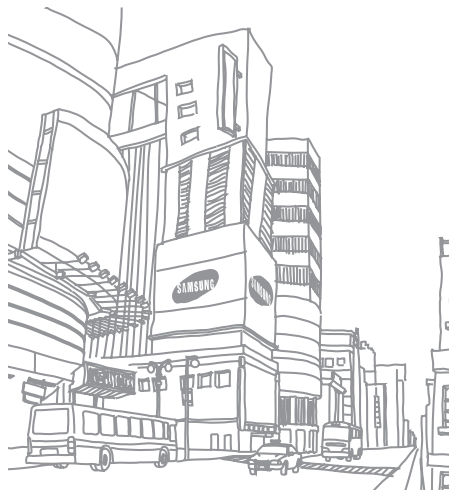

# Index

## alarms

- creating 53
- deactivating 53
- stopping 53

## AllShare 47

## battery

- charging 8

## Bluetooth

- activating 46
- finding and pairing with devices 46
- receiving data 47
- sending data 47

## brightness, display 18

## calendar

- creating events 42
- viewing events 43

## camera

- capturing photos 35
- customising camcorder 39
- customising camera 37
- recording videos 38

## connections

- Bluetooth 46
- DLNA 47
- PC 44
- WLAN 45

## contacts

- creating 41
- importing or exporting 42

## daily briefing 27

## device

- customising 17
- indicator icons 13
- keys 12
- layout 11
- settings 55
- shortcuts panel 16
- turning on or off 11

## digital frame 52

## DLNA

- see AllShare

## ebook

- downloading 25
- importing 50
- reading 25, 50

## email

- sending 31
- setting accounts 31
- viewing 32

## file manager

- copying or cutting files 52
- deleting files 52
- opening files 52
- supported file formats 52

## gallery

- playing videos 40
- viewing photos 40

## Google mail 30

## Google Maps 28

## Google Talk 32

## idle screen

- adding items 15
- moving items 16
- removing items 16

## internet

- see web browser

## language 58

## market 26

## media hub 27

## memory card

- formatting 10
- inserting 9
- removing 10

## memos

- creating 43
- viewing 43

## menu screen

- accessing 16
- organising 17

## messages

- sending email 31
- setting email accounts 31

## music player

- adding files 33
- creating playlists 34
- playing music 33

## PC connections

- mass storage 44
- Samsung Kies 44
- Windows Media Player 44

## phonebook

- creating contacts 41
- creating groups 41
- finding contacts 41

## photos

- capturing 35
- capturing a series 36
- capturing by scene 36
- capturing in smile shot 36
- capturing panoramic 36
- capturing yourself 37
- viewing 40

## Samsung Apps 25

## Samsung Kies 44

## settings

- accessibility 59
- accounts and sync 57
- applications 57
- date and time 60
- locale and text 58
- location and security 56
- privacy 57
- SD card and phone storage 57
- search 58
- text-to-speech 59
- wireless and network 55

## silent mode 11

## synchronisation 44

## task manager 54

## text input 19

## text memos 43

## ThinkFree Office 51

## time and date, set 17

## touch screen

- locking 14
- using 14

TV out mode 49

unpack 8

USB tethering 46

video player 39, 40

videos

capturing 38

playing 39, 40

voice search 54

web browser

adding bookmarks 23

adding RSS feeds 24

browsing web pages 22

opening multiple pages 23

searching for information by voice 23

Windows Media Player 44

WLAN

activating 45

finding and connecting to networks 45

using WPS 46

world clock 54

YouTube

uploading videos 27

watching videos 26

## Declaration of Conformity (R&TTE)

**We, Samsung Electronics**

declare under our sole responsibility that the product

### GSM WCDMA Wi-Fi Mobile Phone : GT-P1010

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

|        |                                    |
|--------|------------------------------------|
| SAFETY | EN                                 |
|        | EN                                 |
|        | EN                                 |
| SAR    | EN                                 |
|        | EN                                 |
|        | IEC                                |
| EMC    | Council Recommendation 1999/519/EC |
|        | EN                                 |
|        | EN                                 |
|        | EN                                 |
|        | EN                                 |
| RADIO  | EN                                 |
|        | EN                                 |
|        | EN                                 |
|        | EN                                 |
|        | EN                                 |

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,  
Churchfield Road,  
Walton-on-Thames,  
Surrey, KT12 2TD, UK\*  
Identification mark: 0168

**CE0168!**

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

2010. XX. XX

(place and date of issue)



Joong-Hoon Choi / Lab Manager

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

# FCC Notice and Cautions

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The GALAXY may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the GALAXY if such interference cannot be eliminated. Vehicles using petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Within the 5.15–5.25 GHz band, UNII devices will be restricted to indoor operations to reduce any potential for harmful interference to co-channel MSS operations in US.

## Cautions

Changes or modifications made in the radio device, not expressly approved by Samsung, will void the user's authority to operate the equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the device warranty if said accessories cause damage or a defect to the device. Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

# Health and safety information

## Exposure to Radio Frequency (RF) Signals

### Certification Information (SAR)

Your wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC

requires wireless devices to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using recommended operating positions accepted by the FCC with the GALAXY transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the GALAXY while operating can be well below the maximum value. This is because the GALAXY is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model GALAXY are performed in positions and locations (e.g. near the body) as required by the FCC.

For typical operations, this model GALAXY has been tested and meets the FCC exposure guidelines.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model GALAXYs can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. This site uses the FCC ID number **A3LGTP1010A**

You can check the FCC ID on the rear case. Once you have the FCC ID number for a particular GALAXY, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular GALAXY. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).

## Operating Environment

Remember to follow any special regulations in force in any area and always switch your GALAXY off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the GALAXY or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.