



Reliability Sensor Triggering Data Bottom Edge

**Sensor triggering distance on the Bottom side
with respect to the Right edge**

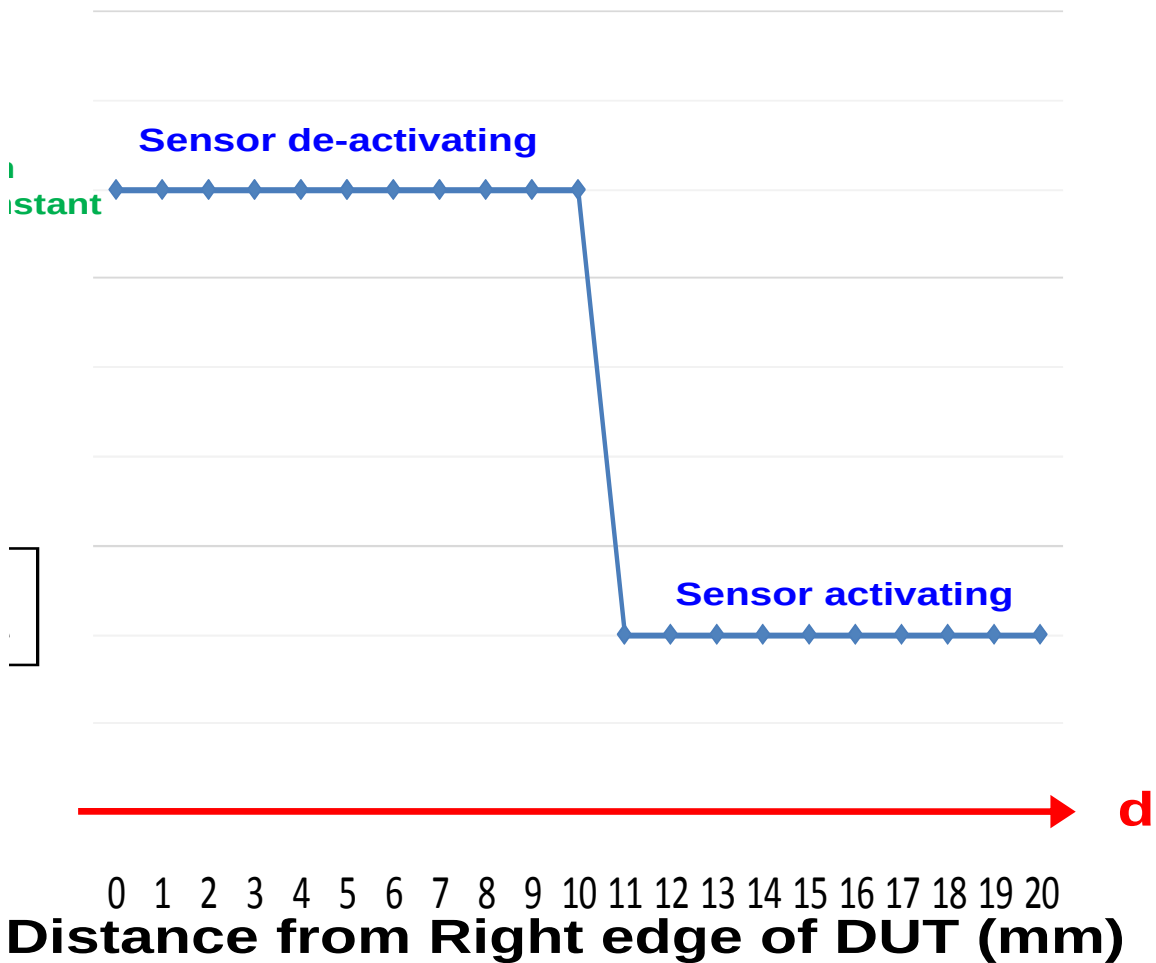

Reliability Sensor Triggering Data Back side, Right

Sensor triggering distance on the Back side with respect to the Right edge

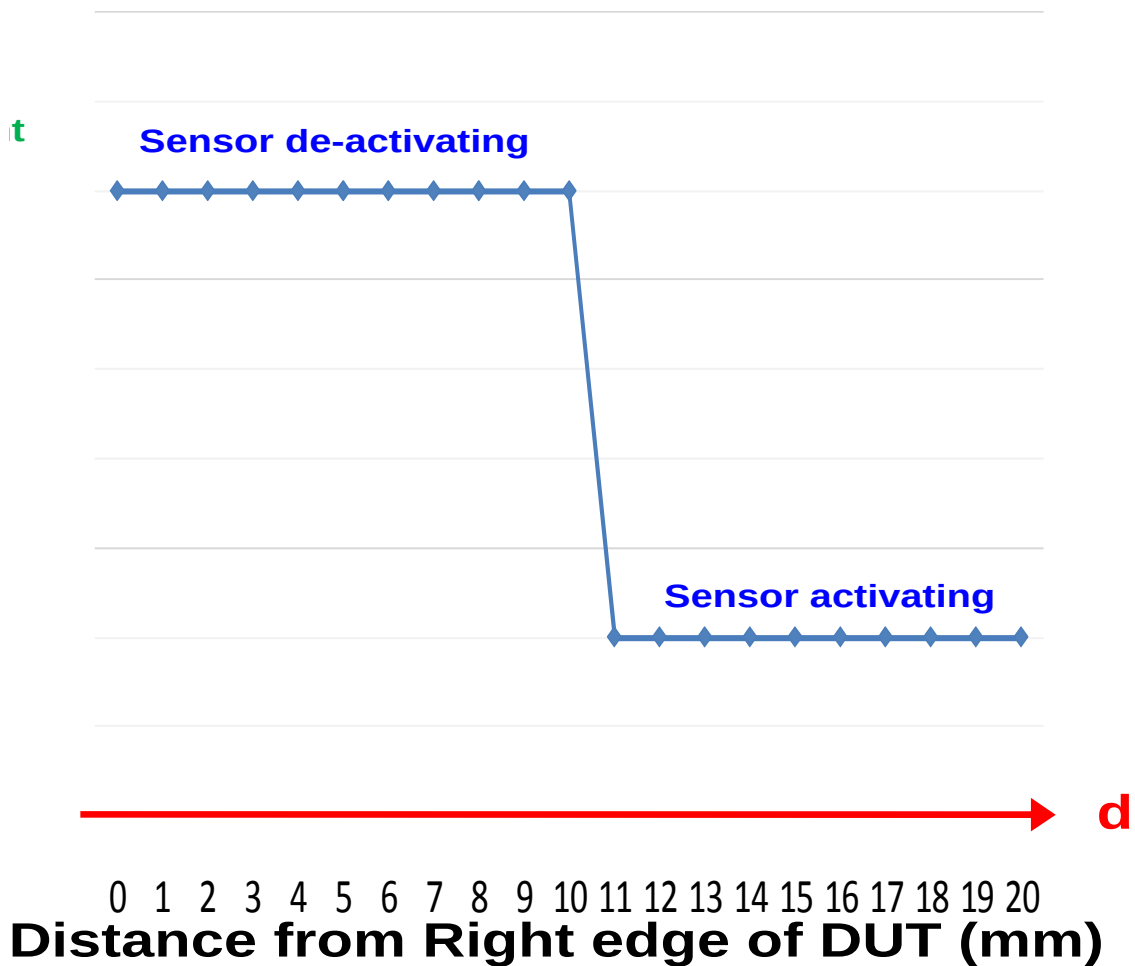

Reliability Sensor Triggering Data at the Vertex, by Angle

**Triggering angle of Grip sensor between phantom
And the bottom side**

