

3. NAM PROGRAMMING

NAM features can be programmed as follows:

Notes:

- If you enter the NAM program mode, each item shows the currently stored data. Go to the next item by pressing **STO**.
- You can modify the data by entering a new data.
- If you enter a wrong digit, press **CLR** to delete the last digit. Press and hold **CLR** to delete all digits.
- To scroll items backwards or forwards, press the **VOLUME** button on the left side of the phone.

General Setup

LCD Display	Key in	Function
47*869#08#9	47*869#08#9	-selects NAM programming
NAM program 1:General 2:Setup NAM1	1	-choose 'GENERAL'
ESN B0000000	Volume;ã	-Electronic Serial Number of the phone is displayed
CAI version 2	Volume;ã	-Common Air Interface version is displayed
SCM 00101010	Volume;ã	-Station Class Mark displays the power class, transmission, slotted class, dual mode.
Lock Code 0000	(0000) 4-digit code STO	Lock code, current status is displayed -to change, enter new code. -stores it
Slot Mode Yes	* or # STO	Slot mode. 'Yes' indicates the slot mode. -changes the status. -stores it.
Slot Index 2	0-7 STO	Slot mode index. The higher,the longer sleeping time -to change,enter new one. -stores it.
Pref NAM1... Digital only	STO	Preferred system selection for NAM1 -changes the system. -stores it.
Pref NAM2... Digital only	STO	Preferred system selection for NAM2 -changes the system. -stores it.

LCD Display	Key in	Function
Pref NAM3... Digital only	STO	Preferred system selection for NAM3 -changes the system. -stores it.
Pref NAM4... Digital only	STO	Preferred system selection for NAM4 -changes the system. -stores it.

Setting Up NAM1

LCD Display	Key in	Function
NAM Program 1:General 2:Setup NAM1	2	-Choose 'Setup NAM1.'
IMSI_MCC 454	number STO	IMSI Moble Country Code,current code is displayed. -to change,enter new one. -stores it.
IMSI_MNC 05	number STO	IMSI Mobile Network Code,current code is displayed. -to change,enter new one. -stores it.
CDMA TEL NO. 85200000000	phone number STO	CDMA curren number is displayed. -to change, enter new one. -stores it.
CDMA pref.. A pref	* or # STO	Preferred system selection,current system is displayed. -changes the system. -stores it.
CDMA ACCOLC 0	class number STO	CDMA Access Overload Class,current status is displayed. -to change,enter new one. -stores it.
Pchn Sys A 283	channel number STO	Preferred channel currently used under system A -to change,enter new one. -stores it.
Pchn Sys B 384	channel number STO	Preferred channel currently used under system B -to change,enter new one. -stores it.
Schn Sys A 691	channel number STO	Second channel currently used under system A -to change,enter new one. -stores it.
Schn Sys B 777	channel number STO	Second channel currently used under system B -to change,enter new one. -stores it.
CD Acq SID 1 0	ID number STO	1st Acquisition system ID,current status is displayed. -to change,enter new one. -stores it.

LCD Display	Key in	Function
CD lockSID 1 10640	ID number STO	1st lock system ID,current status is displayed. -to change,enter new one. -stores it.
CDMA HomeSID Yes	* or # STO	CDMA Home system ID,current status is displayed -changes the status. -stores it.
CDMA fSID Yes	* or # STO	CDMA foreign SID,current status is displayed. -changes the system. -stores it.
CDMA fNID Yes	* or # STO	CDMA foreign NID,current status is displayed. -changes the system. -stores it.
SID #1 10641	number STO	first SID written in the list,current status is displayed. -to change,enter new one. -stores it.
NID #1 65835	number STO	first NID written in the list,current status is displayed. -to change,enter new one. -stores it.
SID #2 13	number STO	2nd SID written in the list,current status is displayed. -to change,enter new one. -stores it.
NID #2 0	number STO	2nd NID written in the list,current status is displayed. -to change,enter new one. -stores it.
SID #3 0	number STO	3rd SID written in the list,current status is displayed. -to change,enter new one. -stores it.
NID #3 0	number STO	3rd SID written in the list,current status is displayed. -to change,enter new one. -stores it.

LCD Display	Key in	Function
SID #4		4th SID written in the list,current status is displayed.
0	number STO	-to change,enter new one. -stores it.
NID #4		4th NID written in the list,current status is displayed.
0	number STO	-to change,enter new one. -stores it.

Setting Up NAM2

LCD Display	Key in	Function
NAM Program 1:General 2:Setup NAM1	3	-Choose 'Setup NAM2'

The NAM2 setup program is the same as 'NAM1'.

Setting Up NAM3

LCD Display	Key in	Function
NAM Program 3:Setup NAM2 4:Setup NAM3	4	-Choose 'Setup NAM3'.

The NAM3 setup program is the same as 'NAM1'.

Setting Up NAM4

LCD Display	Key in	Function
NAM Program 5:Setup NAM4	5	-Choose 'Setup NAM4'

The NAM4 setup program is the same as 'NAM1'.


5. TEST PROCEDURE

TUNE-UP PROCEDURE

List of Equipment

- DC Power Supply
- Test Jig
- Test Cable
- CDMA Mobile Station Test Set HP8924C, HP83236A, CMD-80, etc
- Spectrum Analyzer(include CDMA test mode) HP8596E

Configuration of Test

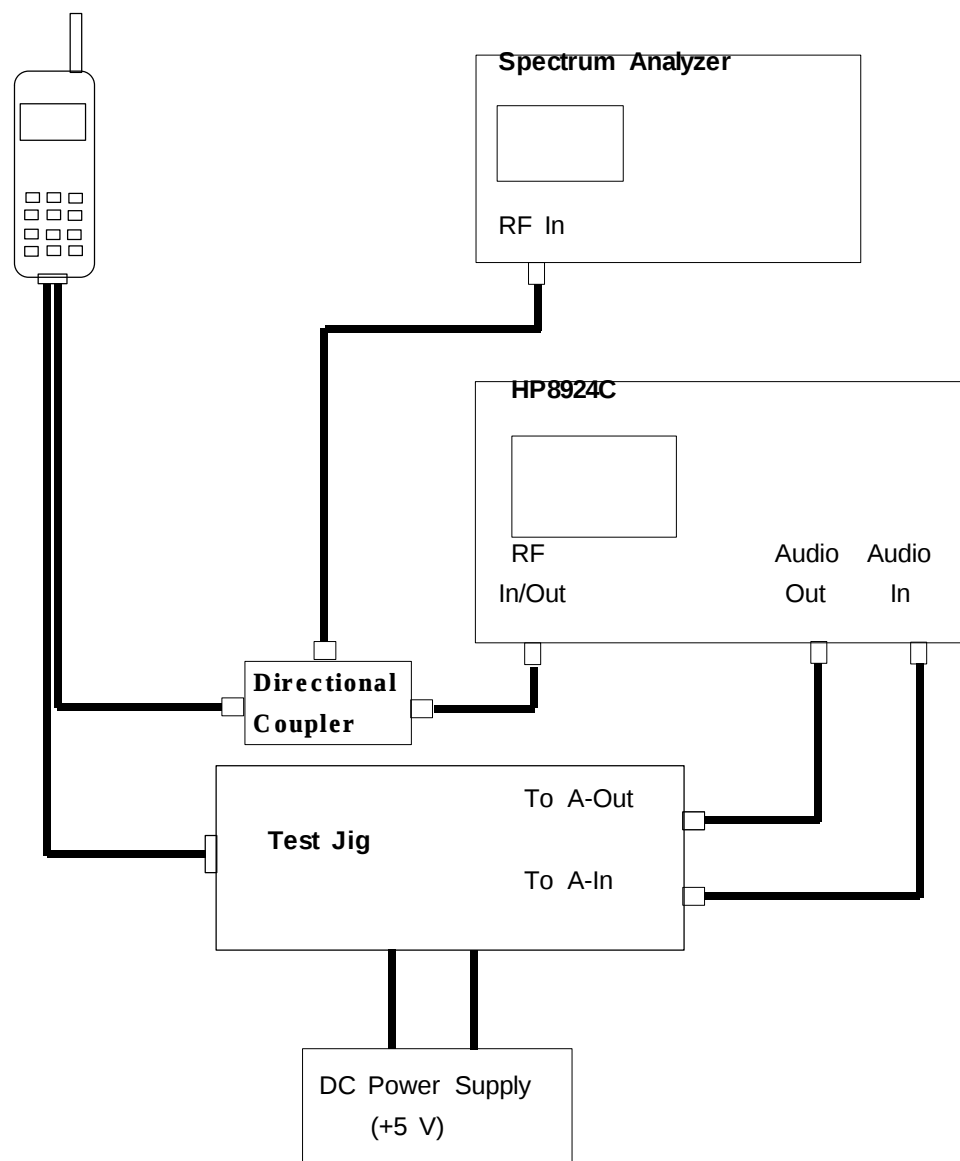

Change to Test Mode

A. To change the phone from Normal Mode to test Mode, You should enter the following keys.

" * 7 5 9 # 8 1 3 5 8 0 "

B. The command ;°0 1"(Suspend) is entered to start test.

C. To finish the Test Mode, You should enter the command "0 2".

Channel Selection and Tx Power Output level Control

1. CDMA

A. You should change the phone from Normal Mode to Test mode

B. The command ;°0 1"(Suspend) is entered to start test.

C. You should enter the following keys.

" 0 9 X X X X #, 0 7, 7 1 X X X #, 3 4 "

- If you enter the command "0 9", You can select the channel

ex) 0 9 0 3 6 3 (under-bar means channel number)

- The command "0 7_i± means Carrier On (Carrier Off : ;°0 8_i±)

- If you enter the command "7 1", You can control the power output level. Following under-bar means AGC code. And you can control the power output level using Volume Up/Down Keys.


ex) 7 1 4 7 5

- If you enter the command "3 4", You can spread the carrier.

D. After enter the command "7 4" and control the Tx Power Output Level to be 0.0dBm using Volume Up/Down keys, press "STO" key to store Data in EEPROM.

TEST CABLE DESCRIPTION FOR SCH-470

1. TEST CABLE

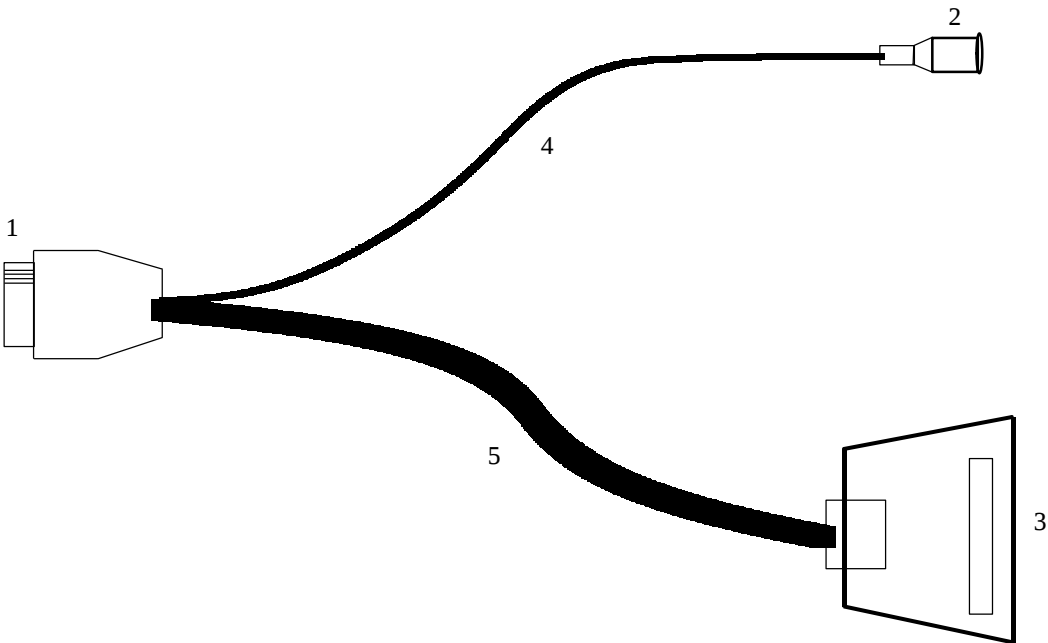


2. TEST CABLE CONNECTIONS

1	PLUG CONNECT TO SCH-470
2	BNC CONNECTOR (RF)
3	Dsub 25PIN CONNECTOR (DATA)
4	RF CABLE
5	DATA CABLE

3. Dsub 25 PIN CONNECTOR PIN DESCRIPTION (TEST CABLE 1, BACK SIDE)

DATA DESCRIPTION	Dsub CONN. PIN NO.
Vcc	4, 5, 6
GND	13, 23, 24, 25
PW ON/OFF	7
TX AUDIO	10
TX DATA	22
RX AUDIO	12
RX DATA	21
RSSI	8

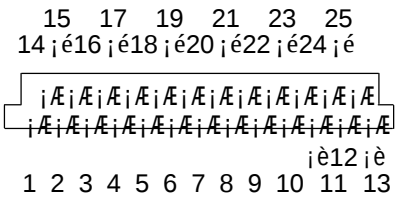

4. CONVERSION TABLE OF FREQUENCY vs CHANNEL

T Y P E	CHANNEL	CONVERSION EQUATION	REMARK
TX FREQUENCY	1 ; N ; 799 990 ; N ; 1023	F=0.03 ; N + 825.00 F=0.03 ; (N-1023) + 825.00	N ; CH NUMBER F ; FREQUENCY
RX FREQUENCY	1 ; N ; 799 990 ; N ; 1023	F=0.03 ; N + 870.00 F=0.03 ; (N-1023) + 870.00	

CDMA MODE

TEST ITEM	STEP	PROCEDURE
1. PREPARE	a b c d e f	Connect the test equipment Select FM mode: press [MENU 6], choose 'CDMA ONLY' Store the CDMA mode: press [STO] Enter the test mode: press [* 7 5 9 # 8 1 3 5 8 0] If you press a wrong key, press [#] key and then enter new command. To exit the test mode at any time : press [0 2]
2. FREQUENCY ACCURACY	a b c d e	Set the channel 363: press [0 9 0 3 6 3] Turn the carrier on and set the power level. : press [0 7 7 1 X X X] Measure the frequency accuracy (spec: $\pm 300\text{Hz}$) To adjust the Frequency Accuracy : press [8 9] and use volume key Store the Frequency Accuracy in EEPROM: Press [STO]
3. OCCUPIED CDMA BAND WIDTH	a b c	Set the channel 363: press [0 9 0 3 6 3] Turn the carrier on and set the power level. : press [0 7 3 4 7 1 X X X] Measure the Band Width. (spec: 1.32MHz)
4. LIMITATIONS ON EMISSIONS	a b c	Set the channel 363: press [0 9 0 3 6 3] Turn the carrier on and set the power level. : press [0 7 3 4 7 1 X X X] Measure the spurious at $F_c \pm 900\text{KHz}$, $F_c \pm 1.98\text{MHz}$, $2F_c$, $3F_c$, $1/2F_c$ spec: $F_c \pm 900\text{KHz}$ below 42dBc/30KHz $F_c \pm 1.98\text{MHz}$ below 54dBc/30KHz Outside Receive Band $43+10\log(\text{PY})$ PY: Mean output power in watts
5. GATED POWER & TIME	a b c d e	Set the Service option: 2 Set the Data Rate: Eighth (1200bps) Registering: HHP --> HP8924C Call : HP8924C --> HHP Measure the Gated Power & Time spec: Gated Power at least 20dB Gated Time - Rising Time: below 6 μs Falling Time: below 6 μs Burst Time: below 1.25ms