



# **Smartphone**

## **SGH-i620**

### **User's Guide**

# Table of contents

|                                        |   |
|----------------------------------------|---|
| Important safety precautions . . . . . | 5 |
|----------------------------------------|---|

## **CHAPTER 1**    **Getting started**

|                                         |    |
|-----------------------------------------|----|
| What's in the box? . . . . .            | 7  |
| Getting to know your device . . . . .   | 8  |
| Installing the SIM card . . . . .       | 11 |
| Installing the battery. . . . .         | 13 |
| Charging your device . . . . .          | 14 |
| Turning your device on or off . . . . . | 16 |

## **CHAPTER 2**    **The basics**

|                                         |    |
|-----------------------------------------|----|
| Using the Home screen . . . . .         | 17 |
| Start menu screen . . . . .             | 21 |
| Entering text . . . . .                 | 22 |
| Customising your device . . . . .       | 23 |
| Using the quick launcher . . . . .      | 35 |
| Searching for items. . . . .            | 37 |
| Locking the touch keys . . . . .        | 38 |
| Using an optional memory card . . . . . | 39 |
| Adding and removing programs . . . . .  | 41 |
| Managing certificates . . . . .         | 43 |
| Resetting your device . . . . .         | 44 |
| Using online help . . . . .             | 45 |

## **CHAPTER 3**    **Synchronisation**

|                                                |    |
|------------------------------------------------|----|
| Installing ActiveSync. . . . .                 | 47 |
| Customising connection settings. . . . .       | 48 |
| Connecting your device to a computer. . . . .  | 48 |
| Synchronising information . . . . .            | 50 |
| Customising synchronisation settings . . . . . | 51 |

**CHAPTER 4 Call functions**

|                                                |    |
|------------------------------------------------|----|
| Turning the phone functions on and off . . . . | 54 |
| Using the Dialling screen . . . . .            | 55 |
| Making a call . . . . .                        | 55 |
| Advanced calling features . . . . .            | 56 |
| Answering or ignoring a call . . . . .         | 59 |
| Options during a call . . . . .                | 59 |
| Call-related features . . . . .                | 62 |
| Customising your phone functions . . . . .     | 65 |

**CHAPTER 5 Messaging, Internet, and Messenger**

|                                  |    |
|----------------------------------|----|
| Messaging . . . . .              | 71 |
| Internet Explorer . . . . .      | 86 |
| Windows Live . . . . .           | 91 |
| Windows Live Messenger . . . . . | 91 |
| RSS Reader . . . . .             | 95 |

**CHAPTER 6 Organiser**

|                       |     |
|-----------------------|-----|
| Contacts . . . . .    | 98  |
| Alarms . . . . .      | 104 |
| Calendar . . . . .    | 105 |
| D-Day . . . . .       | 109 |
| Tasks . . . . .       | 110 |
| Voice Notes . . . . . | 112 |
| World Clock . . . . . | 113 |

**CHAPTER 7 Multimedia**

|                                |     |
|--------------------------------|-----|
| Camera . . . . .               | 115 |
| Windows Media Player . . . . . | 121 |
| Podcast . . . . .              | 129 |
| Adobe Flash Lite . . . . .     | 131 |
| Contents Manager . . . . .     | 132 |

|                       |                                                          |     |
|-----------------------|----------------------------------------------------------|-----|
| <b>CHAPTER 8</b>      | <b>Extra programs</b>                                    |     |
|                       | Games . . . . .                                          | 137 |
|                       | Calculator . . . . .                                     | 138 |
|                       | Smart Converter . . . . .                                | 139 |
|                       | Stopwatch . . . . .                                      | 140 |
|                       | Picxel Viewer . . . . .                                  | 141 |
|                       | Office Mobile . . . . .                                  | 143 |
|                       | File Manager . . . . .                                   | 149 |
|                       | Task Manager . . . . .                                   | 150 |
|                       | SIM Manager . . . . .                                    | 151 |
|                       | SIM Application Toolkit . . . . .                        | 153 |
| <br><b>CHAPTER 9</b>  | <br><b>Getting connected</b>                             |     |
|                       | Beaming with Bluetooth . . . . .                         | 154 |
|                       | Connecting to a computer via USB . . . . .               | 158 |
|                       | Internet Sharing . . . . .                               | 159 |
|                       | Connecting to the Internet or your network . . . . .     | 160 |
| <br><b>CHAPTER 10</b> | <br><b>Troubleshooting</b>                               |     |
|                       | General problems . . . . .                               | 165 |
|                       | Call problems . . . . .                                  | 168 |
|                       | Power and charging problems . . . . .                    | 169 |
|                       | Program problems . . . . .                               | 171 |
| <br><b>CHAPTER 11</b> | <br><b>Regulatory notices</b>                            |     |
|                       | SAR certification information . . . . .                  | 176 |
|                       | European Union notice . . . . .                          | 177 |
|                       | Important safety information . . . . .                   | 178 |
|                       | Safety precautions for power supply unit . . . . .       | 180 |
|                       | Care and maintenance . . . . .                           | 180 |
|                       | Microsoft End User License Agreement . . . . .           | 182 |
|                       | DESCRIPTION OF OTHER RIGHTS<br>AND LIMITATIONS . . . . . | 184 |

## **Important safety precautions**

Read these guidelines before using your wireless device. Failure to comply with them may be dangerous or illegal.

### **Drive safely at all times**

Do not use a hand-held device while driving. Park the vehicle first.

### **Switch off the device when refuelling**

Do not use the device at a refuelling point (service station) or near fuels or chemicals.

### **Switch off in an aircraft**

Wireless devices can cause interference. Using them in an aircraft is both illegal and dangerous.

### **Switch off the device near all medical equipment**

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

### **Interference**

All wireless devices may be subject to interference, which could affect their performance.

### **Be aware of special regulations**

Meet any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference or danger.

### **Water resistance**

Your device is not water-resistant. Keep it dry.

## Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the device is switched on.

## Emergency calls

Key in the emergency number for your present location, then press .

## Keep your device away from small children

Keep the device and all its parts, including accessories, out of the reach of small children.

## Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you and your device and may be dangerous.

---

### CAUTION:

- The device could explode if the battery is replaced with an incorrect type.
  - Dispose of used batteries according to the manufacturer's instructions.
- 



At very high volumes, prolonged listening to a headset can damage your hearing.

---

## Qualified service

Only qualified service personnel may install or repair your device. Failure to do so may invalidate the warranty.

For more detailed safety information, see "Important safety information" on page 178.

# Getting started

Congratulations on the purchase of your new Smartphone! This chapter helps you set up your device, charge the device's batteries, and familiarise yourself with the different components of your device.

## What's in the box?

Your package contains the following items:

- Device
- PC data cable
- Battery
- Travel adapter
- CD-ROM<sup>1</sup>
- Quick Reference Guide

In addition, you can obtain the following accessories for your device from your local Samsung dealer:

- |                                   |                                |
|-----------------------------------|--------------------------------|
| • Car charger or adapter          | • Standard battery             |
| • Travel adapter                  | • Straight headset             |
| • PC data cable                   | • Bluetooth USB dongle kit     |
| • Micro SD card                   | • Ear microphone               |
| • Bluetooth mono & stereo headset | • Bluetooth hands-free car kit |

---

**Note:** The items supplied with your device and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

---


---

1. It contains Microsoft ActiveSync software, Add-on software and programs.


## Getting to know your device

### Front view

The following illustrations show the main elements of your device:

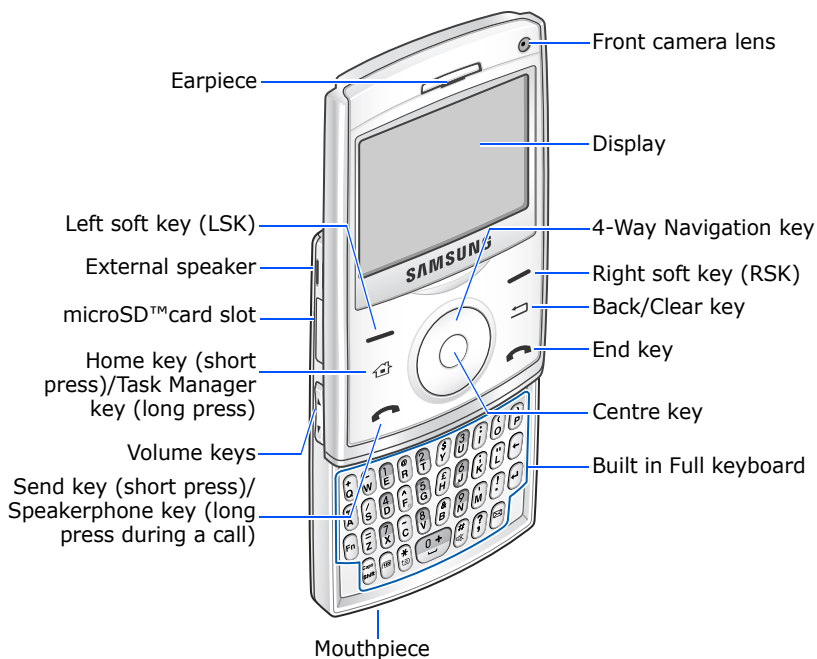

## Rear view

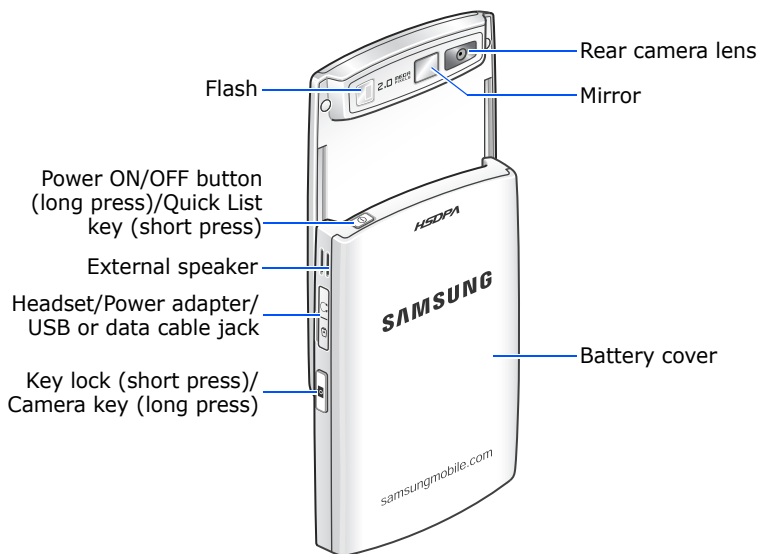

## Keys of your device

| Key | Description                                                                                                                                        |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------|
|     | <ul style="list-style-type: none"> <li>Press and hold to turn the device on or off.</li> <li>Press to open the Quick List screen.</li> </ul>       |
|     | <ul style="list-style-type: none"> <li>Press to switch to the Home screen from a program.</li> <li>Press and hold to open Task Manager.</li> </ul> |
|     | Press to perform the command shown on the screen immediately above the key.                                                                        |

| Key                                                                                 | Description                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <ul style="list-style-type: none"> <li>• Press to close the current menu and return to the previous menu or screen.</li> <li>• Press to delete characters in a text input field.</li> </ul>                     |
|    | <ul style="list-style-type: none"> <li>• Press to scroll through a list.</li> <li>• Press to move the cursor in a text input field.</li> </ul>                                                                  |
|    | Press to confirm your selection or input.                                                                                                                                                                       |
|    | <ul style="list-style-type: none"> <li>• Press to open the Dialling screen.</li> <li>• Press to make or answer a call.</li> <li>• Press and hold to activate the speakerphone feature during a call.</li> </ul> |
|    | <ul style="list-style-type: none"> <li>• Press to end a call.</li> <li>• Press to close the current menu and return to the previous menu or screen.</li> </ul>                                                  |
|    | Press to enter numbers, characters, and symbols.                                                                                                                                                                |
|    | Press to delete characters.                                                                                                                                                                                     |
|    | Press to use characters on the upper half of the keys in a text input field for once.                                                                                                                           |
|    | <ul style="list-style-type: none"> <li>• Press to confirm your selection or input.</li> <li>• Press to start a new line in a text input field.</li> </ul>                                                       |
|   | Press to change case in a text input field.                                                                                                                                                                     |
|  | Press to switch the text input mode to 123 mode and then back to the previous mode.                                                                                                                             |
|  | Press to change the text input mode.                                                                                                                                                                            |

| Key                                                                               | Description                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>• Press to enter a space between characters.</li> <li>• Press and hold to insert an international call prefix.</li> </ul>                                                                          |
|  | Press and hold to activate or deactivate the Silent profile from the Home screen.                                                                                                                                                         |
|  | Press to open the Messaging program.                                                                                                                                                                                                      |
|  | <ul style="list-style-type: none"> <li>• Press to adjust the audio volume.</li> <li>• Press to mute the call ringer as a call comes in. Press and hold to reject a call.</li> <li>• Press and hold to turn on the flash light.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>• Press to lock the touch keys.</li> <li>• Press and hold to open a specified program.</li> </ul>                                                                                                  |


## Installing the SIM card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many other details. For 3G services, you can purchase a USIM (Universal Subscriber Identity Module) card.


- Keep all miniature SIM cards out of the reach of small children.
- The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling the card.
- When installing the SIM card, always make sure that the device is switched off before you remove the battery.

## Inserting the SIM card

1. Remove the battery cover.

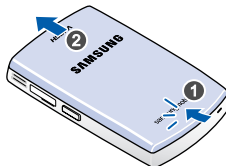


2. Insert and slide the SIM card, as shown, ensuring that the gold-coloured contacts of the card are face down.

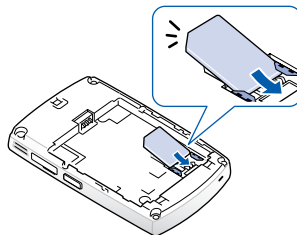

Continue to install the battery. See the next page.

## Removing the SIM card

To remove the SIM card, slide the card out of the holder, as shown.

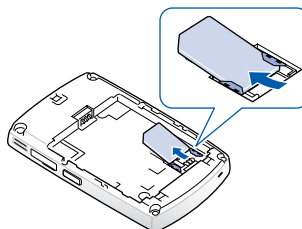


## Installing the battery


Your device is powered by a rechargeable Li-Ion battery.

### Installing the battery


1. Remove the battery cover, if necessary.

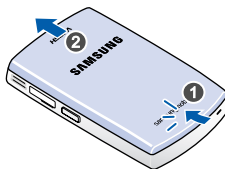

2. Insert the battery into the battery compartment, as shown.

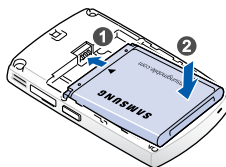

3. Reattach the battery cover.

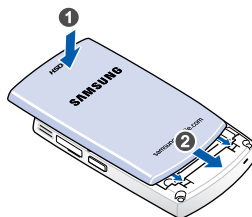

## Removing the battery

1. If necessary, press and hold  (located at the top-right of your device) until the power-off image displays.
2. Remove the battery cover.
3. Lift the battery away from the device.

## Charging your device


Your device is powered by a rechargeable Li-ion battery. Use the travel adapter to charge the battery, and use only Samsung approved batteries and chargers. Use of the wrong adaptor could damage your device and void your warranty.

---

**Note:** You must fully charge the battery before using your device for the first time. A discharged battery recharges fully in approximately 200 minutes. You can use the device while the battery is charging, but this causes the device to charge more slowly.


---

1. Plug the connector of the travel adapter into the jack on the right side of the device.

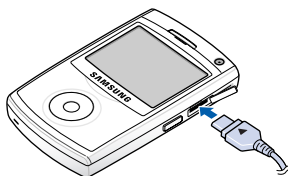


---

**Note:** The following illustration shows the correct and incorrect method for connecting the adapter. Verify the arrow on the adapter is showing and pointing to the device for a correct connection. If it is not, damage to the accessory port will occur therefore voiding the device's warranty.

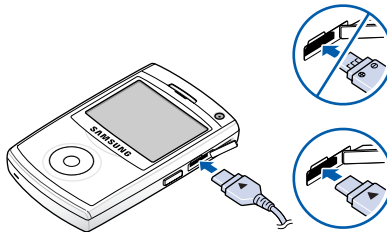

- 
2. Plug the travel adapter into a standard AC power outlet. When charging is finished, unplug the adapter from the power outlet.
  3. Remove the travel adapter from the device.

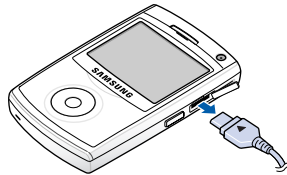

---

**Note:** Do not remove the battery while charging. It may cause malfunctions and may damage the device.

---

## Low battery warning

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Main Battery very low” message repeats at regular intervals on the display and the battery icon () displays. The backlight turns off to conserve the remaining battery power.

When the battery level becomes too low, the device automatically turns off.

## Turning your device on or off

Press and hold  to turn on your device. The device is logged into your home network and receives the signal from the network. You can now make or answer calls and use programs on the device.

To turn off the device, press and hold .

---

**Note:** Your device supports HSDPA (High-Speed Downlink Packet Access) connections. Because the HSDPA network configurations are different from country to country, a notification may appear to indicate that your HSDPA options have changed if you move across the boundaries between countries. To apply the new changes, you must restart your device. If you do not, making or receiving calls and transmitting data simultaneously may not work. In some countries, incoming and outgoing voice calls may be limited until the HSDPA networks are upgraded.

---

## The basics

This chapter explains basic information about using your device, such as customising your device and using online help.

### Using the Home screen

When you turn on your device, the Home screen, the device's idle screen, appears. You can also access this screen by pressing  from any program.

### Status bar

On the top line of the screen, the status bar displays icons to show your device's current status. Followings are some of the status icons you may see:

| Icon                                                                                | Description                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Shows the strength of the signal.<br>You can also view the following service status: <ul style="list-style-type: none"> <li>• : You are out of your service area.</li> <li>• : The phone functions are turned off.</li> </ul> |
|    | Appears when a call is in progress.                                                                                                                                                                                                                                                                                                                                                             |
|    | Appears when a data call is in progress.                                                                                                                                                                                                                                                                                                                                                        |
|   | Appears when the current call is on hold.                                                                                                                                                                                                                                                                                                                                                       |
|  | Appears when a GPRS connection is available in the network. When a GPRS connection is active,  appears.                                                                                                                                                                                                      |

| Icon                                                                                | Description                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Appears when you are roaming out of your home service area and logged onto a different GPRS network.                                                                                                                               |
|    | Appears when a 3G (UMTS) connection is available in the network.                                                                                                                                                                   |
|    | Shows the level of your battery power. The more bars you see, the more power you have remaining.<br>When the battery level is very low,  appears. |
|    | Appears when the ring type has been set to <b>Silent</b> in the current profile or the ring tone has been set to <b>None</b> in Sounds. For details, see page 26.                                                                  |
|    | Appears when the ring type has been set to <b>Vibrate</b> in the current profile or the ring tone has been set to <b>Vibrate</b> in Sounds. For details, see page 26.                                                              |
|    | Indicates that you can make calls using phone line 1 or 2 (network service).                                                                                                                                                       |
|    | Appears when you are roaming outside of your home area and logged onto a different network.                                                                                                                                        |
|    | Appears when Bluetooth is activated. For details, see page 154.                                                                                                                                                                    |
|  | Appears when a Bluetooth headset is connected to the device.                                                                                                                                                                       |
|  | Appears when an error occurs during synchronisation.                                                                                                                                                                               |

| Icon                                                                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Appears when a text (SMS) or multimedia (MMS) message has been received.                                                                                                                                                                                                                                                                                                                                                                                                |
|  | Appears when an instant message has been received.                                                                                                                                                                                                                                                                                                                                                                                                                      |
|  | Appears when a new voicemail has been received. <ul style="list-style-type: none"> <li>: A new voicemail from line 1.</li> <li>: A new voicemail from line 2.</li> <li>: A new voicemail from both lines.</li> </ul> |
|  | Appears when there is a call you have missed.                                                                                                                                                                                                                                                                                                                                                                                                                           |
|  | Appears when you have set incoming calls to be diverted to another destination.                                                                                                                                                                                                                                                                                                                                                                                         |

## Accessing information from the Home screen

From the Home screen, you can:

- check the service status and the current time and date
- view missed calls or unread messages
- view upcoming appointments
- play music files

### To access information from the Home screen:

1. From the Home screen, scroll to the item you want by pressing the Navigation keys and press .

2. Access items in the selected program by pressing the Navigation keys or sliding the thumbwheel.

For more information on these items, see the appropriate instructions for each task in this guide.

3. Press  or  to return to the Home screen.

## Customising the Home screen

You can customise the Home screen according to your preferences.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Display** → **Home Screen**.
3. Press the Up or Down Navigation key to scroll to an option, and press the Left or Right Navigation key to change the setting.

The following options are available:

- **Home screen layout:** Select the layout to be used for the Home screen.

---

**Note:** The **Samsung Living World** layout is easy to know the current time, signal strength, and country because of its graphical screen.

---

- **Colour scheme:** Select the colour scheme to be used for the Home screen.
- **Background image:** Select an image to use as a background image on the Home screen.
- **Time out:** Specify the length of time the device waits before returning the display to the Home screen if the device is not used.

4. When you have finished, press the **Done** soft key.

## **Start menu screen**

On the Start menu, you can access all of the programs in your device. On the Home screen, press the **Start** soft key to open the Start menu screen.

You can change the start menu type. Press the **Start** soft key, and select **Settings** → **Display** → **Start Menu Style**. Then select the option you want.

## **Opening programs or folders**

Scroll to a program or a folder by pressing the Navigation keys or sliding the thumbwheel, and press  to open it.

## **Switching between programs**

Your device is a multi-tasking device. You can run multiple programs at the same time and switch from one program to another. From any program, press  or  to switch to the Home screen. Then access another program from the Start menu or quick launcher.

---

**Note:** Your device supports multiple PDP so that you can activate multiple data connections at the same time. For example, you can use the MMS service while browsing the Internet. However, if a network does not support multiple PDP, you must end the current data connection in order to make a new data connection.

---

## Closing programs

Using Task Manager, you can end the programs which are currently open.

1. On the Home screen, press and hold .
2. Scroll to a program, press the **Stop** soft key. To close all of the running programs, press the **Menu** soft key and select **Stop All**.

## Entering text

Your device is equipped with a Full keyboard to support easy and quick text input. You can enter text as you would when using a computer's keyboard.

The keys are labelled with alphabet on the lower half and numbers and symbols on the upper half. Press the key corresponding to the character you want to enter. To switch between using the upper case characters and lower case characters, press .

You can move the cursor by pressing the Navigation keys. To delete a character, press .

In addition, you can use the following function keys:

- : deletes characters.
- : starts a new line.
- : changes the text input mode to Upper case mode or Lower case mode.
- : switches to 123 mode.

- : allows you to change the text input mode. You can switch between ABC mode and T9 mode in which displays the word choices for your key presses. 123 mode and Symbol mode are also available for entering numbers and symbols. Using the **Languages** option, you can change the language for T9 mode.
- : press and hold to switch to Symbol mode.

## Customising your device

You can customise the device settings to suit the way you work.

### Regional settings

You can change number, currency, and time and date formats appropriate to the countries in question.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Regional Settings**.
3. Select the option you want in each field.
4. When you have finished, press the **Done** soft key.
5. If you changed the **Language** or **Locale** option, press the **OK** soft key.

Then you need to turn the device off and then back on to make your changes take effect.

## Time and date settings

The **Date and Time** setting enables you to set the date, time, and time zone.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Date and Time**.
3. Select your time zone and set the current date and time.
4. If necessary, select a mode for updating the current time and date in the **Time zone updating** field:

**Manual only:** you can set the time and date manually.

**Prompt first:** the device will ask you if you want to update time information.

---

**Note:** When you set the device to automatically update time information, the time zone on the device may appear to be different from the time zone you are in.

---

**Automatic:** your device will receive time information from the network and automatically update the current time. This option is available only if supported by your network.

5. When you have finished, press the **Done** soft key.

---

**Note:** You can change the time and date format to be displayed in **Regional Settings**.

---

## Power settings

You can conserve battery power by adjusting the time-out settings for the display.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Power Management**.
3. Select the power settings:
  - **Battery**: You can check the remaining battery power.
  - **Backlight time out**: You can select the length of time the display backlight stays on when you do not use the device.
  - **Display time out**: You can select the length of time the display stays on. During standby, the device goes to Sleep mode after a specified period of time, so very little power is being consumed.
  - **Display brightness**: You can adjust the brightness for the display.
  - **Keypad backlight time out**: you can select the length of the keypad backlight stays on when you do not use the device.
  - **Keypad backlight on**: Choose from **Any time** or **Custom time**. If you have chosen **Custom time**, enter the starting time and ending time for the keypad to work.
4. When you have finished, press the **Done** soft key.

## Accessibility settings

You can configure the options to increase the accessibility to your device's functions.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **More...** → **Accessibility**.
3. Select the options you want.
  - **System font size:** You can set the size of the font on your screen.
  - **Confirmation time out:** You can set the delay before an unconfirmed action times out.
  - **In-call alert volume:** You can set the volume of the alert tone that sounds when you are on a call.
4. When you have finished, press the **Done** soft key.

## Sound settings

You can customise sound settings for various events on the device.

### Setting sounds and notifications

Your device reminds you in various ways when you have something to do, receive a message, or press the keys on the device. For example, if you have set up an appointment, you are notified in any of the following ways:

- A sound, which you can specify, plays.
- Your device vibrates.

You can change device sounds by choosing types or sounds for each event.

**To choose a ringtone for the call ringer:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Sounds** → **Ring tone**.
3. Select the ringtone you want.
4. Press the **Done** soft key.

**To choose an alarm tone:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Sounds** → **Alarm**.
3. Select the reminder type for the alarm.
4. Press the **Done** soft key.

**To choose a message notification:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Sounds** → **Notifications**.
3. Select a notification for each message type.
4. Press the **Done** soft key.

**To choose reminder types and sounds:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Sounds** → **System Sound**.

3. Select the event for which to specify a sound.
4. Select the reminder type or ringtone.
5. When you have finished, press the **Done** soft key.

**To choose a keypad tone:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Sounds** → **Keypad Tone**.
3. Select a keypad tone.
4. Press the **Done** soft key.

---

**Notes:**

- You can connect to the Internet and then download ringtones that are in a .wav or .mid format.
  - To use an .mp3 or .wma file as your call ringtone, it must be saved in a Storage or Storage Card folder.
- 

**Changing the sound profile**

Using Profiles, you can adjust and customise the device tones for different events or environments and then apply the settings as a group. The currently selected profile displays on the Home screen.

**To change profiles:**

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Profiles**. The list of profiles opens.
3. Select the profile you want.

---

**Notes:**

- You can quickly change the profile. Press  and select the profile you want from the Quick List.
  - Press and hold  from the Home screen to quickly activate or deactivate the Silent profile.
- 

**To customise profiles:**

1. On the Profiles screen, scroll to the profile you want.
2. Press the **Menu** soft key and select **Edit**.
3. Change the settings in each field. Available options may differ depending on the selected profile.
4. When you have finished, press the **Done** soft key.

---

**Note:** To change all profile settings to their factory default, press the **Menu** soft key from the profile list and select **Reset to default**.

---

## Owner information setting

Owner Information identifies the owner or user of the device. Set your contact information in case you have lost the device.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **More...** → **Owner Information**.
3. Fill in each input field.
4. When you have finished, press the **Done** soft key.

## Error reporting setting

Your device has the Error Reporting function which informs you of errors in a program that can give a crash to the device system. You can enable or disable this function.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **More...** → **Error Reporting**.
3. Select **Enable** or **Disable** and press the **Done** soft key.

## Security settings

With options in Security, you can protect your device and SIM card from unauthorised use.

### Locking the device

You can protect your device using the Device Lock feature. Once the feature is enabled, your device is automatically locked after the specified period of inactivity.

---

**Note:** Even if the device is locked, you will be able to receive calls.

---

#### To lock the device:

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **Device Lock**.
3. Select **Prompt if device unused for** and select a length of time the device waits for before locking itself when it is not in use.

4. Scroll to the **Password type** field and select a password type.
  - **Simple PIN:** Use a numeric password. A password must be more than 4 characters.
  - **Strong alphanumeric:** Use an alphanumeric password. A password must be more than 7 characters and contain at least 3 of uppercase and lowercase letters, numbers, or punctuation marks.
5. Enter a password in the **Password** field.
6. Re-enter the same password in the **Confirm password** field for confirmation.
7. Press the **Done** soft key.
8. Press the **Yes** soft key.

---

**Note:** Press  and select **Lock** from the Quick List to manually lock the device.

---

### **To unlock your device:**

1. On the Home screen, press the **Unlock** soft key.
2. Enter the password and press the **Unlock** soft key.

### **Activating the SIM PIN**

When SIM PIN is enabled, you must enter your PIN supplied with your device each time you turn the device on or insert the current SIM card into another device. Consequently, any person who does not have your PIN cannot use your device without your approval.

1. On the Home screen, press the **Start** soft key.

2. Select **Settings** → **More...** → **Security** → **Enable SIM PIN**.
3. Enter the PIN and press the **Done** soft key.

### Locking the SIM card

When SIM Lock is enabled, your device works only with the current SIM card. To use another SIM card, you must enter the SIM lock password.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **Enable SIM Lock**.
3. Enter a password for your SIM card and press the **Done** soft key.
4. Re-enter the password for confirmation and press the **Done** soft key.

### Changing PIN2

A PIN2 is used for certain functions supported by the SIM card. You can change the PIN2 supplied with your SIM card to a new one.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **Change PIN2**.
3. Enter the current PIN2 in the **Old PIN** field, then a new PIN in the **New PIN** field, and re-enter the new PIN in the **Confirm new PIN** field.
4. Press the **Done** soft key.

## Changing the call barring Password

You can change the default call barring password supplied by your service provider.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **Change Barring Password**.
3. Enter the old password, then a new password, and re-enter the new one for confirmation.
4. Press the **Done** soft key.

## Side key setting

You can change the program assigned to the user-defined function key, , to your favourite program.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Side Key Settings**.
3. Select the program you want.
4. Press the **Done** soft key.

## Menu shortcut settings

If you have set the Start menu style to **List**, then number keys can be used as shortcut keys to directly access specific programs that exist in the Start menu.

---

**Note:** You can also assign phone numbers, email addresses, or web pages in Contacts to the number keys as speed dial entries. For details about setting the speed dial list, see page 62.

---

### Assigning a shortcut to a key

1. On the Home screen, press the **Start** soft key.
2. Scroll to the program you want to assign to a key.
3. Press the **Menu** soft key and select **Add Speed Dial**.
4. If necessary, enter the name you want in the **Name** field.
5. Select a location in the **Keypad assignment** field and press the **Done** soft key.

### Accessing a menu using its shortcut

On the Home screen, use one of the following ways:

- For one-digit shortcut key, press and hold the number key.
- For two-digit shortcut keys, press the first number key and then press and hold the last number key.

## Using the quick launcher

Your device provides you with the quick launcher, which allows you to set up shortcuts to your favourite programs, website, files, or folders, and quickly access them.

### To open the quick launcher:

In Idle mode, press . You can also press the **Start** soft key, press the **More** soft key, and select **Accessories** → **MITs Launcher**.

### Adding items to the quick launcher

1. From the quick launcher window, press the **Menu** soft key and select **Add** → a type of item to be added.
2. Select a program, URL address, file, or folder.
3. Repeat steps 2 and 3 to add other items.

### Accessing items from the quick launcher

From the quick launcher window, press the Navigation keys to scroll to the item you want and press .

### Managing the group of the quick launcher

1. Form the quick launcher window, press the **Menu** soft key and select **Edit Group**.
2. To add a new group, press the **Menu** soft key and select **New**. Enter a name and press the **Done** soft key.

To delete the selected group, press the **Menu** soft key and select **Delete**. Press the **Yes** soft key to confirm the deletion.

To change the group name, press the **Menu** soft key and select **Rename**. Change the name and press the **Done** soft key.

To change the order of the groups, press the **Menu** soft key and select **Move**. Press Up or Down Navigation key to move the selected group to the position you want and press the **Done** soft key.

3. Press the **Done** soft key.

### Changing the order of the quick launcher window

1. From the quick launcher window, scroll to the item you want.
2. Press the **Menu** soft key and select **Move**.
3. Press the Up or Down Navigation key to move the selected item to the position you want.
4. Press the **Done** soft key.

### Removing items from the quick launcher

1. From the quick launcher window, scroll to the item you want.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to confirm the deletion.

## Searching for items

Your device provides a search program, Smart Search, to allow you to easily search for data or media files in your device and quickly access them.

### Searching for an item

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **Smart Search**.
3. Enter the first few letters of an item name in the **Find** field and select an item type in the **Type** field.
4. Select **Match case** and/or **Match whole word** to allow the device to search for the matching items more quickly.
5. Press the **Go** soft key. The device searches its file directory or programs and lists all matching items.
6. Scroll to the one you want and press the **Open** soft key.

### Setting up the search options

You can change the search options for each item type to provide the device with more specific information to narrow the search items.

1. From the Smart Search screen, press the **Menu** soft key and select **Options**.

2. Select the item type you want and set each option.
  - **Contact:** Select the types of contact information you want to include in your search.
  - **Appointment:** Select whether to include notes, or set a date for the device to search for appointments.
  - **Task:** Select whether to include notes in your search.
  - **Text message:** Select the types of message information you want to include in your search, or set a date for the device to search for text messages.
  - **E-mail:** Select the types of email information you want to include in your search, or set a date for the device to search for email messages.
  - **Phone call:** Select the types of calls you want to include in your search.
  - **File name:** Select the storage locations you want to include in your search.
3. When you have finished, press the **Done** soft key.

## Locking the touch keys

You can lock the touch keys on the device to keep any accidental key presses from causing a program's launch or device switch on or off.

- To lock the keypad, press .
- To unlock the touch keys, press any key except for touch keys.

## ■ ■ Using an optional memory card

Your device has an expansion slot compatible with microSD memory cards, which are primarily used to back up or transfer files and data.


---

**Note:** Use only compatible memory cards with your device. Using incompatible memory cards, such as Secure Digital (SD) cards, may damage the card, as well as the device, and data stored on the card.

---


### Inserting the memory card

Push the memory card into the slot with the label side face down until it clicks into place. The card is secure when it is not protruding from the device.

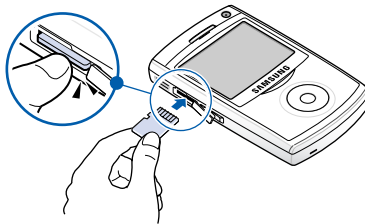

## Removing the memory card

Push the memory card in and release so that it is disengaged from the slot. Then remove the card from the device.

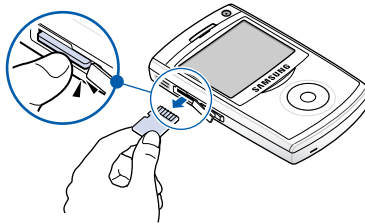

## Formatting the memory card

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **More...** → **Memory Information**.
3. Press the **Menu** soft key and select **Format Storage Card**.
4. Press the **Yes** soft key to confirm the formatting.

## Adding and removing programs

You can install any program created for your device, as long as the device has enough memory. The most popular place to find software for your device is on the Microsoft web site (<http://www.microsoft.com/windowsmobile/smartphone>).

### Adding programs using ActiveSync

You can install programs downloaded from the Internet or included on the supplied software CD-ROM by performing synchronisation between your device and your computer.

First you need to determine what your device and processor type is so that you know which version of the software to install.

1. On the Home screen, press the **Start** soft key and select **Settings** → **More...** → **More...** → **About**. Check the version of your device.
2. Download a program to your computer from the Internet or insert the CD-ROM that contains the program into your computer.  
  
Be sure to select the program designed for your device and the device's processor type.
3. Read any installation instructions, Read Me files, or documentation that comes with the program.
4. Connect your device to your computer and make sure that the ActiveSync is running.

For more information on ActiveSync, see page 46.

5. Double-click the \*.exe file on the computer.

If the file is an installer, the installation wizard will begin. Follow the instructions on the screen. Once the software has been installed, the installer will automatically transfer the software to your device.

If the file is not an installer, you will see an error message. You need to move this file to your device by using ActiveSync Explore to copy the program file to the **Windows\Start Menu** folder on your device.

Once installation is completed, you can view and open the program by accessing the **Start** menu.

## Adding a program directly from the Internet

First you need to determine what your device and processor type is so that you know which version of the software to install.

1. On the Home screen, press the **Start** soft key and select **Settings** → **More...** → **More...** → **About**. Check the version of your device.
2. Download the program to your device straight from the Internet using Internet Explorer.  
  
Be sure to select the program designed for your device and the device's processor type.
3. Read any installation instructions, Read Me files, or documentation that comes with the program.
4. Select the file, such as a \*.xip or \*.exe file. The installation wizard will begin.

5. Follow the directions on the screen.

Once installation is completed, you can view and open the program by accessing the **Start** menu.

## Removing programs

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Remove Programs**.
3. Scroll to the program you want to delete.
4. Press the **Menu** soft key and select **Remove**.
5. Press the **Yes** soft key to confirm the deletion.
6. When you have finished, press the **Ok** soft key.

## Managing certificates

On your device you can add and delete public key certificates. You can store the following two types of certificates on your device.

- **Personal:** help to establish your identity, when you log on to a secured network, such as a corporate network.
- **Root:** help to establish the identity of servers with which you connect. This helps to prevent unauthorised users from accessing your device and information.

## Viewing certificates

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **Certificates** → a certificate type.
3. Select the certificate to view more details.

## Deleting a certificate

1. Scroll to the certificate you want on the list.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to confirm the deletion.



## Resetting your device

You can reset your device's settings and clear all added data from memory.

## Resetting the device

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **More...** → **Reset**.
3. Enter the reset password and press the **Done** soft key.  
The default password is "1234."
4. Press the **Yes** soft key to confirm the reset.
5. Press the **Yes** soft key to confirm deleting DRM files.  
The device resets and reboots itself.

## Changing the reset password

You can change the reset password to prevent the device from being reset by unauthorised people.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Security** → **More...** → **Change Reset Password**.
3. Enter the old password, then a new password, and re-enter the new one for confirmation.
4. Press the **Done** soft key.

## Using online help

Your device is supported by additional information available online, or on the CD-ROM that came with your device.

| For information on:                                       | see:                                                                                                                                          |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| additional programs that can be installed on your device, | the supplied CD-ROM.                                                                                                                          |
| connecting to and synchronising with a PC,                | Chapter 3 in this User's Guide or ActiveSync Help on your PC. To view the ActiveSync help, click the ActiveSync icon on the Windows task bar. |
| up-to-date information on your device,                    | <a href="http://www.microsoft.com/windowsmobile/smartphone">http://www.microsoft.com/windowsmobile/smartphone</a> .                           |

## Synchronisation

Using Microsoft® ActiveSync®, you can synchronise data on your desktop computer with the data on your device.

Synchronisation compares the data on your device with your desktop computer and updates both your device and computer with the latest data.

With ActiveSync, you can:

- Keep Contacts, Calendar, Tasks, or Inbox data up-to-date by synchronising your device with Microsoft Outlook data on your desktop computer.
- Copy (rather than synchronise) files between your device and desktop computer.
- Control the moment when synchronisation occurs by selecting a synchronisation mode.
- Select data types to be synchronised and control the amount of synchronised data.

---

### **WARNING!**

- ActiveSync synchronises two devices using the latest data. Therefore, if you delete some specific data from the device after synchronisation, and then perform a synchronisation again, the corresponding data on the computer will be deleted. Be careful not to lose important data.
  - If you turn off the device after copying files to any folders, except for the Storage folder, using ActiveSync, all files in those folders will be deleted. Store important files in the Storage folder to prevent from being deleted.
-

## Installing ActiveSync

Before beginning synchronisation, you must install ActiveSync on your desktop computer using the supplied CD-ROM. You can also download the latest version of ActiveSync from the Microsoft web site (<http://www.microsoft.com>).

1. Insert the CD-ROM into the CD-ROM drive of your desktop computer. Alternatively, double-click the downloaded ActiveSync installer.
2. Follow the instructions on the screen for installing Microsoft ActiveSync.

When installation is completed, the Synchronisation Setup Wizard helps you to connect your device to your desktop computer, to set up a partnership.

3. Follow the instructions on the screen.

---

**Note:** See page 48 for more information on connecting the device and a computer.

---

Your first synchronisation process will automatically begin when your device is connected to the computer. After the first synchronisation, take a look at Contacts, Calendar, and Tasks on your device. You will notice that your information has been copied to the device.

## Customising connection settings

To establish a connection between your computer and the device, you must enable the connections you want to use in the ActiveSync program. By default, all connections are enabled.

1. From the ActiveSync window on your computer, select **File** → **Connection Settings...**
2. Change the connection settings.
3. Click **OK**.

## Connecting your device to a computer

To connect the device to your computer, you can choose one of the following ways:

- Using a PC data cable
- Using a Bluetooth connection

### Connecting with a PC data cable

Connect one end of the PC data cable to the jack on the left side of the device and the other end to the USB port on your computer.

---

**Note:** USB mode of your device must be set for ActiveSync. Press the **Start** soft key and select **Settings** → **More...** → **Connections** → **USB**. Then select **Active Sync**.

---

The connection is established and the Microsoft ActiveSync window appears. The synchronisation automatically begins.

---

**Notes:**

- When an error occurs with a USB connection, activate the DHCP Client service, or deactivate the firewall or VPN environment.
  - USB hubs and laptop docking stations have not exhibited consistent stability with Windows Mobile-powered devices and ActiveSync. You can connect the device to the PC USB ports if you experience connection drops or an inability to connect through a USB hub or docking station.
- 

## Connecting via Bluetooth

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **ActiveSync**.
3. Press the **Menu** soft key and select **Connect via Bluetooth**.
4. Press the **Yes** soft key, if you are connecting to a computer via Bluetooth for the first time.
5. Select **Add new device...** to search for a new Bluetooth-compatible devices.
6. Select your Bluetooth-compatible computer to pair the device with the computer.
7. Enter a Bluetooth passcode and press the **Next** soft key. This passcode is used just once and you do not need to memorise it.

When you enter the same passcode on your computer, pairing is finished.

8. Enter a display name for the computer and press the **Next** soft key.
9. Check the services you want to use and press the **Done** soft key.

---

**Note: ActiveSync** must be checked on the service list. If **Serial** is available, instead, on the list, select it and make sure that a correct Bluetooth COM port is selected from the Connection Settings on the PC ActiveSync. The Bluetooth software on the PC should have the correct settings.

---

10. Press the **Done** soft key.

## Synchronising information

To begin synchronisation, connect your device to your computer. For more information on connecting the device and the computer, see page 48. The Microsoft ActiveSync window on your computer automatically appears and synchronisation starts.

Once the synchronisation is completed, the device stays connected to the computer. If any change is made, ActiveSync automatically will begin synchronisation. To begin synchronisation, press the **Sync** soft key in ActiveSync on your device.

You can open the device's file directory by clicking **Explore** from the Microsoft ActiveSync window. You can then copy files quickly and easily from the device to the computer, or vice versa.

---

**Note:** To synchronise Bluetooth devices with a compatible computer, the computer must have the Bluetooth stack for Windows XP Service Pack 2.

---

## Customising synchronisation settings

You can customise various setting options for synchronisation with a computer and a server, and set the synchronisation schedule.

First, you must terminate the connection between your device and computer. Disconnect the PC data cable or remove the device from the Bluetooth range.

### Changing PC settings

1. In ActiveSync on your device, press the **Menu** soft key and select **Options**.
2. Press the **Menu** soft key and select **Settings**.
3. Change the computer name, set how to handle a data conflict between your device and computer, and set an event logging type.
4. Press the **Done** soft key.
5. Select the data types to be synchronised.
6. Press the **Done** soft key.

---

**Note:** For more information on the conditions that must be met on the computer and how to change synchronisation options, see ActiveSync Help.

---

## Setting server synchronisation

You can synchronise information automatically as items arrive only if your company runs Microsoft Exchange Server with Exchange ActiveSync.

### Configuring an Exchange Server connection

1. In ActiveSync on your device, press the **Menu** soft key and select **Add Server Source**.
2. Enter the server address and select **This server requires an encrypted (SSL) connection** to use an SSL protocol for server access.
3. Press the **Next** soft key.
4. Enter your Microsoft Exchange user name, password, and domain name.  
  
To save the password for subsequent accesses, select **Save password**.
5. Press the **Next** soft key.
6. Select data types to be synchronised.
7. Press the **Menu** soft key to access the following options:
  - **Settings:** You can set the options for handling data for each data type.

- **Advanced:** You can set how to handle a data conflict between your device and computer, and set an event logging type.
- **Back:** You can return to the previous step.

8. When you have finished, press the **Finish** soft key.

## Changing the synchronisation schedule

You can schedule synchronisation with the Microsoft Exchange Server on two separate times. Use the peak time schedule to synchronise during working hours or other times when you experience higher mail volumes. Use the off-peak time schedule to synchronise during times when you experience lower mail volumes.

1. In ActiveSync on your device, press the **Menu** soft key and select **Schedule**.
2. Set each option:
  - To synchronise periodically during peak times, select a frequency of synchronisation in the **Peak times** field.
  - To synchronise periodically during off-peak times, select a frequency of synchronisation in the **Off-peak times** field.
  - To use the peak time and off-peak time setting while roaming, select **Use above settings when roaming**.
  - To set the days and hours for peak times, press the **Menu** soft key and select **Peak Times**.
3. When you have finished, press the **Done** soft key.

## Call functions

This chapter explains all of the call functions provided by your device.

### Turning the phone functions on and off

You can choose to turn off the phone functions and just use the PDA functions at any time and then turn it back on when you want.

---

**Note:** In many countries, you may be required by law to turn off the phone functions while on a flight. Turning off the display of your device does not actually turn off the phone functions; you must turn off your wireless connection to your operator's network.

---

To turn off the phone functions, press  and select **Wireless Manager**. Then select **Phone** to set it to **Off**.  appears on the top right corner of the screen.

To turn back on the phone functions, select **Phone** to set it to **On** from the Wireless Manager screen.

---

**Note:** You can also access the Wireless Manager screen by pressing the **Start** soft key and selecting **Settings** → **More...** → **Connections** → **Wireless Manager**.

---

## ■ ■ Using the Dialling screen

When you press , the Dialling screen opens. You can view the most recent calls you have dialled, received, and missed on the screen.

When you enter a digit, the Dialling screen lists all of the numbers containing the entered digit in Contacts and Call History, as well as the phone number assigned to the corresponding speed dial key.

## ■ ■ Making a call

You can make a phone call using the number keypad. As well as normal voice calls, you can make video conference calls in a 3G (UMTS) network.

### To make a voice call:

1. On the Home screen, enter a number including an area code.

---

**Note:** If you press , , , , , , , or , the device will display the contact names containing the corresponding alphabet.

---

2. Press  to make a call.

When a call is connected, the call duration displays. During a call, you can use several call options. For details, see page 59.

To adjust the audio volume during a call, press  or  to increase or decrease the volume level.

3. Press  to end the call.

**To make a video call:**

1. **On** the Home screen, enter a number including an area code.
2. Press the **Menu** soft key and select **Video call**.

 **Advanced calling features**

You can make a call from Contacts, Speed Dial, and Call History.

**Making a call from Contacts**

1. On the Home screen, press the **Contacts** soft key. You can also press the **Start** soft key and select **Contacts**.
2. Select a contact card from the contact list.
3. Scroll to the number you want.
4. Press  for a voice call, or press the **Menu** soft key and select **Video call** for a video call.

**Making a call from Speed Dial**

Speed Dial is a list you can create of often-dialled numbers. Information on adding a number to Speed Dial is detailed on page 62.

By memorising the position on the Speed Dial list, you can dial the number simply by entering that number of the Speed Dial key. The phone number assigned to the key appears on the Dialling screen.

Alternatively, if you do not remember the position of a number, access the Speed Dial list:

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **Speed Dial**.
3. Scroll to the number you want.
4. Press  for a voice call, or press the **Menu** soft key and select **Video call** for a video call.

## Making a call from Call History

1. On the Home screen, press the **Start** soft key.
2. Select **Call History**. The recent call list appears.

---

**Note:**  is for incoming voice calls,  is for outgoing voice calls,  is for missed voice calls,  is for incoming video calls,  is for outgoing video calls, and  is for missed video calls.

---

To view the calls categorised by call type, press the **Menu** soft key, select **Filter**, and select a category from the pop-up list.

3. Scroll to the number you want.
4. Press  for a voice call, or press the **Menu** soft key and select **Video call** for a video call.

## Making an international call

1. Press and hold  until the + sign appears. The + replaces the international access code.
2. Enter the full phone number you want to dial. It includes the country code, the area code (without the leading zero), and the phone number.
3. Press  for a voice call, or press the **Menu** soft key and select **Video call** for a video call.

---

**Note:** You can set the country or dialling code to be added before the number when dialling. See page 66.

---

## Making an emergency call

Your device provides the emergency number **112**. This number can normally be used to make an emergency call in any country, with or without a SIM card inserted, if you are within a mobile phone network's service area.

Enter the emergency number **112** and press .

---

### Notes:

- Some service providers may require a SIM card to be inserted, and in some cases the PIN to be entered as well.
  - In some cases, other emergency numbers may also be accessed. Your service provider may save additional local emergency numbers on the SIM card.
-

## Answering or ignoring a call

When a call comes in and the device rings or vibrates, depending on the ringer setting:

- Press the **Answer** soft key or  to answer the call.
- Press the **Ignore** soft key or press  to reject the call. You can also press and hold  or  to reject the call.

---

**Note:** If you reject a call, the busy tone is sent out. Depending on your service provider, the caller may be guided to your voicemail server.

---

- Press  or  to mute the ringer.

## Options during a call

Your device provides a number of control functions that you can use while a call is in progress.

### Answering a second call

If a person is trying to call you when you are talking on the device, a notification window will pop out.

1. Press the **Answer** soft key or  to answer the second call and put the first on hold.
2. To switch back and forth between the two callers, press the **Swap** soft key.
3. To end the second call and go back to the first, press the **End** soft key or .

## Using In-call options

During a call, you can access various options by pressing the **Menu** soft key.

For a voice call, the following options are available:

- **Hold:** places the current call on hold.
- **Whisper mode On/Off:** turn on or off Whisper mode. Whisper mode automatically increase the mouthpiece's sensitivity to allow the other person to hear your voice even though you may be whispering.
- **Swap:** switches back and forth between the two callers.
- **Mute/Unmute:** turns off the mouthpiece so that the person with whom you are speaking cannot hear you, or turns it back on.
- **Speakerphone On/Off:** turns on the speakerphone mode to talk and listen with the device a short distance away.
- **Conference:** makes a conference call when you have an active call and a call on hold. You can have a conversation with up to 5 people at the same time.
- **Private:** allows you to have a private conversation with the selected conference call participant.
- **View Contact:** opens the contact list.
- **Turn handsfree On/Off:** switches the current call to the connected hands-free car kit or headset, or switches it back to the device.
- **Save to Contacts:** saves the phone number of the person with whom you are speaking.
- **Contacts:** opens the contact details, if the dialled number is stored in Contact.
- **View Calendar:** opens the calendar.

- **Call History:** opens the call history list.
- **Send DTMF:** send DTMF (Dual tone multi-frequency) tones of a specific number as a group. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Mute keys:** turn the key tones off or on.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other, but you are disconnected from the call.
- **End All Calls:** disconnect all calls.

For a video call, the following options are available:

- **Mute/Unmute:** turns off the mouthpiece, or turn it back on.
- **Speakerphone off/on:** turns off or on the speakerphone mode.
- **Switch to BT headset/Switch to phone:** switches the current call to the connected Bluetooth headset, or switches it back to the device. For details about Bluetooth connections, see page 156.
- **Save to Contacts:** saves the phone number of the person with whom you are speaking.
- **Display:** allows you to change the effect or quality of the camera image.
- **Advanced:** allows you to send the DTMF tones of numbers or a file to the person with whom you are speaking.
- **Switch to voice call:** turns off the camera and switches the call to a voice call.
- **Options:** allows you to change the options for video calls. For details, see page 70.

## Call-related features

### Checking your voicemail

The first speed dial location is assigned to your voicemail box by default. When you insert your SIM card into the device, it automatically detects and sets as default the voicemail centre number of your mobile service provider.

To check your voicemail, press and hold  from the Dialling screen.

---

**Note:** You can check and change the voicemail centre number. See page 66.

---

### Managing the Speed Dial list

You can assign frequently-used phone numbers, email addresses, or web pages in Contacts to the speed dial location 2 through 99. The location 0 and 1 on the Speed Dial list are preset for the international call prefix and the voicemail centre number, respectively.

#### Adding a contact to the Speed Dial list

1. On the Home screen, press the **Contacts** soft key. You can also press the **Start** soft key and select **Contacts**.
2. Select a contact card from the list.
3. Scroll to a number, email address, or web page address.
4. Press the **Menu** soft key and select **Add to Speed Dial**.

5. If necessary, enter the name you want.
6. In the **Keypad assignment** field, select a location.
7. Press the **Done** soft key.

### Deleting Speed Dial assignments

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **Speed Dial**.
3. On the Speed Dial list, scroll to an entry.
4. Press the **Menu** soft key and select **Delete**.
5. Press the **Yes** soft key to confirm the deletion.

### Managing your Call History

Call History details all incoming, outgoing, and missed calls, and also provides a summary of total calls. It can also tell you when a call was initiated and how long it lasted.

#### To open Call History:

On the Home screen, press the **Start** soft key and select **Call History**. A list of all calls appears.

If necessary, select the category of the call history to be displayed by pressing the **Menu** soft key and selecting **Filter**.

## Viewing details of calls

- To view the duration of a call, and time and date you received or made it, scroll to the call you want to view and press .
- To save the phone number of a call to Contacts, scroll to the call you want and press the **Save** soft key.
- To view contact information, press the **Menu** soft key and select **Find Contact**.
- To send an SMS message, press the **Menu** soft key and select **Send Text Message**.
- To send an email message, press the **Menu** soft key and select **Email**.
- To delete an individual call, press the **Menu** soft key and then select **Delete**. To delete all calls, select **Delete List**.
- To send an MMS message, press the **Menu** soft key and select **Send MMS**.

## Viewing call timers

In Call History, you can view the duration of your calls. This option is convenient for estimating your usage.

1. On the Call History screen, press the **Menu** soft key and select **View Timers**.

You can view the total call time, the last call time, the time of calls you received or made, including roaming calls and data calls, and a lifetime counter. You can also view the time you reset the call time.

2. Press the **Done** soft key.

To erase the call time records, except for **Lifetime calls**, press the **Menu** soft key, select **Reset Timers**, and press the **Yes** soft key.

## Customising your phone functions

You can personalise the settings of the phone functions, the services you have, and the network to which you have connected.

### Accessing the Phone setting options

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **Phone**.
3. Select a setting menu, and then set each option.
4. When you have finished, press the **Done** soft key.

### Available setting options

#### All Calls

- **Band Selection:** This option allows you to select the network band in which your device will operate.
- **Call Cost:** This network feature lets you view the cost of calls. Viewing call cost may not be available, depending on particular SIM cards. For more information, contact your service provider.

**Last Call Cost:** shows the cost of the last call you made.

**Total Cost:** shows the total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set in the **Edit Cost Limit** option, you can no longer make any calls until you reset the counter.

**Cost Limit:** shows the maximum cost set in the **Edit Cost Limit** option.

**Reset Call Cost:** allows you to reset the cost counter.

**Edit Cost Limit:** allows you to enter the maximum cost that you authorise for your calls. Calls can be made as long as the preset max cost is not exceeded.

**Price per unit:** allows you to set the cost of one unit. This price per unit is applied when calculating the cost of your calls.

- **Call Options:** You can customise settings related to call functions, such as an answering option, voicemail and SMS access numbers, and auto dial codes.

**Any key answer:** When this option is activated, you can answer incoming calls by pressing any key, except for , , , ,  and .

**Show SIM contacts:** When this option is activated, the contact cards stored on the SIM card display in the contact list.

**Phone number:** Check your phone number.

**Voice mail number:** When you insert your SIM card into your device, the device automatically detects and sets your voicemail access number by default. If not, you can manually enter the number obtained from your service provider.

**Text messages service centre:** When you insert your SIM card into your device, the device automatically detects and sets your SMS access number by default. If not, you can manually enter the number obtained from your service provider.

**Country code:** You can enter a country code. The code will be automatically added before a phone number when dialling.

**Dialling code:** You can enter an area code. The code will be automatically added before a phone number when dialling.

- **Caller ID:** When you place a call, your phone number can be displayed to or hidden from the person to whom you are calling. Using this option, you can enable or disable the display of your caller identification.
- **Channels:** This option allows you to set the cell broadcast (CB) message receipt and set up broadcast channels from which you want to receive CB messages.

**Enable channels:** Select to enable the receipt of CB messages.

**Receive channel list:** Select to receive a list of all available broadcast channels from the network.

**Language:** Select your preferred languages to display CB messages.

To edit the channel list, press the **Menu** soft key and select **Edit Channels**. Then press the **Menu** soft key and select the options for adding or editing channels.

- **Closed User Group:** This option allows you to set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group (CUG), contact your service provider.

**Use user group:** Select to activate the CUG feature.

**Outside access:** Enable calls to numbers other than those in the closed user group. This feature depends on the nature of your CUG subscription.

**Default group:** Enable the default CUG, if you have set one with your service provider. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

**Group index:** Set the index number of the user group.

- **Fixed Dialling:** When this option is activated, your device allows outgoing calls only to the limited set of phone numbers. You can call only those numbers that are included in the Fixed Dialling Number list or which begin with the same digit(s) as a phone number on the list.
- **Networks:** You can set the device to automatically select a network when you are roaming out of your service area, or find and select the network you want.

Press the **Menu** soft key to access the following options:

**Find a New Network:** Search for all available networks. You can start searching when the device is out of your service area.

**Select a Network:** Select a network from the available networks.

**Preferred Networks:** Set up a list of your preferred networks. You can set priority of the networks or add networks manually by selecting them from the preset network list or entering their service ID codes.

**Cancel:** Exit the **Networks** menu.

## Voice Calls

- **Call Barring:** This network service allows you to restrict your incoming or outgoing calls. To set up this service, you need to enter the call barring password obtained from your service provider.

For incoming call barring, the following options are available:

**All calls:** No calls can be received.

**When roaming:** Calls cannot be received when you are using your device outside of your home service area.

**Off:** Call barring is deactivated; all calls can be received normally.

For outgoing call barring, the following options are available:

**All calls:** No calls can be made.

**Int'l calls:** International calls cannot be made.

**Int'l except to home:** When abroad, calls can be made only to numbers within the current country and to your home country.

**Off:** Call barring is deactivated; all calls can be made normally.

- **Call Forwarding:** This network service allows you to forward your incoming calls to another phone number.

**Unconditional:** All calls are forwarded.

**No Reply:** Calls are forwarded when you do not answer.

**Busy:** Calls are forwarded when you are on the device.

**Unavailable:** Calls are forwarded when your device is turned off or your device is out of your service area.

**Data Calls:** All data calls are forwarded.

**Fax Calls:** All fax calls are forwarded.

- **Call Waiting:** This service allows you to receive another call while you have a call in progress. Select **Provide call waiting notifications** to activate this service.

## Video Calls

- **Outgoing Image:** You can set whether the device shows the camera view to the person with whom you are speaking, or select an image to be shown instead of the camera view.

**Incoming Video Call:** set to show you via the front camera.

**Hide Me Options:** select a screen to be shown on the other's phone.

**My Image:** set an image to be shown on the other's phone if you select **My Image** in the **Hide Me Options** field.

- **Call Fail Options:** Select how to retry a video call when it fails.
- **Call Barring:** This network service allows you to restrict your incoming or outgoing calls. For details, see page 68.
- **Call Forwarding:** This network service allows you to forward your incoming calls to another phone number. For details, see page 69.

# Messaging, Internet, and Messenger

## Messaging

In Messaging, you can create, send, receive, view, edit, and organise:

- Text messages (SMS)
- Multimedia message (MMS)
- Email messages

### **To open Messaging:**

On the Home screen, press the **Start** soft key and select **Messaging**.

## **Working with SMS or MMS messages**

You can write an SMS message of up to 160 characters. When you enter more than 160 characters, your device handles the message as a multi-part message.

You can also send or receive multimedia messages (MMS). In addition to the familiar text content of text messages, multimedia messages can contain images, video clips, audio clips, and combinations of these things in more than one page.

MMS also supports email addressing, so that messages can be sent from device to email and vice versa.

## Creating and sending an SMS message

---

**Note:** You can select your preferred network type for sending SMS messages. Press the **Start** soft key and select **Settings** → **More...** → **More...** → **SMS Sending Options**. Then select the option you want.

---

1. On the Messaging screen, select **SMS/MMS**.
2. Press the **Menu** soft key and select **New** → **SMS**.
3. In the **To** field, enter the recipients' phone numbers, separating them with a semicolon.

You can retrieve numbers from the contact list by pressing the **Menu** soft key and selecting **Add Recipient**.

4. Press the Down Navigation key and enter the message text.

To enter preset sentences, press the **Menu** soft key and select **My Text** → a sentence.

5. When you have finished composing the message, press the **Send** soft key.

---

**Note:** To know if your message is delivered to the recipient(s), on the Messaging screen, press the **Menu** soft key and select **Settings** → **Request delivery notifications**.

---

## Creating and sending an MMS message

1. On the Messaging screen, select **SMS/MMS**.
2. Press the **Menu** soft key and select **New** → **MMS**.
3. In the **To**, **Cc**, or **Bcc** field, enter the recipients' numbers or addresses, separating them with a semicolon.

---

**Note:** The **Cc** and **Bcc** fields are above the **To** field.

---

You can also retrieve numbers or the addresses from the contact list or the messages you have sent by pressing the **Menu** soft key and selecting **Add Recipients**.

4. Press the Down Navigation key to move to the **Subject** field and enter the message subject.
5. Press the Down Navigation key and enter the message text.
6. Press the **Menu** soft key to access the following options for composing a message:
  - **Preview:** shows the multimedia message you created.
  - **Add Recipients:** allows you to add recipients' numbers or addresses.
  - **Edit Item:** allows you to edit the selected item.
  - **Add:** allows you to add a media file.
  - **Attach:** allows you to attach a contact card or calendar item as a digital file format, or a media file.
  - **Edit Page:** allows you to add or delete pages, change the text style, or set the page order or duration.

- **Save to:** allows you to save the message as a draft or as an MMS template.
  - **Cancel Message:** cancels sending the message.
  - **Sending Options:** allows you to change the options for sending MMS messages. See page 77.
7. When you have finished composing the message, press the **Send** soft key.

### Viewing SMS or MMS messages

When you receive a new SMS or MMS message, the New Message icon () displays on the top line of the screen.

You can also view messages you received, sent, composed but not sent by accessing the message folders.

#### To open the message folders:

On the SMS/MMS screen, press the **Menu** soft key and select **Folders**. The following default folders display:

- **Deleted Items:** contains messages that have been deleted from each folder.
- **Drafts:** stores draft messages that have not been sent.
- **Inbox:** contains received messages. Received push message and broadcast messages are also stored in this folder.
- **Outbox:** stores the messages waiting to be sent.
- **Sent Items:** stores the messages that have been sent.

**To view a message:**

1. Open the message folder you want.

The icons on the message list tell you the message type.

- : SMS message
- : MMS message

---

**Note:** You can change the default settings for viewing a message. From any message folder, press the **Menu** soft key and select **Tools** → **Options** → **Display**.

---

2. Select the message you want to view.

If you open a push message from a WAP server, press the **Proceed** soft key to access the URL specified in the message.

3. Press the Left or Right Navigation key to view other messages.

**To access message options:**

From any message folder, you can access the following options by pressing the **Menu** soft key; depending on the selected folder, available options may vary:

- **New:** allows you to compose a new SMS or MMS message.
- **Reply:** sends a reply to the sender and/or all other recipients, or forwards the message to other people.
- **Folders:** allows you to access other folders.
- **Move:** allows you to move the message to other folders.

- **Mark as Unread/Mark as Read:** allows you to mark the message as unread or read. Unread messages are boldfaced on the message list.
- **Copy to SIM/Copy to Inbox:** copies the message to the SIM card or the device's memory. This option is only available for SMS messages.
- **Tools:** allows you to switch to another message account, delete all of the deleted messages, or change the options for Messaging.
- **Download Message/Do Not Download:** allows you to set the device to download the complete contents of the message from the MMS server, or cancel the download setting.
- **Send/Receive:** sends or receives messages.
- **MMS Options:** allows you to change the options for MMS messages. See page 77.

### Viewing messages on the SIM card

Sometimes, text messages may be stored on the SIM card, depending on their specifications.

1. From the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **SIM Manager**.
3. Press the **Menu** soft key and select **SMS Tool**.
4. Scroll to the number you want to view message, and press the **Menu** soft key and select **View SMS**.

## Configuring MMS settings

You can change the default MMS settings. From any message folder, press the **Menu** soft key and select **MMS Options**. The following options are available:

- **Sending Options:** allows you to change the settings for sending MMS messages.

**Priority:** You can select the priority level of your messages.

**Expiry:** You can select the length of time your messages are stored in the message centre after they are sent.

**Delivery Time:** You can select the time delay before messages are sent.

**Hide address:** You can set your caller ID to be hidden from outgoing messages.

**Request delivery report:** When this option is activated, the network informs you whether or not your message has been delivered.

**Request read report:** When this option is activated, your device sends a request for a read reply along with your message to the recipient.

**Keep a copy:** You can leave copies of your messages in the **Sent Items** folder after sending.

**Message Class:** You can select the maximum message size.

**Creation Mode:** You can set whether or not the device allows the MMS creation using unsupported files. Depending on your country, this option may be unavailable.

- **Receiving Options:** allows you to change the settings for receiving MMS messages.

**Home network:** Set how to retrieve new messages from the server while in your home network.

**Network when abroad:** Set how to retrieve new messages from the server while roaming around another network.

**Send delivery receipt:** When this option is activated, the network informs the sender whether or not the message has been delivered.

**Send read receipt:** When this option is activated, your network replays to the read reply that came along the message.

**Reject Unknown Sender:** Reject messages from unknown senders.

**Advertisement Allowed:** Accept advertisements.

**Information Allowed:** Accept information messages.

- **Profiles:** allows you to set up and activate MMS profiles which are sets of MMS parameters required to send or receive MMS messages. To activate a profile, select it from the profile list.

To edit a profile, press the **Menu** soft key and select **View/Edit**. You can change the following options:

**Profile Name:** Enter the profile name.

**MMSC URL:** Enter the URL address of the MMS centre.

**Proxy Settings:** Activate or deactivate the proxy server. When this option is activated, the **IP Address** and **Port** options are activated.

**IP Address:** Enter the IP address of the gateway.

**Port:** Enter the port number of the gateway.

**Connects to:** Select a network type.

Select **GPRS Settings** to access the additional options. GPRS Settings are available only for the **MMS Network** type.

**APN:** Enter the access point name.

**Login ID:** Enter the login name.

**Password:** Enter the login password.

- **Default Style:** allows you to change the text style, text colour, background colour, and page duration.
- **About:** shows version and copyright information.

## Working with email messages

You can send and receive email messages in one of these ways:

- Synchronise email messages with Microsoft Exchange or Microsoft Outlook on your PC.
- Send and receive email messages by connecting directly to an email server through an Internet Service Provider (ISP) or a network.

## Synchronising email messages

Use the **Outlook Email** account to send and receive email messages by synchronising email messages with Microsoft Exchange or Microsoft Outlook on your PC. You will need to enable Inbox synchronisation in ActiveSync.

During synchronisation:

- Messages are copied from the mail folders of Exchange or Outlook on your PC to the **Outlook Email** folders on your device.

- Email messages in **Outlook Email** on your device are transferred to Exchange or Outlook, and then sent from those programs.

## **Connecting directly to an email server**

You can send and receive email messages by connecting to an email server. You'll need to set up a remote connection to a network or an ISP, and a connection to your email server.

When you connect to the email server, new messages are downloaded to the device's Inbox folder. Also, messages in the device's Outbox folder are sent and messages that have been deleted on the email server are removed from the device's message folders.

## **Folder behavior with a direct connection to an email server**

The behavior of the folders you create depends on whether you are using POP3 or IMAP4.

- If you use POP3 and you move email messages to a folder you created, the link is broken between the messages on the device and their copies on the mail server. The next time you connect, the mail server will see that the messages are missing from the device and delete them. This prevents you from having duplicate copies of a message, but it also means that you will no longer have access to messages that you move to folders created from anywhere except the device.
- If you use IMAP4, the folders you created and the email messages you moved are mirrored on the server. Therefore, messages are available to you anytime you connect to your mail server. This synchronisation of folders occurs whenever you connect to your mail server; create new folders or rename/delete folders when connected.

## Creating an email account

You need to create a new account to be used for retrieving and sending email messages.

---

**Note:** You can set a new account using Email Wizard. On the Home screen, press the **Start** → **More** → **More** soft key and select **Email Wizard**.

---

### To make a new account:

1. From the Messaging screen, select **New E-mail Account**.
2. Select **Other** by pressing the Left or Right Navigation key and press the **Next** soft key.
3. Enter your display name and email address, and press the **Next** soft key.

If you want to set up your account automatically from the Internet, select **Try to get e-mail server settings from the Internet**.

4. Press the **Next** soft key.
5. Enter your user information, such as user name, password, and domain name, press the **Next** soft key.
6. Select an email server type, enter an account name, and select a network type.
7. Press the **Next** soft key.
8. Enter the server names and press the **Next** soft key.

To set up an outgoing server, select **Outgoing Server Settings**.

9. Set the options for downloading email messages and press the **Next** soft key.

You can select the number of days for which you receive email messages and set the maximum data volume of email messages you want to download.

10. Select how often your device automatically connects to the server and checks for incoming emails, and press the **Next** soft key.
11. Press the **Finish** soft key.

**To edit an account:**

1. From the Messaging screen, scroll to the account you want.
2. Press the **Menu** soft key and select **Settings**.
3. Change the account settings as you would when creating it.

**Creating and sending an email message**

1. On the Messaging screen, select the email account with which you want to send.
2. Press the **Menu** soft key and select **New**.
3. In the **To**, **Cc**, or **Bcc** field, enter the recipient's email addresses, separating them with a semicolon.

---

**Note:** The **Cc** and **Bcc** fields are above the **To** field.

---

You can retrieve addresses from the contact list by pressing the **Menu** soft key and selecting **Add Recipient**.

4. Press the Down Navigation key to move to the **Subject** field and enter the email subject.
5. Press the Down Navigation key and enter the email text.  
To enter preset sentences, press the **Menu** soft key and select **My Text** → a sentence.  
You can add a picture or voice note as an attachment by pressing the **Menu** soft key and selecting **Insert** → an item type.
6. When you have finished composing the message, press the **Send** soft key.
7. Press the **Menu** soft key and select **Send/Receive** to connect to the network and send the message.

## Viewing email messages

You can also view messages you received, sent, composed but not sent by accessing the message folders.

### To open the message folders:

On the Messaging screen, access the email account you want, press the **Menu** soft key, and select **Folders**.

The following default folders display:

- **Deleted Items**: contains messages that have been deleted on your device.
- **Drafts**: stores draft messages that have not been sent.

- **Inbox:** contains received messages.
- **Outbox:** is a temporary storage place for messages waiting to be sent.
- **Sent Items:** stores the messages that have been sent.

**To view an email message:**

1. On the Messaging screen, select the email account from which you want to receive email messages.
2. Press the **Menu** soft key and select **Send/Receive**.

The device connects to your email server and receives incoming email messages or sends email messages in Outbox.

3. Select the message you want to view.

**To access message options:**

From any message folder, you can access the following options by pressing the **Menu** soft key:

- **New:** allows you to compose a new email message.
- **Reply:** sends a reply to the sender and/or all other recipients, or forwards the message to other people.
- **Folders:** allows you to access other folders.
- **Move:** allows you to move the message to other folders.
- **Mark as Unread/Mark as Read:** allows you to mark the message as unread or read. Unread messages are boldfaced on the message list.
- **Tools:** allows you to switch to another message account, delete all of the deleted messages, or change the options for email.

- **Download Message/Do Not Download:** allows you to set the device to download the complete contents of the email from the email server, or cancel the download setting.
- **MMS Options:** allows you to change the options for the Messaging.
- **Send/Receive:** sends or receives email messages.

### Setting downloading options

You can specify your downloading preferences when you set up the account or select your synchronisation options.

- Change options for Inbox synchronisation using ActiveSync on your computer. For more information, see "ActiveSync Help."
- Change options for direct email server connections in Inbox on your device. Press the **Menu** soft key and select **Settings**. Then change the settings for the selected account.

### Viewing email attachments

To download an attachment, select **Get entire message and any attachments** in an open message, or press the **Menu** soft key and select **Download Message**. It will be downloaded the next time you synchronise or connect to your email server. To view an attachment, select the attachment in an open message.

## Inserting signatures into messages

You can specify a signature to be automatically inserted into SMS, MMS or email messages that you send.

### To specify a signature:

1. From any message folder, press the **Menu** soft key and select **Tools** → **Options** → **Signatures**.
2. Select the account for which you want to specify from the **Select an account** field.
3. Select **Use signature with this account**.
4. To insert a signature in every messages, including when you reply or forward the message, select **Include when replying and forwarding**.
5. Enter a signature to be inserted and press the **Done** soft key.

## Internet Explorer

Use Microsoft® Pocket Internet Explorer to view Web HTML, cHTML, and WAP pages. You can browse by connecting to an Internet Service Provider (ISP) or network and browse the Web. To do this, you'll need to create the connection first as described on page 160.

When connected to an ISP or network, you can also download files and programs from the Internet.

### To open Internet Explorer:

On the Home screen, press the **Start** soft key and select **Internet** → **Internet Explorer**.

## Connecting to a website

1. To connect and start browsing, do one of the following:
  - Press the **Menu** soft key and select **Address Bar**. Enter the web address you want to visit or select a page from the history list.
  - Press the **Favourites** soft key and scroll to the page you want to view from the Favourites list.
2. Press the **Go** soft key on the browser to open the associated web page.

## Navigating the Internet Explorer

From web pages, you can use the following options:

| To                               | Press                                                                               |
|----------------------------------|-------------------------------------------------------------------------------------|
| scroll through browser items     | the Navigation keys.                                                                |
| select a browser item            | ○.                                                                                  |
| return to the previous page      |  . |
| refresh the connection           | the <b>Menu</b> soft key and select <b>Refresh</b> .                                |
| To change the display options    | the <b>Menu</b> soft key, select <b>View</b> , and select the option you want.      |
| view information on the web page | the <b>Menu</b> soft key and select <b>Tools</b> → <b>Properties</b> .              |

## Using the Favourites list

You can store your favourite links while using the Internet Browser and then access them easily at a later time. Categorising them enables you to find them more quickly.

### Adding a web page to the Favourites list

1. Go to the page you want to add, press the **Menu** soft key, and select **Add to Favourites**.
2. Change the name for the favourite link, if necessary.
3. Select a category under which you want to save the favourite link from the **Folder** field.

You can also create a new category. See “Managing Favorites categories.”

4. Press the **Add** soft key.

### Opening a link through the Favorites list

1. On the Internet Explorer screen, press the **Favourites** soft key.
2. Scroll to the link you want to access.  
If the link you want is in a certain folder, open the folder and scroll to the link.
3. Press the **Go** soft key.

### Managing Favorites categories

You can create a new category for saving favourite web pages, and rename or delete the created categories.

**To add a category:**

1. On the Internet Explorer screen, press the **Favourites** soft key.
2. Press the **Menu** soft key and select **Add Folder**.
3. Enter a category name and press the **Add** soft key.

**To edit the categories:**

Scroll to the category you want, press the **Menu** soft key, and select **Edit** or **Delete** to rename or delete the selected category.

## Changing Explorer options

You can customise web browsing options, change the connection settings, and clear memory. On the Internet Explorer screen, press the **Menu** soft key and select **Tools** → **Options**.

The following options are available:

- **General:** You can select whether or not to play sounds on web pages, view the warnings when you move from a secure web page to a non-secure one, or enable or disable the receiving and sending of cookies. You can also select the text encoding type to use.
- **Connections:** You can change the network setting to connect to Internet Explorer. If you select **Automatically detect settings**, your device automatically detects network settings from your service provider.
- **Memory:** You can check the amount of memory currently being used for the Internet Explorer. To clear the memory, scroll to a type of memory and press the **Clear** soft key.

## **Windows Live**

Windows Live™, is a new set of Internet software and services designed to work together seamlessly to put you in control of the information, personal connections, and interests you care about. Windows Live makes it easier for you to stay in touch with your friends, and to find the information you need quickly and more safely.

### **To open Windows Live:**

On the Home screen, press the **Start** soft key. Select **Internet** → **Windows Live**.

## **Windows Live Messenger**

Windows Live Messenger delivers an always-on experience that enables you to remain available to other online users and always up to date with email, instant messaging (IM) and other online services without maintaining a continuous network connection to the device.

The connection will be restored when a new message arrives or when you need the service. In addition, subscribers will receive only updates or changes to their contacts and Inbox - rather than receiving entire lists - when they connect to the service.

You will have one-click access to MSN Hotmail® and Windows Live Messenger.

In addition to always-on services, you can access, compose and answer Hotmail messages offline, maximising their time when mobile connections are not available.

**To access Windows Live Messenger:**

On the Home screen, press the **Start** soft key and select **Internet** → **Windows Live Messenger**.

## **Signing In**

To use the Windows Live Messenger service, you must have a Microsoft Passport™ account or Hotmail account, or a Microsoft Exchange email account. If you have a Hotmail® or MSN account, you already have a Passport. Once you have obtained either a Microsoft Passport or a Microsoft Exchange account, you are ready to set up your account.

---

**Note:** Sign up for a Microsoft Passport account at <http://www.passport.com>. Get a free Microsoft Hotmail email address at <http://www.hotmail.com>.

---

**To sign into the Windows Live Messenger service:**

1. On the Windows Live Messenger screen, press the **Sign in** soft key.
2. Enter the email address and the password of your Microsoft Passport and Hotmail account.
3. Press the **Next** soft key.

## Using Windows Live Messenger

Windows Live Messenger on your device is an instant messaging program that lets you:

- see who is online.
- send and receive instant messages.
- have instant message conversations with groups of contacts.

### Working with contacts

The Windows Live Messenger screen shows all of your messenger contacts at a glance, divided into the **Online** and **Offline** categories. From this view, while connected, you can start a chat.

- To add a contact, press the **Menu** soft key and select **Add new contact**.
- To delete a contact, press the **Menu** soft key and select **Contact options** → **Remove contact**.
- To view the properties of a contact, press the **Menu** soft key and select **Contact options** → **View contact's info**.
- To block a contact from chatting with you, press the **Menu** soft key and select **Contact options** → **Block contact**.

### Chatting with contacts

1. To open a chat window, scroll to the contact with whom you want to chat.
2. Press the **Send IM** soft key.

3. Enter your message in the text entry area at the bottom of the screen, or press the **Menu** soft key and select **Add emoticon** to add an emoticon.
4. Press the **Send** soft key to send the message.
5. Repeat steps 3 and 4 to chat with the contact.

During a chat:

- To send a media file, press the **Menu** soft key and select **Send** → a type → a media file.
  - To invite another contact to a multi user chat, press the **Menu** soft key, select **Options** → **Add participant**, and select the contact you want to invite.
  - To switch back to the main window, press the Navigation key. To revert back to your chat window, press the Navigation key and select the person whom you were chatting with.
  - To view the participants of the current chat, press the **Menu** soft key and select **Options** → **View participants**.
  - To record and send a voice clip, press the **Voice clip** soft key.
6. To end the chat, press the **Menu** soft key and select **End conversation**.

### **Customising Windows Live Messenger settings**

To change the settings for the Windows Live Messenger, press the **Menu** soft key and select **Change appearance**. You can change your display name or picture.

## Using the Hotmail service

You can send and read email messages on the device via the Microsoft Hotmail service.

## Composing and sending an email

1. Scroll to the contact you want to send an email message.
2. Press the **Send e-mail** soft key.
3. Compose an email message as you would in the Messaging program.

## Viewing email message

While viewing the email message list, select the email you want to view.

## RSS Reader

RSS Reader allows quick and easy access to real-time news, headlines, and more. It will collect news from various websites and provides it to you in a simple form.

To do this, you'll need to create the connection first as described on page 160.

### To open RSS Reader:

On the Home screen, press the **Start** soft key and select **Internet** → **RSS Reader**. The news feed list appears.

## Reading the latest news

1. From the news feed list, press the **Update** soft key. The device connects to the network and updates the news Feed list with the latest news.
2. Press the **Done** soft key to return to the feed list.
3. Select a different feed.
4. Select a headline which interests you. The Internet Explorer launches and you can access the corresponding news website.

## Searching for news reports

You can search for news reports by entering a keyword for the subjects in which you have a interest.

1. Press the **Menu** soft key and select **Feed search**.
2. Enter a keyword and press the **Search** soft key. Your device searches for related reports on the Internet and displays the results.
3. Select the headline you want.

## Exporting or importing feeds

You can export a feed as an OPML (Offline Processor Markup Language) file format or import OPML files from other sources.

### To export a feed:

1. Scroll to a feed from the list.
2. Press the **Menu** soft key and select **OPML** → **Export**.
3. Select the file folder in which you want to save the file.
4. Enter a file name and press the **OK** soft key.
5. Press the **OK** soft key.

### To import a feed:

1. Scroll to the folder to which you want to import a feed.
2. Press the **Menu** soft key and select **OPML** → **Import**.

3. Choose **Select OPML file** to import a feed from an OPML file, or **Enter OPML URL** to import a feed from a web site.
4. Select the file to import or enter a URL address and press the **OK** soft key.

## Changing RSS reader settings

Press the **Menu** soft key and select **Options** to access the following options:

- **Folder update setting/Feed update setting:** You can change the settings for folder or feed updates.
- **All update setting:** You can change the settings for updates for all elements of RSS Reader.
- **Page option:** You can select the option for deleting expired pages, and set the maximum number of expired pages to be stored. If the number of the pages reaches the limit, the oldest pages will be automatically deleted.
- **Proxy:** You can set the address and port number of the proxy server for retrieving RSS content from the network.
- **About:** You can view version and copyright information.

## Organiser

This chapter explains how to use Personal Information Management (PIM) programs to keep track of contacts and appointments and make a list of tasks you need to do.



### Contacts

Contacts maintains a list of your friends and colleagues so that you can easily find the information you are looking for, whether you are at home or on the road.

#### To open **Contacts**:

On the Home screen, press the **Contacts** soft key. You can also press the **Start** soft key and select **Contacts**. You can view the list of contact cards that you have created.

### Creating a contact card

You can save a new contact card in the device's memory or on the SIM card.

#### Creating a contact card in the device's memory

1. On the contact list, press the **New** soft key and select **Outlook Contact** or **Windows Live**.
2. Enter a name and other contact information.

You can add a personal ringtone to a contact card. Scroll to the **Custom ring tone** field and select the ring melody you want.

Select the **Picture** field to add an image for the caller ID image. To remove the added image, press the **Menu** soft key and select **Remove Picture**.

To assign the contact card to a category, scroll to the **Categories** field and select a category.

3. When you have finished, press the **Done** soft key.

### **Creating a contact card on the SIM card**

1. On the contact list, press the **New** soft key and select **SIM Contact**.
2. Enter the name of the person you want to add.
3. Enter the number you want to store.
4. Press the **Done** soft key.

### **Creating a contact card from the Dialling screen**

1. On the Home screen, enter the phone number and press the **Save** soft key.
2. Select **<New Contact>** to create a new contact card.  
To add the phone number to an existing contact card, select the contact card from the list.
3. Select a type.
4. Fill in the other fields and press the **Save** soft key.

## Viewing and editing a contact card

When you access Contacts, the contact list displays the names of your contacts alphabetically, along with an abbreviation for the primary contact number or email address, such as the person's work phone number (**w**) or mobile phone number (**m**).

The following table shows possible abbreviations that might be displayed on the contact list and their meanings:

| Abbreviation | Meaning                |
|--------------|------------------------|
| w/w2         | work phone/work2 phone |
| h/h2         | home phone/home2 phone |
| m            | mobile phone           |
| co           | company phone          |
| pgr          | pager                  |
| car          | car phone              |
| ast          | assistant phone        |
| rdo          | radio phone            |
| e/e2/e3      | email/email2/email3    |
| im/im2/im3   | IM/IM2/IM3             |
| web          | web page               |

### To open a contact card:

1. On the contact list, select the contact card you want to view.

2. On the summary screen:

- To edit the contact information, press the **Menu** soft key and select **Edit**.
- To send an SMS message, press the **Menu** soft key and then select **Send Text Message**.
- To dial a number, select the number or press the **Call** soft key. To make a video call, press the **Menu** soft key and then select **Video call**.
- To send an email, select the email address.
- To access a web page, select the web page.

## Searching for a contact card

You can search for a contact card in Contacts by entering its associated name. You can start searching directly from the contact list or by using the Smart Search program.

### Searching from the contact list

1. On the contact list, press the alphanumeric keys corresponding the letters of the name you want.

The device highlights the first contact card matching your input.

2. Press  to open the contact card or press  to dial a number in the contact card.

### Searching using Smart Search

For further details about using the Smart Search program, see page 37.

## Adding a number or address to the Speed Dial list

You can assign a shortcut number to a phone number for speed dialling or to an email or URL address for quick access.

1. On the contact list, select the contact card you want.
2. Scroll to the number or address you want.
3. Press the **Menu** soft key and select **Add to Speed Dial**.
4. If necessary, change the name and select a keypad location.
5. Press the **Done** soft key.

## Copying entries between the SIM card and Contacts

You can copy the contact card or all of contact entries in a specific category to the SIM card or vice versa.

### Copying from Contacts to the SIM card

1. On the contact list, select the contact card stored in the device's memory.
2. Scroll to the phone number to be copied.
3. Press the **Menu** soft key and select **Save to SIM**.
4. If necessary, change the contact name.
5. Press the **Done** soft key.

## Copying from the SIM card to Contacts

1. On the contact list, select the contact card stored on the SIM card.
2. Press the **Menu** soft key and select **Save to Contacts**.
3. If necessary, change the contact name.
4. Fill in the other fields and press the **Done** soft key to save the changes.

## Copying all contacts

To copy all contacts between the device's memory and the SIM card, on the contact list, press the **Menu** soft key and select **Copy all** → a copy type.

## Sending a contact card

You can send a contact card in Contacts to another device via SMS, MMS, or an active Bluetooth connection.

On the contact list or on the summary screen, press the **Menu** soft key.

- To send via SMS, select **Send Contact** → **SMS/MMS**. For details, see page 72.
- To send via Bluetooth, select **Send Contact** → **Beam**. For details, see page 157.

## Deleting a contact card

1. On the contact list, select a contact card.
2. Press the **Menu** soft key and select **Delete Contact** or **Delete SIM Contact**.
3. Press the **Yes** soft key to permanently delete the contact card.



## Alarms

You can use the alarm clock to set a wake-up alarm or set an alarm to remind you of an appointment.

### To open Alarms:

On the Home screen, press the **Start** soft key and select **Organizer** → **Alarms**.

## Setting a wake-up alarm

1. On the Alarm screen, select **Wake up alarm**.
2. Check a box, enter the time for the wake-up alarm to sound, and select the days when the wake-up alarm rings in the week viewer.

Use the Navigation keys to move through each field. You can set the wake-up alarm at 3 different times.

3. Select a melody for the alarm in the **Tone** field.
4. Select a time interval to resume the alarm in the **Snooze** field.
5. Press the **Done** soft key.

## Setting an alarm

1. On the Alarm screen, select one of **Alarm 1** to **Alarm 6**.
2. Set each alarm option.
3. Press the **Done** soft key.

## Stopping an alarm

- When an alarm rings, press the **Dismiss** soft key to stop it, or press the **Snooze** soft key to set the alarm to ring again after the specified snooze interval.
- To deactivate an alarm, select the one you want from the Alarm screen, select **Off** on the **Alarm activation** line.



## Calendar

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Week, and Month).

### To open Calendar:

On the Home screen, press the **Start** soft key and select **Organizer** → **Calendar**. You can view the lists of appointments that you have created for the current day.

## Creating an appointment

1. Press the **Menu** soft key and select **New Appointment**.

2. Fill in each field.

From the **Reminder** field, you can set a reminder to alert you to the appointment at the specified interval.

From the **Sensitivity** field, you can set a sensitivity class by which Microsoft Exchange Server handles the appointment.

3. When you have finished, press the **Done** soft key.

## Viewing and editing an appointment

On the Calendar screen, you can view and edit your appointments using the different views: Agenda, Week, or Month. By default, the calendar first appears in the agenda view, which provides the most detailed information about your appointment.

### Switching the view mode

You can change the view mode of the calendar to cycle through the agenda, week, and month view. In each view, press the **Week**, **Month**, or **Agenda** soft key.

- **Agenda View:** shows you the appointments for the selected day.
- **Week View:** shows the week calendar of your appointments.

Time cells having scheduled items are indicated by colours (Navy blue: Busy, Purple: Out of office, White: Free, Sky blue: Tentative).

- **Month View:** allows you to keep track of your monthly schedule and shows which days have appointments scheduled (🔺: Morning appointment, 🔻: Afternoon appointment, 🟡: Morning/Afternoon appointment, 🟩: All day appointment).

## Viewing an appointment

1. Select the calendar view by pressing the **Week**, **Month**, or **Agenda** soft key.
2. In each view, select the date you want. In Agenda view, you can access other dates by pressing the Left or Right Navigation key.

To go to today's date, press the **Menu** soft key and select **Go to Today**.

To go to a certain date, press the **Menu** soft key and select **Go to Date**. Enter the date and press the **Done** soft key.

3. Select the appointment you want to view.

## Editing an appointment

1. From any view mode, select the appointment you want to view.
2. Press the **Menu** soft key and select **Edit**.
3. Edit the appointment information and press the **Done** soft key to save the changes to the appointment.

## Sending an appointment

You can send an appointment item as a VCalendar file to another device via an active Bluetooth connection.

To send via Bluetooth, open the appointment you want, press the **Menu** soft key, and select **Beam Appointment**. For details, see page 157.

## Deleting an appointment

1. On the calendar screen, open the appointment to delete.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to permanently delete the appointment.

## Changing calendar setting options

From any view, press the **Menu** soft key and select **Tools** → **Options**. The following options are available:

- **Start in:** You can select which mode the calendar starts with.
- **First day of week:** You can select which day the calendar starts with.
- **Week view:** You can select a week view type.
- **Month view:** You can set the month view to show the current week number.
- **Set reminders:** You can select the default schedule alarm time.
- **Respond to meetings via:** You can select the mailing service to respond to the attendee who makes appointment.

## **D-Day**

In D-Day, you can calculate how many days are left before or have passed since a specific event.

### **To open D-Day:**

On the Home screen, press the **Start** soft key and select **Organizer** → **D-Day**.

---

**Note:** Depending on the language setting, your device may not display some texts.

---

## **Creating a D-Day counter**

1. Press the **New** soft key.
2. Set options in each field.
3. When you have finished, press the **Done** soft key.

The counter is added to the list and shows how many days are left or have passed.

## Editing D-Day categories

You can change the names and icons of D-Day categories.

1. From the counter list, press the **Menu** soft key and select **Edit category**.
2. Scroll to the category you want.
3. Press the **Menu** soft key and select **Rename**.
4. Enter a new name and press the **Done** soft key.
5. Press the Left or Right Navigation key to change the category icon.
6. Press the **Done** soft key to save changes.

## Deleting a D-Day counter

1. Scroll to the counter you want.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to confirm the deletion.

## Tasks

Tasks is a convenient place to create task reminders. You can mark a task as completed or delete a task.

### To open Tasks:

On the Home screen, press the **Start** soft key and select **Organizer** → **Tasks**.

## Creating a task note

1. Press the Up Navigation key.
2. Enter your task information in the **Enter new task here** field.
3. When you have finished, press .

## Completing a task

When a task is complete, mark it to indicate that the task is done. To mark, scroll to the completed task and press the **Complete** soft key.

To unmark, press the **Activate** soft key.

## Beaming a task note

You can send a task note to another device via an active Bluetooth connection.

On the task list, scroll to the task you want. Press the **Menu** soft key and select **Beam Task**. For details, see page 157.

## Deleting a task

1. On the task list, scroll to the task.
2. Press the **Menu** soft key and select **Delete Task**.
3. Press the **Yes** soft key to confirm the deletion.

## Voice Notes

In any program where you can write on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. Using Voice Notes, you can create a recording.

### To open Voice Notes:

On the Home screen, press the **Start** soft key and select **Organizer** → **Voice Notes**.

### Recording a voice note

1. Hold your device's mouthpiece near your mouth or other source of sound.
2. Press the **Record** soft key to make your recording.
3. Press the **Stop** soft key to stop recording.

### Reviewing a voice note

On the voice note list, select the note you want to review. Recording plays. During playback, you can adjust the sound volume by pressing  or .

### Setting a voice note as the ringtone

1. On the voice note list, scroll to a voice note.
2. Press the **Menu** soft key and select **Set As Ringtone**.
3. Press the **OK** soft key.

## Deleting a voice note

1. On the voice note list, scroll to a voice note.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to confirm the deletion.

## World Clock

You can set up the world clock with the time zones you want, and then check the current time of the city you need at any time.

1. On the Home screen, press the **Start** soft key.
2. Select **Organizer** → **World Clock**.  
To view in the world map view, press **World map**.
3. Scroll to the clock you want.
4. Press the **Edit** soft key and select **Assign**.  
Select the country and city you want.  
To apply daylight savings to the currently selected time zone, select **DST**.
5. Press the **Done** soft key to save the selected time zone.

On the World Clock screen, press the **Edit** soft key. The following options are available:

- **Clear:** allows you to remove an assigned time zone.
- **Assign:** assigns a new time zone.
- **View:** allows you to change a clock type.
- **Set as current time:** allows you to set the time zone as your current date and time.
- **Set as home screen:** sets the time zone to be displayed on the Home screen.

# Multimedia

## Camera

With the built-in camera of your device, you can take photos or record videos of people or events while on the move. Your device produces JPEG photos and 3GP videos.

### To open Camera:

From the Home screen, press the **Start** soft key and select **Camera**, or press and hold .

## Taking photos

When you access Camera mode, the display is activated as a viewfinder.

1. Adjust the image to be captured.
  - Press the Up or Down Navigation key to zoom in or out.
  - Press the Left or Right Navigation key to adjust the brightness of the image.
  - Press the **Menu** soft key to access the camera options. See page 116.
  - Use the number keypad to adjust the image quickly. See page 117.
2. Press  or  to take a photo.
3. Press the **Save** soft key, , or  to save the photo.

The photo is saved in the location specified in the **Default Storage** option. After saving the photo, the camera automatically returns to Photo Preview mode.

## Setting camera options

You can customise the camera settings. Once you change the camera settings, the corresponding icons display at the top of the photo preview screen.

On the camera preview screen, press the **Menu** soft key.

- **Camcorder**: switches to Camcorder mode.
- **Shooting Mode**: changes the camera shooting mode.

**Single Shot**: takes a normal single shot.

**Multi Shot**: takes a series of stills. You can select the default number of photos the camera will take in the **Camera** menu in **Options**.

**Mosaic Shot**: takes a series of stills and saves them in one frame. You can select the default layout in the **Camera** menu in **Options**.

- **Size**: allows you to select an image size.
- **Quality**: allows you to select an image quality setting.
- **White Balance**: allows you to select a white balance mode to adjust the colour balance of photos.
- **Timer**: selects the length of time for the camera to delay before taking a photo.
- **Night Mode On/Night Mode Off**: When the lighting is dim and the camera needs a longer exposure time for the picture to be of good quality, you can activate or deactivate Night mode.
- **Effect**: changes the colour tone for photos or applies a special effect to photos.
- **Frame**: selects a decorative frame.
- **Options**: allows you to change the default settings for Camera. See page 120.

## Using the keypad shortcuts

You can use the keypad to customise your camera settings when you are in the photo preview screen.

- : switches to Camcorder mode.
- : changes the shooting mode by changing the number of photos or the layout.
- : changes the image size.
- : changes the image quality.
- : changes the white balance.
- : selects the length of time delay before taking a photo.
- : allows you to change the colour tone or applies a special effect.
- : allows you to add a decorative frame to the photo.
- : accesses camera setting options.

## Viewing photos

To view photos you have taken, press the **Album** soft key in Camera mode. The list of the photos in the currently selected memory appears. For further details, see page 132.

## Recording video clips

1. From Camera mode, press or to switch to Camcorder mode.
2. Adjust the image to be recorded.

- Press the Up or Down Navigation key to zoom in or out on your subject.
  - Press the Left or Right Navigation key to adjust the brightness of the image.
  - Press the **Menu** soft key to access the camcorder options. See page 118.
  - Use the number keypad to adjust the image quickly. See page 119.
3. Press  or  to start recording. The timer on the top left of the screen shows you the elapsed time.
- Press the **Pause** or **Resume** soft key to pause and resume recording.
4. Press  or  to stop recording.
5. Press the **Save** soft key to save the video clip.
- The video clip is saved in the location specified in the **Default Storage** option. After saving the video, the camcorder automatically returns to Video Preview mode.

## Setting camcorder options

You can customise the camcorder settings. Once you change the video settings, the corresponding icons display at the top of the video preview screen.

On the video preview screen, press the **Menu** soft key.

- **Camera:** switches to Camera mode.
- **Recording Mode:** select a video recording mode. Select **Limit for MMS** to record a video suitable for an MMS or email message. Select **Normal** to record a video within the limit of the currently available memory.
- **Size:** allows you to select a video frame size.

- **Quality:** allows you to select an image quality setting.
- **White Balance:** allows you to select a white balance mode to adjust the colour balance of videos.
- **Timer:** selects the length of time for the device to delay before recording a video.
- **Audio Record Off/Audio Record On:** selects whether or not you record a video with audio.
- **Effect:** changes the colour tone for videos or applies a special effect to videos.
- **Options:** allows you to change the default settings for Camera. See page 120.

## Using the keypad shortcuts

You can use the keypad to customise your video settings when you are on the video preview screen.

-  : switches to Camera mode.
-  : changes the recording mode.
-  : changes the frame size.
-  : changes the image quality.
-  : changes the white balance.
-  : selects the length of time delay before starting recording a video.
-  : allows you to change the colour tone or applies a special effect.
-  : mutes or unmutes audio.
- : accesses camera setting options.

## Playing video clips

To view the video clips you have recorded, press the **Album** soft key in Camcorder mode. The list of the video clips in the currently selected memory appears. For further details, see page 132.

## Changing the default camera settings

To customise the default camera settings, press the **Menu** soft key and select **Options**.

The following options are available:

- **General:** You can customise the general settings for the Camera program.

**Viewfinder:** allows you to set the camera to display icons on the preview screen.

**Auto Save:** allows you to set the camera to save a photo or video after capturing.

**Default Storage:** allows you to select where you want to store your photos or video clips.

- **Camera:** You can customise the settings for Camera mode.

**Multi Shot:** allows you to set the number of photos.

**Mosaic Shot:** allows you to select the layout and shutter release mode.

**Default Prefix:** allows you to change the default prefix of photo names.

**Sound:** allows you to select sounds for the shutter release, zooming, and brightness adjustment.

- **Camcorder:** You can customise the settings for Camcorder mode.  
**Default Prefix:** allows you to change the default prefix of video names.  
**Sound:** allows you to turn on or off the sound effect when recording begins or ends.
- **Shortcuts:** You can check view the functions assigned to the keys in Camera mode or Camcorder mode.

## **Windows Media Player**

Your device is equipped with Microsoft Windows Media Player 10. With Windows Media Player, you can play Windows Media Audio, Windows Media Video, and MP3 audio files that are stored on your device, on a memory card, or on the Web.

### **To open Windows Media Player:**

On the Home screen, press the **Start** soft key, the **More** soft key and select **Windows Media**.

## **Preparing media files**

You can copy media files from your desktop computer to the device using the Windows Media Player or ActiveSync. You can also copy media files using a memory card.

---

**Note:** If you have stored too many files in memory, the operation speed of the system slows down. Using an optional memory card helps you clear up this problem and lets you enjoy more music files.

---

## About DRM, licences, and protected files

Some digital media files, such as songs downloaded from online stores, are encrypted to prevent the files from being unlawfully distributed or shared. Content providers use a technology called Digital Rights Management (DRM), to encrypt the files. During the encryption process, the content provider creates a licence which specifies how and when the file can be used.

For example, a content provider could create a licence that allows you to play a certain file on your computer, but not on your device. Or, a licence that allows you to play a certain file on your device, but only for a month, or perhaps only a certain number of times. Files that have licences associated with them are called protected files.

## Copying media files using ActiveSync

1. Connect your device to a computer and start synchronisation by referring to page 46.
2. Open the file directory on the device by clicking **Explore** from the Microsoft ActiveSync window.
3. Drag the media files you want to copy and drop them into a folder.

Windows Media Player automatically retrieves the media files from the folder where the files are copied and you can search them from the library screen. If the media files do not appear in the library, update the library by pressing the **Menu** soft key and selecting **Update Library**.

### **Copying media files using the Windows Media Player program on your computer**

You can use the desktop Windows Media Player to copy media files. Using the desktop Windows Media Player ensures that licences are copied with protected files.

Make sure that you have Windows Media Player 10 or later versions on your desktop computer. Depending on the version of your Windows Media Player, the procedure to copy files may vary.

1. Connect your device to the desktop computer and start synchronisation.
2. Open Windows Media Player on the computer.
3. Click the **Sync** tab.
4. Click **Edit Playlist**.
5. Select the media files you want to synchronise from the left pane of the window.
6. Click **OK**.
7. Select the saving location from the right pane of the Windows Media Player window.
8. Click  to select the quality level you want and click **OK**.

9. Click **Start Sync**.

The selected files are converted and copied to the location you selected in step 7.

## Using libraries

A library is a file list provided by Windows Media Player to retrieve media files in the device's memory. To access libraries, press the **Menu** soft key from the player screen and select **Library**.

The library screen contains categories, such as My Music, My Videos, My TV, My playlists, and Now playing. From the library screen, you can sort your content by criteria, such as artist name, album title, or genre.

On the library screen, you can use the following options by pressing the **Menu** soft key:

- **Queue Up:** adds the selected file to the end of the current playlist.
- **Delete from Library:** deletes the selected file from the library.
- **Now Playing:** opens the current playlist.
- **Library:** allows you to select the library that you want to view; for example, the library of files stored in your device or on a memory card.
- **Update Library:** adds new files to the library by searching your device or a memory card.
- **Open File:** allows you to find and play files that are stored on your device or a memory card, but those are not in the library.

- **Open URL:** allows you to specify a URL address for a streaming service.
- **Properties:** displays information about the selected file.
- **Player:** closes the library screen and displays the player screen.

## Playing music and video files

If you have copied media files to your device's memory or memory card, you can play them from Windows Media Player.

---

**Note:** If you play media files using the Bluetooth stereo headset, a break may occur when you access to the other menu functions.

---

### Playing media files from a library

1. On the library screen, if necessary, press the **Menu** soft key, select **Library**, and select the memory from which you want to retrieve files.
2. Press the **Menu** soft key and select **Update Library**.
3. When libraries have been updated, press the **Done** soft key.
4. Select a category.
5. Scroll to the library you want to play and press the **Play** soft key.

The player screen appears and the selected file plays.

Use the following options during playback:

- To adjust the Windows Media volume, press the Up or Down Navigation key. You can view the volume level on the screen.
- To adjust the audio volume, press  or .
- To move backward in a file, press and hold the Left Navigation key.
- To move forward in a file, press and hold the Right Navigation key.
- To access the next file, press the Right Navigation key.
- To access the previous file, press the Left Navigation key.
- To pause or resume playback, press  or .
- To play the files on the playlist randomly or repeatedly, press the **Menu** soft key and select **Shuffle/Repeat** → an option.
- To view the video on a full screen, press the **Menu** soft key and select **Full Screen**.
- To stop playback, press the **Menu** soft key and select **Stop**.

## Playing media files on a network

1. On the library screen, press the **Menu** soft key and select **Open URL**.
2. Enter a URL address in the **URL** field, or scroll to one of the URL address that you have used from the **History** field.
3. Press the **OK** soft key.

---

**Note:** To play streaming media, you must be connected to a network. For more information on creating a remote connection between your device and a network, see page 160.

---

## Setting up a playlist

You can add media files on the library screen to a temporary playlist. It lists the currently playing file, as well as any files that have been queued up to play next.

### Creating a playlist

1. On the library screen, select the category you want and scroll to the file you want to play.

If the file does not appear on the list, press the **Menu** soft key and select **Update Library**.

2. Press the **Menu** soft key and select **Queue Up** to add the file to the playlist.
3. Repeat steps 1 and 2 to add more files.
4. Press , or **Menu** soft key and select **Player** to return to the player screen.
5. Press  or  to start playing the files.
6. To save the playlist, press the **Now Playing** soft key and then the **Menu** soft key, and select **Save Playlist**.
7. Enter the list name and press the **Done** soft key. The list is saved in the My Playlists library.

## Opening the playlist

On the player screen, press the **Now Playing** soft key. You can use various options by pressing the **Menu** soft key.

## Editing the playlist

- To change the play order, press the **Menu** soft key and select **Move Up** or **Move Down**.
- To delete the selected files, press the **Menu** soft key and select **Delete from Playlist**.
- To clear the playlist, press the **Menu** soft key and select **Clear Now Playing**.

## Changing the Window Media Player settings

You can customise the appearance and functionality of Windows Media Player. On the player screen, press the **Menu** soft key and select **Options**.

You can use the following options:

- **Playback:** Select the options for playback. You can select the way time is displayed on the player screen, or whether or not to pause playback when you launch another program, and resume playback after a phone call.
- **Video:** Select the viewing options for playing videos on a full screen.

---

**Note:** If there is a problem while playing MP4 files, deselect the **Shrink to fit window** option. The problem occurs because the file has been resized.

---

- **Network:** Change the connection speed and protocol for playing music and streaming video.
- **Library:** Select whether the player screen or the library screen is displayed when you open Windows Media Player.
- **Skins:** Change the appearance of the player screen by selecting a new skin.
- **Buttons:** Assign Windows Media Player functions to the keys on your device to quickly control playback without having to use the menus.

## Podcast

In Podcast, you can access and enjoy online audio and video services and create your own playlists.

To do this, you'll need to create the connection first as described on page 160.

### **To open Podcast:**

On the Home screen, press the **Start** soft key and select **Internet** → **Podcast**.

## **Subscribing to the Podcast service**

From the Podcast screen, scroll to **Podcasts**, press the **Menu** soft key and select **Subscribe to Podcast**. When you are connected to the corresponding website, follow the onscreen instructions to complete the subscription process.

## Accessing audio and video services

From the Podcast screen, select **Podcasts**. You will be connected to the corresponding website which allows you to choose the online services that you enjoy.

To update the audio and video library, and playlists with new files, press the **Menu** soft key and select **Update Library**.

## Creating a playlist

You can create your own playlists with your favourite audio or video files or playlist wizard filtering audio or video files according to your preferences.

1. Press the **Menu** soft key and select **New** → **New Playlist** or **New Playlist Wizard**.

2. Enter a title for the playlist.

For a playlist wizard, press the **Menu** soft key and add rules or limit to filter audio or video files.

3. Press the **Ok** or **Done** soft key.
4. Add files, if necessary.

## Changing Podcast settings

To change the properties of Podcast, press the **Menu** soft key and select **Options** or **Properties**. You can specify information to be displayed on the playlists, or display and update properties of the playlists in Podcast.

## Adobe Flash Lite

Adobe Flash Lite is the Flash technology specially developed for mobile phones.

You can view flash files using this program.

### To open Adobe Flash Lite:

On the Home screen, press the **Start** soft key and then the **More** soft key, and select **Accessories** → **Adobe Flash Lite**.

### Viewing a flash file

From the file folder list, select the file you want to view.

While viewing a file, you can use the following options:

- To view the file on a full screen, press the **Menu** soft key and select **Full Screen**.
- To pause playback, press the **Menu** soft key and select **Pause**.
- To resume playback, press the **Menu** soft key and select **Resume**.
- To rewind the file, press the **Menu** soft key and select **Rewind**.
- To stop playback, press the **Menu** soft key and select **Stop**.
- To play the file repeatedly, press the **Menu** soft key and select **Looping** → **On**.
- To exit the screen, press the **Quit** soft key.

---

**Note:** Adobe Flash Lite 2.1 supports contents developed for flash 7. Depending on the file size, and memory capacity, some of the flash files may not be opened on your device.

---

## Contents Manager

This program allows you to access all of your pictures, sound clips, and video clips stored in your device's directory or from a memory card.

### **To open Contents Manager:**

On the Home screen, press the **Start** soft key and then the **More** soft key, and select **Contents Manager**. The file folders display.

## **Viewing a picture**

1. From the file folder list, select **My Pictures**.
2. Select the picture you want.
3. Press the Left or Right Navigation key to view other pictures.

While viewing a picture, you can use the following options:

- To zoom in or out, press  to switch to Zoom mode, and then press the **+** or **-** soft key.
- To edit the picture, press the **Menu** soft key and select **Edit Image**. You can then access the editing tool options by pressing the **Menu** soft key.

- To set the picture as wallpaper for the Home screen or caller ID image for a contact card, press the **Menu** soft key and select **Set As** → an option.

## Viewing pictures as a slide show

You can view all of your pictures as a slide show, a sequential presentation of each image in the current album.

Press the **Menu** soft key and select **Play Slide Show**. The slide show begins on a full screen.

- To pause or resume the slide show, press .
- To manually scroll through the pictures, press the Left or Right Navigation key.
- To stop the slide show and return to the previous screen, press .

## Playing a sound or video clip

1. From the file folder list, select **Notes**, **My Sounds**, or **My Videos**. In **Notes**, you can access your voice recordings.
2. Select the sound or video clips you want. The file plays in Windows Media.

## Searching for a file

You can quickly search for a file by entering its name.

1. From the file folder list, select a folder.
2. Press the **Menu** soft key and select **Search**.

3. Enter the file name and select the file type and location.
4. Press the **Search** soft key. The device searches the file folders and lists all matching files.
5. Press the **Open** soft key to access the file.

## Sending a file

You can send a file to another device via MMS, or an active Bluetooth connection.

Open a folder, if necessary, and scroll to the file you want.

- To send via MMS, press the **Menu** soft key and select **Send** → **as MMS**. For details, see page 73.
- To send via Bluetooth, press the **Menu** soft key and select **Send** → **via Bluetooth**. For details, see page 157. You can send only one file per attempt.

## Printing a file

You can print files via a Bluetooth connection.

1. Activate the Bluetooth feature and connect to a Bluetooth printer. See page 156.
2. From the file folder list, open the folder you want and select the file you want.
3. Press the **Menu** soft key and select **Print via Bluetooth**.
4. Set the printing options.
5. Press the **Print** soft key to print the file.

## Copying or moving a file

1. From the file folder list, open the folder you want and scroll to the file you want.
2. Press the **Menu** soft key and select **Edit** → **Copy/Move**.
3. Select the folder to which you want to copy or move the file.

## Deleting a file

1. From the file folder list, open the folder you want and scroll to the file you want.
2. Press the **Menu** soft key and select **Delete**.
3. Press the **Yes** soft key to confirm the deletion.

## Making a zip file

You can convert a file to a zip file to compact the size. This is helpful when you send files via Bluetooth or attach them to an MMS message.

1. Open the folder you want and scroll to the file you want.
2. Press the **Menu** soft key and select **Edit** → **Zip**.
3. Enter a file name and select the location to save the file.
4. Press the **Zip** soft key.

## Customising Contents Manager settings

From the file list, press the **Menu** soft key and select **Options** to access the following options:

- **Views:** allows you to select a view mode of files.
- **Slide Show:** allows you to set up properties of a slide show.
- **Shortcuts:** shows shortcut keys available in Contents Manager.
- **About:** shows copyright information.

## Extra programs

### Games

Your device includes fun games, such as Bubble Breaker and Solitaire, in Games.

#### To open Games:

On the Home screen, press the **Start** soft key and then the **More** soft key, and select **Games**.

### Bubble Breaker

The object of Bubble Breaker is to clear out all the balls. The rule is that you may only clear out adjacent same-coloured balls. The score depends on clear out every balls.

#### Playing a game

1. On the Game screen, select **Bubble Breaker**.
2. Navigate to the ball you want to clear and press .  
The group will be outline and the score for that selection will be shown.
3. Press  to accept that selection. The selected balls are cleared out.

Press the **Menu** soft key and select **Statistics** to view statistics or information about the game.

You can customise the game options such as play sounds, game style, or ball colour by pressing the **Menu** soft key and selecting **Options**.

## Solitaire

The object of Solitaire is to use all the cards in the deck to build up the four suit stacks in ascending order, beginning with aces.

### Playing a game

1. On the Game screen, select **Solitaire**.
2. Move any aces on the seven stacks to the four card spaces on the left of the screen and then make any other available plays.

To move cards, press the number or character of the card to move and then press the number or character of the stack to which you want to move the card.

3. When you have made all available plays, press the **Draw** soft key to turn over cards.

## Calculator

The calculator allows you to perform general mathematical functions, such as addition, subtraction, multiplication, and division.

### Performing a calculation

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **Calculator**.
3. Enter the numbers and operations (+, -, /, or \*).  
To use advanced operations, such as percentage (%), square (Xn), and square root (√), press the **Menu** soft key and select an option.
4. Press  to execute the calculation.

You can use the calculation result for subsequent calculations by pressing the **Menu** soft key and selecting **Copy result**. To insert the copied value into the input field, press the **Menu** soft key and select **Paste result**.

## Changing the calculator settings

Press the **Menu** soft key and select **Options** to access the following options:

- **Show digit grouping symbol:** Set whether the calculator shows a symbol of digit grouping for numbers.
- **Keep calculation log:** Set whether the calculation remains on the screen for further calculations.



## Smart Converter

In Smart Converter, you can perform unit conversions.

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories** → **Smart Converter**.
3. Select a converter type.

4. Select an original unit and enter the value to be converted in the upper unit field.

Press  to add a decimal point. Your device only can display up to 6 digits after the decimal point.

In the temperature converter, press  to change the temperature to below zero.

5. Select a target unit from the lower unit field. The equivalent value appears.

---

#### Notes:

- To reverse the unit fields for continuous conversions, press the **Menu** soft key and select **Reverse**.
  - For the currency converter, you may need to change currency rates. Press the **Menu** soft key and **View rates**.
- 



## Stopwatch

You can measure elapsed time interval.

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **Accessories**.
3. Press the **More** soft key and select **Stopwatch**.

4. Press the **Start** soft key to start the timer.
5. Press the **Record** soft key to check an interval.
6. Press the **Stop** soft key to stop the stopwatch.

## Office Mobile

You can use the Excel Mobile, Word Mobile, and PowerPoint Mobile programs.

### **To open Office Mobile:**

On the Home screen, press the **Start** soft key and then the **More** soft key. Select **Office Mobile**.

## **Excel Mobile**

Excel Mobile works with Microsoft Excel on your computer to give you easy access to copies of your workbooks. You can create new workbooks on your device, or you can copy workbooks from your computer to your device. Synchronise workbooks between your computer and your device so that you have the most up-to-date content in both locations.

## Creating a workbook

1. Select **Excel Mobile**.
2. Open the workbook you want.
3. Press the **Menu** soft key and select **Edit Mode**.
4. Select a cell.
5. Enter the value or text and press the **Done** soft key.
6. You can edit and format data by pressing and selecting **Menu** → **Edit**, **Insert**, and **Tools**. For more details, see the online help.
7. Press the **Menu** soft key and select **File** → **Save As** to save the file.
8. Enter a name and select a location.
9. Press the **Save** soft key.

## Using Excel Mobile workbooks

Excel Mobile contains a list of the excel files stored on your device. Select a file on the list to open it.

## Tips for working in Excel Mobile

Note the following when working with large worksheets in Excel Mobile:

- View in the Full screen mode to see as much of your worksheet as possible. Press the **View** soft key and select **Full Screen**.
- Freeze panes on a worksheet. First select the cell where you want to freeze panes. Press the **View** soft key and select **Freeze Panes**. You might want to freeze the top and leftmost panes in a worksheet to keep the row and column labels visible as you scroll through a sheet. To exit, press the **View** soft key and select **Unfreeze Panes**.

## PowerPoint Mobile

With PowerPoint Mobile, you can open and view slide show presentations created on your computer. Whether the presentation is opened from an email message, downloaded from a file share or the Internet, copied to the device from a memory card, or obtained by synchronising with your computer, slide shows created in \*.ppt and \*.pps format with PowerPoint 97 and later can be viewed on your device.

### Viewing a slide show

1. Select **PowerPoint Mobile**.
2. Select a file folder and select the file you want to view.

3. Press the Left or Right Navigation key to move to the next slide.

To open the previous slide, press the **Menu** soft key and select **Previous**.

To navigate between slides, press the **Menu** soft key and select **Go to Slide** and select the slide you want.

4. To end the slide show, press the **End** soft key.

### Zooming in or out in a slide

You can zoom in to see a portion of a slide in more detail and zoom out to see the entire slide again.

1. Open the slide show you want.
2. On a slide screen, press the **Menu** soft key and select **Zoom In** or **Zoom Out**.

### Changing slide show options

You can change defaults for viewing a slide show.

#### Changing the slide show orientation

1. Open the slide show you want.
2. On a slide screen, press the **Menu** soft key and select **Options...** → **Orientation**.
3. Select the orientation you want.

## Changing playback options

1. Open the slide show you want.
2. On a slide screen, press the **Menu** soft key and select **Options...**
3. Select **Override playback options** and select any of the following:
  - **Without animation:** Turns off builds and other animations.
  - **Without transition:** Prevents slide transitions from playing.
  - **Without media:** Prevents media files from playing.
  - **Use timings:** Sets to use the timings recorded with each slide in a presentation.
  - **Loop continuously:** Sets to advance to the first slide after the last slide in a presentation.

## Word Mobile

Word Mobile works with Microsoft Word on your computer to give you easy access to copies of your documents. You can create new documents on your device, or you can copy documents from your computer to your device. Synchronise documents between your computer and your device so that you have the most up-to-date content in both locations.

Use Word Mobile to create Word documents, such as letters, meeting minutes, and trip reports.

## Creating a Word document

1. Select **Word Mobile**.
2. Open the document you want.
3. Press the **Menu** soft key and select **Edit Mode**.
4. Enter information.

---

**Note:** To change the font or paragraph format, press the **Menu** soft key and select **Format** → a style.

---

5. Press the **Menu** soft key and select **File** → **Save As** to save the document.
6. Enter a name and select a location.
7. Press the **Save** soft key.

## Using a Word document

Word Mobile contains a list of the word document files stored on your device. Select a file on the list to open it.

---

**Note:** If you are opening a word document created on a computer, press the **View** soft key and select **Wrap to Window** to view the entire document.

---

You can save a document you created or edited in a variety of formats, including Word Document (\*.doc), Document Template (\*.dot), Rich Text Format (\*.rtf), and Plain Text (\*.txt).

## File Manager

The File Manager program allows you to open an explorer window similar to a desktop Windows based system. The explorer window allows you to navigate through your device to locate the desired folders and files. You can also quickly manage, delete, copy, or edit any files and folders on your device.

---

**Note:** If you turn off the device after storing some files in any folders, except for the Storage folder, using ActiveSync, all of the files in those folders will be deleted. Store important files in the Storage folder to prevent them from being deleted.

---

### Accessing files

1. On the Home screen, press the **Start** soft key and then the **More** soft key.
2. Select **File Manager**. The list of the folders in the device's memory displays.

3. Scroll to the folder that you want to view.

Press  to return to the previous directory level.

4. Scroll to an item and press  to open it.

## Using file management options

From the file directory, press the **Menu** soft key to access the following options:

- **Search:** Search for a file by entering its name.
- **Favorites:** Add the select file or folder to the Favorites List folder.
- **Send:** Send a file via MMS or Bluetooth.
- **View:** Change the view mode or change the sort order of the File Manager.
- **Scroll:** Scroll to the file or folder.
- **Selection:** Select the file or all files.
- **About:** Show version and copyright information.
- **Exit:** Exit the File Manager.

From the file directory, press the **Edit** soft key to access the file editing options, such as **Cut**, **Copy**, **Paste**, and **Delete**. You can also use **Rename**, **New Folder**, **Property**, and **Zip**.

## Task Manager

Your device is a multi-tasking device. It can run more than one program at the same time. However, multi-tasking may cause hang-ups, freezing, memory problems, and additional power consumption. To avoid these problems, end unnecessary programs using Task Manager.

### **To open Task Manager:**

On the Home screen, press and hold . You can also press the **Start** soft key and then the **More** soft key, and select **Accessories**. Press the **More** soft key and select **Task Manager**. The list of all the programs currently running on your device appears.

## Managing running programs

- To activate a program, press the **Menu** soft key and select **Activate**.
- To close a program, press the **Stop** soft key. To close all programs, press the **Menu** soft key and select **Stop All**.
- To refresh the program list, press the **Menu** soft key and select **Refresh**.

## Checking the battery status

You can check the remaining battery power level. Press the **Menu** soft key and select **Battery**.

## Checking the storage memory

You can check the memory in use for storing files and running programs in your device or on a memory card. Press the **Menu** soft key and select **Memory Info**.

## **SIM Manager**

The SIM Manager application enables you to create or view the contacts stored on the SIM card.

### **Using SIM contacts**

You can access the contacts stored on the SIM card and copy or move them to the contact list on your device's memory.

### **Creating a SIM contact**

1. On the Home screen, press the **Start** soft key.
2. Press the **More** soft key.
3. Select **Accessories** → **SIM Manager**.
4. Press the **New** soft key.
5. Enter contact information and press the **Done** soft key.

### **Editing SIM contacts**

1. On the SIM Manager screen, scroll to the contact you want.

2. Press the **Menu** soft key, and select **SIM Tool** → **Edit**.
3. Edit contact information and press the **Done** soft key.

## Viewing your own number

You can store your phone numbers with separate descriptive names. Changes made with this option do not affect the actual subscriber number of your SIM card.

On the SIM Manager screen, press the **Menu** soft key and select **Own Number**.

## SIM Application Toolkit

This is available if you use a SIM AT card that provides the SIM Application Toolkit menus and additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans.

For details, see your SIM card instructions or contact your service provider.

## Getting connected

You can use your device to exchange information with other mobile devices as well as your desktop computer, a network, or the Internet. You have the following connection options:

- Exchange information between devices with Bluetooth capabilities without a physical connection.
- Connect the device to your computer using a USB connection to use the device as a modem, data sync device or external memory disk.
- Connect to your Internet service provider (ISP) or the network at your company. Once connected, you can send or receive email and instant messages, and browse the Internet or intranet.

### Beaming with Bluetooth

Bluetooth is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange data over a distance of about 10 metres without requiring a physical connection.

You do not need to line up the device with another device to beam information with Bluetooth.

### Activating Bluetooth mode

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **Wireless Manager**.

3. Press  to activate the Bluetooth feature.
4. Press the **Done** soft key.

## Setting Bluetooth profiles

You can change the settings for each Bluetooth profile available on your device.

On the Home screen, press the **Start** soft key, and select **Settings** → **More...** → **Connections** → **Bluetooth Profiles**. The following options are available:

- **Headset**: Connect or disconnect to a hands-free car kit or headset.
- **BPP**: Connect to a Bluetooth printer. Press the **Menu** soft key and select **Set as default print** to connect.
- **OBEX**: Change the settings for a profile for connecting to a Bluetooth file server.

**Bluetooth authentication**: determine whether or not the device asks you to permit connection when other devices try to connect to your device.

**able to write**: determine whether or not other devices write to your device.

**Download folder**: select the download folder.

- **My Information**: Set the display name for your device, and check the address information.

## Searching for and pairing with a Bluetooth device

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **Bluetooth**.
3. To search for a new device, select **Add new device...**
4. Wait for the device to search for Bluetooth devices.
5. Select a device to connect to the device.
6. Enter a Bluetooth passcode and press the **Next** soft key. This passcode is used just once and you do not need to memorise it.

When the owner of the other device enters the same passcode, pairing is finished.

---

**Note:** Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth passcode, such as **0000**. If the other device has one, you must enter the code.

---

7. Press the **OK** soft key when the connection is established.
8. Enter a display name for the other device and press the **Next** soft key.
9. Check the services you want and press the **Done** soft key.

## Using the device options

When you press the **Menu** soft key from the device list, you can access the following options:

- **Edit:** allows you to change the name of the connectable device.
- **Delete:** allows you to delete the device.
- **Turn Off Bluetooth:** allows you to deactivate the Bluetooth feature.
- **Turn On Visibility:** allows other devices to detect your device.
- **COM Ports:** allows you to select a COM port for sending or receiving data.

## Sending data with Bluetooth

1. Locate an item in a program that you want to send, such as Calendar, Contacts, Tasks, File Manager, or Content Manager.
2. Scroll to the item you want to send.  
You can send only one item per attempt.
3. Press the **Menu** soft key and select a Bluetooth sending option, depending on the program you accessed.

4. Search for and pair with the device.

The device searches for devices within range and displays a list of available devices.

If there are many devices on the list, you may not be allowed to search for more devices. Press the **Menu** soft key and select **Delete** to delete the device from the list.

5. Select a device you want to start sending data to.
6. Press the **OK** soft key when sending has been completed.

## Connecting to a computer via USB

You can select how the device functions when connected to a computer via the USB port.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **USB**.
3. Select one of the following functions for USB connections:
  - **Mass Storage:** The device is perceived as an external memory device. You must insert a memory card into the device.
  - **Active Sync:** The device communicates with a computer via ActiveSync.
4. Press the **Done** soft key.

## Internet Sharing

Using Internet Sharing, you can set your device to be used as an external modem for another device or computer when connected via the USB port or Bluetooth.

---

**Note:** If you have an active GPRS connection, for example a WAP connection, you must first terminate the connection before attempting Internet access via Internet Sharing.

---

1. For a USB connection, plug the PC data cable into the device and the USB port on your computer.
2. On the Home screen, press the **Start** soft key.
3. Select **Internet** → **Internet Sharing**.
4. Select the PC connection and network connection types.
5. Press the **Connect** soft key to activate Internet Sharing.
6. For a Bluetooth PAN connection, search for a compatible computer and connect the device to the computer.

---

**Notes:**

- When Internet Sharing is activated, you cannot use ActiveSync.
  - When Windows Service Pack 2 is used, Internet access using Internet Sharing is more stable.
  - To use a Bluetooth PAN connection, the device or computer connected to your device should support the PAN profile.
-

## Connecting to the Internet or your network

You can use the **Connections** settings to create GPRS, proxy, and Virtual Private Network (VPN) connections so that you can connect to the Internet or your corporate network. By using a data connection, you can browse the Internet, download emails, chat by using MSN® Messenger, or synchronise remotely with an Exchange Server. Check with your service provider to see if a data connection has already been set up for you, and if over-the-air configuration is supported.

### Creating a GPRS connection

If you subscribe to General Packet Radio Services (GPRS), you can set up a GPRS connection to gain access to your corporate network or the Internet.

You can also use your device as a GPRS modem for a desktop computer.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **GPRS** → **GPRS Settings**.

---

**Note:** You can select an authentication method for GPRS connections by using **GPRS Authentication**.

---

3. Press the **Menu** soft key and select **Add**.
4. Enter the requested information.
  - **Description:** Enter a name for the connection.

- **Connects to:** Select a network type for which the connection will be used.
- **Access point:** Enter the information provided by your system administrator.
- **User name:** Enter your user name for the GPRS network.
- **Password:** Enter your password.
- **Authentication Type:** Select an authentication type.
- **Primary DNS:** Enter the primary domain naming system (DNS) address.
- **Secondary DNS:** Enter the secondary DNS address.
- **IP address:** Enter the Internet Protocol (IP) address.

---

**Note:** If you are not sure about the information to enter, ask your network administrator.

---

5. When you have finished, press the **Done** soft key.

## Creating a proxy connection

You can use a proxy connection to gain access to the Internet over an existing connection to your corporate network.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **More...** → **Proxy**.
3. Press the **Menu** soft key and select **Add**.
4. Enter the requested information.
  - **Description:** Enter a name for the connection.

- **Connects from:** Select the type of network from which you will connect.
- **Connects to:** Select the type of network to which you will connect.
- **Proxy (name:port):** Enter the proxy server name and port number in the form.
- **Type:** Select a network type for which the proxy connection will be used.
- **User name:** Enter your user name for the network to which you will connect.
- **Password:** Enter your password.

---

**Note:** If you are not sure about the information to enter, ask your service provider.

---

5. When you have finished, press the **Done** soft key.

## Creating a VPN connection

If your company has set up a virtual private network (VPN), you can create a VPN connection to gain access to your corporate network over an Internet connection.

1. On the Home screen, press the **Start** soft key.
2. Select **Settings** → **More...** → **Connections** → **More...** → **VPN**.
3. Press the **Menu** soft key and select **Add**.
4. Enter the requested information.
  - **Description:** Enter a name for the connection.
  - **VPN type:** Select the type of VPN.

- **Server:** Enter the VPN server name.
- **Connects from:** Select the type of network from which you will connect to VPN (typically **The Internet**).
- **Connects to:** Select the type of network to which you will connect (typically **Work**).
- **User name:** Enter your user name for the VPN.
- **Password:** Enter your password.
- **Domain:** Enter the domain name, if required.
- **IPSec authentication:** If you selected **IPSec/L2TP** for **VPN type**, select the type of authentication.
- **IPSec Pre-shared key:** If you selected **Pre-Shared Key** for **IPSec authentication**, enter the shared key.

---

**Note:** If you are not sure about the information to enter, ask your network administrator.

---

5. When you have finished, press the **Done** soft key.

## Setting up data connections

After creating connection profiles, you can assign a profile to each network type.

1. On the Connections screen, press the **Menu** soft key and select **Advanced**.
2. Select a connection profile in each network.
3. Press the **Done** soft key.

## Adding a URL exception

Some URL addresses for web pages on your company intranet may use periods, for example: intranet.companyname.com. To view these pages in Internet Explorer, you must create a URL exception.

---

**Note:** You do not need to create URL exceptions for Internet URL addresses.

---

1. On the Connections screen, press the **Menu** soft key and select **Advanced**.
2. Press the **Menu** soft key and select **Work URL Exceptions**.
3. Press the **Menu** soft key and select **Add**.
4. Enter the URL pattern and press the **Done** soft key. Separate multiple URL patterns with a semicolon.

## Changing the data connection options

On the Advanced screen, press the **Menu** soft key and select **Options** to access the following options:

- **Redial attempts:** Select the redial attempt to connect the Internet or your network after an unsuccessful connection.
- **Idle disconnect after:** Select the length of time for which your device will cache released connections.
- **My desktop connects to:** Select the type of network to which your desktop computer will connect.

# Troubleshooting

## ■ General problems

| Problem                                                                                                                      | Description & Solution                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "The SIM card is missing or is not valid. You can still make emergency calls if your service provider supports it." displays | Check that the SIM card has been correctly installed.                                                                                                                                                                                                                                                                                                             |
| "No network coverage," "Error unable to connect. No network coverage." or "Your text message cannot be sent." displays       | <ul style="list-style-type: none"><li>• The network connection has been lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.</li><li>• You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.</li></ul> |

| Problem                                                                                                      | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The bars next to  disappear | <ul style="list-style-type: none"> <li>• If you have just turned on your device, wait for about 2 minutes, until your device finds the network and receives a signal from the network.</li> <li>• If you are in a tunnel or in an elevator, the device may not be able to receive the network signal properly. Move to an open place.</li> <li>• This may appear when you move between different service areas. It is normal.</li> </ul> |
| The display is not clear                                                                                     | In direct sunlight, you may not be able to see the display clearly. Moving to a place with different lighting should solve this problem.                                                                                                                                                                                                                                                                                                 |
| White lines appear on the display                                                                            | This may happen if you turn on the device after a long period of disuse, or after removing the battery without turning off the device. This is not related to the device's life or performance. The display should correct itself shortly.                                                                                                                                                                                               |

| Problem                                                  | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "PIN code" appears                                       | <ul style="list-style-type: none"> <li>• You are using your device for the first time. You must enter the Personal Identification Number (PIN) supplied with the SIM card.</li> <li>• The PIN check feature has been enabled. Each time the device is switched on, the PIN has to be entered. To disable this feature, press the <b>Start</b> soft key, select <b>Settings</b> → <b>More...</b> → <b>Security</b> → <b>Disable SIM PIN</b>, and enter the PIN.</li> </ul> |
| "PUK Required" appears                                   | The PIN code was entered incorrectly three times and the SIM card is now blocked. Enter the PUK supplied by your service provider.                                                                                                                                                                                                                                                                                                                                        |
| I forgot the password, PIN, reset password, or PUK codes | If you forget or lose the device password, contact your device dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network provider. For information about passwords, contact your access point provider, for example, a commercial Internet Service Provider (ISP), service provider, or network operator.                                                                                                            |

## ■ ■ Call problems

| Problem                                        | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I have entered a number but it was not dialled | <ul style="list-style-type: none"> <li>• Be sure that you have pressed .</li> <li>• Check if your wireless connection to your mobile service provider is switched on and the signal from the network is unobstructed.</li> <li>• You may have set an outgoing call barring option.</li> </ul>                                              |
| My correspondent cannot reach me               | <ul style="list-style-type: none"> <li>• Be sure that your device is switched on ( pressed for more than one second).</li> <li>• Check if your wireless connection to your mobile service provider is switched on and the signal from the network is unobstructed.</li> <li>• You may have set an incoming call barring option.</li> </ul> |
| My correspondent cannot hear me speaking       | <ul style="list-style-type: none"> <li>• Be sure that you have switched on the mouthpiece.</li> <li>• Make sure that the device is close enough to your mouth. The mouthpiece is located at the bottom of the device.</li> </ul>                                                                                                                                                                                            |

| Problem                                                                              | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The audio quality of the call is poor                                                | <ul style="list-style-type: none"> <li>• Adjust the voice volume by pressing  or .</li> <li>• Check the signal strength indicator on the display (); the number of bars indicates the signal strength, from strong to weak.</li> <li>• Try moving the device slightly or moving closer to a window if you are in a building.</li> </ul> |
| Calls to and from the device are not connected properly, and are easily disconnected | <ul style="list-style-type: none"> <li>• Signals from the network are weak. Move to another area.</li> <li>• Touching the antenna area on the top of the device may lower the call quality. Be careful not to touch the antenna area while using the device.</li> </ul>                                                                                                                                                                                                                                                                                                                    |

## Power and charging problems

| Problem                                      | Description & Solution                                                                                                         |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| The device malfunctions or does not function | Remove the battery and then replace it. Turn on the device. If the problem persists, contact a Samsung service representative. |

| Problem                                                                                | Description & Solution                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The battery's standby time is shorter than expected                                    | <ul style="list-style-type: none"> <li>• Batteries are subject to wear and tear. Standby time may grow shorter as time passes.</li> <li>• Leaving a fully charged battery in a cold or hot place for a long period of time may reduce battery life.</li> <li>• Standby time depends on where you use the device. The actual time may vary from the battery's specifications.</li> </ul> |
| Is it OK if I leave the device connected to the power outlet after it is fully charged | We recommend that you disconnect the device from the adapter or unplug the adapter from the power outlet.                                                                                                                                                                                                                                                                               |
| The device becomes hot                                                                 | This may happen when you are on the device or when you use programs, such as games, the Internet, media player, or the camera, for a long time because the device needs more power at those times. Stop using those programs until the device cool down.                                                                                                                                |
| The battery level seems sufficient, but the device does not turn on                    | <ul style="list-style-type: none"> <li>• Remove the battery from the device and reinstall it. Then turn on the device.</li> <li>• Clean the metal contacts both on the battery and on the device. Reinstall the battery and turn on the device.</li> </ul>                                                                                                                              |

| Problem                                            | Description & Solution                                                                                                                    |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| The device turns off when the adapter is connected | Dust on the contacts may cause unexpected power-off or charging problems. Clean the metal contacts both on the battery and on the device. |

## Program problems

| Problem                                                                                                       | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "Not enough memory to perform operation. Delete some data first." or "Memory low. Delete some data." displays | To view what kind of data you have and how much memory the different data groups consume, press the <b>Start</b> soft key and then the <b>More</b> soft key, and select <b>Accessories</b> → <b>More</b> → <b>Task Manager</b> . Press the <b>Menu</b> soft key and select <b>Memory Info</b> . Delete old items from programs. If necessary, make a backup copy of your data using ActiveSync or the memory card. |
| <b>WAP Browser</b>                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                    |
| "Unable to connect. Verify your proxy settings, and try again." displays                                      | Insert proper browser settings. Contact your service provider for instructions.                                                                                                                                                                                                                                                                                                                                    |

| Problem                                                                                                     | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Internet Explorer</b>                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| "Your Internet connection is not configured properly. Please verify your settings in Connections." displays | Insert proper browser settings. Contact your service provider for instructions.                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| The device is unable to connect to the Internet                                                             | <ul style="list-style-type: none"> <li>• Check if you have set up and are connected to an Internet service provider.</li> <li>• Check if your wireless connection to your mobile service provider is switched on and the signal from the GPRS network is not obstructed.</li> <li>• Verify with your service provider that your user name and password are correct.</li> <li>• Verify with your Internet service provider that the network you are trying to connect is available, or try to connect it from another PC.</li> </ul> |
| <b>Camera</b>                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Images seem smudged                                                                                         | Check if the camera lens protection window is clean.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Contacts</b>                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| No number is dialled when you recall a contact card                                                         | <ul style="list-style-type: none"> <li>• Check if a number has been stored in the contact card.</li> <li>• Re-store the number, if necessary.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                            |

| Problem                                               | Description & Solution                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bluetooth</b>                                      |                                                                                                                                                                                                                                                                                                                                                                                     |
| I cannot end a Bluetooth connection                   | If another device is connected to your device, you can end the connection by deactivating Bluetooth. Go to <b>Wireless Manager</b> and deselect <b>Bluetooth</b> .                                                                                                                                                                                                                  |
| I cannot find my friend's Bluetooth-enabled device    | <ul style="list-style-type: none"> <li>• Be sure that both have activated Bluetooth.</li> <li>• Be sure that the distance between the two devices is not over 10 metres or that there are no walls or other obstructions between the devices.</li> <li>• Be sure that the other device is in the discoverable mode.</li> <li>• Be sure that both devices are compatible.</li> </ul> |
| I cannot discover the remote Bluetooth stereo headset | <ul style="list-style-type: none"> <li>• Be sure that the Bluetooth functionality on the device is turned on.</li> <li>• Be sure that the remote Bluetooth stereo headset is in the discoverable mode.</li> <li>• Be sure that the remote Bluetooth device has the capability to act as a stereo headset.</li> </ul>                                                                |

| Problem                                                                           | Description & Solution                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I cannot connect to the remote Bluetooth stereo headset                           | Ensure that the correct passkey was entered on the device during the connection with the headset. Most Bluetooth headsets have a fixed passkey that would be mentioned in their user's guide. You would need to enter the passkey when establishing a connection with the headset.                                                                                                                                                  |
| I cannot listen to music on the remote Bluetooth stereo headset                   | <ul style="list-style-type: none"> <li>• Ensure that you are connected to the Bluetooth stereo headset.</li> <li>• Ensure that the song that you are playing is one of the supported formats.</li> <li>• Check the battery levels on the Bluetooth stereo headset.</li> <li>• Ensure that the device and headset are within range of each other. The maximum distance between the two should not be more than 10 metres.</li> </ul> |
| There are breaks in the music being played on the remote Bluetooth stereo headset | You may observe breaks if there are walls that separate the device and the Bluetooth stereo headset.                                                                                                                                                                                                                                                                                                                                |
| I cannot make a call using the Bluetooth stereo headset while listening to music. | End a Bluetooth connection and re-connect to the headset using the hands-free profile.                                                                                                                                                                                                                                                                                                                                              |

| Problem                                                | Description & Solution                                                                                                                                                                                                                                              |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Call History</b>                                    |                                                                                                                                                                                                                                                                     |
| The call history appears empty                         | You may have activated a filter, and no communication events fitting that filter have been logged. To see all events, press the <b>Start</b> soft key and select <b>Call History</b> . Press the <b>Menu</b> soft key and select <b>Filter</b> → <b>No Filter</b> . |
| <b>Messaging</b>                                       |                                                                                                                                                                                                                                                                     |
| I cannot select a contact card when creating a message | If the contact card does not have a phone number or email address, you cannot select it. Add the missing information to the contact card in Contacts.                                                                                                               |
| <b>PC connectivity</b>                                 |                                                                                                                                                                                                                                                                     |
| Problems occur when connecting the device to a PC      | Make sure that ActiveSync is installed and running on your PC. See the user's guide for ActiveSync on the CD-ROM. For further information on ActiveSync, see the help function on ActiveSync or visit <a href="http://www.microsoft.com">www.microsoft.com</a> .    |

If the above guidelines do not help you to solve the problem, take note of:

- the model and serial numbers of your device
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

## Regulatory notices

### SAR certification information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the

network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are

Head : 0.337 W/Kg, Body-worn: 0.291 W/Kg.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of FCC exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID A3LSGHI620.

## **Consumer Information on Wireless Phones**

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless

phones. The FDA publication includes the following information:

### **What kinds of phones are the subject of this update?**

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### **Do wireless phones pose a health hazard?**

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF

exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### **What is FDA's role concerning the safety of wireless phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF

safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

### **What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in

laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more

years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both

laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### **What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?**

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

"If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### **What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency

energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### **Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

### **Do wireless phone accessories that claim to shield the head from RF radiation work?**

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

### **What about wireless phone interference with medical equipment?**

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and

Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:  
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):  
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:  
<http://www.icnirp.de>
- National Radiation Protection Board (UK):  
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration

<http://www.fda.gov/cellphones>

## **Road Safety**

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen,

call roadside assistance or other special non-emergency number.

**“The wireless industry reminds you to use your phone safely when driving.”**

For more information, please call 1-888-901-SAFE, or visit our web-site [www.wow-com.com](http://www.wow-com.com)

Provided by the Cellular Telecommunications & Internet Association

## **Operating Environment**

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## **Using Your Phone Near Other Electronic Devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

## **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

### **Persons with pacemakers:**

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted Facilities**

Switch your phone off in any facility where posted notices require you to do so.

## **Potentially Explosive Environments**

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

If the phone is not on, switch it on.

Key in the emergency number for your present location (for example, 911 or other official emergency number).  
Emergency numbers vary by location.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible.

Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

### **Restricting Children's access to your Phone**

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

### **FCC Notice and Cautions**

**FCC Notice**

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery march Park, Quincy, MA 02269, Attn: Publication Sales Division.

## **Cautions**

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

## **Other Important Safety Information**

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## **Product Performance**

### **Getting the Most Out of Your Signal Reception**

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

### **Understanding the Power Save Feature**

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated.

If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

## **Understanding How Your Phone Operates**

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

## **Maintaining Your Phone's Peak Performance**

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

## **Availability of Various Features/Ring Tones**

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

## **Battery Standby and Talk Time**

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

## **Battery Precautions**

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in

household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

## Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children and pets. They may inadvertently damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



## **Microsoft End User License Agreement**

- You have acquired a device("DEVICE") that includes software licensed by Samsung Electronics Co., Ltd. from an affiliate of Microsoft Corporation ("MS"). Those installed software products of MS origin, as well as

associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

- IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT Samsung Electronics Co., Ltd. FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**
- SOFTWARE includes software already installed on the DEVICE (“DEVICE Software”) and MS software contained on the CD-ROM disk (“Companion CD”).

## GRANT OF SOFTWARE LICENSE.

This EULA grants you the following license:

**DEVICE Software.** You may use the DEVICE Software as installed on the DEVICE.

**Companion CD.** A Companion CD is included with your DEVICE, and you may install and use the Microsoft® ActiveSync® component on one (1) or more personal computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft® Windows Mobile™ Version 5.0 operating system. For other software component(s) contained on the Companion CD, you may install and use such components only in accordance with the terms of the printed or online end user license agreement(s) provided with such

component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such components) on the DEVICE or a single personal computer with which you use the DEVICE.

**Phone Functionality.** If the DEVICE Software includes phone functionality, all or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate wireless telecommunication carrier to whom Samsung Electronics Co., Ltd. may distribute its DEVICES ("Mobile Operator"), or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE.

**Microsoft® Outlook®.** If Microsoft Outlook is included with your Device, the following terms apply to your use of Microsoft Outlook: (i) regardless of the information contained in the "Software Installation and Use" section of the online EULA you may install one (1) copy of Microsoft Outlook on one (1) personal computer to use, exchange data, share data, access and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook is between Samsung Electronics Co., Ltd. and the end user-not between the PC manufacturer and end user.



## DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

- **Speech/Handwriting Recognition.** If the DEVICE Software includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes and that errors can occur in the component's

recognition of your handwriting, and the final conversion into text. Neither Samsung Electronics Co., Ltd. nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition process.

- **Limitations on Reverse Engineering, Decompilation and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.
- **NOTICE REGARDING THE MPEG-4 VISUAL STANDARD.** The DEVICE Software may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879

- **No Rental/Commercial Hosting.** You may not rent, lease or lend or provide commercial hosting services with the SOFTWARE to others.
- **SOFTWARE as Component of the Device-Software Transfer.** The DEVICE Software installed in read only memory ("ROM") of the DEVICE may only be used as part of the DEVICE. Its component parts may not be separated for use on more than on Device, unless expressly permitted by this EULA. You may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.  
If the DEVICE Software includes phone functionality, you may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software of Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination.** Without prejudice to any other rights, Samsung Electronics Co., Ltd. or MS may terminate this EULA if you fail to comply with the terms and conditions

of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

- **Security Updates/Digital Rights Management.**

Content providers are using the digital rights management technology ("DRM") contained in your DEVICE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Portions of the DEVICE Software and third party applications such as media players use DRM to play Secure Content ("DRM Software"). If the DRM Software's security has been compromised, owners of Secure Content ("Secure Content Owners") may request that MS block the ability of DRM license servers and personal computers to deliver new licenses that enable an affected DEVICE to play Secure Content. This action does not alter the DRM Software's ability to play unprotected content. A list of revoked DRM Software is sent to your DEVICE whenever you download a license for Secure Content from the Internet or from your personal computer. You therefore agree that MS may, in conjunction with such license, also download revocation lists onto your DEVICE on behalf of Secure Content Owners. MS will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such revocation lists.

- **Consent to Use of Data.** You agree that MS, Microsoft Corporation, their affiliates and/or their designated agent may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. MS, Microsoft Corporation, their affiliates and/or their designated agent may use this information solely to improve their products or to provide customized services or technologies to you. MS, Microsoft

Corporation, their affiliates and/or their designated agent may disclose this information to others, but not in a form that personally identifies you.

- **Internet Gaming/Update Features.** If the DEVICE Software provides, and you choose to utilize, the Internet gaming or update features within the DEVICE Software, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorize MS, Microsoft Corporation and/or their designated agent to use this information solely to improve their products or to provide customized services or technologies to you. MS or Microsoft Corporation may disclose this information to others, but not in a form that personally identifies you.

- **Internet-Based Services Components.** The DEVICE Software may contain components that enable and facilitate the use of certain Internet-based services. you acknowledge and agree that MS, Microsoft Corporation, their affiliates and/or their designated agent to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").
- If Samsung Electronics Co., Ltd. provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.
- If MS, Microsoft Corporation, their affiliates and/or their designated agent make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).
- Samsung Electronics Co., Ltd., MS, Microsoft Corporation, their affiliates and/or their designated agent reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the DEVICE Software.
- **Links to Third Party Sites.** The DEVICE Software may provide you with the ability to link to third party sites through the use of the DEVICE Software. The third party sites are not under the control of MS, Microsoft Corporation, their affiliates and/or their designated agent. Neither MS nor Microsoft Corporation nor their affiliates nor their designated agents are responsible for

(i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, nor (ii) webcasting or any other form of transmission received from any third party sites. If the DEVICE Software provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by MS, Microsoft Corporation, their affiliates and/or their designated agents.

## UPGRADES AND RECOVERY MEDIA.

- **DEVICE Software.** If the DEVICE Software is provided by Samsung Electronics Co., Ltd. separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" you may install one (1) copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any software component(s) is provided by Samsung Electronics Co., Ltd. separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labeled "For Upgrade Purposes Only", you may (i) install and use one (1) copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).
- **RECOVERY MEDIA.** If SOFTWARE is provided by Samsung Electronics Co., Ltd. on separate media labeled "Recovery Media" you may use the Recovery Media solely

to restore or reinstall the SOFTWARE originally installed on your DEVICE.

## **INTELLECTUAL PROPERTY RIGHTS.**

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any image, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS or its suppliers (including Microsoft Corporation). **The SOFTWARE is licensed, not sold.** You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS and its suppliers (including Microsoft Corporation). Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

**TRADEMARKS.** This EULA does not grant you any rights in connection with any trademarks or service marks of Samsung Electronics Co., Ltd., MS, Microsoft Corporation, their affiliates or suppliers.

**EXPORT RESTRICTIONS.** You acknowledge that the SOFTWARE is subject to U.S. and European Union export

jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

**PRODUCT SUPPORT.** Product support for the SOFTWARE is not provided by MS, Microsoft Corporation, or their affiliates. For product support, please refer to Samsung Electronics Co., Ltd. support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact Samsung Electronics Co., Ltd. for any other reason, please refer to the address provided in the documentation for the DEVICE.

**RESTRICTED USE.** The SOFTWARE is not designed or intended for use or resale in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, or other devices or systems in which a malfunction of the SOFTWARE would result in foreseeable risk of injury or death to the operator of the device or system, or to others.

**NO LIABILITY FOR CERTAIN DAMAGES.** EXCEPT AS PROHIBITED BY LAW, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. **IN NO EVENT SHALL MS BE**

**LIABLE FOR ANY AMOUNT IN EXCESS OF TWO HUNDRED FIFTY U.S. DOLLARS (U.S \$250)**

**FOR APPLICABLE LIMITED WARRANTIES (IF ANY) AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET (IF ANY) INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS OR ELECTRONICALLY.**

**THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. THERE ARE NO WARRANTIES OR CONDITIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY (IF ANY) IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, LACK OF VIRUSES OR NON-INFRINGEMENT, OR WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, ANY AND ALL OF WHICH ARE HEREBY EXPRESSLY DISCLAIMED. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE IN A WARRANTY BOOKLET OR OTHERWISE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS, MICROSOFT CORPORATION OR THEIR AFFILIATES.**











- \* Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- \* Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

**SAMSUNG ELECTRONICS**

