

Enterprise IP Solutions

OfficeServ SOHO User Guide



SAFETY CONCERNS

For product safety and correct operation, the following information must be given to the operator/user and shall be read before the installation and operation.

Conventions



WARNING

Provides information or instructions that you should follow in order to avoid personal injury or fatality.



CAUTION

Provides information or instructions that you should follow in order to avoid a service failure or damage to your phone.



NOTE

Indicates additional information for reference.

Symbols



Caution

Indication of a general caution



Restriction

Indication for prohibiting an action for a product




Instruction

Indication for commanding a specifically required action




WARNING

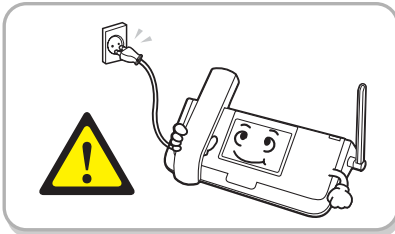


Connect the power adapter provided with the product, to the power connection port.

Using adapters other than that provided may seriously damage the product or cause fire or electrocution.

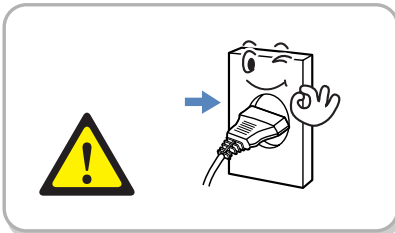

Insert power cord tightly and fully into the outlet.

This is to prevent fires.

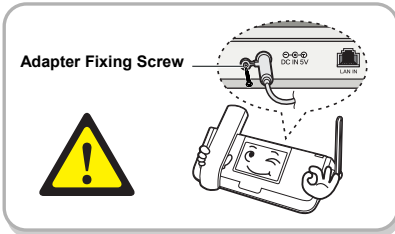


Fix OfficeServ SOHO and power adapter by using screws after connecting the power adapter.

Failing to do so can cause fire or electrocution.




Be careful not to drop the product.

This is to prevent product damage and injuries.

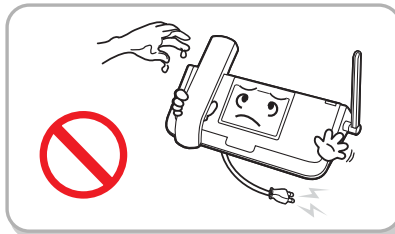

Do not pull or excessively bend the power cord, and do not touch the power plug with wet hands.

This prevents power cord damage, fire and electrocution.

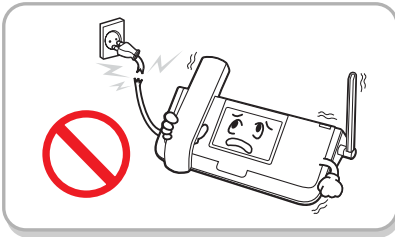


Do not use damaged power plugs and cords, or loose outlets.

Failing to do so can cause fire or electrocution.



Do not connect many devices to a single outlet.

This is to prevent fires.

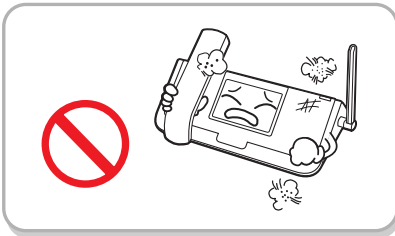


Do not place the product in dusty areas or in environments with extreme thermal differences.

Failing to do so can cause fire or electrocution.



Do not place the product near items that can start a fire(e.g., cigarette fire, heaters).

Failing to do so can cause fire or electrocution.

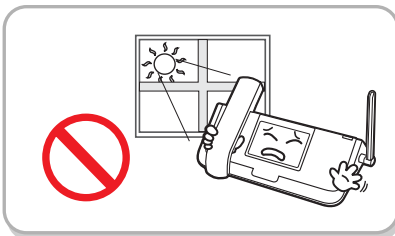

Do not place the product under direct sunlight.

The product may not operate properly due to damaged components.




Do not use or store inflammable sprays or material near the product.

Failing to do so can cause fire or electrocution.




Do not place vases, flowerpots, cups, cosmetics, or medicine, which contain water, near the product.

Failing to do so can cause fire or electrocution.

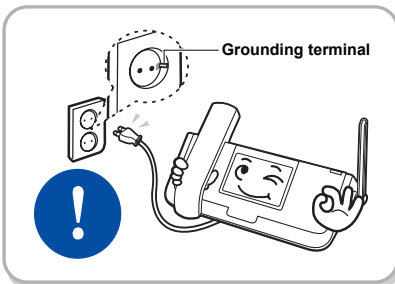


The power cable must be connected to an outlet equipped with a grounding terminal.

This is to prevent fires and electrocution.

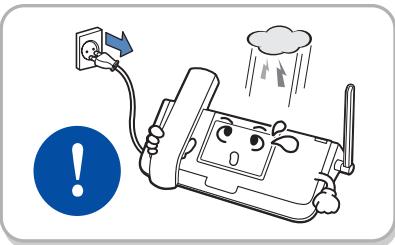


Unplug the power cable when lighting and thunder is expected.

This is to prevent fires and electrocution.

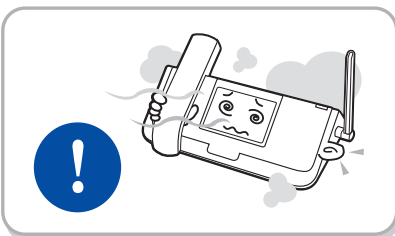


If the product makes strange sound, smell, or smoke, unplug the cord immediately and contact the service center.

Failing to do so can cause fire or electrocution.

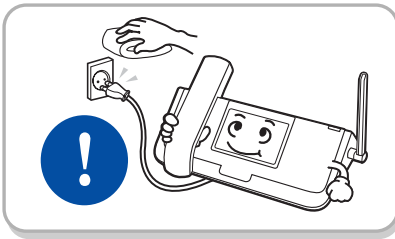


If dust or water is on the pin or the touching surface of the power plug, unplug the cord and clean the plug with cloth. If the substance cannot be cleaned, contact the service center.

Failing to do so can cause fire or electrocution.

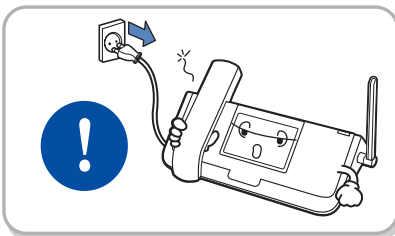

Unplug the power cord when not using the product for a long time.


This is to prevent fire or electrocution.

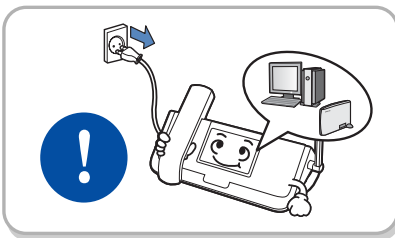

To connect an external device(e.g., PC, modem, facsimile) to the product, turn off the power of both the product and the device before connecting the cable.

This is to prevent fire or electrocution.

CAUTION

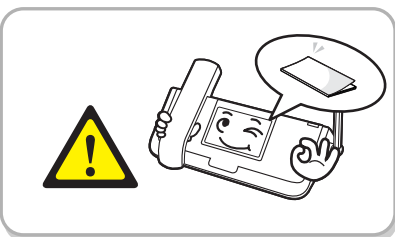


Accurately install and properly use the product according to the user guide.

This is to prevent malfunctions and reductions in product lifetime.




Do not install the product on unstable places.

This is to protect the product from falling.

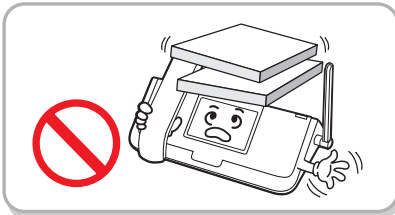

Do not place heavy items over the product.

Components of the product can be damaged.

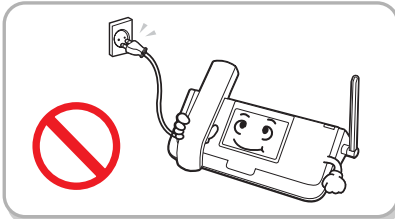


Do not turn off the power while the product is upgrading its software.

Turning off the power during upgrade will cancel the upgrade.




Do not clean the product with chemicals such as wax, benzene, alcohol, thinner, insecticide, air freshener, and detergent.

This is to protect the product from bleach or damage.

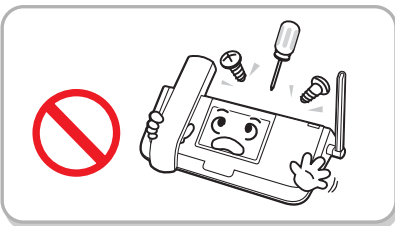


Do not disassemble, repair, or modify the product without permission.

Contact your dealer or the service center to repair the product.

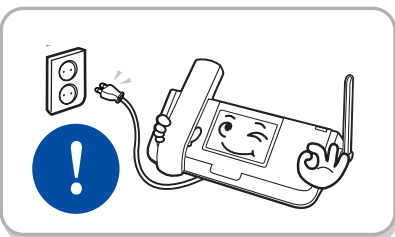

Do not connect the power cable to the improper AC power outlet.

The power adapter type may be various depending on countries. The product may not operate normally if the voltage is improper.

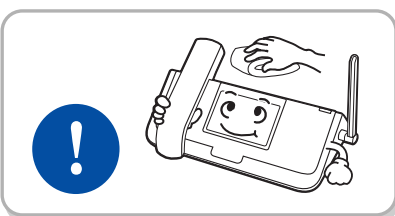

Clean the produce with a dry cloth after unplugging the power cord.

This is to protect the product from damage.

TABLE OF CONTENTS

SAFETY CONCERNS

2

Conventions	2
Symbols	2
WARNING	3
CAUTION	6

PREPARATION

13

Main Features	13
Product Content	15
Front Panel	16

INSTALLATION

18

Environment Description	19
Network Configuration Diagram	19
Check the following network environment:	20
Checking External Network Environment of User	21
OfficeServ SOHO Connection (ISDN Type)	22
OfficeServ SOHO Connection (PSTN Type)	24
Easy Installation of OfficeServ SOHO	25
Easy Install	26
Connecting OfficeServ SOHO with Desktop / Laptop Computers	30
Connecting Desktop / Laptop Computer to OfficeServ SOHO Wirelessly	30
Connecting Desktop / Laptop Computer to OfficeServ SOHO by LAN Cable	32

THINGS YOU SHOULD KNOW

34

Screens	34
Main Screen	34

Station Status Display Screen.....	35
Menus During Call Screen.....	35
Menu Screen	36
Entering Characters	36
Selecting Entry Mode	37
Entering Characters.....	37
Entering Numbers.....	38
Entering Special Characters	38

MAKING CALLS

39

Before Making a Call	39
Calling Method.....	39
Making Intercom Calls	40
Making an Intercom Call.....	40
Callback.....	43
Making External Calls	44
Making an External Call.....	44
Making Calls Using Pause.....	47
Auto Redial	48
CALLBACK (CCBS / CCNR) (ISDN Only)	49
New Call (PSTN Only)	50
Making Intercom / External Calls	50
Dialing The Most Recent Dialed Number.....	50
Dialing Using Recent Call Log	51
Speed Dialing	52
Dialing Numbers Saved in [M](Memory) Button.....	53
Dialling using the PhoneBook.....	54

ANSWERING CALLS

55

Before Answering Calls	55
Answering Method	55
Call Refusal / Call Deflection	56

Answering Intercom Calls	57
Answering from OfficeServ SOHO	57
Answering from WLAN phone	58
Answering External Calls	59
Answering from OfficeServ SOHO	59
Answering from Mobile	60
Call Pick Up.....	61

FUNCTIONS USED DURING CALLS

62

During Intercom Call	62
Call Transfer	62
Mute	63
During External Calls	64
Call Transfer	64
Trunk Flash.....	65
KEYPAD facility (ISDN Only)	66
Malicious call tracing (malicious call identification, MCID)(ISDN Only).....	66
Parking a call (ISDN Only).....	67
Call Waiting	67
Conference during Intercom / External Calls	68

CONVENIENT FEATURES

69

Calling Line Identification Presentation (CLIP)	69
Conference.....	70
Group Conference	70
Each Conference.....	71
Do Not Disturb (DND).....	72
Setting DND.....	72
Canceling DND.....	73
Group Listening.....	74

MENU

75

Main Menu	75
SMS	77
Inbox.....	78
Outbox.....	78
Templates	80
SMS Settings.....	81
PhoneBook.....	83
Find Number	83
Outgoing Call	86
Incoming Call	86
Missed Call	87
New Entry	87
Edit Group	88
Register Memory Button	88
Delete All	89
E-Diary	90
Wakeup Call	90
Alarm	91
Scheduler	91
Memo	92
Calculator	92
World Time	93
D-Day	93
Unit Change.....	94
Sound.....	95
Ring Tone	95
KeyTone.....	95
Volume.....	96
Services	97
Phone Setup.....	99
My Phone	99

Mobile Setup.....	103
a/b port Setup	104
Network Setup	106
Global Setup.....	110
Reset	117
Easy Install	118
Auto Attendant	118
VoIP Setup.....	120
Least Cost Routing	124

TROUBLESHOOTING

125

WEB MANAGEMENT

127

What is Web Management System?	127
Login	128
Data	130
Network	130
WLAN	134
Security.....	136
Telephone & Phonebook	142
Eaasy Install	143
DB Config	143
Upgrade.....	144
Password.....	144
Status.....	145

ANNEX

146

What is OfficeServ SOHO CRM?.....	146
Specification	147

PREPARATION



Main Features

Wide LCD Screen



Various functions of the phone are shown on the LCD. Users can use functions easily by finding and selecting a menu from the LCD screen.

Convenient Direction Button



Users can use the direction button to move between menus or to select a menu.

Easy Installation



The installation wizard enables users to easily set the time and network mode and to easily register WLAN phone.

Redial



Users can redial a number selected from the call list. In addition, the auto-redial function repeatedly attempts connection to a busy line for a certain time period.



Hold



Users can put the caller on hold to attend to an urgent matter or to connect another line, and can later reconnect to the original caller.

DND



Users can use the DND(Do Not Disturb) function to prevent the phone from ringing even if a call arrives.

Wireless Data Service



This product supports interface with communication devices(e.g., PC, PDA) that include WLAN modules, enabling data communication service via wireless LAN.

Clean Office



Wireless data service enables a clean office without cables.

No Power Operation



 
 

 
 
 
You can make or receive external calls using the handset even during power failures.(Only PSTN 1 is supported. However, other functions will be disabled.)

Product Content

After purchasing this product, check if the items below are all included in the package. If an item is missing or is damaged, contact your dealer. The cable type and quantity may be various depending on countries.



PREPARATION

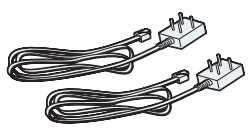OfficeServ SOHO		WIP-5000M
		
OfficeServ SOHO	LAN Cable	WIP-5000M WLAN phone
		
Power Adapter	Dual-Modular Phone Cables(2)	Charger
		
Power Adapter Fixing Screw(1)	4-Port Phone Jack Cables(2)	Battery (1 Standard Type)
		
User Guide	Quick Installation Guide	User Guide



NOTE


WIP-5000M Mobile Phone

For descriptions on the WIP-5000M WLAN phone, provided with OfficeServ SOHO, refer to the 'WIP-5000M User Guide'.

Front Panel

Buttons on the front panel of the OfficeServ SOHO are described below:

PREPARATION

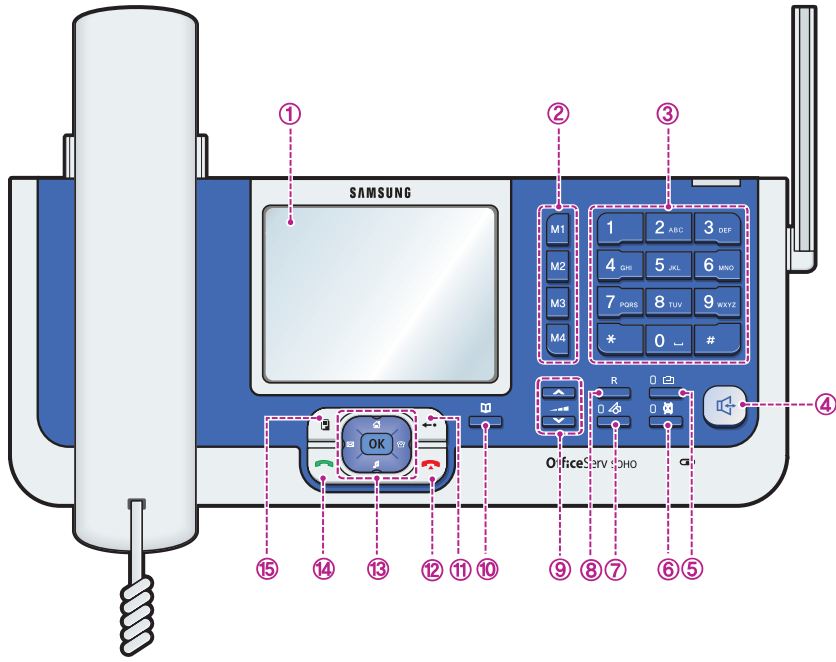

Name		Button	Function
①	LCD Screen	-	Display the status, phone number, menu, and various messages.
②	M1~M4(Memory) Button		Frequently used numbers are saved as Memory buttons.
③	Dial Button		Button used for entering numbers and characters.
④	Speaker Button		Button used for making calls through the speakerphone.
⑤	Internal Call Button		Used for making internal calls.



Name		Button	Function
⑥	Mute Button		Used to switch off the microphone.
⑦	Services Button		Button used for Special Services according to Service Provider.
⑧	R Button		Button used for holding/transferring a connected call.
⑨	Volume Button		Button used for adjusting the ring volume. Button used for adjusting the volume during a call.
⑩	PhoneBook Button		Button used for viewing the phonebook.
⑪	Cancel Button		- Used when moving to the previous step in menu mode. - Used to exit the menu mode. - Used to delete an entered character/number after the character/number is entered.
⑫	End Button		- Used when terminating a call during a call. - Used to exit the menu mode.
⑬	Direction Button/ OK Button		- Direction button: Used when editing characters/numbers or moving a menu item. - OK button: Used when selecting/saving the item where a cursor is in the menu mode.
⑭	Send Button		- Used when making a call(Press [Send] button after entering number.) - Used for checking recent outgoing/incoming(including no answer) call or for dialing the corresponding number. - Used when receiving an incoming call. - Used when pressing the dial button for over a certain time period to make a call to the most recent dialed number. - Press the send button in a standby state to retrieve the list of recent calls.
⑮	Menu Button		Used for using menu functions such as: SMS, PhoneBook, E-Diary, Sound, Services, Phone Setup.

INSTALLATION

The installation procedure of OfficeServ SOHO is described below:



1

Check Installation Environment

- Check network configuration
- Check connecting system of internal/external network



2

OfficeServ SOHO connect

- Basic Connection: Handset, trunk cable, Internet cable, and Power cable
- Option: FAX and PC or PDA



3

Configure Network

- Mandatory Setting: Time, date
- Network Mode setting
- Register WLAN phone



4

Configure User PC


Configure Network Environment of User PC
(Windows 98/ME, Windows 2000, Windows XP)

Environment Description

This section describes the user environment before installing OfficeServ SOHO.

Network Configuration Diagram

The network configuration diagram of OfficeServ SOHO is shown below:

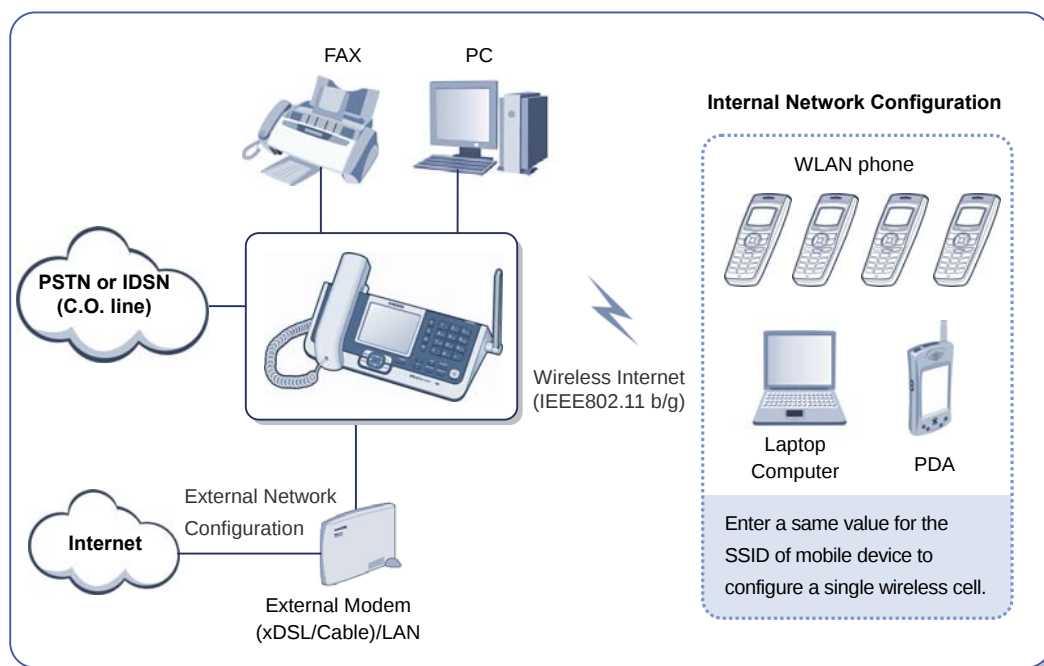

Check the following network environment:

1. PC Environment:

Check the type of OS(e.g., Windows 95/98/ME/2000/XP) of the PC and whether a LAN card is equipped on the PC. The Internet setup procedure differs depending on the type of OS. There are two ways to check the type of OS.

- Clicking [Start] will open a menu tab. You can verify the version from the Windows information displayed on the left section of the menu tab.
- Right click [My Computer] on your desktop and select [Properties] to check the system information.

2. LAN Environment of PC:

The OfficeServ SOHO can be connected only to PCs that have a LAN card. Check if a LAN/WLAN card is equipped on the PC.

3. Types and number of terminals

- Mobile terminal: WLAN phone(WIP-5000M), Laptop computer, PDA
- Wired terminal: PC, FAX

4. External Network:

Check the connecting method and network information(Refer to the next page).



Checking External Network Environment of User

Check the external network environment of the user before installing OfficeServ SOHO.

When using static IP

When using a static IP assigned by the ISP, set to **Static**, and enter the assigned IP address, gateway, subnet mask, and DNS address.

When using dynamic IP

If your ISP supports DHCP or you are connecting through a dynamic IP address, set to **DHCP**. Once the **DHCP** is set, an IP address is automatically assigned to OfficeServ SOHO.

When using an IP address assigned through user ID and password

If you are connected to the Internet through a DSL line, check with your ISP to see if they use PPPoE. If they do, you will have to enable PPPoE and enter the user ID and password provided by the ISP instead of entering an IP address, gateway, subnet mask, and DNS address.


When using an IP address assigned through a PPTP server of ISP

PPTP is used instead of PPPoE by some European ISPs. Enter the server address, ID, and password.



OfficeServ SOHO Connection (ISDN Type)

Before proceeding with the installation of the OfficeServ SOHO please read carefully the instructions below:

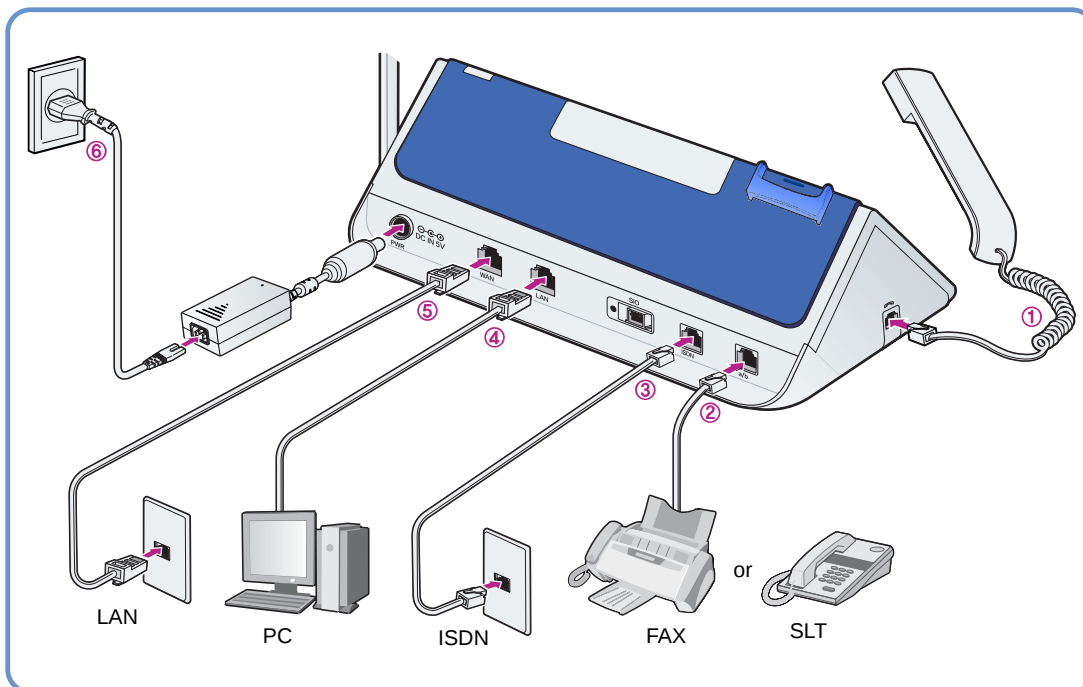

Turn off the power of the external modem, OfficeServ SOHO, and PC(or facsimile) before installation.

1. Handset Connection:

Connect the handset to the connection port on the left side of the OfficeServ SOHO.

2. ISDN Network Connection:

Connect the BRI to the ISDN port of the OfficeServ SOHO by using the ISDN access cable.

3. Single Line Telephone Connection:

Connect the facsimile, Answering Device or Single line Telephone to the port of the OfficeServ SOHO by using a phone cable.(RJ-11).

4. PC Connection:

Connect the LAN port of the PC to the LAN port of the OfficeServ SOHO by using a LAN cable.(RJ-45).

5. LAN Connection:

Connect the LAN port of the external modem to the WAN port of the OfficeServ SOHO by using a LAN cable.(This is not applicable to an internal ADSL modem.)

6. Power Connection:


Connect the power port of the OfficeServ SOHO to the power outlet by using a power adapter for +5 V.

After installation, turn on the power of the external modem, OfficeServ SOHO, and PC(or facsimile) in sequence.



OfficeServ SOHO Connection (PSTN Type)

Before proceeding with the installation of the OfficeServ SOHO please read carefully the instructions below:

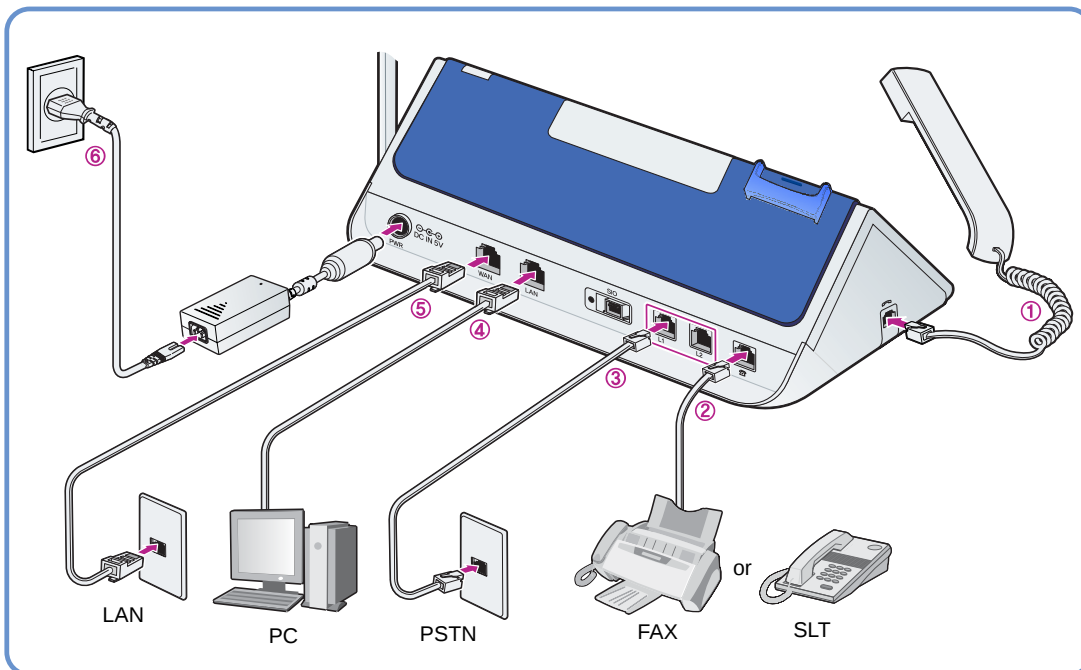

Turn off the power of the external modem, OfficeServ SOHO, and PC(or facsimile) before installation.

1. Handset Connection:

Connect the handset to the connection port on the left side of the OfficeServ SOHO.

2. Single Line Telephone Connection:

Connect the facsimile, Answering Device or Single line Telephone to the port of the OfficeServ SOHO by using a phone cable.(RJ-11).

3. PSTN Line Connection:

Connect the L1(Line1), L2(Line2) to the analog trunk port of the OfficeServ SOHO by using the RJ-11 dual modular cable.

4. PC Connection:

Connect the LAN port of the PC to the LAN port of the OfficeServ SOHO by using a LAN cable.(RJ-45).

5. LAN Connection:

Connect the LAN port of the external modem to the WAN port of the OfficeServ SOHO by using a LAN cable.(This is not applicable to an internal ADSL modem.)

6. Power Connection:

Connect the power port of the OfficeServ SOHO to the power outlet by using a power adapter for +5 V.

 
After installation, turn on the power of the external modem, OfficeServ SOHO, and PC(or facsimile) in sequence.

Easy Installation of OfficeServ SOHO

Once the power of the OfficeServ SOHO is turned on, the green LEDs of the **[Internal Call]** and **[Mute]** buttons on the front panel of the OfficeServ SOHO blink in turns.

Within a short time, the loading screen and the **[EasyInstall]** screen will appear in sequence on the LCD of the OfficeServ SOHO.

The use of the buttons for menu settings is described below:

Button	Description	Button	Description
	The [OK] button is used after text is entered or to set the menus.		The direction buttons are used to move the cursor left or right or to search the menus.
	The [Cancel] button is used to delete entries or to return to the previous step.		The direction buttons are used to move the cursor up or down .

Press the **[OK]** button to move to the next step after the menu settings or press the **[Cancel]** button to return to the previous step.

In case of problems with the Internet connection or with the registration of a WLAN phone, please refer to the 'Troubleshooting' section in User Guide. The procedure for easy installation of the OfficeServ SOHO is as follows:



Easy Install




INSTALLATION

Start Easy Install




Connect the Internet cable(LAN cable) to the OfficeServ SOHO and press **[OK]** to start the installation.

Time Setup: This is only for PSTN Type (Model: SIT200EM)

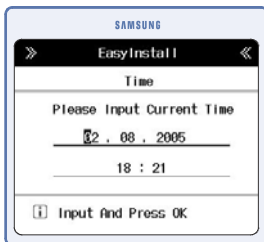


Enter the current date and time and press **[OK]**.


Network Mode

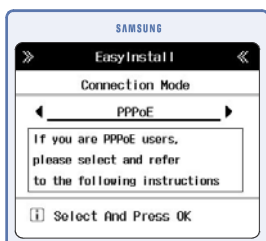


1. PPPoE

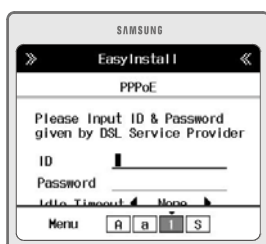

2. Static

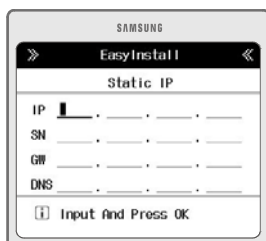

3. DHCP

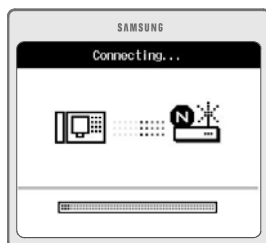

4. Setup Later

To skip Internet setup, select this item and press **[OK]**.

Use the  or  button to select your Internet service system among PPPoE, Static, DHCP, and Setup Later, and press **[OK]**. Items are described below:

Select this item if you are a PPPoE user.
Enter the ID and Password provided by the ISP and press **[OK]**.

- Contact your ISP if you have forgotten the ID or password.


Select this item if you are a Static IP user.
Enter the address provided by ISP and press **[OK]**.

- IP: Enter IP address
- SN: Enter Subnet Mask
- GW: Enter Gateway address
- DNS: Enter DNS(Domain Name Server) address

Select this item if you are a DHCP user.
Press **[OK]** to set up the Internet automatically.



ISDN Settings (This is only for ISDN Type (Model: SIT200EI))

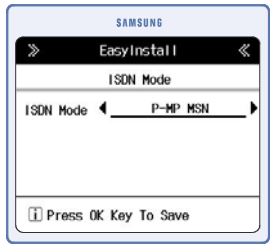

Use the navigation button  or  to Select the **ISDN** connection mode between **DDI** and **P-MP Multinumber** and press **[OK]**. The items are described below:

5. DDI



Select this item if you have a point-to-point ISDN subscription. Enter your main telephone number (e.g., 0292189777) and select the destination of the incoming calls, then press **[OK]**.


6. P-MP Multinumber



Select this item if you have a point-to-multipoint ISDN subscription. Enter the main telephone number and if necessary any additional telephone number (e.g., 0292189765) and select, per each of them, the destination of the incoming calls, by pressing **[OK]** to confirm each entry.

To continue, once the ISDN setting procedure is concluded, select **Go to CLIP Settings** and press **[OK]**.


CLIP Settings (This is only for ISDN type (Model: SIT200EI))

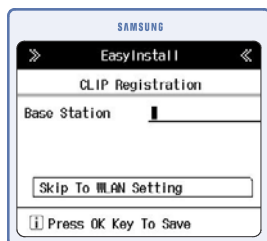

Enter, per each extension, the telephone number, among those received from your network operator (e.g.,: 0292189765), that you want to display to the person called.


To continue, select **Go to WLAN settings** and press **[OK]**.

Register WLAN phone

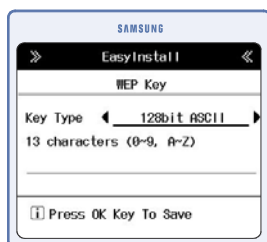

Enter a 13 characters WEP key

- Entering a WEP key (Wireless Equivalence Privacy) is optional. To skip this entry, press the **[OK]** button.

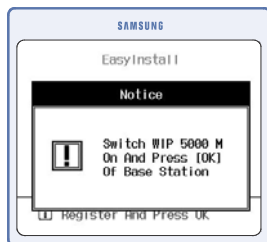

Turn on the WLAN WIP-5000M phone and press the **[OK]** button of the OfficeServ SOHO.



Register the WLAN WIP-5000M phone according to the procedure described in the section 'Easy Registration(38page)' inherent to the WIP-5000M and press **[OK]**.



Connecting OfficeServ SOHO with Desktop / Laptop Computers

You can use the Internet on a desktop or a laptop computer using OfficeServ SOHO.

You can connect a desktop or a laptop computer to OfficeServ SOHO in a wireless method(using a WLAN card) or in a wired method(using a wired LAN card and a LAN cable).

Connecting Desktop / Laptop Computer to OfficeServ SOHO Wirelessly

- A wireless connection can be made only if a WLAN card is installed in the desktop or laptop computer. If a wired LAN card is installed, refer to the wired connection method.
- You can set up a WLAN by using an extra program provided by the WLAN card manufacturer. It is recommended that you configure the WLAN using such program. For information on how to set up a WLAN, refer to the user guide of the program.
- You can also set up a WLAN by using the WLAN connection service of Windows XP.



NOTE

Setting up a WLAN in Windows 2000/ME/98

Windows 2000/ME/98 do not provide WLAN setting menus.
Use programs provided by the manufacturer to set up a WLAN.



NOTE

Checking Windows Version

Here are two ways to check the version(e.g. Windows XP, Windows 2000, Windows 98) of the Windows OS running on your computer

- Clicking [Start] will open a menu tab. You can verify the version from the Windows information displayed on the left section of the menu tab.
- Right click [My Computer] on your desktop and select [Properties] to check the system information.

Using WLAN Card Program

A WLAN card or a WLAN adapter is provided with an extra program for WLAN setup. To set up a WLAN, refer to the user guide of the program.

Enter the same SSID set in the OfficeServ SOHO.

To check the SSID of the OfficeServ SOHO, refer to the procedure described in the 'Note' paragraph on the next page.

Wireless Laptop Network Configuration

1. Click **[Start]** to select **[Control Panel]**.
2. Double-click **[Network Connection]** in Control Panel.
 - If the Control Panel does not have **[Network Connection]**, select **[Switch to Classic View]** at the upper left corner of the Control Panel.
3. If **[Wireless Network Connection]** is set to **[Disabled]**, right-click **[Wireless Network Connection]** and select **[Enabled]**.
 - Even if a message, 'A wireless connection is not available' appears after selecting **[Enabled]**, proceed to the next step.
4. Right-click **[Wireless Network Connection]** to select **[Properties]**, and select **[Show icon in notification area when connected]**. Click **[OK]**.
5. Right-click **[Wireless Network Connection]** and select **[View Available Wireless Networks]**.
6. From the list of **[View Available Wireless Networks]**, select the same SSID of OfficeServ SOHO. To check the SSID of the OfficeServ SOHO, refer to the procedure described in the 'NOTE' below. Select **[Allow Access to the Selected Wireless Network Regardless of Security]** and click the **[Connect]** button.



NOTE

Verifying SSID

From the OfficeServ SOHO, press **[Menu]** →  → **[2. WLAN Setup]** → **[Enter Password(default: 0000)]** → **[OK]** → **[4. WLAN Information]** to verify the SSID.





Connecting Desktop / Laptop Computer to OfficeServ SOHO by LAN Cable

If the computer has been connected to the Internet before, additional setting is not required. Check the Internet connection(LAN cable status) by referring to 'OfficeServ SOHO connection', and execute the Internet Explorer. If the computer is not connected to the Internet, follow the steps below:

For Windows 98/ME

1. Select **[Start] → [Settings] → [Control Panel] → [Network]**.
2. Double-click **[TCP/IP]**.
3. Select 'Obtain an IP address automatically' and click **[OK]**. Restart the computer.

For Windows 2000

1. Select **[Start] → [Settings] → [Control Panel] → [Network and Dial-up Connections]**.
2. Right-click **[Local Area Connection]** and select **[Properties]**.
3. Double-click **[Internet Protocol(TCP/IP)]**.
4. Select 'Obtain an IP address automatically' and 'Obtain DNS server address automatically' and click **[OK]**.

For Windows XP

1. Press **[Start]** and select **[Control Panel]**.
2. Double-click **[Network Connection]**.
3. Right-click **[Local Area Connection]** and select **[Properties]**.
4. Double-click **[Internet Protocol(TCP/IP)]**.
5. Select **[Obtain an IP address automatically]** and **[Obtain DNS address automatically]**. Click **[OK]** to finish the setting.



THINGS YOU SHOULD KNOW

Screens

Major screens that are displayed on the LCD of OfficeServ SOHO are described below:

Main Screen

The default background screen of the main screen is shown below.

The background screen can be changed by pressing [Menu] button and selecting [Phone Setup] → [1. My Phone] → [1. Select Background].




Icons of the background screen are described below:


Icon	Function
	Station Message
	Call forward
	Answer mode
	DND
	Mute
	Alarm
	Message
	Network connection

Station Status Display Screen

You can display this screen by pressing the [SCREEN] button while in standby mode or during a call. Statuses of stations and DND, and System Speed Dial are displayed as icons. You can use a function by moving to the corresponding menu and pressing the [OK] button.

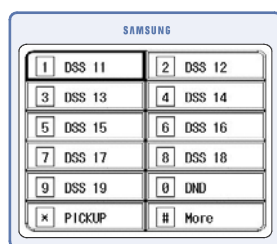


<PSTN Type>

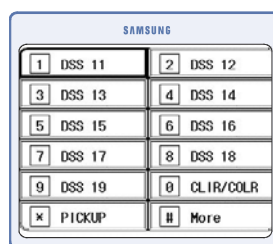

<ISDN Type>

Menus During Call Screen

You can display menus available during a call by pressing the [Menu] button. Various functions that can be used during a call are displayed in this screen. You can use a function by moving to the corresponding menu and pressing the [OK] button.

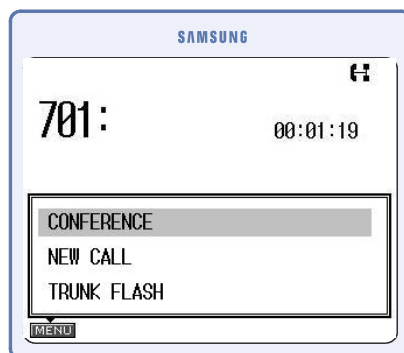

NOTE

Menus Displayed During a Call

Available menus may differ depending on the system version. You can use direction buttons to view menus that are not shown on the screen. 'RETRY' menu is not displayed during intercom calls.




THINGS YOU SHOULD KNOW

Menu Screen

You can display the Menu screen by pressing the [Menu] button while the OfficeServ SOHO is in standby mode.

The Menu screen displays PhoneBook, E-Diary, Message, Conference, Phone Setup, and WLAN functions as icons. This menu may be different according to the country.

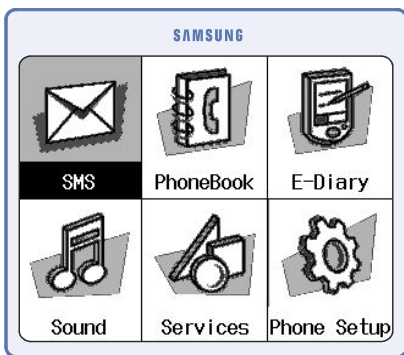

Entering Characters

You can use the dial button and the [Menu] button of OfficeServ SOHO to enter or edit letters, numbers, and special characters.

MENU Button




Dial Button



Selecting Entry Mode

Press the [Menu] button when the character input screen appears. Repeat pressing [Menu] button until the cursor moves to the desired entry mode.

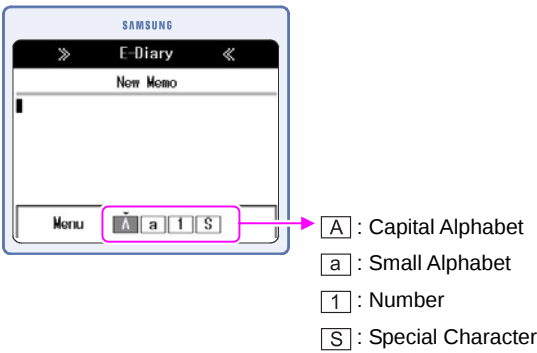

NOTE

Character Entry Mode

Character entry mode is set to 'Capital Alphabet' by default.

THINGS YOU SHOULD KNOW

Entering Characters

1. Press the [Menu] button and select the capital/small alphabet mode.
2. Press the dial button to enter or edit characters.

(For upperscase)

Dial Button	Character	Dial Button	Character	Dial Button	Character
1		2 ABC	A B C	3 DEF	D E F
4 GHI	G H I	5 JKL	J K L	6 MNO	M N O
7 PQRS	P Q R S	8 TUV	T U V	9 WXYZ	W X Y Z
*	* / .	0 _	space	#	# @ -

(For lowercase)

Dial Button	Character	Dial Button	Character	Dial Button	Character
			a b c		d e f
	g h i		j k l		m n o
	p q r s		t u v		w x y z
	* / .		space		# @ -

THINGS YOU SHOULD KNOW

Entering Numbers

Select number entry mode by pressing [Menu] button, and press the corresponding dial button.

Entering Special Characters

1. Press the **[Menu]** button and select the special character mode. Available special characters will appear below the entry screen.
2. Press    direction buttons to select a special character and press **[OK]** button. Press   direction buttons to select another type of special character.



NOTE

Entering Characters

- If the character to be entered is same as the character immediately entered, press the  button and move the cursor one space to the right.
- Press the  button to enter a space.
- To enter a space between two characters already entered, press the    direction button to move to the character that should be right after the space and press the [0] button.
- Press the [C] button to erase an entered character. Press the [C] button briefly to erase characters one by one, or press and hold the button to erase all characters.

MAKING CALLS

Before Making a Call


The means and features for making calls are summarized in the table below.
For procedures on using the functions, refer to the corresponding descriptions.

Category	Intercom Call	External Call
Call method	Handset, speakerphone	
Feature	- Making intercom calls - Callback	- Making external calls - Auto Redial - Callback - New Call
	- Dialing the most recent dialed number - Dialing using the recent call log - Speed dialing - Dialing numbers saved in [M](memory) button - Dialling using the PhoneBook - Dialling using the LCR function	



Calling Method

 Calls can be made by using the handset or speakerphone.



Using Handset

Lift the handset and enter the phone number.
Then press **[Send]** button.



Using Speakerphone

Press **[Speaker]** button, enter a phone number, and then press **[Send]** button without lifting the handset to make a call. Listen to the voice and speak to the microphone. Press **[Speaker]** button again to end the call.

- You can lift the handset while speaking through the speakerphone to continue the call by using the handset.

Making Intercom Calls

This section describes how to make an internal call.

 
Making an Intercom Call

This function is used for making an internal call from OfficeServ SOHO to a WLAN phone or vice versa.



MAKING CALLS

Calling From OfficeServ SOHO to WLAN phone



1. Lift the handset.
 - Press [Speaker] button to speak through the speakerphone.



2. Press the number of the recipient's station.



3. Press the **[Send]** button.
A connecting tone will be played.



4. Start conversation when the recipient answers.

Calling from WLAN phone to OfficeServ SOHO or to Another WLAN phone



1. Press the number of the recipient's station.



2. Press the [Send] button to hear a connecting tone.



3. Start conversation when the recipient answers.



MAKING CALLS

Calling from a/b port phone to OfficeServ SOHO or to WLAN phone



1. Lift the handset of the a/b port Phone



2. Press the number of the recipient's station.




3. Start conversation when the recipient answers.

Calling from [Station Status Display Screen] of OfficeServ SOHO




1. Press the **[Internal Call]** button while the phone is in standby mode.


2. Select a WLAN phone from the 'Station Status Display Screen'.

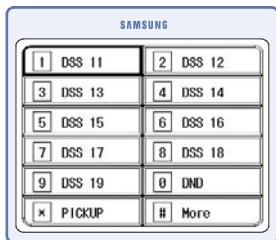

<PSTN Type>

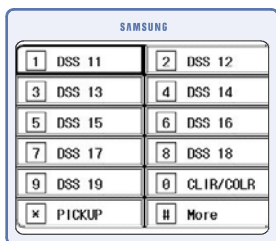


<ISDN Type>

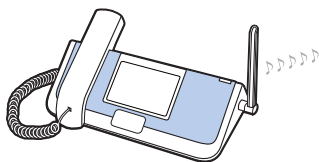

3. Press the **[OK]** button to dial the selected station.
 - In case an unregistered WLAN phone is selected the 'Plug out' message appears.

Callback


When you make an internal call but if the recipient is busy, you can reserve a call on the recipient's station.

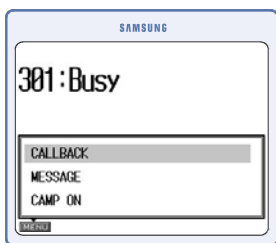

1. If you hear a busy tone on making a call, press **[Menu]** button and select **[CALLBACK]**.



2. On hearing the confirmation tone, replace the handset.

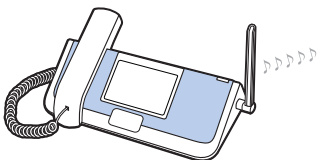

3. Your phone rings when the recipient finishes the earlier call.

- A message indicating callback is displayed on the LCD.



4. Lift the handset and the recipient's station will ring.



5. Start conversation when the recipient answers.



MAKING CALLS

Making External Calls

This chapter describes how to make an external call from OfficeServ SOHO or a WLAN phone.

Making an External Call

This function is used for making an external call from OfficeServ SOHO or a WLAN phone.




MAKING CALLS

Calling from OfficeServ SOHO



1. Lift the handset.
 - Press [Speaker] button to call through the speakerphone.

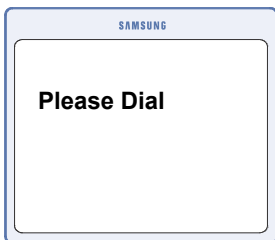

2. When the 'Please Dial' message appears on the LCD, enter the recipient's number.



3. Start conversation when the recipient answers.

Calling from Mobile



1. Enter an external phone number.



2. Press the **[Send]** button to hear a connecting tone.



3. Start conversation when the recipient answers.



MAKING CALLS


Calling from a/b port phone



1. Lift the handset of a/b port phone.



MAKING CALLS

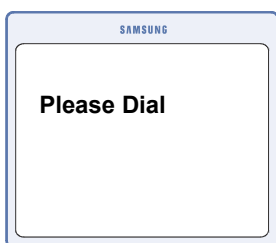

2. Enter the Trunk Access Number first, and enter the recipient's number.



3. Start conversation when the recipient answers.

Making Calls Using Pause

You can use the pause function when making a call from the OfficeServ SOHO or from a WLAN phone to an Automatic Response System(ARS).



NOTE

Pause Function

Pause function refers to using the pause character when dialing numbers for making a call to an Automatic Response System(ARS) such as telebanking. Note that some ARS may not be able to recognize electronic dialing.



1. Enter an ARS number(e.g., Telebanking).



2. Press **[Menu]** and enter the pause character 'p'.



3. Enter the function numbers to be used for the ARS.




4. Press **[Send]** to connect to the ARS and to automatically execute the functions corresponding to the entered function numbers.




MAKING CALLS

Auto Redial

When you make an external call but if the recipient is busy, you can use this function to redial the same number periodically until the recipient answers the call.

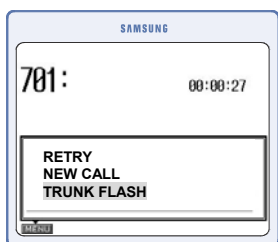

<PSTN Type>

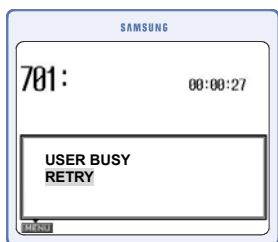


<ISDN Type>



1. If you hear a busy tone on making a call, press **[Menu]** button and select **[RETRY]**.

2. Replace the handset and wait until the call is connected. The 'wait for redial' message is displayed on the LCD, and the number is redialled periodically.

- If the recipient continues to be on the phone, auto redial will be performed up to 99 times, and then the auto redial mode will be released.

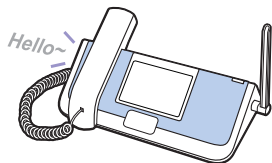

3. When the recipient answers the call, lift the handset or press the **[Speaker]** button to start conversation.

- The Speaker LED is blinked until answering the call.





NOTE

Canceling Auto Redial

To cancel the auto redial function, press dial button, **[Speaker]** button or lift and replace the handset.

CALLBACK (CCBS / CCNR) (ISDN Only)

If the external called does not answer(CCNR) or is busy(CCBS), you can reserve the call pressing [CALL BACK] in soft menu. This function is serviced ISDN network.

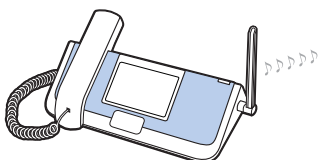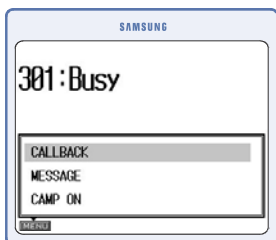


1. Press **[Menu]** → **[CALL BACK]**, if the external called does not answer or is busy.
2. On hearing the confirmation tone, replace the handset.
3. When the called is IDLE state, OfficeServ SOHO is called the reserved number automatically.



MAKING CALLS

New Call (PSTN Only)

This function allows you to make another call immediately after the current call.

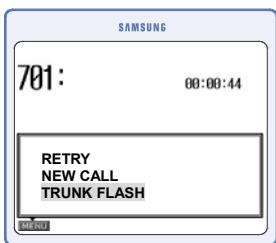

1. During a call, press **[Menu]** button and select **[NEW CALL]**.



2. Press the target phone number on hearing the dial tone.

Making Intercom / External Calls


This chapter describes how to make an external or intercom call from OfficeServ SOHO or a WLAN phone.

Dialing The Most Recent Dialed Number

This function is used to dial the most recently dialed internal/external number.



1. Press the **[Send]** button for at least 2 seconds.

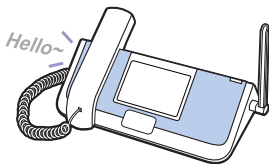


2. Speak through the speakerphone or handset.

Dialing Using Recent Call Log

This function is used for making an internal or external call using a list of numbers recently dialed.




1. Press **[Send]** button while in standby mode.
 - Press the **[Send]** button briefly to display the call log, or press and hold the button to dial the most recently dialed number.

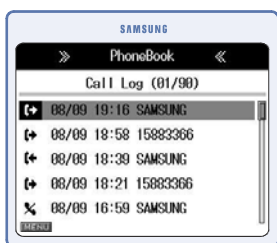

2. Recently outgoing, incoming, and missed calls are each displayed up to 32 numbers. Use direction buttons and move to the intended number.
 - Press the **[OK]** button to display the user name, registered to the phonebook, the call time, and call duration.



3. Press **[Send]** button to dial the selected number.

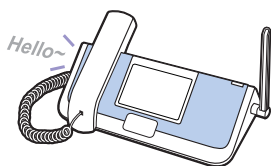

4. Speak through the speakerphone or handset.




MAKING CALLS

Speed Dialing

By registering frequently used numbers to dialing buttons, you can dial a phone number conveniently only by pressing the corresponding dialing button without entering the full number. Dial buttons must be kept pressed to dial corresponding numbers.



1. While in standby mode, press and hold the last one of the speed dial buttons registered in the phonebook for at least 2 seconds.

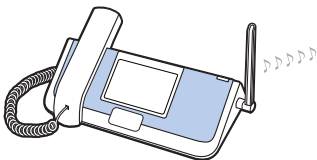

2. A call is made to the corresponding phone number and the recipient's phone rings.



3. Start conversation when the recipient answers.



 
NOTE

Registering Speed Dial Number


For procedure on registering a speed phone number, a speed phone number, refer to the 'PhoneBook' section of 'MENU'.

Dialing Numbers Saved in [M](Memory) Button

By registering a frequently used number to memory button, you can dial the number conveniently only by pressing the memory button without entering the full number.



1. Select the **[M]**(Memory) button where the target number is saved.

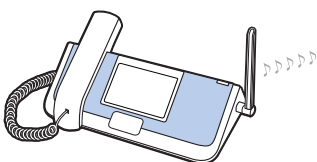

2. A call is made to the corresponding phone number and the recipient's phone rings.



3. Start conversation when the recipient answers.



NOTE

Registering a Phone Number to [M](Memory) Button


For procedure on registering a number to a [M](memory) button, refer to the 'PhoneBook' section of 'MENU'.



MAKING CALLS

Dialing using the PhoneBook


You can save the names of up to 250 contacts in your PhoneBook. You can search for the required telephone number using various criteria.

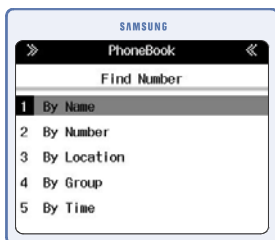

1. [Menu] → [Phone book] → [1. Find Number].

Select the finding option.

- Options are By Name/ By Number/ By Location/ By Group/ By Time

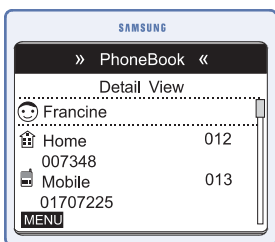

2. Enter the information according to the option, and select the number,



3. Press [Send] button to dial the selected number.



4. Start conversation when the recipient answers.

ANSWERING CALLS

Before Answering Calls

The means and features for answering calls are summarized in the table below. For procedures on using the functions, refer to the corresponding descriptions.

Category	Intercom Call	External Call
Call method	Handset, speakerphone	
Function	Answering intercom calls	Answering external calls
	Call pickup	

Answering Method

Calls can be answered by using the handset or speakerphone.



Using handset

Lift the handset to answer a call.



Using speakerphone


Press **[Speaker]** button without lifting the handset to answer a call. You can hear the caller's voice(or the other party's voice) through speaker and speak through the microphone. Press the **[Speaker]** button again to hang up.

- You can lift the handset while speaking through the speakerphone to continue the call by using the handset.



Call Refusal / Call Deflection

You can refusal or deflect the call you would not like to answer.

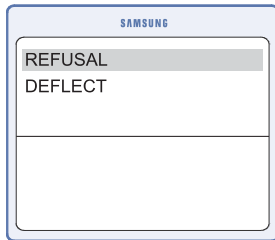

1. The base station is ringing. The display shows you the number of the caller. Select 'REFUSAL' or 'DEFLECT'. And press **[OK]**.


2. If you select the DEFLECT, Enter the station number you want the call diverted to. And press '#' or [OK] button. If you press the '*', it is cleared the number you enter.



Answering Intercom Calls

This function allows you to answer internal calls incoming to OfficeServ SOHO or a WLAN phone.

Answering from OfficeServ SOHO

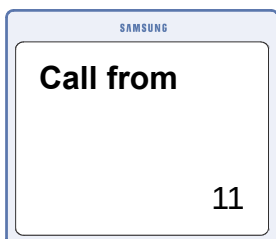

1. On receiving a call, the bell rings and an incoming message is displayed on the LCD.



2. Lift the handset to answer the call.

- Press the [Speaker] button to speak through the speakerphone.



3. Replace the handset to disconnect the call.

- Press the [Speaker] button again when using the speakerphone.



NOTE

Answering from OfficeServ SOHO

Press the [▼Vol▲] button while the bell is ringing to adjust the bell volume. If the volume is set to mute, an incoming message is displayed on the LCD but the bell does not ring.

Auto Answering setting

- PSTN: [Menu] → [Phone Setup] → [1. My Phone] → [1. Feature On/Off] → [2.Auto Answer]에서 [Auto Answer] → Set to 'On'
- ISDN: [Menu] → [Phone Setup] → [1. My Phone] → [1. Feature On/Off] → [3.Auto Answer] → Set the Internal to 'On'.



ANSWERING CALLS

Answering from WLAN phone

Call from

123456789

1. On receiving a call, the bell rings and an incoming message is displayed on the LCD.



2. Press the **[Send]** button to answer the call.



3. Press the **[End]** button to disconnect the call.



ANSWERING CALLS

Answering External Calls

This section describes how to answer an external call.

Answering from OfficeServ SOHO



1. On receiving an external call, the phone rings and a green lamp lights on the corresponding C.O. line button. Lift the handset to answer the call.

- Press the [Speaker] button to answer using the speakerphone.



2. Start conversation.



3. Replace the handset to disconnect the call.

- Press the [Speaker] button again when using the speakerphone.



Answering from Mobile

Call from

11

1. On receiving a call, the bell rings and an incoming message appears on the LCD.



2. Press the **[Send]** button to answer the call.



3. Press the **[End]** button to disconnect the call.




ANSWERING CALLS

Call Pick Up


This function is used to pick up a call incoming to another station.



1. When another station rings, press the **[SCREEN]** button of your phone.

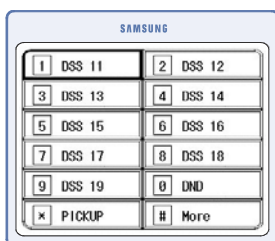

<PSTN Type>

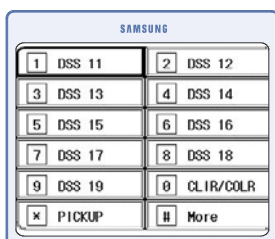

<ISDN Type>



3. Start conversation.



4. Replace the handset to disconnect the call.
 - Press the **[Speaker]** button again when using the speakerphone.



ANSWERING CALLS

FUNCTIONS USED DURING CALLS

During Intercom Call


This section describes some functions during intercom calls.

Call Transfer

This function is used for transferring a connected internal call to another intercom user or external user.



1. Press the **[R]** button during an internal call.

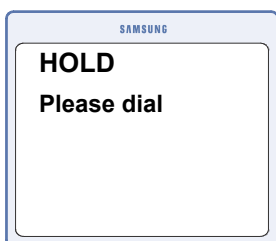

2. Press the destination number.



3. Replace the handset when the handset answers the call.

- Replace the handset while the transfer tone is ringing to transfer the call unconditionally. Otherwise, wait until the destination user answers the call to transfer the call after consulting the user.



Mute

When this function is used, you can hear what the other party is saying but the other party cannot hear any voice or sound from your phone.



1. Press **[Mute]** key during the call, **[Mute]** LED is changed to RED. Mute function is enable.



2. Press **[Mute]** key again, **[Mute]** LED is off. Mute function is disable.



During External Calls

This section describes some functions during external calls.

Call Transfer

This function is used for transferring a connected external call to another intercom user or internal call to external call. In case of ISDN, it's available to transfer a connected external call to another external call.



1. Press the **[R]** button during an external call.



2. Press the destination station number.



3. Replace the handset when the handset answers the call.

- Replace the handset while the transfer tone is ringing to transfer the call unconditionally. Otherwise, wait until the destination user answers the call to transfer the call after consulting the user.



NOTE

Call Transfer

On successful transfer, the color of the C.O. line lamp changes from green to red.




Trunk Flash


If OfficeServ is under other PBX system, this function allows you to be used features that the upper PBX system is serviced.



1. If an external call arrives while you are already answering another external call, press **[Menu]**.

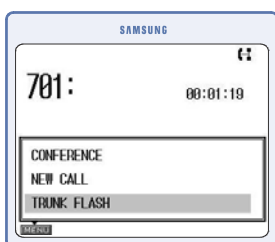

2. Select **[TRUNK FLASH]** to answer the new call. The previous caller will remain on hold.

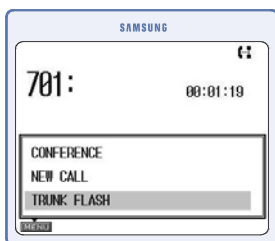

3. Select **[TRUNK FLASH]** again to return to the previous caller on hold.



NOTE

Trunk Flash


The trunk flash function is an additional function of a trunk switch connected to the OfficeServ SOHO and will only be provided if the trunk switch supports the function.



FUNCTIONS USED DURING CALLS

KEYPAD facility (ISDN Only)

Keypad information is data in the form of characters of the telephone keypad (e.g. numbers, star key, hash key) which are converted into particular functions in an integrated services private branch exchange, a remote station or in the switching centre of your network operator. The keypad facility can be switched on or off via the menu. ([Menu] → [Phone Setup] → [1. Feature On/Off] → [1. Keypad facility On/Off], Set to ON.)

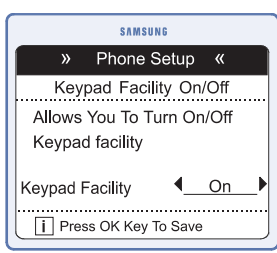

1. Press **[KEYPAD]** button during an external call to activate the KEYPAD facility. When KEYPAD facility is activated, the **[KEYPAD]** button will be changed to **[DTMF]** button.
2. Press **[DTMF]** button during an external call to deactivate the KEYPAD facility.




NOTE

Service charges

You may have to apply for this service from your network operator and it might incur additional charges.

Malicious call tracing (malicious call identification, MCID)(ISDN Only)

If you receive malicious phone calls and the caller's number is not shown on the display, you can still find out the number via the switching centre. This is achieved by means of an intercept function.

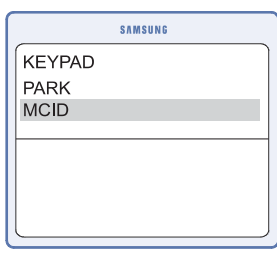

1. Press **[Menu]** Button during the external call. And select 'MCID'. The switching centre will then trace back the call to its point of origin



FUNCTIONS USED DURING CALLS



NOTE


To Service

(contact with your network operator, firstly.)

The caller's network does not support CLIP (Calling Line Identification Presentation = identification of the oncoming call). In this case, the call cannot be traced.

Parking a call (ISDN Only)

You are holding a conversation and you would like to continue the call in another room. In this other room there is also an ISDN wall socket. However, you can also unpark the call with another telephone, e.g., a mobile handset.

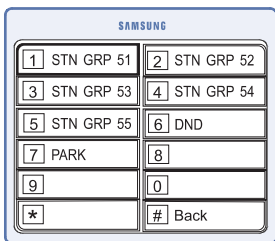

1. Press **[Intern]** Key when you would like continue the call somewhere else.


2. Select the 'PARK'. And enter the number to park.



FUNCTIONS USED DURING CALLS

Call Waiting

If the other call is incoming when you are holding a conversation, the incoming call number is displayed on LCD and indication tone is listened periodically.

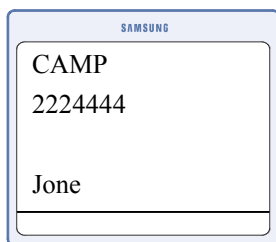

- Press **[Menu]** → **[ANSWER]** or **[R]**, You can answer the other call.
- If you would like to refuse the other call, Press **[Menu]** → **[REFUSAL]**.
- If you would like the deflect the other call, press **[Menu]** → **[DEFLECT]**.

Conference during Intercom / External Calls


This function is used for organizing a conference call between up to three parties(internal/external) during a call.




1. Press **[Menu]** during a call.



2. Enter the phone number of a third party to add to the conference.

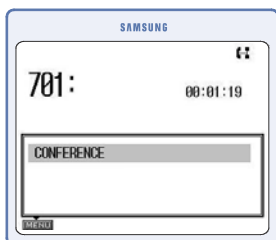

3. When the third party answers the call, press **[Menu]** and select **[CONFERENCE]**.

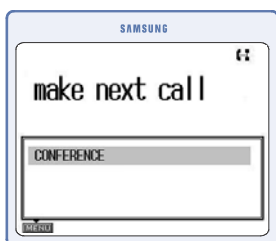

4. Conference member numbers appears.
 - To remove a member from the conference, enter the phone number of the member while the 'Make Next Call' message is displayed.



CONVENIENT FEATURES

Calling Line Identification Presentation (CLIP)

This function displays the caller ID on the LCD of the phone.

CLIP is a pay service provided by the telephone company. Such information may not be provided in the following cases:

- Caller requested the telephone company not to disclose his/her ID.
- Call was made from an area where the CLIP service is not provided(e.g., international calls).
- Call was made from a public phone.
- Caller information provided by the telephone company is damaged.
- The telephone company does not serve CLIP.

[PSTN]

Select [Menu] → [Phone Setup] → [5. Global Setup] → [1. Feature On.Off] → [3. CID Detection] to display Caller ID.

[ISDN]

It is not need the additional settings, CID is displayed if the network is serviced the CLIP



Conference


This section describes two functions of conference. Up to three members, including the caller, can participate in a conference call.

Group Conference


This function allows you to make a conference call with members registered to a group. Up to five groups can be assigned to a group conference.



1. Press the **[Menu]** button while the phone is in a standby mode.

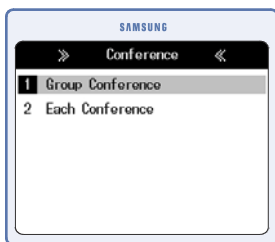

2. Select **[Services] → [2. Conference] → [1. Group Conference]** by using the direction button.

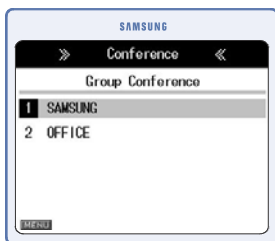

3. Move to the target group and press the **[OK]** button. Then, the phone number list of the target group is displayed.

- If no group is registered, the screen for registering a group is displayed. Register the target group and select the group to make a conference call.
- Move the cursor to the target group and press the **[Menu]** button to edit or delete the group.



4. Press the **[Send]** button to make a call to the recipient.




Each Conference


This function allows you to call the recipient directly for a conference call, and to make a conversation.



1. Press the **[Menu]** button while the phone is in a standby mode.

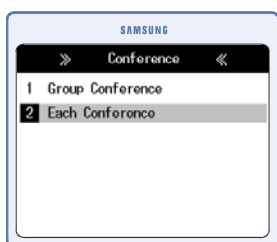

2. Select **[Services] → [2. Conference] → [2. Each Conference]** by using the direction button

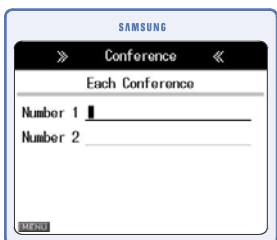

3. Enter the target phone number and press the **[Send]** button to connect the recipient.
 - Press the **[Menu]** button and select the **[Sending]** menu. Then, the call is connected to the recipient.



4. Once the recipient answers the phone, the conference call starts.



Do Not Disturb (DND)


This sections describes how to use DND function.

Setting DND


This function allows you to block calls to your phone even if the calls arrive.



1. Press the **[SCREEN]** button while the phone is in a standby mode.

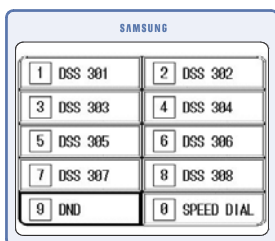

2. Select **[9. DND]** from the **[Station Status Display Screen]**.

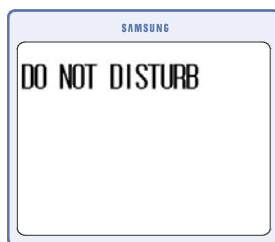

3. DND function is set and the **'DO NOT DISTURB'** message is displayed on the main screen.
 - When DND function is set, the DND icon is displayed on the main screen, and the DND button of the [Station Status Display Screen] is expressed in black.




Canceling DND


This function allows you to cancel DND.




1. Press the **[SCREEN]** button while the phone is in a standby mode.

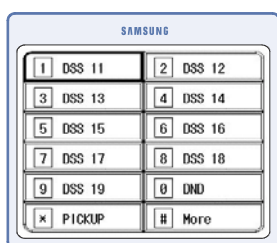

<PSTN Type>

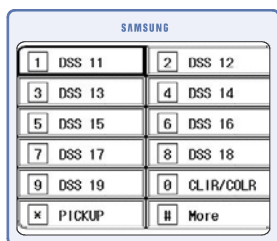

<ISDN Type>

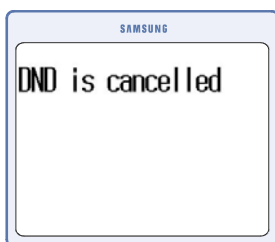

2. Select **[9. DND]** from the **[Station Status Display Screen]**.

- When DND function is set, the DND button is expressed in black.

3. DND is cancelled, and the **'DND is cancelled'** message is displayed on the main screen.

- When DND function is cancelled, the DND icon disappears from the main screen.




Group Listening

You can enable others to hear the conversation of a call through the speaker.
The microphone is disabled.



1. Press the **[Speaker]** button during a call.

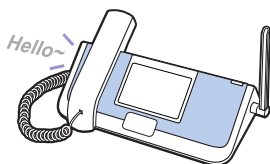

2. Other people can hear the conversation.



3. Press the **[Speaker]** button to turn off the speaker.




MENU

This section describes how to set various menus of OfficeServ SOHO. You can select a menu either by using the direction key to move to an item and pressing the [OK] button or by entering the item number.

Main Menu

Press the **[Menu]** button to display the following main menu on the LCD screen when the OfficeServ SOHO is in a standby mode.

The Menu screen displays the SMS, PhoneBook, E-Diary, Sound, Services and Phone Setup as icons.

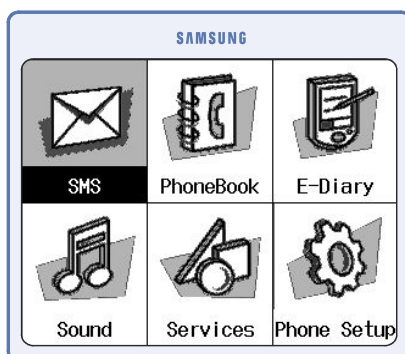

Menu	Item	Description
 SMS	Inbox	Lists the received messages
	Outbox	Send new messages and lists the messages sent
	Templates	Stores the most frequently used messages to use them as templates
	SMS Settings	Configuration of the SMS service(Service Centre, notification, Display)
 PhoneBook	Find Number	Search an item in the Phonebook(per number, name, position, etc.)
	Outgoing calls	Lists the outgoing calls and allows recalling the relevant numbers
	Incoming calls	Lists the received calls and allows recalling the relevant numbers
	Missed calls	Lists the calls with no answer and allows recalling the relevant numbers
	New Entry	To add a name into the Phonebook