

SM-T807A

ANDROID TABLET

User Manual

Please read this manual before operating your
device and keep it for future reference.



DRAFT For Internal Use Only

Warning! This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR

ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

IF YOUR CARRIER PROHIBITS THIS, IF YOU ATTEMPT TO DOWNLOAD SOFTWARE ONTO THE DEVICE WITHOUT AUTHORIZATION, YOU WILL BE NOTIFIED ON THE SCREEN THAT THE PHONE WILL NO LONGER OPERATE AND BE INSTRUCTED TO POWER DOWN THE DEVICE. YOU MUST THEN CONTACT YOUR CARRIER TO RESTORE THE DEVICE TO THE CARRIER AUTHORIZED SETTINGS.

SAFE™ (Samsung Approved For Enterprise)

SAFE™: "SAFE™" (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung's own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network

connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung's SAFE™ program, please refer to www.samsung.com/us/safe.

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE "SAMSUNG ENTITIES") EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to www.samsung.com/us/safe, available on the web and where Samsung smartphone and Galaxy Tab™ devices are sold. [101212]

Samsung Telecommunications America (STA), LLC

DRAFT For Internal Use Only

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address:

<http://www.samsung.com>

©2013 Samsung Electronics America, Inc. All rights reserved.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsung.com/us/support

Nuance[®], VSuite[™], T9[®] Text Input, XT9[®] Smart Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth[®] word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD[™], microSDHC[™], and the microSD logo are Trademarks of the SD Card Association.

Google, the Google logo, Android, the Android logo, Gmail, Google Hangouts, Google Maps, Google Play, Google Play Books, Google Play Magazines, Google Play Movies & TV, Google Play Music, Picasa, and YouTube and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Peel and the Peel logo are marks owned by Peel Technologies, Inc. and may be registered.

Polaris Office and the Polaris Office logo are marks owned by Infracore and may be trademarks or registered trademarks.

DRAFT For Internal Use Only

Table of Contents

Section 1: Getting Started 6

Understanding This User Manual	6
Battery	7
Turning Your Device On and Off	9
Setting Up Your Device	9
Task Manager	11
Memory Card	12
Securing Your Device	14

Section 2: Understanding Your Device 15

Features	15
Front and Sides	16
Home Screen	18
Navigating Your Device	21
Using the Touch Screen	22
S Pen	28
Samsung Smart Pause	32
Samsung Smart Scroll	33
Activating Multi Window	33
Notifications	35

Notifications Panel	36
Indicator Icons	37
Primary Shortcuts	38
Other App Shortcuts	38
Widgets	39
App Shortcuts	39
Folders	40
Wallpapers	41
Apps Screen	42
Entering Text	42

Section 3: Accounts and Contacts46

Accounts	46
Your Google Account	47
Your Samsung Account	47
Contacts	47
Groups	51
Favorites	53

Section 4: Messaging54

Types of Messages	54
-------------------------	----

Gmail	54
Email	55
Hangouts	58
Google+	58
Messenger	58
ChatON	58
Section 5: Music	60
Listening to Music	60
Play Music	60
Music Player	60
Section 6: Camera and Video	66
Camera	66
Zooming In and Out	70
Gallery	74
Story Album	78
Video	80
YouTube	82
Section 7: Connections	83
Wi-Fi	83
Wi-Fi Direct	86
Bluetooth	87
Kies Via Wi-Fi	89

Synchronizing with Windows Media Player	89
Connecting as a Mass Storage Device	90
Section 8: Applications	91
Accessing Applications	91
Action Memo	92
Alarm	92
Bloomberg Businessweek+	93
Calculator	93
Calendar	94
Camera	95
ChatON	96
Chrome	96
Contacts	96
Downloads	96
Dropbox	96
Email	97
Evernote	97
Flipboard	97
Gallery	97
Gmail	97
Google Search	97
Google Settings	99

Google+	99
Group Play	99
Hangouts	101
Help	101
Internet	101
KNOX	101
Maps	101
Messenger	101
Music	101
My Files	102
NYTimes	102
Play Books	102
Play Games	102
Play Magazines	102
Play Movies & TV	102
Play Music	102
Play Store	103
Polaris Office 5	104
S Finder	105
S Note	105
S Translator	109
S Voice	110

Samsung Apps	111
Samsung Hub	111
Samsung Link	111
Scrapbook	112
Screen Saver	112
Settings	113
SketchBook for Galaxy	113
Story Album	114
TripAdvisor	114
Twitter	114
Video	114
Video Editor	114
Voice Search	114
WatchON	114
World Clock	115
YouTube	115
Section 9: Settings	116
About Settings	116
Settings Tabs	116
Connections	116
Wi-Fi	116
Wi-Fi Direct Settings	116

Bluetooth	116
Airplane Mode	117
Data Usage	117
Location Services	118
More Networks	118
Nearby Devices	120
Screen Mirroring	120
Device	121
Sound	121
Display	123
Multi Window	123
Lock Screen	124
Wallpaper	125
Font	126
Notification Panel	126
Accessibility	126
Blocking Mode	129
Controls	129
Language and Input	129
Voice Control	133
S Pen	133
Motions	134

Palm Motion	134
Smart Screen	135
General	136
Accounts	136
Cloud	138
Backup and Reset	139
Date and Time	140
Accessory	140
Application Manager	141
Battery	143
Power Saving Mode	143
Storage	144
Security	145
About Device	149

Section 10: Health and Safety Information .. 151

Exposure to Radio Frequency (RF) Signals	151
Specific Absorption Rate (SAR) Certification Information	156
FCC Part 15 Information to User	158
Smart Practices While Driving	158
Battery Use and Safety	159

Samsung Mobile Products and Recycling . . .	161	SECURITY OF THE INFORMATION WE COLLECT	194
UL Certified Travel Charger	161	CHAT ROOMS AND OTHER PUBLIC AREAS . .	195
Display / Touch-Screen	162	CONTESTS AND SWEEPSTAKES	195
GPS	162	ACCURACY OF THE INFORMATION WE COLLECT	195
Care and Maintenance	163	CHANGES TO PRIVACY POLICY	196
Responsible Listening	164	Social Hub End User License Agreement . . .	196
Operating Environment	166	Index	1
Restricting Children's Access to Your Mobile Device			
168			
FCC Notice and Cautions	168		
Other Important Safety Information	168		
Section 11: Warranty Information	171		
Standard Limited Warranty	171		
End User License Agreement for Software . .	176		
Social Hub	183		
LIMITATION OF LIABILITY	189		
Social Hub Privacy Policy	191		
INFORMATION THAT WE COLLECT	192		
USE OF INFORMATION WE COLLECT	192		
DISCLOSURE OF INFORMATION TO THIRD PARTIES			
193			
CHILDREN	194		

DRAFT For Internal Use Only

Section 1: Getting Started

This section helps you to quickly start using your device.

Understanding This User Manual

The sections of this manual generally follow the features of your device. A robust index for features begins on page 218.

Also included is important safety information, beginning on page 154, that you should know before using your device.

This manual gives navigation instructions according to the default display settings. If you select other settings, navigation steps may be different.

Unless otherwise specified, all instructions in this manual assume that you are starting from a Home screen. To get to a Home screen, you may need to unlock the device. For more information, refer to “*Securing Your Device*” on page 14.

Note: Instructions in this manual are based on default settings and may vary from your device depending on the software version on your device and any changes to the device’s settings.

Note: Unless stated otherwise, instructions in this user manual start with the device unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary depending on the software version of your device and any changes to the device’s settings.

Special Text

In this manual, some text is set apart from the rest. This special text is intended to point out important information, share quick methods for activating features, define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings important information to your attention that can help to prevent loss of data or functionality or damage to your device.

Text Conventions

This manual provides condensed information about how to use your device. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures. For example:

From a Home screen, touch  **Apps** →  **Settings**
→ **Connections** tab → **Wi-Fi**.

Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (Charging Head and USB cable) are included with the device for charging the battery.

Warning! Use only approved charging devices. Approved accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

Battery Indicator

The Battery icon  in the Status Bar shows the battery power level. When battery power is 15% or less, your device prompts you to charge the battery. If you continue to operate the device without charging, the device powers off. For battery use information, see “About Device” on page 149.

Charging the Battery

Your device comes with a Wall/USB Charger (Charging Head, and USB cable) to charge your device from any standard AC power outlet.

Note: The battery comes partially charged. You must fully charge the battery before using your device for the first time. After the first charge, you can use the device while charging.

DRAFT For Internal Use Only

1. Insert the USB cable into the Charging Head.

2. Insert the USB cable into the device's Charger/
Accessory Port.

Warning! While the device is charging, if the touch screen does not function due to an unstable power supply, unplug the USB power adapter from the power outlet or unplug the USB cable from the device.

3. Plug the Charging Head into a standard AC power outlet.

4. When charging is complete, unplug the Charging Head from the power outlet and remove the USB cable from the device.

Note: You cannot charge the battery using the USB cable and your PC.

Note: If the battery is completely discharged, you cannot turn on the device, even with the USB power adapter connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device.

DRAFT For Internal Use Only

Turning Your Device On and Off

Turning Your Device On

- Press and hold the **Power/Lock Key**.

For more information, refer to “*Unlocking the device*” on page 14.

Note: Your device’s internal antenna is located along the top back of the device. Do not block the antenna; doing so may affect signal quality and may cause the device to operate at a higher power level than is necessary.

Turning Your Device Off

1. Press and hold the **Power/Lock Key**.
2. On the *Device options* menu, touch **Power off**.

Setting Up Your Device

When you turn on your device for the first time, it displays a Welcome screen. Follow the prompts to set up features and preferences on your device.

Some screens can be skipped (touch **Next**) or re-displayed (touch **Back**).

1. From the *Welcome screen*, select a language and touch **Next** to get started.

Note: If you are visually impaired or hard of hearing, touch **Accessibility**. For more information, see Accessibility Settings. For more information, refer to “*Accessibility*” on page 126.

DRAFT For Internal Use Only

2. Follow the prompts to complete each section. For each topic, you will have the option to skip it and continue to the next screen.

- **Wi-Fi:** Sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. For more information, refer to “*Wi-Fi*” on page 83.
- **Date and time:** Set the date, time, and select a time zone.
- **End User License Agreement:** Read the End User License Agreement and touch **I understand and agree to the terms and conditions above**. If you would like to send Samsung error reports during device failures, touch **Yes**.
- **Samsung Account:** Touch **Sign in** to sign in to your current Samsung Account, or touch **Create new account** and follow the instructions to set up a new Samsung Account.
 - Touch **variety of services** to learn more using your Samsung Account.
- **Got Google?:** Touch **Yes** to sign in to your current Google Account, or touch **No** and follow the instructions to set up a new Google Account.

- **Make it Google:** Touch **Get an account** and follow the instructions to create a new Google Account, or touch **Not now**.
 - Touch ⓘ to learn more about Google Accounts.
 - This screen only displays if you did not previously sign in to your Google Account.
- **Google and your Location:** Read the information about location services. Touch each location service to enable.
- **Entertainment:** Touch **Set up credit card** and follow the instructions to enter credit card information for your Google Play account, or touch **Not now**.
 - This screen only displays if you previously signed in to your Google Account.
- **This tablet belongs to...:** Enter your first and last name. This information is used by the tablet to personalize certain apps.
- **Dropbox Account:** Touch **Create account** and follow the instructions to set up a new Dropbox Account, or touch **Sign in** to sign in to your existing Drop Box Account.

- **Thank you:** This screen displays the Device name and an option to learn more.
 - **Device name:** Enter a name for the tablet. This name is used to identify the tablet when using Bluetooth, Wi-Fi Direct, and so on. The default is the model name, SM-P600.
 - **Learn more:** Touch this option and then touch each feature to see more details.
 - **Finish:** Your setup is now complete. Touch this option to display the Home screen.

Task Manager

Your device can run applications simultaneously and some applications run in the background.

Use Task Manager to see which applications are running on your device and to end running applications to extend battery life. You can also uninstall applications from your device and see how much memory is used by applications.

Task Manager Application

The Task Manager application provides information about applications, including **Active applications**, **Downloaded**, **RAM manager**, and **Storage**.

To access the Task Manager:

1. Add the Active Apps Manager widget to a Home screen and then touch the Active Apps Manager widget. For more information, refer to “*Widgets*” on page 39.
2. Touch **Active applications** to view applications running on your device. Touch **End** to end an application or **End all** to end all running applications.
3. Touch **Downloaded** to view applications installed from Google Play. Touch **Uninstall** to remove an application from your device.
4. Touch **RAM manager** to display the amount of Random Access Memory (RAM) currently in use. Touch **Clear memory** to clear inactive and background processes.
5. Touch **Storage** to view internal (Device memory) and external (SD card) storage memory statistics.

For more information, refer to “*Apps Screen*” on page 42.

DRAFT For Internal Use Only

Memory Card

Your device supports removable microSD or microSDHC memory cards with maximum capacities of 64 GB (depending on the memory card manufacturer and type). Memory cards are used to store music, photos, videos, and other files.

Note: You can only store music files that you own (from a CD or purchased with the device) on a memory card.

Installing a Memory Card

1. Open the Memory Card Slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Replace the Memory Card Slot cover.

DRAFT For Internal Use Only

Removing a Memory Card

Important! To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Storage**.
2. Under **SD card**, touch **Unmount SD card** and then touch **OK**.
3. Open the Memory Card Slot cover and turn to expose the slot.
4. Gently press down on the memory card, so that it pops out from the slot, and carefully pull the card out.
5. Replace the Memory Card Slot cover.

Formatting a Memory Card

Formatting erases all content from the memory card and prepares it for use with your device.

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Storage**.
2. After mounting the SD card, touch **Format SD card**.

3. Follow the prompts to confirm the formatting of the card.

DRAFT For Internal Use Only

Securing Your Device

By default, the device locks automatically when the screen times out or you can lock it manually. You can unlock the device using one of the default Unlock screens or, for increased security, use a personal screen unlock pattern.

For more information about creating and enabling a Screen unlock pattern, see “*More Networks*” on page 118.

For other settings related to securing your device, see “*Location Services*” on page 118.

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

Locking the device

- Press the **Power/Lock Key**.

Unlocking the device

- Press the **Power/Lock Key**, and then swipe across the screen as shown.

DRAFT For Internal Use Only

Section 2: Understanding Your Device

This section outlines key features of your device and describes the screen and the icons that appear when the device is in use. It also shows how to navigate through the device.

Features

- 10.1-inch WQXGA (2560x1600) TFT (PLS) LCD touch screen
- Android Version: Jelly Bean 4.3
- Wi-Fi, 1.9 GHz dual-core processor
- Full HTML Web Browser
- Bluetooth 4.0 Wireless technology. For more information, refer to “Bluetooth” on page 87.
- Built-in Wi-Fi technology (802.11 a/b/g/n/ac)
- 8 megapixel camera and camcorder, plus 2 megapixel full HD forward-facing camera for video chat
- Full integration of Google applications (Gmail, YouTube, Google Maps, and Voice Search)
- Photo gallery that supports GIF, AGIF, JPEG, PNG, BMP, WBMP, and WEBP formats
- Messaging Features:
 - Gmail
 - Email (corporate and personal)
 - Google Hangouts (Instant Messaging and Video Chat)
- HD Video Player (1080p)
 - Codec: MPEG4, H.264, H.263, VC-1, VP8, WMV7/8, Sorenson Spark, MP43
 - Format: AVI, MP4, 3GP, MKV, WMV, ASF, FLV
- Music player that supports MP3, AAC/AAC+/EAAC+, WMA, Vorbis, FLAC, AC-3, AMR-NB/WB, WAV
- Support for microSD and microSDHC memory cards
- Preloaded applications such as AllShare Play, Google Play Books, Google Play Store, Music Hub, and Polaris Office.

DRAFT For Internal Use Only

Front and Sides

The following items can be found on the front and sides of your device as illustrated.

1. **Light Sensor:** Used to control screen brightness automatically when taking photos with the front-facing Camera.
2. **Front-facing Camera Lens:** Used when taking photos or recording videos.
3. **3.5mm Headset Jack:** Plug in for headphones.
4. **External Speakers:** Used in music or video playback, notification tones, and for other sounds.
5. **Display Screen:** The orientation of the display screen rotates with the tablet as you turn it. You can turn this feature on and off. For more information, refer to *“Rotating the Screen”* on page 25.
6. **Memory Card Slot:** Install a memory card for storage of files.
7. **Menu:** Display a list of options.
8. **Home:** Display the central Home screen. Touch and hold to display recent apps that have been accessed.
9. **Back:** Return to the previous screen or option.

DRAFT For Internal Use Only

Back, Top, and Bottom

The following items can be found on the back, top, and bottom of your device as illustrated.

1. **Flash:** Provides adequate light when taking pictures in dark places.
2. **Camera Lens:** Used when taking photos or recording videos.
3. **Infrared Blaster:** Emits infrared signals used for controlling external devices.
4. **Volume Key:** From a Home screen, press to adjust Master Volume. During music playback, press to adjust volume.
5. **Power/Lock Key:** Press and hold to turn the device on or off. Press to lock the device or to wake the screen for unlocking.
6. **S Pen:** A built-in stylus that allows you to perform various functions. For more information, refer to “S Pen” on page 28.
7. **Charger/Accessory Port:** Plug in a USB cable for charging or to sync music and files.
8. **Microphone:** Used for video chat.

DRAFT For Internal Use Only

Home Screen

The Home screen is the starting point for using your device.

Note: Unless stated otherwise, instructions in this user manual start with the device unlocked, at the Home screen.

1. **System Bar:** The area along the bottom of the Home screen where you can find navigation buttons and icons that show notifications, battery power, and connection details.
2. **Status Icons:** Indicate the status of your tablet. Touch the Time / Status Icons area to display the Status Details panel. For more information, refer to “*Indicator Icons*” on page 37.
3. **Time:** The current time. For more information, refer to “*Date and Time*” on page 140.
4. **Widgets:** Applications that run on the Home screen. Some widgets are found on the Home screen by default. For more information, refer to “*Widgets*” on page 39.
5. **Home screen:** The starting point for using your device. Place shortcuts, widgets, and other items to customize your device to your needs.
6. **Primary Shortcuts:** Shortcuts to common features. These shortcuts are found on all Home screens by default. For more information, refer to “*Primary Shortcuts*” on page 38.

7. **Google Search:** Search the web by typing or speaking. For more information, refer to *“Google Search”* on page 87.
8. **Apps:** Display the Apps screen.

Extended Home Screen

The Home screen consists of the Home panel plus additional panels that extend beyond the display width to provide more space for adding shortcuts and widgets. For more information, refer to *“Adding and Removing Home Screen Panels”* on page 20.

Slide your finger horizontally across the screen to scroll to the left or right side panels.

Note: The center panel displays when you touch  **Home**.

Customizing the Home Screens

To customize the Home screens to suit your preferences:

1. Navigate to one of the Home screen panels.
2. Touch and hold on the screen until the **Home screen** pop-up displays.
3. Touch **Set wallpaper** to change the Home screen wallpaper. For more information, refer to *“Wallpapers”* on page 41.
4. Under **Add to Home screen** touch:
 - **Apps and widgets** to add app or widget shortcuts on the Home screen.
 - **Folder** to add a folder on a Home screen. For more information, refer to *“Folders”* on page 40.
 - **Page** to add a Home screen.

Display Settings

You can customize display screen settings to your preferences. For more information, refer to *“Display”* on page 123.

DRAFT For Internal Use Only

Adding and Removing Home Screen Panels

Your device comes with seven Home screen panels. You can customize the Home screen by removing or adding panels.

Note: The panel in the center position displays when you touch  **Home**.

- From a Home screen, pinch the screen from the left and right side to the center to display the editing screen.

Tip: Tip: Touch and hold on the screen until the **Home screen** pop-up displays. Under **Add to Home screen**, touch **Page** to add a Home screen.

Use these controls to configure panels:

1. **Remove:** Touch and drag a panel to the Trash Can to remove the panel from the Home screen.
2. **Default Home Page:** Touch the Home icon on a panel to set it as the default home screen.
3. **Add:** Touch to add a new panel, up to a total of seven. This option is available when less than seven panels have been added.

To rearrange the order of panels:

- Touch and drag a panel to a new location.

To return to the Home screen:

- Touch  **Back**.

DRAFT For Internal Use Only

Navigating Your Device

Use command buttons and the touch screen to navigate.

Command Buttons

Back

Touch  **Back** to return to the previous screen, option, or step.

Home

Touch  **Home** to display the center Home screen.

Touch and hold to open a list of thumbnail images of apps you have worked with recently. Touch an App to open it.

Touch  to display the Task Manager.

To launch Google Search, touch .

Touch  to clear all thumbnail images.

Context-Sensitive Menus

Context-sensitive menus offer options for features or screens. To access context-sensitive menus:

- Touch  **Menu** to display a list of options.
- Touch an option in the list.

Screen Capture

- Touch and hold the **Power/Lock Key** and  **Home** to capture and save an image of the current screen.

Note: A copy of the screenshot is automatically saved to the clipboard.

To view the screen shots:

1. From a Home screen, touch  **Apps** →  **Samsung folder** →  **My Files**.
2. Touch **storage** → **Device storage** → **Pictures** → **Screenshots**.
3. Touch a screen capture file to display it.

Application Bar

The Application Bar is the area along the top of various application screens. It usually contains the Search and Menu icons, as well as other icons that are used to display options and settings.

Using the Touch Screen

Use only fingers or the S Pen to use the touch screen.

 
Caution! Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.

To avoid damaging the touch screen, do not tap it with anything sharp or apply excessive pressure to it with your fingertips.

Finger Gestures

Touching


To open an application, to select a menu item, to press an on-screen button, or to enter a character using the on-screen keyboard, touch it with a finger.

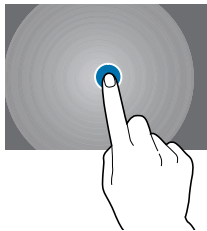

DRAFT For Internal Use Only


Touching and Holding

 Touch and hold an item for more than 2 seconds to access available options.

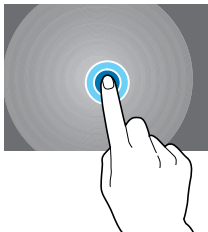

Dragging

 
To move an icon, thumbnail, or preview to a new location, touch and hold it and drag it to the target position.

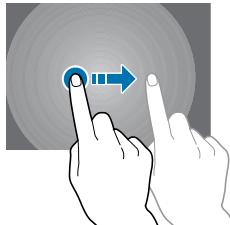

DRAFT For Internal Use Only


Double-Tapping

 Double-tap on a webpage, map, or image to zoom in a part. Double-tap again to return.

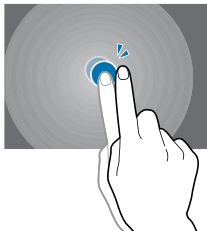

Flicking

 
Flick left or right on the Home screen or the Applications screen to see another panel. Flick up or down to scroll through a webpage or a list, such as contacts.

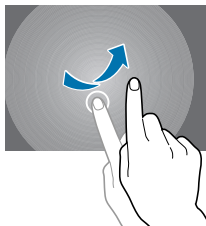

DRAFT For Internal Use Only

Pinching

 Spread two fingers apart on a webpage, map, or image to zoom in a part. Pinch to zoom out.

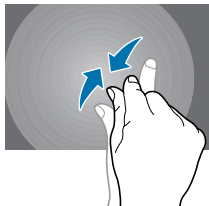

Control Motions

Simple motions allow easy control of the device.

 
Before using motions, make sure the motion feature is activated.

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **Motions**.
2. Touch the **OFF/ON** button to turn Motions **ON** .

Note: Excessive shaking or impact to the device may result in unintended inputs. Control motions properly.

Rotating the Screen

Many applications allow display in either portrait or landscape orientation. Rotating the device causes the display to automatically adjust to fit the new screen orientation.

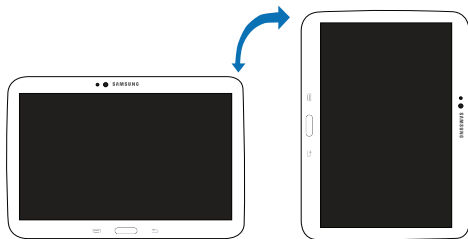

To prevent the display from rotating automatically, open the notifications panel and deselect **Screen rotation**.

Note: Some applications do not allow screen rotation.

Some applications display a different screen depending on the orientation. The calculator turns into a scientific calculator when rotated to landscape.

Tilting

 
Touch and hold two points on the screen, and then tilt the device back and forth to zoom in or out.



Note: To move an icon to a new location, touch and hold it and drag it to the target position. For more information, refer to “*Dragging*” on page 23.

Panning to Browse

When an image is zoomed in, touch and hold a point on the screen, and then move the device in any direction to browse the image.

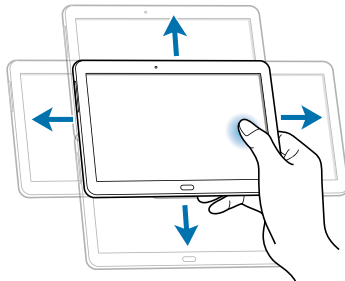

DRAFT For Internal Use Only

Palm Motions

Use palm motions to control the device by touching the screen.

Before using motions, make sure the palm motion feature is activated.

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **Palm motion**.
2. Touch the **OFF/ON** button to turn Palm motion **ON**  .

 
Sweeping

Sweep your hand across the screen to capture a screenshot. The image is saved in  **Gallery** → **Screenshots**. It is not possible to capture a screenshot while using some applications.



Covering


Cover the screen with a palm to pause media playback.

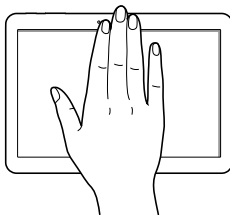

DRAFT For Internal Use Only

S Pen

 
The S Pen is a stylus that assists you in performing different functions. By using the Pen button, you can minimize having to switch between touch and pen input.

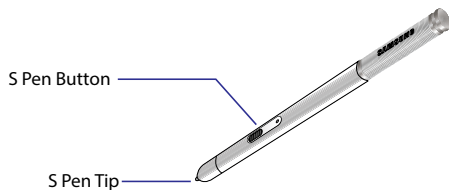

Using the S Pen

The included S Pen can be used to easily select items or perform functions. Actions using the S Pen with the button pressed provide additional conveniences, such as screen capture.

 Pull out the S Pen from the slot to use it.

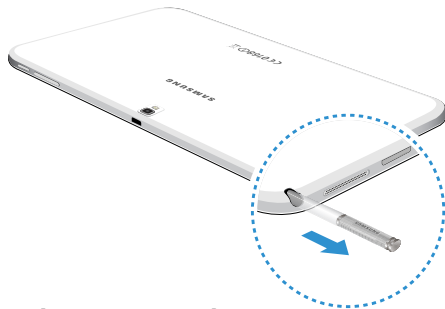

DRAFT For Internal Use Only

When you pull out the S Pen from the slot, the device detects it and performs the following:

- Turns on the touch screen (if it is off).
- Launches action memo, or display general air commands.

Notes:

- The pen nib of the S Pen is replaceable. If the pen nib gets dull, replace it with a new one.
- If the S Pen is not working properly, take it to a Samsung Service Centre. Refer to the Samsung website for more information about the S Pen.
- For best results, keep the S Pen mostly perpendicular to the touch screen and avoid using it at sharp angles.
- The Menu button and the Back button cannot be activated by the S Pen.

Capturing Screenshots

With the S Pen button pressed, touch the screen until you hear a click. A screenshot is saved in the **Gallery → Screenshots** folder.

It is possible to draw or write on or to crop a screenshot. The edited image is saved in the **Gallery → Screenshots** folder.

It is not possible to capture a screenshot while using some applications.



DRAFT For Internal Use Only

Launching Action Memo

With the S Pen button pressed, double-tap the screen to launch action memo.

Jot down or draw a note, and then select the memo by tapping  to perform various actions, such as adding contacts or sending an email. With the memo selected, draw a line around an area with the S Pen to perform actions with the selected area.



Selecting and Capturing an Image

With the S Pen button pressed, draw a line around an area to select it.

If necessary, use one of the following options:



Restore the original selection.



Convert the selection to circular shape.

 


Convert the selection to rectangular shape.



Customize the selection.

Select an application to use with the selected area from the icons that appear at the bottom of the screen.

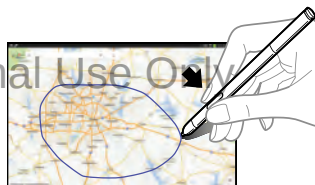

DRAFT For Internal Use Only

 
Using Air Command

Press the S Pen button while hovering the S Pen over the screen.


In most cases, general air commands appear on the screen when pressing the S Pen button.

Use the following actions:

- **Action Memo:** Launch action memo.
- **Scrap booker:** Select and capture an image, and then save the image into Scrapbook.
- **Screen Write:** Capture a screenshot and edit it with the S Pen.
- **S Finder:** Launch S Finder.
- **Pen Window:** Launch multiple applications in specified areas on the screen.

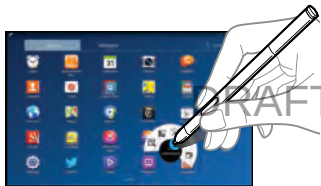

 Some items have contextual menus that make the S Pen pointer glow. Press the S Pen button to display the menu while hovering the S Pen over the item.

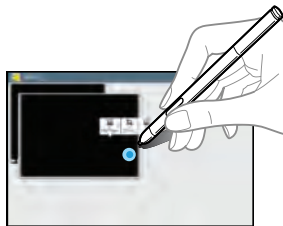

DRAFT For Internal Use Only

Air View

Use this feature to perform various functions while the S Pen is hovering over the screen.

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **S Pen** → **Air view**.
2. Touch the **OFF/ON** button to turn Air view **ON** .

Point at an item with the S Pen to preview content or view information in a pop-up window.

You can scroll through panels or lists by moving the S Pen pointer to an edge (top/bottom/left/right) of the screen.



Samsung Smart Pause

Use this feature to pause videos when you look away from the screen.

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **Smart screen**.
2. Touch **Smart pause** to enable it.

During video playback, look away from the screen to pause the video. To resume playback, look at the screen again.



DRAFT For Internal Use Only

For more information, refer to “S Pen” on page 28.

Samsung Smart Scroll

Use this feature to scroll the screen up or down by tilting your head or the device.

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **Smart screen** → **Smart scroll**.
2. Touch the **OFF/ON** button to turn Smart scroll **ON** .
3. Touch **Smart scroll** and select a scroll type.

When you are viewing email or webpages, the scroll type icon ( for head orientation or  for tilting the device) that shows the recognition status for movements appears in blue.

When the device recognizes your head or device's movements, the icon turns green. Tilt your head downward or upward, or tilt the device forward or backward to scroll in that direction.



Activating Multi Window

Use this feature to run two applications on the screen at the same time.

Notes:

- Only applications on the Multi Window panel can run.
- When launching applications that contain multimedia files, such as music or videos, sound from both files will be played.
- This feature may not be available depending on the region or service provider.

DRAFT For Internal Use Only

To use Multi Window:

1. From a Home screen, touch  **Apps** →  **Settings**
→ **Device** tab.
2. Touch the **OFF/ON** button to turn Multi window
ON .

Using the Multi Window Panel

 
To show the Multi Window panel:

1. Touch and hold  **Back**.

The Multi Window panel appears on the left side of the screen.

2. Select one application, and then drag another application to a new location.

You can launch the same application on the two windows at the same time.

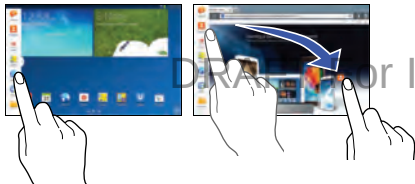

To hide the Multi Window panel:

- Touch and hold  **Back** again.

Drag the circle between the application panels left or right to adjust the size of the panels.

Touch the panel handle to hide or show the panel. When a panel is open, touch and hold the handle and drag it to the left or right edge of the screen to move the panel. When a panel is hidden, touch and hold the handle and drag it up or down to move the handle.

Using Multi Window Applications

While using Multi Window applications, select an application panel, touch the circle between the application panels, and then use one of the following:



Switch app to compact screen.



Switch locations between Multi Window applications.



Share items between the application windows.
Drag an item to share from one window to another.
Some applications may not support this feature.



Close the application.

Sharing Files

Drag an item you want to share to the other window to share the item from one window to another.

Creating a Paired Window

Use this feature to save the combination of current running Multi Window applications.

On the Multi Window panel:

1. Touch  → **Create**.
2. Enter a title and then touch **OK**.

Notifications

Notification icons appear on the status bar at the top of the screen to report new messages, calendar events, device status, and more. Drag down from the status bar to open the notifications panel. Scroll the list to see additional alerts. To close the notifications panel, drag up the bar that is at the bottom of the screen.

DRAFT For Internal Use Only

Notifications Panel

From the notifications panel, you can view your device's current settings. Drag down from the status bar, touch  to open the notifications panel, and then use the following options:

- **Wi-Fi:** Activate or deactivate the Wi-Fi feature.
- **GPS:** Activate or deactivate the GPS feature.
- **Sound:** Activate or deactivate silent mode. You can vibrate or mute your device in silent mode.
- **Screen rotation:** Allow or prevent the interface from rotating when you rotate the device.
- **Bluetooth:** Activate or deactivate the Bluetooth feature.
- **Reading mode:** Activate or deactivate reading mode, which optimizes the screen for reading.
- **Blocking mode:** Activate or deactivate blocking mode. In blocking mode, the device will block notifications. To select which notifications will be blocked:
 - From a Home screen, touch  **Apps** →  **Settings** → **Device tab** → **Blocking mode**.

- **Power saving:** Activate or deactivate power-saving mode.
- **Multi window:** Set to use Multi Window.
- **Screen Mirroring:** Activate or deactivate the screen mirroring feature.
- **Air view:** Activate or deactivate the air view feature.
- **Smart stay:** Activate or deactivate the smart stay feature.
- **Smart pause:** Activate or deactivate the smart pause feature.
- **Smart scroll:** Activate or deactivate the smart scroll feature.
- **Sync:** Activate or deactivate auto-syncing of applications.
- **Airplane mode:** Activate or deactivate airplane mode.

Note: The available options may vary depending on the region or service provider.

To rearrange the options on the notifications panel:

1. Open the notifications panel and touch .
2. Touch and hold an item, and then drag the item to another location.

To open the Settings application:

- Touch  **Settings**. For more information, refer to “Settings” on page 116.

To set brightness options:

- Touch the **Brightness** slider and drag it to set the brightness or touch **Auto** to allow the device to set brightness automatically based on available light and battery charge status. For more information, refer to “Display” on page 123.

Notifications displays system notifications.

- Touch a notification entry to display the details. Touch **Clear** to remove Notification Icons from the System Bar. For more information, refer to “Notifications” on page 35.

To close the Notification Panel:

- Touch  **Home**,  **Back**, or swipe up.

Indicator Icons

The icons displayed at the top of the screen provide information about the status of the device. The icons listed in the table below are most common.



Wi-Fi connected



Bluetooth feature activated



GPS activated



Air gesture feature activated



Smart screen feature activated



Synced with the web



Connected to computer



Alarm activated



S Pen removed



Silent mode activated



Vibration mode activated



Airplane mode activated



Error occurred or caution required



Battery power level

Primary Shortcuts

Primary Shortcuts display at the bottom of the Home screens.

Tip: The main Home screen is usually the center Home screen.

The default Primary Shortcuts are: S Note, Calendar, Internet, Email, Gallery, Scrapbook, Dropbox, Play Store.

Other App Shortcuts

There are also other application shortcuts on the Home screens, such as Dropbox, Samsung Apps, and Play Store.

For more information, refer to “*More Application Information*” on page 53.

Application shortcuts can be added to any Home screen. For more information, refer to “*App Shortcuts*” on page 39.

DRAFT For Internal Use Only

Widgets

When you first turn on your tablet, there are various widgets on the center Home screen. They can also appear on the Home screens to the left and right of the center Home screen.

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

For more information, refer to “Applications” on page 91.

Adding Widgets to a Home screen

1. Navigate to the Home screen on which you want to place the Widget and touch  **Apps**.
2. Touch the **Widgets** tab.

Note: Swipe across the screen horizontally to view all Widgets.

3. Touch and hold the widget's icon until the Home screen displays, then slide your finger where you want to place the icon and release it.

Note: There must be room on the screen where you want to place the widget, otherwise the widget will not add to the Home screen.

Removing Widgets

- Touch and hold the Widget until the  **Remove** icon displays, then drag the widget to the **Remove** icon.

Note: This action does not actually delete the Widget, it just removes it from the current Home screen.

App Shortcuts

Use App Shortcuts for quick access to applications or features, such as Email or other applications.

1. Navigate to the Home screen on which you want to place the App Shortcut.
2. From a Home screen, touch  **Apps**.
– or –

Touch and hold on the screen until the **Home screen** options pop-up displays and then touch **Apps and widgets**.

3. Touch the **Apps** tab.

4. Touch and hold the application icon until the Home screen displays, then slide your finger where you want to place the icon and release it.

For more information, refer to “*Apps Screen*” on page 42.

5. Touch and hold the App Shortcut and then drag the application icon to reposition it on the Home screen.

Removing App Shortcuts

- Touch and hold the App Shortcut until  **Remove** displays, then drag the App Shortcut to the **Remove** icon.

Folders

Place Folders on a Home screen to organize items together.

Adding Folders

To create a folder on a Home page:

1. Navigate to the desired Home screen.
2. Touch and hold on the screen until the **Home screen** pop-up displays and then touch **Folder**.
The Create folder pop-up displays.
3. Touch the **Enter folder name** field, use the keyboard to enter a name for the folder, and touch **OK**.
A new folder displays on the Home screen.

Managing Folders

To rename a folder:

- Touch the folder, touch the current name, and use the keyboard to enter a new name for the folder.

DRAFT For Internal Use Only

To add an App shortcut to a folder:

1. Add the App shortcut to the Home screen that the folder is on.
2. Touch and hold the App shortcut, drag it to the folder, and drop it.

To remove an App shortcut from a folder:

1. Touch the folder to view the contents.
2. Touch the App shortcut, drag it out of the folder, and drop it on the Home screen.

Removing a Folder

- Touch and hold the folder until the  **Remove** icon displays, then drag the folder to the **Remove** icon.

Note: Any App shortcuts in the folder are also removed.

Wallpapers

You can choose a picture to display on the Home Screen, Lock screen, or on both the Home and Lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From a Home screen, touch and hold on the screen. The **Home screen** options pop-up displays.
2. Touch **Set wallpaper**. The Set wallpaper pop-up displays.
3. Touch **Home screen**, **Lock screen**, or **Home and lock screens**.

The **Select wallpaper from** pop-up displays the following options:

- **Gallery:** Access the Gallery to select a photo. Touch a photo to select it. Crop and resize the picture, if desired. Touch **Done** to save the picture as wallpaper. Touch **Cancel** to cancel.
- **Live wallpapers:** Choose from pre-loaded interactive animated wallpapers. Touch a wallpaper to see an example. If available, touch **Settings** to view options for the selection. Touch **Set wallpaper** to save your choice. Touch  **Back** to return to the Live wallpapers menu.

DRAFT For Internal Use Only

- **Wallpapers:** Choose from pre-loaded wallpaper images. Touch an image to view it. Touch **Set wallpaper** to save it as wallpaper. Touch  **Back** to return to the Home screen.

Note: Live wallpapers is not available for the Lock screen.

Apps Screen

The **Apps** screen displays all applications installed on your wireless device. Applications that you download and install from Google Play or from the web are also added to a Home screen.

The Apps icons are arranged in a customizable grid. To arrange the Apps icons in alphabetical order:

1. From a Home screen, touch  **Apps**.
2. Touch  **Menu** → **View type**.
3. Touch **Alphabetical grid**.

To manually change the order of the icons on the Apps screen:

1. From a Home screen, touch  **Apps**.
2. Touch  **Menu** → **Edit**.
3. Touch and hold an icon and drag it to a new position.
4. Touch **Save** to save the changes.

You can place shortcuts to applications on the Home screen for quick access to the application. For more information, refer to “*App Shortcuts*” on page 39.

To view your downloaded applications:

1. From a Home screen, touch  **Apps**.
2. Touch  **Download** to view downloaded apps.
3. Touch an icon on the **Downloaded applications** screen to launch the application.

– or –

Add an App Shortcut to a Home screen by dragging the App icon onto the Home Screen. For more information, refer to “*App Shortcuts*” on page 39.

Entering Text

Use the Samsung keyboard or the voice input feature to enter text.

Note: Text entry is not supported in some languages. To enter text, you must change the input language to one of the supported languages.

Using the Keyboard

Touch any text field, open the notifications panel, touch **Select input method**, and then select the type of keyboard to use.



1. Enter uppercase.
2. Enter punctuation marks.
3. Touch for Voice input. Touch and hold to use Handwriting, display keyboard settings, or change the keyboard type.
4. Enter a space.
5. Add an item from the clipboard.

6. Break to the next line.
7. Delete a preceding character.

DRAFT For Internal Use Only

Entering Uppercase

Touch  before entering a character. For all caps, touch it twice.

Changing the keyboard type

Touch and hold , and then touch  to change the keyboard type.

Changing language keyboards

Add languages to the keyboard, and then slide the space key left or right to change language keyboards.

Handwriting

Touch and hold  → , and then write a word with a finger or the S Pen. Suggested words appear as characters are entered. Select a suggested word.



Use handwriting gestures to perform actions, such as editing or deleting characters and inserting spaces. To view the gesture guides, touch and hold , and then touch  **Settings** → **Help** → **Keyboard** → **Use handwriting gestures**.

Direct Pen Input

1. From a Home screen, touch  **Apps** →  **Settings** → **Controls** tab → **S Pen** → **Direct pen input**.
2. Touch the **OFF/ON** button to turn Direct pen input **ON** .

When hovering the S Pen over a text field, the  icon appears at the upper left corner of the text field. Touch  to write with the S Pen.

To make simple corrections, change input languages, or enter a space between characters, touch each correction tool displayed on the handwriting pad.

When this feature is enabled, you can do the following actions:

- Send a handwritten message.
- Set an alarm just by writing numbers.



Entering Text By Voice

Activate the voice input feature and then speak into the microphone. The device displays what you speak.

If the device does not recognise your words, touch the underlined text and select an alternative word or phrase from the dropdown list.

To change the language or add languages for voice recognition, touch the current language.

Copying and Pasting

Touch and hold over text, drag  or  to select more or less text, and then touch **COPY** to copy or **CUT** to cut. The selected text is copied to the clipboard.

To paste it into a text entry field, touch and hold at the point where it should be inserted, and then touch **PASTE**.

Section 3: Accounts and Contacts

This section explains how to manage accounts and contacts.

Accounts

Your device can synchronize with a variety of accounts. With synchronization, information on your device is updated with any information that changes in your accounts.

- **Samsung Account:** Add your Samsung Account.
- **ChatON:** Add your ChatON Account.
- **Dropbox:** Add your Dropbox Account.
- **Email:** Add an Email Account to sync Contacts.
- **Evernote:** Add an Evernote Account.
- **Google:** Add your Google Account to sync your Contacts, Calendar, and Gmail.
- **LDAP:** Add an LDAP Account to find entries in an LDAP directory server.
- **Microsoft Exchange ActiveSync:** Add your Exchange Account to sync Contacts, Calendar, and Email.
- **Server:** Add a Server to sync and access your data.
- **Facebook:** Add a Facebook Account to sync apps.
- **Twitter:** Add a Twitter Account.

Setting Up Accounts

Set up and manage your synchronized accounts with the **Accounts** setting.

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Accounts** → **Add account**.
2. Touch the account type.
3. Follow the prompts to enter your account credentials to complete the set up process.

Your tablet communicates with the appropriate account servers to set up your account. When complete, your account displays in the **Accounts** area of the Settings screen.

DRAFT For Internal Use Only

Your Google Account

In order to utilize your device to the fullest extent, you will need to create a Google Account when you first use your device. With a Google Account, Google applications will always be in sync between your tablet and computer.

If you need to create a Google account, follow these steps:

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Accounts** → **Add account** → **Google**.
2. Follow the prompts to sign into your existing account or create a new account.

Your Samsung Account

Create a Samsung Account for access to Samsung apps and services, such as Samsung Hub, Samsung Apps, Samsung Link, and much more.

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Accounts** → **Add account** → **Samsung account**.
2. Follow the prompts to sign into your existing account or create a new account.

Contacts

Store contact information for your friends, family, and colleagues to quickly access information or to send a message.

To access Contacts:

- From a Home screen, touch  **Apps** →  **Contacts**.

Add a Contact

1. Touch  **Contacts** →  **Create**. The *Save contact to* pop-up displays.
2. To choose where the contact is stored, touch **Device** or an account.
– or –

Touch **Add new account** to add a different account. For more information, refer to “*Setting Up Accounts*” on page 46.

DRAFT For Internal Use Only

3. Touch each field to enter information. Touch  to add another entry, or  to remove an entry. Touch  to choose a label.
- **Picture:** Touch the picture icon to assign a picture to the new contact.
 - **Name:** Enter the name. Touch  to display additional name fields.
 - **Phone:** Enter a phone number.
 - **Email:** Enter an email address.
 - **Groups:** Assign the contact to a group.
 - **Add another field:** Add additional fields for the contact.
4. Touch **Save**.

Updating Contacts

1. Touch  **Contacts**.
2. Touch a contact in the *Contacts list* to display it.
3. Touch  **Edit**.
4. Touch any field to edit. For more information, refer to “Add a Contact” on page 47.

Deleting Contacts

1. Touch  **Contacts**.
2. Touch a contact in the *Contacts list* to display it.
3. Touch  **Delete**.

Contacts Display Options

There are various ways to display your contacts.

1. Touch  **Contacts**.
2. Touch the **Groups** tab, **Favorites** tab, or **Contacts** tab to view contacts in various ways:
 - **Groups:** Display contacts sorted into groups—such as Not assigned, Co-workers, Family, Friends, etc. The number of contacts in each group is displayed next to the group name. Touch a group name to show only contacts in that group. For more information, refer to “Create a New Group” on page 51.
 - **Favorites:** Show only your favorite (or starred), contacts. For more information, refer to “Favorites” on page 53.
 - **Contacts:** Show all your contacts. Touch the **Search** field and enter a keyword to list contacts that contain that keyword.

3. While viewing **Groups**, **Favorites**, or **Contacts**, touch  **Menu** for options.
4. While viewing the **Contacts** tab, touch  **Menu** → **Settings** for Contact settings.

Linked Contacts

Your device can synchronize with multiple accounts, including Google, Corporate Exchange, and other email providers. When you synchronize contacts from these accounts with your device, you may have multiple contacts for the same person.

Linking, or joining, imported contact records allows you to see all of a contact's numbers and addresses together in a single contact entry. Linking also helps you keep your contacts updated, because any changes that your contacts make to their information in the respective accounts are automatically updated the next time you synchronize with that account.

Linking Contacts

1. Touch  **Contacts**.
2. Touch a contact in the *Contacts list* to display it.
3. Touch  **Menu** → **Link contact**.
4. Touch the contact you want to link. The linked contact's information is displayed with the original contact's information.
5. Repeat Steps 3 and 4 to link other contacts.

Separating Contacts

1. Touch  **Contacts**.
2. Touch a contact in the *Contacts list* to display it.
3. Touch  **Menu** → **Separate contact**. A list of linked contacts is displayed.
4. Touch  to separate a linked contact.

DRAFT For Internal Use Only

Sharing Contact Information

You can send a contact's information using Bluetooth to other Bluetooth devices, or in an Email or Gmail as an attachment.

Note: Not all Bluetooth devices accept contacts and not all devices support transfers of multiple contacts. Check the target device's documentation.

1. Touch  **Contacts**.
2. Touch  **Menu** → **Share namecard via**.
3. Touch **Selected contact** so share only the displayed contact, or touch **Multiple contacts**.
4. Touch a sending method, such as Bluetooth or email.
5. Follow the prompts to send the contact information.

Importing and Exporting Contacts

To back up and restore your contacts, you can export your contacts list to a storage device (such as a PC), or import your contacts list from a storage device.

1. Use the USB cable to connect your device to the storage device.
2. Touch  **Contacts**.
3. Touch  **Menu** → **Import/Export**.
4. Touch an option and then follow the prompts.

DRAFT For Internal Use Only

Groups

Assign contacts to Groups to make searching for contacts faster or to quickly send messages to group members.

Create a New Group

Create a new group when you add or edit a contact.

1. Touch  **Contacts**.
2. Touch the **Groups** tab.
3. Touch  **Menu** → **Create**.
4. Touch the **Group name** field enter a name.
5. Touch  **Add member**. Touch individual contacts or touch **Select all**, then touch  **Done** to add the selected contacts to the group.
6. Touch  **Save**.

Tip: Contacts can belong to more than one group. While editing the contact, touch the **Groups** field to add additional groups.

Once you create a new group, the Contacts List can be set to display only the contacts in that group. For more information, refer to “*Contacts Display Options*” on page 48.

Adding Group Members

To add a contact to a group, just Edit a contact's Group field. For more information, refer to “*Updating Contacts*” on page 48.

To add multiple contacts to a group:

1. Touch  **Contacts**.
2. Touch **Groups** and then touch the group to which you want to add members.
3. Touch  **Add member**.
The contacts that can be added display.
4. Touch **Select all** or the name of each contact to add.
5. Touch  **Done** to add the contacts to the group.

DRAFT For Internal Use Only

Removing Group Members

To remove contacts from a group:

1. Touch  **Contacts**.
2. Touch **Groups** and then touch the group from which you want to remove members.
3. Touch  **Menu** → **Remove member**.
4. Touch **Select all** or the name of each contact to remove.
5. Touch  **Done** to remove the contacts.

Contacts are removed from the group and the group name is removed from each contact's **Group** field.

Renaming a Group

1. Touch  **Contacts**.
2. Touch the **Groups** tab and touch the group you want to rename.
3. Touch  **Menu** → **Edit**.
4. Touch the **Group name** field and enter a new name.
5. Touch  **Save**.

Deleting Groups

1. Touch  **Contacts** → **Groups** tab →  **Delete**.
2. Touch individual groups or touch **Select all**, then touch  **Delete**.
3. Touch **Group only** (to delete only the group) or **Group and group members** (to delete both the group and the group's members).

DRAFT For Internal Use Only

Favorites

Mark contact records with a ★ gold star to identify them as favorites.

Mark a Contact as a Favorite

1. Touch  **Contacts**.
2. Touch a contact in the *Contacts list* to display it.
3. Touch the ☆ **Star** so that it turns gold ★.

Tip: You do not have to edit the contact to mark it as a favorite.

View Favorites

There are two ways to view your favorites.

1. Touch  **Contacts**.
2. Touch the **Favorites** tab. Only your starred contacts are displayed.
– or –

Touch the **Groups** tab, then touch **Starred in Android** to list only your starred contacts that are being saved to your Google account.

Remove Favorites

1. Touch  **Contacts** → **Favorites** tab.
2. Touch  **Menu** → **Remove from favorites**.
3. Touch individual contacts or touch **Select all**, then touch ✓ **Done** to remove.

Note: To remove the currently displayed contact your favorites list, touch the ★ **Star** next to the contact's name so that it is no longer gold ☆.

DRAFT For Internal Use Only

Section 4: Messaging

This section describes how to send and receive messages and other features associated with messaging.

Types of Messages

Your device supports these types of messages:

- Email
- Gmail
- Hangouts
- Google+
- Google Messenger
- ChatON
- Twitter

Note: Your Wi-Fi-only device does NOT support voice calling and messaging services. Please disregard any “dial” and “message” related menus because some Gmail options are identically set in all Android devices.

Gmail

Send and receive email with Gmail, Google’s web-based email service.

- From a Home screen, touch  **Apps** →  **Google folder** →  **Gmail**.

Setting Up Your Gmail Account

If you did not set up a Google account during the initial configuration, the first time you launch Gmail, your device prompts you to set up your Google account.

1. Touch  **Gmail**.
2. Follow the prompts to sign in or create a new account. The device communicates with the Google server to set up your account and synchronize your email. When complete, your Gmail displays in the Inbox.

Note: You can use more than one Google account on your device. To add another account, touch  **Menu** → **Settings** → **General tab** → **Accounts** → **Add account**.

Refreshing Your Gmail Account

Refresh your account to update your device from the Gmail servers.

1. Touch  **Gmail**.
2. While viewing your Inbox, drag your finger downward across your messages.

Gmail Settings

Use the Gmail Settings to configure your Gmail preferences.

1. Touch  **Gmail**.
2. Touch  **Menu** → **Settings** for settings.

Tip: Touch  **Menu** → **Help** for more information.

Composing and Sending Gmail

1. Touch  **Gmail**.
2. Touch  **Compose**, then touch fields to compose the message. While composing a message, touch  **Menu** for options.
3. Touch  **SEND** to send this message.
– or –

Touch  **Menu** → **Save draft** to save a draft of this message.

Email

Use Email to view and manage all your email accounts in one application.

- From a Home screen, touch  **Apps** →  **Email**.

Configuring Email Accounts

You can configure Email for most accounts in just a few steps.

1. Touch  **Email**.
2. The first time you set up an email account, at the Set up email screen, enter an **Email address** and **Password**, then touch **Next**.
– or –
For additional accounts, touch  **Menu** → **Settings** → **Add account**.
3. Follow the on-screen instructions to set up your email account.

4. Touch **Next** to go to the next screen or touch **Previous** to go to the Apps screen.

Note: For Exchange ActiveSync accounts, the Activate device administrator? screen may appear. Read the information and touch **Activate** to continue.

5. Enter an account name and Your name, if required.

6. Touch **Done**.

The device communicates with the appropriate server to set up your account and synchronize your email.

When complete, your email appears in the Inbox for the account.

Note: To configure email account settings at any time, use  **Menu** → **Settings**. Touch the account to display Account settings.

Managing Your Email Accounts

You can view email you receive for all accounts in the **Combined view** screen or you can view email accounts individually.

1. Touch  **Email**.
2. Touch the  drop-down menu at the top left of the screen to select:
 - **Combined view:** View all email in a combined inbox.
 - **<Account Name>:** View email for the account.

Refreshing Your Email Account

Refresh your account to update your device from the Email servers.

1. Touch  **Email**.
2. In the Application Bar, touch  **Refresh**.

DRAFT For Internal Use Only

Deleting Email Accounts

To delete an Email account:

1. Touch  **Email**.
2. Touch  **Menu** → **Settings** → **Delete account**.

Email Settings

Use the Email Settings to configure your Email preferences.

Note: Available settings depend on the email provider.

1. Touch  **Email**.
2. Touch  **Menu** → **Settings**, then touch **General settings**. The following options display:
 - **Display:** Set how email is shown in the email list and when you open them.
 - **Composing and sending:** Set what functions are available while composing and sending email.
 - **Auto-advance:** Set the screen to show after deleting a message. Choices are: Next email, Previous email, or Email list.
 - **Confirm deletions:** Ask for confirmation before deleting email.
 - **Priority senders:** Enter email addresses that you want treated as a priority.

- **Spam addresses:** Manage your spam address list.
- **Rules for filtering:** Create rules for filtering email based on names, address, or subject.

3. Touch an account to configure specific settings.
Available options depend on the account.

Composing and Sending Email

1. Touch  **Email**.
2. If you have multiple accounts set up, choose an account from the menu at the top of the screen.
3. Touch  **Compose**, then touch fields to enter recipients and the email text.
4. While composing a message:
 - Touch displayed buttons to set Priority, Tracking options, Security options, and so on.
 - Touch  **Attach** to add a file to the message.
Available options depend on the type of email account.
5. Touch the body of the email to enter the text of your email. Touch the text option buttons to edit and format your message text.

6. Touch  **Send** to send the message.
- or –
- Touch  **Save** to save the email to the Drafts folder.

Hangouts

Previously known as Google Talk, Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

- From a Home screen, touch  **Apps** →  **Google folder** →  **Hangouts**.

Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+.

- From a Home screen, touch  **Apps** →  **Google folder** →  **Google+.**

Messenger

With Google Messenger, you can bring groups of friends together into a simple group conversation, putting everyone on the same page. When you get a new conversation in Messenger, Google+ sends an update to your device.

- From a Home screen, touch  **Apps** →  **Google folder** →  **Messenger**.

ChatON

A smart-messaging app that gives you a host of innovative ways to stay connected with all your friends and family, regardless of their device or platform. Use ChatON to send and receive instant messages from any device that has a mobile phone number.

1. From a Home screen, touch  **Apps** →  **ChatON**.
If you are launching this application for the first time, follow the on-screen instructions to complete the account setup.
2. Enter and send your message.

DRAFT For Internal Use Only

Section 5: Music

Listening to Music

You can listen to music by using your device's built-in speakers, through a wired headset, or through a wireless Bluetooth stereo headset.

For more information, refer to “Bluetooth” on page 87.

Press the **Volume Key** on the side of the device to activate on-screen volume control, then touch and drag on the scale to set volume. You can also press the Volume Key to adjust playback volume.

Play Music

Google Play Music is a Google service that gives you instant access to your personal music collection on the Internet and your compatible Android devices without the hassle of wires or syncing. For more information, visit music.google.com.

- From a Home screen, touch  **Apps** →  **Google folder** →  **Play Music**.

Music Player

Music Player plays songs stored on your tablet or an installed memory card.

To access Music Player:

1. From a Home screen, touch  **Apps** →  **Music**.
The Music Player application searches your device's internal storage or on an installed memory card for music and playlists. This can take from a few seconds to several minutes, depending on the amount of new music added since you last opened the application. It then displays your music in several ways.
2. Touch a tab, such as **Songs**, **Playlists**, **Albums**, and so on, to change the way you view the contents of your library.
3. Touch the Music application icon  at the top-left of the Application bar to return to the previous Music screen.

Searching for Music

To find music in your library:

1. Touch  **Music**.

2. Touch  **Search** and use the keyboard to type the name of an artist, album, or song.

Music Player Options and Settings

To use Music Player options and configure settings:

1. Touch  **Music**.
2. Touch  **Menu** to display the following options:
 - **List view / Thumbnail view:** View your music in a list or thumbnail format.
 - **Delete:** Delete a song, an album, or every song or album.
 - **Scan for nearby devices:** Discover and connect directly to nearby devices.
 - **Settings:** The following settings display:
 - **SoundAlive:** Configure SoundAlive.
 - **Adapt Sound:** Enhance sound quality.
 - **Play speed:** Decrease or increase play speed.
 - **Smart volume:** Automatically adjust volume to surroundings.
 - **Voice control:** Use voice commands to control playback.
 - **Lyrics:** Display the lyrics of the song, if available.
 - **Music auto off:** Set the option Off or set your music to turn off automatically by touching one of the time values.

- **End:** Close the Music Player app.

Managing Playlists

To create, manage, or delete a playlist:

- Touch  **Music**.

Creating a Playlist

- Touch  **Create playlist** and use the keyboard to enter a name for the playlist.

Renaming a Playlist

1. Touch the **Playlists** tab.
2. Touch a playlist, touch  **Menu** → **Edit title** and use the keyboard to enter a new name for the playlist.

DRAFT For Internal Use Only

Adding Songs to or Removing Songs from Playlists

1. Touch  **Create playlist** and touch a playlist.
– or –
Touch **Playlists**, touch a playlist, and then touch  **Add music**.
All songs are displayed.
2. Touch  next to each song you want to add or next to **Add all** to add all songs to the playlist.
– or –
Touch  to remove a song from the playlist.
3. Touch  **Done** to save the playlist.

Changing the Order of a Playlist

1. Touch the **Playlists** tab and touch a playlist.
2. Touch  **Change order**.
3. Touch the grid  for an entry and drag the entry to a new position in the list.
4. Touch **Done** to change the order and save the playlist.

Playing a Playlist

1. Touch the **Playlists** tab.
2. Touch **Favorites**, **Most played**, **Recently played**, or **Recently added**, or touch a playlist title that you created.
3. Touch a song to start playing the playlist at that song.

Deleting a Playlist

1. Touch the **Playlists** tab and touch a playlist.
2. Touch  **Menu** → **Remove**.
3. Touch the box next to **Select all**, touch  **Remove**, and then touch **OK**.

Playing Music

To play a song:

1. Touch  **Music**.
2. Touch a song or touch an album or genre and then touch a song in the list of songs on the album.
The song you touch starts to play. The tracks in the current list play in order until you reach the end of the list (unless you choose a repeat option). Otherwise, playback stops only if you stop it, even when you switch applications.

Accessing the Music Player

If you navigate away from the Music Player application and music is playing, the Music notification icon ► is displayed in the System Bar.

You can change songs or easily return to the Music Player:

1. Touch the top of the screen and swipe downward. The Notification Panel displays.
2. Touch the song thumbnail to display the Music Player. You can also pause and resume playback and skip to the next or previous song in the panel. For more information, refer to “Notifications” on page 35.

 
Music Player Controls

When a song is playing, the Music Player screen displays and various controls are available.

1. Touch  **Music**.
2. Touch a song or playlist to begin playback. The music player displays below (portrait mode) or to the right (landscape mode) of the music listing.
3. Touch the song thumbnail to enlarge the music player.

Music Player Controls

During playback, use the sound and playlist controls:

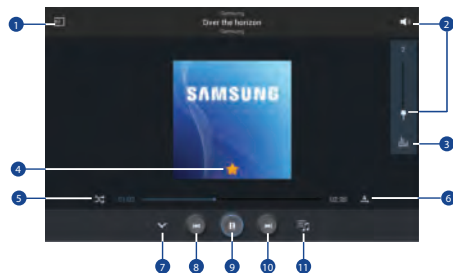

1. Scan DLNA-enabled devices.
2. Touch to display the volume control, then touch and drag on the scale to set volume. You can also press the Volume Key on the side of the device to adjust playback volume.

DRAFT For Internal Use Only

3. Touch to view and set SoundAlive options.
4. Set the file as your favorite song.
5. Turn on shuffle.
6. Change the repeat mode.
7. Hide the music player screen.
8. Restart the currently-playing song or skip to the previous song. Touch and hold to move backwards quickly.
9. Pause and resume playback.
10. Skip to the next song. Tap and hold to move forwards quickly.
11. Open the playlist.

Options While Playing a Song

There are various options and controls available while a song is playing:

1. Touch  **Music**, touch a song or an album, and then a song.
2. Touch the music player to enlarge it.
3. Touch  **Menu** to display the following options:
 - **Add to playlist:** Add the song to a new playlist or an existing playlist.
 - **Via Bluetooth:** Play the current song by using a Bluetooth device.
 - **Play via Group Play:** Share the current song by using Group Play.
 - **Scan for nearby devices:** Discover and connect directly to nearby devices.

DRAFT For Internal Use Only

- **Details:** View song details.
- **Set as alarm tone:** Use the current song as an alarm tone.
- **Settings:** Displays Music Player settings. For more information, refer to “*Music Player Options and Settings*” on page 61.
- **End:** This option returns you to the home screen.

Playing Music by Mood

Play music grouped by mood. The playlist is automatically created by the device. When a new song is added:

1. Touch  **Music** → **Music square** →  **Library update**.
2. Touch **Music square** and select a cell of mood. Or select multiple cells by dragging your finger.
-

DRAFT For Internal Use Only

Section 6: Camera and Video

Camera

Use this application to take photos or videos.

- From a Home screen, touch  **Apps** →  **Camera**.

Note: The camera automatically shuts off when unused.

Note: Make sure that the lens is clean. Otherwise, the device may not work properly in some modes that require high resolutions.

Camera Etiquette

- Do not take photos or videos of other people without their permission.
- Do not take photos or videos where legally prohibited.
- Do not take photos or videos in places where you may violate other people's privacy.

Using the Camera

To access the Camera:

- Touch  **Camera**.

If a memory card is inserted, the Storage location pop-up displays.

- Touch **OK** to change the storage location to memory card.

– or –

Touch **Cancel** to use the device storage for storing pictures and videos.

The Camera screen displays.



- Switch between the front and rear camera.

2. Switch to dual camera mode.
3. View more options.
4. Display current mode.
5. Record video button.
6. Camera button.
7. Shooting mode.
8. Open Gallery to view photos and videos.
9. Select an available effect.

Taking Photos

1. Touch the image on the preview screen where the camera should focus.
When the subject is in focus, the focus frame turns green.
2. Touch  to take the photo.

Shooting Mode

Several photo effects are available.

- Touch **MODE**, and then scroll up or down the screen at the right side of the screen.
 - **Auto**: Use this to allow the camera to evaluate the surroundings and determine the ideal mode for the photo.
 - **Beauty face**: Take a photo with lightened faces for gentler images.
 - **Best photo**: Take a series of photos, and then save the best one.

DRAFT For Internal Use Only

- **Best face:** Use this to take multiple group shots at the same time and combine them to create the best possible image.
 - Touch  to take multiple photos. To get the best shot, hold the camera steady and remain still while taking photos. When **Gallery** opens, touch the yellow frame on each face, and choose the best individual pose for the subject. After choosing a pose for each individual, touch **Save** to merge the images into a single photo, and save it.
- **Sound & shot:** Use this to take a photo with sound.
 - Touch  to take a photo. The device records a few seconds of audio after taking a photo.

Note: While taking photos in this mode, sound is recorded by the internal microphone.

- **Drama:** Use this to take a series of photos and combine them to create an image that shows trails of the movement.

To get the best shot, follow these tips. The device may not take photos properly in other shooting conditions.

 - Hold the camera steady and remain still while taking photos.
 - Take photos of a subject that is moving in one direction.

- Take photos with backgrounds that are free of moving objects.
 - Avoid taking photos of a subject and background with similar colors.
 - Avoid taking photos of a subject that is too close or too far away to fit within the viewfinder or that is too long such as a bus or a train.
- **Rich tone (HDR):** Use this to take photos without losing details in bright and dark areas.
 - **Eraser:** Use this to erase the movements of moving subjects in the background.
 - Touch  to take a series of photos. The device erases traces of movement from a moving subject. To restore the original photo, touch Show moving objects, and then touch the highlighted area.

To get the best shot, follow these tips:

- Hold the camera steady and remain still while taking photos.
- Avoid taking photos of a subject and background with similar colors.

- When taking photos of a subject that is moving very little or moving a great deal, the camera may not recognise all of the movements.
- If there are multiple subjects moving in the background, the camera may not recognise all of the movement.
- **Panorama:** Take a photo composed of many photos strung together.
To get the best shot, follow these tips:
 - Move the camera slowly in one direction.
 - Keep the camera's viewfinder within the guide frame.
 - Avoid taking photos of a subject in front of unrecognizable backgrounds, such as empty skies or plain walls.
- **Sports:** Use this setting for fast-moving subjects.
- **Night:** Use this setting for images taken in darker conditions.

Panoramic Photos

A panoramic photo is a wide landscape image consisting of multiple shots.

1. Touch **MODE** → **Panorama**.
2. Touch  and move the camera in one direction.
When the blue frame aligns with the viewfinder, the camera automatically takes another shot in a panoramic sequence. To stop shooting, touch . If the viewfinder is out of the direction, the device stops shooting.

Applying Filter Effects

Use the filter effects to take unique photos or videos.

- Touch  and select a filter effect. The available options vary by mode.

DRAFT For Internal Use Only

Recording Videos

To record a video:

- Touch  to take a video. To pause recording, touch . To stop recording, touch .

While recording, use the following actions:

- To change the focus, touch where you want to focus. To focus on the centre of the screen, touch .
- To capture an image from the video while recording, touch .

 
Recording Mode

- Touch  **Options** →  **Recording mode** to change the recording mode.
 - **Normal:** Use this mode for normal quality.
 - **Limit for email:** Use this mode to lower quality for sending via messages.
 - **Fast motion:** Use this mode when recording action scenes.

Zooming In and Out

Use one of the following methods:

- Use the **Volume** button to zoom in or out.
- Spread two fingers apart on the screen to zoom in, and pinch to zoom out.

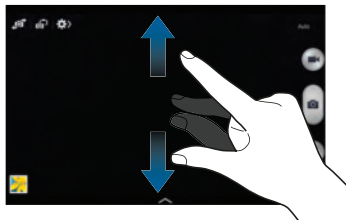


Note: The zoom in and out effect is available when using the zoom feature while shooting video.

DRAFT For Internal Use Only

Dual Camera Mode

When you take a landscape photo with the rear camera, the photo or video captured by the front camera appears in an inset window, or vice versa. Use this feature to take a beautiful landscape photo and a self-portrait simultaneously.

 - Touch  to switch to dual camera mode. Touch  to take a photo or touch  to take a video.

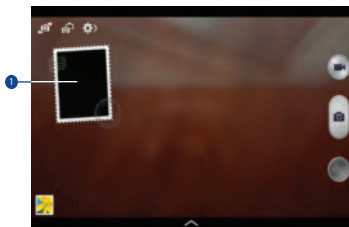

1. Tap to resize it or move the location.

Note: You can record videos in dual camera mode for up to 5 minutes in Full HD and up to 10 minutes in HD. While taking videos in this mode, sound is recorded by the internal microphone.

Share Shot

- Touch  > **Options** →  OFF, and then select one of the following:
 - **Share shot:** Send a photo directly to another device via Wi-Fi Direct.
 - **Buddy photo share:** Set the device to recognise a person's face that you have tagged in a photo and send it to that person.
 - **ChatON photo share:** Send a photo to another device via ChatON.
 - **Remote viewfinder:** Set a device to control the camera remotely.

DRAFT For Internal Use Only

Controlling the Camera Remotely

Set a device as a viewfinder to control the camera remotely.

Touch  > **Options** →  → **Remote viewfinder**, and then connect the device and the camera using Wi-Fi Direct. Touch to take a photo remotely using the device as a viewfinder.

Configuring Settings for Camera

- Touch  →  to configure settings for Camera. Not all of the following options are available in both still camera and video camera modes. The available options vary depending on the mode used.
 - **Photo size/Video size:** Select a resolution. Use higher resolution for higher quality. But it takes up more memory.
 - **Burst shot:** Take a series of photos of moving subjects.
 - **Tap to take pics:** Touch the image on the preview screen to take photos.
 - **Face detection:** Set the device to recognise people's faces and help you take photos of them.

- **Metering:** Select a metering method. This determines how light values are calculated. Centre-weighted measures background light in the centre of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.
- **ISO:** Select an ISO value. This controls camera light sensitivity. It is measured in film-camera equivalents. Low values are for stationary or brightly-lit objects. Higher values are for fast-moving or poorly-lit objects.
- **Video stabilization:** Activate or deactivate anti-shake. Anti-shake helps focus when the camera is moving.
- **Auto night detection:** Set the device to automatically detect darker conditions and adjust the brightness of the photo without the flash.
- **Save as:** Set the device to delete the original photo when taking photos with rich tone mode.

DRAFT For Internal Use Only

- **Location tag:** Attach a GPS location tag to the photo.

Note: To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions.

- **Review:** Briefly display photos taken.
- **Volume key:** Set the device to use the Volume button to control the shutter or zoom function.
- **Timer:** Use this for delayed-time shots.
- **White balance:** Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Exposure value:** Change the exposure value. This determines how much light the camera's sensor receives. For low-light situations, use a higher exposure.
- **Guidelines:** Display viewfinder guides to help composition when selecting subjects.
- **Flash:** Activate or deactivate the flash.

- **Voice control:** Set the camera to take photos with voice commands.
- **Contextual filename:** Set the camera to display contextual tags. Activate this to use Tag Buddy in Gallery and Story Album.
- **Save as flipped:** Invert the image to create a mirror-image of the original scene.
- **Storage:** Select the memory location for storage.
- **Reset:** Reset the camera settings.

DRAFT For Internal Use Only

Shortcuts

Reorganize shortcuts for easy access to the camera's various options.

1. Touch  **Menu** → **Edit quick settings**.
2. Touch and hold an option and drag it to a slot at the top of the screen. The other icons can be moved within the list by touching and dragging them.

Gallery

Use this application to view images and videos.

- From a Home screen, touch  **Apps** →  **Gallery**.

Note: Some file formats are not supported depending on the software installed on the device. Some files may not play properly depending on the encoding method used.

Viewing Images

Launching Gallery displays images by creation date.

- To sort images by location, people, or other categories, touch **Time** and select a category. Albums displays images by folder.
- In a folder, images are displayed by creation date. Select an image to view it in full screen.
- Scroll left or right to view the next or previous image.

Zooming In and Out

Use one of the following methods to zoom in an image:

- Double-touch anywhere to zoom in.
- Spread two fingers apart on any place to zoom in. Pinch to zoom out, or double-tap to return.

DRAFT For Internal Use Only

Viewing Images Using the Motion Feature

Use the motion feature to execute a function with particular motion.

1. On the Applications screen, touch **Settings** → **Controls** tab → **Motions**, drag the **Motions** switch to the right, and then turn on the switch for each feature.
2. To stop using a motion feature, drag the **Motions** switch to the left.

Playing Videos

Video files show the  icon on the preview.

- Select a video to watch it and touch .

Trimming Segments of a Video

1. Select a video, and then touch .
2. Move the start bracket to the desired starting point, move the end bracket to the desired ending point, and then save the video.

Editing Images

- When viewing an image, touch  **Menu** and use the following functions:
 - **Edit**: Use Photo Editor to edit your photo.
 - **Favorite**: Add to the favorites list.
 - **Slideshow**: Start a slideshow with the images in the current folder.
 - **Photo frame**: Use this to add a frame and a note to an image. The edited image is saved in the Photo frame folder.
 - **Photo note**: Use this to write a note on the back of the image. Touch  to edit the note.
 - **Copy to clipboard**: Copy to clipboard.
 - **Print**: Print the image via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
 - **Rename**: Rename the file.

DRAFT For Internal Use Only

- **Buddy photo share:** Send the image to a person whose face is tagged in the image.
- **Rotate left:** Rotate counter-clockwise.
- **Rotate right:** Rotate clockwise.
- **Crop:** Resize the blue frame to crop and save the image in it.
- **Set as:** Set the image as wallpaper or a contact image.
- **Details:** View image details.
- **Settings:** Change the Gallery settings.

Modifying Images

- When viewing an image, touch  **Menu** → **Edit** and use the following functions:
 - **Rotate:** Rotate the image.
 - **Crop:** Crop the image.
 - **Color:** Adjust the saturation or brightness of the image.
 - **Effect:** Apply effects to the image.
 - **Sticker:** Attach stickers.
 - **Drawing:** Draw on the image.
 - **Frame:** Apply frames to the image.

Favorite Images

- When viewing an image, touch  **Menu** → **Favorite** to add the image to the favorites list.

Deleting Images

Use one of the following methods:

- In a folder, touch  **Menu** → **Select item**, select images by ticking, and then touch  **Delete**.
- When viewing an image, touch  **Delete**.

Sharing Images

Use one of the following methods:

- In a folder, touch  **Menu** → **Select item**, select images by ticking, and then touch  to send them to others or share them via social network services.
- When viewing an image, touch  to send it to others or share it via social network services.

DRAFT For Internal Use Only

Setting as Wallpaper

- When viewing an image, touch  **Menu** → **Set as** to set the image as wallpaper or to assign it to a contact.

Tagging Faces

1. Touch  **Menu** → **Settings** → **Tags** → **Face tag**. A yellow frame appears around the recognized face.
2. Touch the face, touch **Add name**, and then select or add a contact.
3. When the face tag appears on an image, touch the face tag and use available options, such as sending messages.

Note: Face recognition may fail depending on the face angle, face size, skin color, facial expression, light conditions, or accessories the subject is wearing.

Using Tag Buddy

- Touch  **Menu** → **Settings** → **Tags** → **Tag buddy**, and then drag the **Tag buddy** switch to the right to display a contextual tag (weather, location, date, and person's name) when opening an image.

DRAFT For Internal Use Only

Story Album

Use this application to create your own digital album to keep your stories by organizing the images neatly and automatically.

Note: The Story Album app must be installed before you can use it. Touch OK on the pop-up and follow the on-screen instructions.

To access Story Album:

1. From a Home screen, touch  **Apps** →  **Samsung folder** →  **Story Album**.
2. Touch  **Menu** → **Help** to learn more about Story Album.

Creating Story Albums

Create story albums by selecting images from Gallery or images sorted by tag information.

To create a story album manually:

1. Touch  **Create album**.
The Create album screen displays.



2. Touch **From Gallery** to add pictures from the Gallery.
— or —

Touch **By tag information** to create the story album automatically. Select criteria, and then touch **Find pictures**. Enter a title for the album, select a theme, and then touch **Create album**.

DRAFT For Internal Use Only

Creating Recommended Albums

When you take photos at one location, the device automatically sorts your photos into albums based on your specified criteria and suggests making the new albums.

- Touch  **Menu** → **Settings** → **Home city**, and then set a method for recognizing your location. Select an album type and set a minimum number of photos.

Viewing Story Albums

1. Select a story album. The cover image appears on the first page. Scroll left or right to view images in the story album.
2. On a page of the album, touch  **Menu** and use the following functions. The available options vary depending on the page.
 - **Edit title**: Rename the album.
 - **Change theme**: Change the theme for the album.
 - **Change cover image**: Change the cover image of the album.

- **Slideshow**: Start a slideshow with the images in the current album.
- **Share via**: Send the album to others.
- **Print**: Print the album via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
- **Order photo book**: Place an order for a printed album.
- **Export Album**: Export the album to other storage locations.
- **Add content**: Add more content to the current page.
- **Remove content**: Delete content on the current page.
- **Edit**: Change the layout of the current page.
- **Delete page**: Delete the current page.

Managing Story Albums

1. Touch and hold a story album.
2. Touch one or more story albums or touch the  **# selected** **selected tab** → **Select all**.
3. Touch  **Share via** to create a PDF file or a Story Album file (.scc).
4. Touch  **Delete** to delete the selected story albums.

DRAFT For Internal Use Only

Editing Images

1. Touch the image of the page in an album.

The following options are available:



Add a caption.



Send the image to others.



Delete the image.



Select among various effects that are available.

2. Touch  **Menu**, and then use the following functions:

- **Slideshow:** Start a slideshow or change the slideshow settings.
- **Set as cover:** Set the image as an album cover image.
- **Rotate left:** Rotate the image counter-clockwise.
- **Rotate right:** Rotate the image clockwise.

Video

Use this application to play video files.

 
- From a Home screen, touch  **Apps** →  **Video**.

Note: Some file formats are not supported depending on the device's software.

DRAFT For Internal Use Only

Playing Videos

Select a video to play.

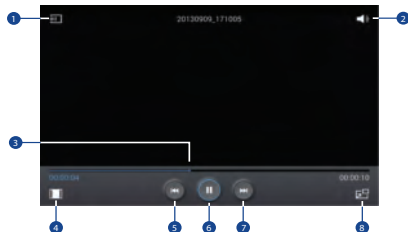

1. Scan DLNA-enabled devices.
2. Adjust the volume.
3. Move forwards or backwards by dragging the bar.
4. Change screen ratio.
5. Restart the current video or skip to the previous video.
Touch and hold to move backwards quickly.
6. Pause and resume playback.
7. Skip to the next video. Tap and hold to move forwards quickly.
8. Switch to floating screen mode.

Deleting Videos

- Touch  **Menu** → **Delete**, select videos by ticking, and then touch **Delete**.

Sharing Videos

Touch  **Menu** → **Share via**, select videos by ticking, touch **Done**, and then select a sharing method.

Using Popup Video Player

Use this feature to use other applications without closing the video player.

- While watching videos, touch  to use the pop-up player.
- Spread two fingers apart on the screen to enlarge the player or pinch to reduce it.
- To move the player, drag the player to another location.

Purchasing Videos

Scroll the screen to the left or right, and then select a video.

YouTube

 
Use this application to watch videos from the YouTube website.

- From a Home screen, touch  **Apps** →  **YouTube**.

Watching Videos

Touch  **Search**, and then enter a keyword. Select one of the returned search results to watch a video.

Touch  to display full screen.

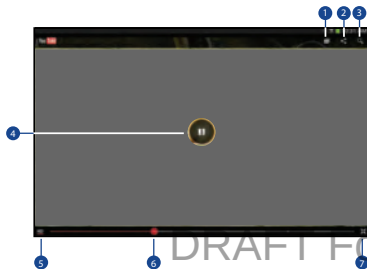

1. Add the video to the playlist.
2. Send the URL to others.
3. Search for videos.
4. Pause or resume playback.
5. Change display quality.
6. Move forwards or backwards by dragging the bar.
7. Exit full screen.

Sharing Videos

- Select the video to view, touch , and then select a sharing method.

Uploading Videos

- Select your account, touch , select a video, enter information for the video, and then touch **UPLOAD**.

DRAFT For Internal Use Only

Section 7: Connections

Your device includes features to connect to the internet and to other devices by using Wi-Fi, Bluetooth, or a USB cable.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your device's Wi-Fi feature to:

- Access the internet for browsing or to send and receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling.

Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be *open* (unsecured, as with most hotspots) or *secured* (requiring you to provide login credentials). Your device supports Wi-Fi 802.11 a/b/g/n/ac.

Turn Wi-Fi On or Off

Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range WAPs (Wireless Access Points).

From the Notification Panel

1. From any screen, touch the top of the screen and swipe downward. The Notification Panel displays.
2. Touch **Wi-Fi** to turn Wi-Fi on (green) or off (grey).

From Settings

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections**.
2. Touch the **OFF/ON** button to turn Wi-Fi ON  or OFF .

DRAFT For Internal Use Only

Scan and Connect to a Wi-Fi Network

When you turn on Wi-Fi, your device searches for and displays available Wi-Fi connections.

1. From any screen, touch the top of the screen and swipe downward. The Notification Panel displays.
2. Touch **Wi-Fi** to turn Wi-Fi on (green). Your device begins scanning for available Wireless Access Points.

Note: To begin a new scan for available WAPs, touch **Scan**.

3. When the scan is complete, touch a Wi-Fi network to connect. If the Wi-Fi network is open (unsecured), your device automatically connects. If the Wi-Fi network is secured, enter the password at the prompt to connect.

Tip: You can have your device automatically notify you of available networks. See *Network notification* under “Settings” on page 85.

Note: When Wi-Fi is on,  is displayed on the Status bar.

Add a Wi-Fi Network Manually

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.
2. Touch the **OFF/ON** button to turn Wi-Fi ON .
3. Touch **Wi-Fi** → **Add Wi-Fi network** and enter the following:
 - **Network SSID:** Enter the name of the Wi-Fi Wireless Access Point (WAP).
 - **Security:** Select the type of security used by the WAP.

Note: Depending on the security protocol used by the WAP, additional network information may be required, such as a password.

- **Password:** If the WAP is secured, enter the password or hex key.
4. Touch **Connect**.

DRAFT For Internal Use Only

Settings

Configure your Wi-Fi connections.

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.
2. Touch the **OFF/ON** button to turn Wi-Fi ON .
3. Touch **Wi-Fi** →  **Menu** for options:
 - **Advanced:**
 - **Network notification:** Receive a notification when new Wireless Access Points (WAPs) are available.
 - **Passpoint:** Connect to passpoint-enabled Wi-Fi Access Points automatically.
 - **Sort by:** Sort Wi-Fi networks by alphabet or RSSI (received signal strength indicator).
 - **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
 - **Always allow scanning:** Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.

- **Wi-Fi timer:** Specify the **Starting time** and the **Ending time** for Wi-Fi to be automatically connected.
- **Install certificates:** Install authentication certificates.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).
- **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
- **WPS PIN entry:** View the PIN used by your phone to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
- **Help:** Learn about setting up and using Wi-Fi networks, and other settings.

DRAFT For internal Use Only

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

These devices must be enabled for Wi-Fi Direct communication. This connection is direct and not via a hot spot or Wireless Access Point (WAP).

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.

2. Touch the **OFF/ON** button to turn Wi-Fi ON .

3. Touch **Wi-Fi** → **Wi-Fi Direct**.

Your device begins scanning for other devices enabled with Wi-Fi Direct.

4. Enable Wi-Fi Direct on the target device.
5. In the list of available devices, touch the target device.
– or –

If you want to connect to more than one device, touch **Multi-connect** and touch each device (that support Multi-connect) you want to connect to. Touch **Done**.

6. On the target device, touch **Accept** (you have 30 seconds to touch **Accept**).

Once connected, the target device will show as **Connected** in your list of Wi-Fi Direct devices and the  icon will display on the Status bar.

Share Information with Wi-Fi Direct

To share videos, photos, or other information with the connected device, follow these steps:

1. View the information that you want to share. For example, if you want to share a photo, find the photo in your camera viewer or  **Samsung** folder →  **My Files** folder, then touch the **Share**, **Share via**, or **Send via** option.
2. Touch the **Wi-Fi Direct** option.
The Wi-Fi Direct settings screen displays, Wi-Fi Direct is turned on, and your device scans for other devices.
3. Touch a connected device name.
4. The other device displays a pop-up that indicates it is receiving the file.

Bluetooth

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You do not need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them—even if they are in different rooms.

Your device can use Bluetooth to share photos, contacts and other content with other Bluetooth-enabled devices. Many of the apps on your phone provide options for sharing via Bluetooth under  **Menu**.

Turning Bluetooth On or Off

From the Notification Panel

1. From any screen, touch the top of the screen and swipe downward.

The Notification Panel displays.

2. Touch **Bluetooth** to turn Bluetooth on (green) or off (grey).

From Settings

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.
2. Touch the **OFF/ON** button to turn Bluetooth ON  or OFF .

Note: When Bluetooth is on,  is displayed on the Status bar.

Pair with a Bluetooth Device

To exchange information between your device and another bluetooth-enabled device, you first must pair them.

Tip: After pairing, your device and the target device recognize each other and exchange information without having to enter a passcode or PIN.

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.
2. Touch the **OFF/ON** button to turn Bluetooth ON . Your device begins scanning for other Bluetooth-enabled devices.

DRAFT For Internal Use Only

3. Touch **Bluetooth** to enable the target device's discoverable or visible mode. The target device will be listed under Available devices. (If the target device is not listed under Available devices, touch **Scan**.)
4. Touch the target device to pair with it. Follow the prompts to confirm the passkey, if required.

Share Data with a Bluetooth-Enabled Device

1. Select a file or item from within an app (such as a photo in Gallery).
2. Touch the option for sharing, then select Bluetooth.

Note: The method for selecting an option may vary by app and data type.

3. Search for and pair with a Bluetooth device. For more information, refer to *"Pair with a Bluetooth Device"* on page 87.

Receive Data from a Bluetooth-Enabled Device

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab.
2. Touch the **OFF/ON** button to turn Bluetooth ON .
3. Touch **Bluetooth** to select the length of time that your device will be visible, touch  **Menu** → **Visibility timeout**.
4. Pair with the Bluetooth device from which you want to receive data. For more information, refer to *"Pair with a Bluetooth Device"* on page 87.
5. Touch **Accept** to confirm that you are willing to receive data.

A Bluetooth authorization request pop-up displays when a Bluetooth-enabled device attempts to send data to your device.

A File received message displays.

Received data is saved to the Bluetooth folder. If you receive a contact, it is saved to your contacts automatically.

DRAFT For Internal Use Only

Additional Bluetooth Settings

When Bluetooth is on, additional settings are available.

1. From a Home screen, touch  **Apps** →  **Settings** → **Connections** tab → **Bluetooth**.
2. Touch **Scan** to scan for nearby discoverable devices. After searching, touch a device to pair with it. For more information, refer to “Pair with a Bluetooth Device” on page 87.
3. Touch  **Menu** and select a Bluetooth setting to configure:
 - **Visibility timeout:** Use this setting to control when to automatically turn off the Discoverable option.
 - **Received files:** Show the list of files received by using Bluetooth.
 - **Help:** Display Bluetooth information.

Change Your Bluetooth Name

1. From a Home screen, touch  **Apps** →  **Settings** → **General** tab → **About device** → **Device name**.
2. Use the keyboard to modify your device name and touch **OK**.

To uninstall an app from the Apps screen:

Kies Via Wi-Fi

Samsung Kies is a software that enables you to update your device firmware, synchronize files, and transfer data to and from your device directly by connecting to the PC.

Note: Some features will be supported through the System Updates feature in the future. For more information, refer to “Upgrading the Device” on page 59.

To learn more about Samsung Kies and Samsung applications, browse featured applications and download Kies at: www.samsung.com/us/support/downloads.

Note: Samsung Kies works on both PC and Macintosh computers.

Synchronizing with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

1. Attach your device to the computer with the USB cable. Your computer recognizes the connection and displays the AutoPlay screen.

2. Click the option to **Sync digital media files to this device** to synchronize music files.
3. Select and drag the music files you want to the sync list and begin synchronizing.
4. When finished, exit Windows Media Player and disconnect the USB cable.

Connecting as a Mass Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as **Card**, separate from the internal memory, which is **Tablet**.

1. Insert a memory card into the device to transfer files from or to the memory card.
2. Attach your device to the computer with the USB cable. Your computer recognizes the connection and displays the AutoPlay screen.
3. Click the option to **Open device to view files**. You should see a Card and a Tablet folder.
4. Copy files from the PC to the memory card (Card folder).
5. When finished, close the PC folder and disconnect the USB cable.

DRAFT For Internal Use Only

Section 8: Applications

This section contains a description of each application that is available on the Apps screen, its function, and how to navigate through that particular application. If the application is described in another section of this user manual, then a cross reference to that description is provided.

Accessing Applications

The **Apps** screen displays all applications installed on your wireless device. Applications that you download and install from Google Play or from the web are also added to a Home screen.

To access applications:

1. From a Home screen, touch  **Apps**.
2. Locate the application's icon and touch it to launch the application.

Tip: To open applications quickly, add the icons of frequently-used applications to one of the Home screens, if it is not there by default. For details, see “*App Shortcuts*” on page 39.

DRAFT For Internal Use Only

Action Memo

Use Action Memo to jot down or draw a note, and then select the memo to perform various actions, such as adding contacts or sending an email.

To launch Action Memo:

- With the S Pen button pressed, double-tap the screen. For more information, refer to “*Launching Action Memo*” on page 30.

– or –

Touch  **Samsung** folder →  **Action Memo**, and then touch  **Create**.

Alarm

Use this application to set wake-up calls and alarms for important events.

- Touch  **Alarm**.



1. An alarm is set.
2. Turn this alarm on or off.

DRAFT For Internal Use Only

Setting Alarms

- Touch  **Create**, set a time for the alarm to go off, select days for the alarm to repeat, and then touch **Save**. You can also set an alarm by writing numbers with the S Pen.
- **Location alarm:** Set a location. The alarm goes off only when you are in the location.
- **Snooze:** Set an interval and the number of times for the alarm to repeat after the preset time.
- **Smart alarm:** Set a time for the alarm to go off before the preset time.

Stopping Alarms

- Drag  outside the large circle to stop an alarm.
- Drag  outside the large circle to repeat the alarm after a specified length of time.

Deleting Alarms

- Touch and hold the alarm, and then touch **Delete**.

Bloomberg Businessweek+

Read Bloomberg Businessweek+ weekly for all the content of the print edition of the magazine along with exclusive content and interactive features that enrich the reading experience.

- Touch  **Businessweek+**.

Calculator

The Calculator provides the basic arithmetic functions to solve simple arithmetic problems and advanced operators to solve more complex problems.

1. Touch  **Samsung** folder →  **Calculator**.
2. Enter the first number using the numeric keys.
3. Enter the operation for your calculation by touching the + (add), - (subtract), × (multiply), or ÷ (divide) key.
4. Enter the next number.
5. To view the result, touch the = (equals) key.
6. Repeat Steps 3 through 5 as many times as required.
7. Touch  to clear the result.

DRAFT For Internal Use Only

8. For more advanced problems, rotate your device to landscape mode and use the advanced operators **sin**, **ln**, **cos**, **log**, **tan**, and so on, just as you would on a pocket calculator.
9. Touch and hold entries in the Calculator's display field to copy or cut the contents of the display. The  and  display. Use the icons to select the content to Cut or Copy. Touch either icon to display the options pop-up. Touch **Clipboard** to review the Clipboard.

Calendar

Use this application to manage events and tasks.

- Touch  **Calendar**.

Creating Events or Tasks

1. Touch , and then use one of the following methods:
 - **Add event:** Enter an event with an optional repeat setting.
 - **Add task:** Enter a task with an optional priority setting.
 – or –

To add an event or task more briefly, touch a date to select it and touch it again.

Enter a title and specify which calendar to use or sync with. Then touch **Edit event details** or **Edit task details** to add more details, such as how often the event repeats, when it has an advance alert, or where it takes place.

2. Invite others to the event by sending an email. Enter the email address to the **Participants** field, or touch  to open the contacts list.
3. Attach a map showing the location of the event. Enter the location in the **Location** field, touch  next to the field, and then pinpoint the precise location by touching and holding on the map that appears.

Syncing with Google Calendar

1. On a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Accounts** → **Google** under **My accounts**.
2. Touch a Google account → **Sync Calendar** → **Sync now**.

To manually sync for updating:

- Touch  **Calendar** →  **Menu** → **Sync**.

To display synced events or tasks:

- Touch  **Calendar** →  **Menu** → **Calendars**, and then tick the Google account.

Handwriting on Month View

- On month view screen, touch  to turn on handwriting mode. This is only available in month view in landscape mode.

Changing Calendar Type

- Select one from among different types of calendars including year, month, week, and others at the top side of the screen.

Searching for Events

- Touch  **Search**, and then enter a keyword to use for the search.
- To view today's events, touch Today at the top of the screen.

Deleting Events

- Touch  **Menu** → **Delete**, select events, and then touch **Delete**.

Sharing Events

- Select an event or task, touch  **Menu** → **Share via**, and then select a sharing method.

Camera

Use this application to take photos or videos.

- Touch  **Camera**.

For more information, refer to “Camera” on page 66.

DRAFT For Internal Use Only

ChatON

Use ChatON to send and receive instant messages from any device that has a mobile phone number.

- Touch  **ChatON**.

For more information, refer to “*ChatON*” on page 58.

Chrome

Use Chrome to browse the internet and bring your open tabs, bookmarks and omnibox data from your computer to your tablet.

1. Touch  **Chrome**.
2. Follow the on-screen instructions.

Contacts

Store contact information for your friends, family, and colleagues, to quickly access information or to send a message.

- Touch  **Contacts**.

For more information, refer to “*Contacts*” on page 47.

Downloads

Use this application to see what files are downloaded through the applications.

1. Touch  **Samsung folder** →  **Downloads**.
2. Select a file to open it with an appropriate application.
 - To sort the files by size, touch **Sort by size**.
 - To sort the files by date, touch **Sort by date**.

Dropbox

Use this application to save and share files with others via the Dropbox cloud storage. When you save files to Dropbox, your device automatically syncs with the web server and any other computers that have Dropbox installed.

1. Touch  **Galaxy Plus folder** →  **Dropbox**
When running Dropbox for the first time, touch **Start** to activate it.
2. Follow the on-screen instructions to complete the setup and begin using Dropbox.

DRAFT For Internal Use Only

Email

Send and receive email using popular email services.

- Touch  **Email**.

For more information, refer to “*Email*” on page 55.

Evernote

Use this application to create, synchronize, and share multimedia notes that you create. You can add tags to the notes, or sort the notes into a notebook so that you can manage your ideas efficiently.

- Touch  **Galaxy Plus** folder →  **Evernote**.

Flipboard

Use this application to access your personalized magazines.

- Touch  **Galaxy Plus** folder →  **Flipboard**.

For more information, refer to “*Flipboard*” on page 84.

Gallery

Use Gallery to view, capture, and manage photos and videos.

For more information, refer to “*Gallery*” on page 74.

- Touch  **Gallery**.

Gmail

Send and receive email with Gmail, Google’s web-based email.

- Touch  **Google** folder →  **Gmail**.

For more information, refer to “*Gmail*” on page 54.

Google Search

Search the internet using the Google search engine.

1. From the main Home screen, touch .

– or –

From a Home screen, touch  **Apps** →

 **Google** folder →  **Google**.

2. Use the keyboard to enter search criteria to display matching searches.

– or –

DRAFT For Internal Use Only

Touch  and speak the search criteria slowly and clearly. Google searches for the information and displays results.

Suggestions display below the text entry area.

3. Touch a suggestion to search for that term.

– or –

Touch  on the keyboard to start the search.

A browser window displays the search results.

To use Voice Search directly:

1. From a Home screen, touch  **Apps** →

 **Google** folder →  **Voice Search**.

2. Speak the search criteria slowly and clearly. Google searches for the information and displays results. If criteria is not understood, it displays **Retry**. Touch the  to retry speaking the search words.

Searching the Device

- Touch the search field, and then enter a keyword. Alternatively, touch , and then speak a keyword. If no results are returned from the applications, the web browser appears, displaying the search results.

Search Scope

To select which applications to search:

- Touch  **Menu** → **Settings** → **Tablet search**, and then touch the items to search for.

DRAFT For Internal Use Only

Google Now

Launch Google search to view Google Now cards that show the current weather, public transit info, your next appointment, and more when you are most likely to need it. Join Google Now when opening Google search for the first time.

To change Google Now settings:

- Touch  **Menu** → **Settings** → **Google Now**.

Google Settings

Use this application to configure settings for some features provided by Google.

- Touch  **Google folder** →  **Google Settings**.

Google+

Share updates and see what is going on around you with Google+ for mobile.

- Touch  **Google folder** →  **Google+**.

For more information, refer to “Google+” on page 58.

Group Play

Group Play is an easy way to share files in real time with others who are on the same Wi-Fi network. Group Play can be used when you want to share documents, images, music, and so on.

You can use Group Play for meetings, sales presentations, conferences, and classes. All you need is a Wi-Fi network that works with Group Play, and most do.

Note: The Group Play app must be installed before you can use it. Touch **OK** on the pop-up and follow the on-screen instructions.

Using Group Play from an Application

While using various applications, such as  **Gallery**, when you touch  **Share** to share a file, you see Group Play as an option.

To share a file using Group Play:

1. Touch  **Gallery**.

2. Navigate to the file you want to share and touch

 **Share via** →  **Group Play**.

For more information, refer to “*Gallery*” on page 74.

Note: After the initial Group Play request, touch

 **Group Play** instead of  **Share**.

3. Use the keyboard to enter a PIN code and touch **Done**.

This process makes sure only desired recipients can view your shared image.

The Group Play screen displays and the device waits for other connected recipients to accept the connection and enter the PIN on their screens.

You can now interact and draw with the on-screen image, and users will instantaneously see the same gestures and also be able to interact.

Note: The newly altered image (with markups and comments) cannot be saved, but you can take a screen shot of the current image and save it to your Clipboard.

Using Group Play Directly

You can also access Group Play from the Applications screen.

1. Touch  **Samsung** folder →  **Group Play**.

The Disclaimer screen displays the first time you access Group Play.

2. Read the Group Play Terms and Conditions and touch **Agree**.

The Group Play screen displays.

3. Touch **Join group** to join a Group Play session in progress.

– or –

Touch **Create group** to create a new group.

4. Touch  **Menu** → **Help** for more Group Play information.

DRAFT For Internal Use Only

Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls.

- Touch  **Google folder** →  **Hangouts**.

Help

Access help information to learn how to use the device and applications or configure important settings.

- Touch  **Help**.

Internet

Your device includes a full HTML Browser, to access the internet.

- Touch  **Internet**.

KNOX

Use this application to secure the data on your device.

- Touch  **Samsung folder** →  **KNOX**.

Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Note: You must enable location services to use Maps. For more information, refer to “*Location Services*” on page 118.

- Touch  **Maps**.

Messenger

With Google Messenger, you can bring groups of friends together into a simple group conversation.

- Touch  **Google folder** →  **Messenger**.

For more information, refer to “*Messenger*” on page 58.

Music

Play music and other audio files that you copy from your computer.

- Touch  **Music**.

For more information, refer to “*Music Player*” on page 74.

DRAFT For Internal Use Only

My Files

Use this application to access all kinds of files stored in the device, including images, videos, songs, and sound clips.

- Touch  **Samsung** folder →  **My Files**.

NYTimes

NYTimes allows you to read the latest web edition of *The New York Times* newspaper.

1. Touch  **NYTimes**.

The Latest News screen is displayed.

2. Touch on an article title to read it.
3. Touch  **Menu** for options, settings, and help.

Play Books

Use this application to read and download book files.

- Touch  **Google** folder →  **Play Books**.

Play Games

Use this application to download and play games.

- Touch  **Google** folder →  **Play Games**.

Play Magazines

Google Play Magazines helps you subscribe to your favorite magazines so you can have them available to read on your tablet at your leisure.

Play Magazines requires that you log on to your Google account. For more information, refer to “Accounts” on page 136.

- Touch  **Google** folder →  **Play Magazines**.

Play Movies & TV

Use this application to watch, download, and rent movies or TV shows.

- Touch  **Google** folder →  **Play Movies & TV**.

Play Music

Use this application to listen to music from the device or stream music from the Google cloud service.

- Touch  **Google** folder →  **Play Music**.

For more information, refer to “Play Music” on page 74.

Play Store

Google Play Store provides access to downloadable applications and games to install on your device. It also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your device.

1. Touch  **Play Store**.
2. The first time you open Play Store, read the Google Play Terms of Service, the Google Music Terms of Service, the Google Books Terms of Service, and the YouTube Rentals Terms of Service, then touch **Accept** to continue.
3.  **Menu** → **Help**.

Installing Applications

Use this application to purchase and download applications and games that are able to run on the device.

1. Touch  **Play Store**.
2. Browse applications by category or touch  **Search** to search with a keyword.

3. Select an application to view information. To download it, touch **INSTALL**. If there is a charge for the application, touch the price, and follow on-screen instructions to complete the purchase process.

Note: When a new version is available for any installed application, an update icon appears at the top of the screen to alert you to the update. Open the notifications panel and touch the icon to update the application.

Note: To install applications that you downloaded from other sources, on a Home screen, touch  **Apps** →  **Settings** → **General** tab → **Security** → **Unknown sources**.

Uninstalling Applications

To uninstall applications purchased from Play Store:

- Touch  **Play Store** and then touch  **My apps**, select an application to delete in the list of installed applications, and then touch **UNINSTALL**.

Updates to Downloaded Apps

You can check for new versions of applications by visiting the Google Play Store. Items that have a new version available will say **Update**.

You can also select apps that you would like to be updated automatically. To do this:

1. Touch  **Play Store** and then touch  **My apps**.
2. Touch the **INSTALLED** tab to list the Play Store apps installed on your device.
UPDATE is displayed if there is an update available for the app.
3. Touch an app and then touch  **Menu** → **Settings** → **Auto-update apps** to enable or disable automatic updating.

4. Touch **OPEN** to open the app on your device.
5. Touch **UPDATE** to immediately update the app on your device.

Polaris Office 5

Polaris Office Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

The application can also open Adobe PDF (Portable Document Format) files.

1. Touch  **Polaris Office 5**.
2. Enter your Email information, if desired, and touch **Register** to complete the process.
– or –
Touch **Later** to ignore this registration.
The main Polaris Office screen displays.
3. To get help for using Polaris Office, touch  **Menu** → **Help** → **User Guide**.

DRAFT For Internal Use Only

S Finder

Use this application to search a wide variety of items on the device, including email, documents, images, music, applications, and more.

1. Touch and hold  **Menu** to launch **S Finder**.
2. Touch the search field, and then enter search criteria.
Alternatively, touch , and then speak a keyword.
You can also use this feature to search the handwritten content in the device.

S Note

Use this application to create a note using multimedia files or voice recordings.

- Touch  **S Note**.

Creating Notes

 
When running S Note for the first time:

1. Touch **Start** to set the default covers and a template.
2. Follow the on-screen instruction to complete the setup.

Composing Notes

Create notes with enriched content by drawing sketches with your finger or S Pen, or by adding multimedia files or voice memos.

- Touch  to write or draw on the screen, or touch  to enter text with the keyboard.

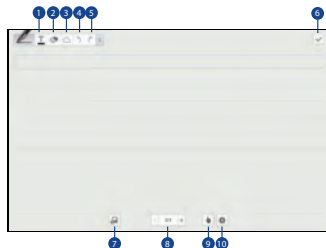

1. Enter a note.
2. Erase the note.
3. Select the note.
4. Undo the last action.
5. Redo the last action.
6. Save the note.
7. Insert a multimedia file.
8. Append another page to the current note.
9. Switch to S Pen mode or finger mode.
10. Change page options.

When using the templates that have image frames:

- Touch and hold an image frame, and then touch **Take picture** or **Images** to add an image.

To delete a frame:

- Touch and hold the frame, and then touch **Delete**.

When jotting down a note:

- Touch  once more to change the pen type, line thickness, or pen color.



1. Save the current setting as a pen profile.
2. Change the pen type.
3. Change the line thickness.
4. Change the pen color.
5. Add a new color based on the color picker.

When erasing the handwritten note:

- Touch , and then touch  to change the eraser size or touch **Clear all** to clear the note

To zoom in or out:

- On the screen, spread two fingers apart or pinch them.

To set page options, touch  **Page options**. The following options display:

- **Add page:** Add a new page.
- **Delete page:** To delete the page.
- **Add tag:** To add a tag to the page.
- **Index page:** To add an index to the page.
- **Add template:** To change the page template.
- **Background:** To change the background of the page.
- **Show Grid:** To display a grid on the page.

Inserting Multimedia Files

- Touch  to insert images, videos, voice memos, and more.

Making a Table

1. Touch  → **Easy chart** → **Table**, set the number of rows and columns for the table, and then touch **Done**.
2. To enter data in the table, touch a table cell.
3. To add or delete columns, touch  **Menu** → **Add dataset** or **Delete dataset**.
4. To add or delete rows, touch  **Menu** → **Add item** or **Delete item**.

Making a Chart

- To make a chart, touch  → **Easy chart**, and then select a chart type. Then, draw bars, lines, or dividers on the chart.
- To make a chart from the data in the table, touch and hold the table, touch **Edit chart** → , and then select a chart.

Editing a Chart

- To edit a chart, touch the chart or table → **Edit chart**, and then use the following options:
 - Touch  at the top left of the screen to change the chart type.
 - Touch an item, and touch , and then write values, to correct with your finger or the S Pen.

Note: The available options may vary depending on the chart type.

Using Idea Sketch

- Touch  → **Idea Sketch**, and then write a keyword or select category to search for images.
- To add your own sketches to the list, touch  **Create**, and then draw an image in the sketch panel.

DRAFT For Internal Use Only

Viewing Note Pages

When viewing pages, touch  **Menu** to use the following options:

- **Delete:** Delete the page.
- **Share via:** Send the page to others.
- **Export:** Save the page as an image file or a PDF file.
- **Edit pages:** Add or delete pages.
- **Add tag:** Add a tag to the page.
- **Index page:** Add an index to the page.
- **Add shortcut to home:** Add a shortcut to the page on the Home screen.
- **Print:** Print the page via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
- **Save as:** Save the page with a different name.
- **Set as:** Set the note as wallpaper or assign it to a contact.

Viewing Pages Preview

1. Drag down a note to preview the pages above the note.
2. Touch  on the note cover to access the following options:
 - **Delete:** Delete the note.
 - **Share via:** Share the note with others.
 - **Export:** Export the note as an image file or a PDF file.
 - **Rename:** Rename the note.
 - **Edit cover:** Change the note cover.
 - **Add to Favorites:** Add the note to the favorites list.
 - **Lock:** Lock the note so that others cannot view it.
 - **Add shortcut to home:** Add a shortcut to the note on the Home screen.

DRAFT For Internal Use Only

Searching for Notes

Use this feature to search for a note by entering search criteria, such as names, tags, text, or handwritten words.

- Touch  **Search**, touch the Search field at the top of the screen, and use the on-screen keyboard to enter search criteria.

S Translator

Use this application to translate text into other languages.

Note: The S Translator app must be installed before you can use it. Touch **OK** on the pop-up and follow the on-screen instructions.

- Touch  **Samsung** folder →  **S Translator**.

Using S Translator

- Set the source and target languages, enter text in the input field, and then touch  **Translate**.
- To add a language pair to your favorites list, touch **Add to favorites**.
- To send a language pair to others, touch **Share via**.

Starting a Conversation with the Translator

- Touch the buttons at the bottom of the screen to communicate with another person via spoken translation.
- Touch **Speak** for your language, and then speak into the microphone. The device will translate what you say. Touch  in the target language field to let the device read the translation out loud.
- Then, touch **Speak** for the language of the person you are talking with and let the person reply in their language. The device will translate what they say. Touch  in the source language field to let the device read it back to you.

DRAFT For Internal Use Only

S Voice

Use this application to command the device by voice to dial a number, send a message, write a memo, and more.

- Touch  **Samsung** folder →  **S Voice**.
– or –

Press the **Home** button twice.

Here are several examples of spoken commands:

- Open music
- Launch calculator
- Check schedule

Tips for better voice recognition:

- Speak clearly.
- Speak in quiet places.
- Do not use offensive or slang words.
- Avoid speaking in dialectal accents.

The device may not recognise your commands or may perform unwanted commands depending on your surroundings or how you speak.

Using Wake-Up Commands on the Locked Screen

On the locked screen, you can use various functions with preset wake-up commands.

To activate this feature:

1. From a Home screen, touch  **Apps** →  **Settings** → **Device** tab → **Lock screen**.
2. Touch the **OFF/ON** button to turn **Wake up in lock screen** ON .

To set a function and wake-up command:

1. From a Home screen, touch  **Apps** →  **Settings** → **Device** tab → **Lock screen**.
2. Touch **Wake up in lock screen**.
3. Select a number and function, and then touch  to set the wake-up command.

DRAFT For Internal Use Only

Samsung Apps

Use this application to purchase and download dedicated Samsung applications. For more information, visit:

samsungapps.com Touch

- Touch  **Samsung Apps**.

Note: This application may not be available depending on the region or service provider.

Installing Applications

1. Browse applications by category. Touch **CATEGORY** to select a category.
2. To search for an application, touch  **Search** at the top of the screen, and then enter a keyword in the search field.
3. Select an application to view information. To download it, touch **Free** or the price.

Samsung Hub

Use this application to purchase and download multimedia content. You can also manage the content on the device.

- Touch  **Samsung Hub**.

Purchasing Multimedia Content

Select a service category, select media content, and then complete the purchase process.

Managing Content on the Device

Select a service category, scroll left, and then manage content on the device.

Samsung Link

Use this application to share and play content across smart devices anywhere, anytime.

- Touch  **Samsung folder** →  **Samsung Link**.

DRAFT For Internal Use Only

Scrapbook

Use this application to create your own digital scrapbook with content from webpages, videos and more.

- Touch  **Scrapbook**.

Creating Categories

- Touch  **Categories** → **Create category**, select a layout from the list, enter a name, and then touch **OK**.

Collecting Items

- While viewing webpages, or videos, with the S Pen button pressed, draw a line around an area to select it. Touch **Scrapbook** from the list of applications that appears at the bottom of the screen, and then select a category to add the selected area.
- Alternatively, press the S Pen button while hovering over the screen, touch **Scrap booker** on the general air commands, draw a line around an area, and then touch .

Viewing Items

- Select a category, and then select an item. While viewing an item, touch **Link** to go to the source it was collected from.

Screen Saver

When your tablet screen automatically times out, instead of a blank screen, enable the Galaxy Note Screen Saver, which is actually an action-packed video tour of all the fantastic features that you will find on your Galaxy Tab.

1. Touch  **Screen Saver**.

The Galaxy Note 10.1 Screen Saver Settings screen displays.

2. Follow the on-screen instructions to set up Screen Saver.

Tip: Touch  **Back** to stop the Screen Saver video even if Enable Touch To Stop is enabled.

DRAFT For Internal Use Only

Settings

Configure your device to your preferences.

- Touch  **Settings**.

 
For more information, refer to “*Settings*” on page 116.

SketchBook for Galaxy

Use this application to create a quick concept or sketch out your idea for a project.

Note: The SketchBook app must be installed before you can use it. Touch OK on the pop-up and follow the on-screen instructions.

1. From a Home screen, touch  **Apps** →  **Galaxy Plus** folder →  **SketchBook for Galaxy**.
2. Use artistic tools to draw and paint your digital art. The image is saved in Gallery.

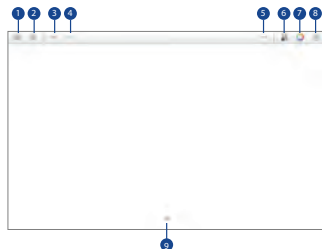

1. Create and save a sketchbook.
2. Display SketchBook information and settings.
3. Undo the last action.
4. Redo the last action.
5. Use SketchBook tools.
6. Change the brush types and settings.
7. Change a brush color.
8. Add or delete layers.
9. Register the frequently-used tools.

DRAFT For Internal Use Only

Story Album

Use Story Album to create a digital album of your story in media.

- Touch  **Samsung** folder →  **Story Album**.

For more information, refer to “*Story Album*” on page 82.

TripAdvisor

Use this application to get travel information such as destination or hotel. You can also book for a room and share your reviews with others.

- Touch  **Galaxy Plus** folder →  **TripAdvisor**.

Twitter

Get real-time stories, pictures, videos, conversations, ideas, and inspiration all in your timeline. Follow people and your interests to get unfiltered access and unique behind-the-scenes perspectives. Express yourself with photos, videos and comments.

- Touch  **Twitter**.

Video

Use this application to play video files.

- Touch  **Video**.

For more information, refer to “*Video*” on page 80.

Video Editor

Use this application to edit your videos.

- Touch  **Samsung** folder →  **Video Editor**.

Voice Search

Use this application to search webpages by speaking.

1. Touch  **Google** folder →  **Voice Search**.
2. Speak a keyword or phrase when **Speak now** appears on the screen.

WatchON

Enjoy all of your favorite movies and TV shows with WatchON.

- Before beginning your initial WatchON application setup, make sure that your TV is turned off.
- Sign into your Samsung account before using WatchON. For more information, refer to “*Your Samsung Account*” on page 47.

DRAFT For Internal Use Only

Initial Configuration

1. From a Home screen, touch  **Apps** →  **WatchON**.
The Privacy policy displays.
2. Read the Privacy policy, check the **I have read and accept the terms of the above privacy policy** box, and touch **Confirm**.
The Set up WatchON screen displays.
3. Touch **Set up WatchON**.
4. Follow the on-screen instructions.

WatchON Menu

1. From a Home screen, touch  **Apps** →  **WatchON**.
2. Touch  **Menu** for the following options.
 - **Sign in:** Sign in to your Samsung account to improve your WatchON experience.
 - **Settings:** Configure Samsung WatchON settings. Follow the on-screen instructions.
 - **Help:** Displays Samsung WatchON help information and a Contact us telephone number.

World Clock

Use this application to check the time of many major cities in the world.

- Touch  **Samsung folder** →  **World Clock**.

Creating Clocks

- Touch , **Add city** and then enter a city name or select a city from the cities list or globe, and then touch  **Save**.
- To apply summer time, touch and hold a clock, and then touch **DST settings**.

Deleting Clocks

- Touch and hold the clock, and then touch  **Delete**.

YouTube

Use this application to watch videos from the YouTube website.

- Touch  **YouTube**.

For more information, refer to “YouTube” on page 82.

Section 9: Settings

About Settings

Use this application to configure the device, set application options, and add accounts.

To accessing Settings:

- From a Home screen, touch  **Apps** →  **Settings**.
– or –

From any screen, touch the top of the screen and swipe downward, to display the Quick Settings, and then touch  **Settings**. For more information, refer to “Notifications Panel” on page 36.

Settings Tabs

The Settings are divided into four main groups. When the Settings screen displays, the tabs are located at the top of the screen.

Connections

Control your device’s wireless connections.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Your device supports Wi-Fi 802.11 a/b/g/n/ac.

For more information about using your device’s Wi-Fi features, see “*Wi-Fi*” on page 83.

Wi-Fi Direct Settings

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection. for more information about using Wi-Fi Direct, see “*Wi-Fi Direct*” on page 86.

Bluetooth

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You do not need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them—even if they are in different rooms.

For more information about using Bluetooth, see “*Bluetooth*” on page 87.

Airplane Mode

Airplane mode allows you to use many of your tablet's features, such as Camera, Games, and more, when you are in an airplane or in any other area where accessing data is prohibited.

Important! When your tablet is in Airplane Mode, it cannot access online information or applications.

- Press and hold the **Power/Lock Key** then touch **Airplane mode**.

— or —

Touch the top of the screen and swipe downward, to display the Quick Settings, and then touch **Airplane mode**.

For more information, refer to “*Notifications*” on page 35.

— or —

Touch  **Settings** → **Connections** tab →

Airplane mode, touch the check box, and then touch **OK** to turn on Airplane mode.

Data Usage

View your Wi-Fi data usage.

1. From the **Settings** screen, touch **Connections** tab → **Data usage**.
2. Touch the **Data usage cycle** drop-down menu and select a date.

The data usage displays as a visual (chart) and also displays a list of each application with a breakdown of data usage by application.

Note: Data is measured by your device. Your service provider may account for data usage differently.

3. Touch  **Menu** for options:
 - **Auto sync data:** Automatically sync data. Disabling auto sync will reduce data usage and conserve battery power, but notifications and updates will need to be manually synchronized.
 - **Mobile hotspots:** Display all mobile hotspots near you.

DRAFT For Internal Use Only

Location Services

You value your privacy. So, by default, your device only acquires your location when you allow it. To use Location-Based Services, you must first enable location services on your device.

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Use wireless networks option or enable the GPS satellites.

1. From the **Settings** screen, touch **Connections** tab → **Location services**.
2. Touch **Access to my location** to allow apps that have asked your permission to use your location information.
3. Touch **Use GPS satellites** to enable the GPS satellite.
4. Touch **Use wireless networks** to enable location information using the wireless network.
5. Touch **My places** to save your favorite locations for use with services that require location information.

More Networks

This tab displays additional wireless and network information.

- From the **Settings** screen, touch **Connections** tab → **More networks**.
Options display for VPN.

VPN

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

DRAFT For Internal Use Only

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP, L2TP/IPSec PSK, L2TP/IPSec RSA, IPSec Xauth PSK, IPSec Xauth RSA, or IPSec Hybrid RSA.

Note: You must also set a screen unlock PIN or password before you can use credential storage. For more information, refer to “*Screen Security*” on page 124.

1. From the **Settings** screen, touch **Connections** tab → **More networks** → **VPN**.
2. Touch  **Add**.
3. In the form that appears, fill in the information provided by your network administrator.
4. Touch **Save** to save your VPN settings.

Connecting To a VPN

1. From the **Settings** screen, touch **Connections** tab → **More networks** → **VPN**.
2. Touch the VPN to which you want to connect.
3. In the pop-up that opens, enter any requested credentials.
4. Touch **Connect**.

Edit or Delete a VPN

1. From the **Settings** screen, touch **Connections** tab → **More networks** → **VPN**.
2. Touch and hold the VPN that you want to edit or delete.
3. In the pop-up that opens, touch:
 - **Edit network**, make the desired VPN setting changes, and touch **Save**.
 - or –
 - **Delete network** to delete the VPN.

DRAFT For Internal Use Only

Nearby Devices

This option allows you to share your media files with nearby DLNA (Digital Living Network Alliance) enabled devices.

Warning! If file sharing is enabled, other devices can access your data. Use the Wi-Fi network and this option with care.

To configure this option:

1. From the **Settings** screen, touch **Connections** tab → **Nearby devices**.
2. Touch the **OFF/ON** button to turn Nearby devices ON .
The device name displays under Device name. The default is the model number: SM-P600.
3. In the Advanced section, set the following options:
 - **Shared contents:** Select the content to share. Choices are: Videos, Photos, and Music.
 - **Allowed devices list:** Indicate the devices accessible to your device.
 - **Not-allowed devices list:** Indicate the devices not accessible to your device.

- **Download to:** Set whether to download data to Device or SD card.
- **Upload from other devices:** If a nearby device attempts to upload data, this setting indicates the response. Options are: Always accept, Always ask, and Always reject.

Screen Mirroring

To share your device's screen with another device, enable Screen Mirroring.

1. From the **Settings** screen, touch **Connections** tab → **Screen Mirroring**.
The Screen Mirroring screen displays.
The **OFF/ON** button is set to ON . Available devices are listed.
2. Touch **Scan** to find more devices.
3. Touch  **Menu** → **Help** to for more information.

DRAFT For Internal Use Only

Device

This section of the Settings screen contains settings for your device.

Sound

Volume

Set the volume level for all types of sounds.

1. From the **Settings** screen, touch **Device** tab → **Sound** → **Volume**.
2. Touch and drag the sliders to set the volume for:
 - **Music, video, games, and other media:** Sounds made by music apps, video apps, and more.
 - **Notifications:** Sounds for alerts to new messages and other events.
 - **System:** Application sounds and other sounds made by your device.

Tip: You can also set System volume from a Home screen by pressing the Volume Key.

3. Touch **OK** to save your settings.

Vibration Intensity

Select how intense the vibration is for different options.

1. From the **Settings** screen, touch **Device** tab → **Sound** → **Vibration intensity**.
2. Touch and drag the sliders to adjust the vibration intensity for Notification and Haptic feedback.
3. Touch **OK** to save the setting.

Notifications

Select a default ringtone for message, alarm, and other notifications.

1. From the **Settings** screen, touch **Device** tab → **Sound** → **Default notification sound**.
2. Touch a ringtone to hear a sample and select it.
3. Touch **OK** to save the setting.

System

You can activate or deactivate both touch and screen lock sounds.

1. From the **Settings** screen, touch **Device** tab → **Sound**.

2. Touch the check box next to any of the following options to activate the feature:
 - **Touch sounds:** Makes a sound when you touch the screen.
 - **Screen lock sound:** Makes a sound when your screen is locked or unlocked.
 - **Haptic feedback:** Vibrate when soft keys are tapped and for certain software actions.
 - **Pen attach/detach sound:** Set the sound that is made when the pen is attached or detached from your tablet.

Samsung Keyboard

Set the keyboard sounds.

1. From the **Settings** screen, touch **Device** tab → **Sound**.
2. Touch the check box next to either of the following options to activate the feature:
 - **Key-tap sound:** Enables auditory feedback when you touch an on-screen key.
 - **Key-tap vibration:** Enables the device to vibrate when you touch an on-screen key.

HDMI

To set the HDMI (High-Definition Multimedia Interface) audio setting:

1. From the **Settings** screen, touch **Device** tab → **Sound**.
2. Touch **Audio output**.
3. Touch **Stereo** or **Surround** to set the audio output setting.

More Settings

To find the best sound for you and use this while you play music:

1. From the **Settings** screen, touch **Device** tab → **Sound**.
2. Touch **Adapt Sound**.
3. Read the on-screen instructions.
4. Touch **Start** when you are ready to begin.

DRAFT For Internal Use Only

Display

Use the Display settings to configure the way your device's screen operates.

- From the **Settings** screen, touch **Device** tab → **Display**.

The following options are available:

- **Brightness**: Touch and drag the slider to set the brightness or touch **Automatic brightness**. Touch **OK** to save the setting.
- **Screen timeout**: Set the length of delay between the last key press or screen touch and the automatic screen timeout (dim and lock).
- **Touch key light duration**: Set the duration for the touch button backlight.
- **Screen mode**: Select a screen mode from the following:
 - **Adapt display**: Use this mode for optimizing the display according to the display settings.
 - **Dynamic**: Use this mode to make the display tone more vivid.
 - **Standard**: Use this mode for normal surroundings.
 - **Movie**: Use this mode for dim surroundings, such as in a dark room.

- **Reading mode**: Use Reading mode to optimize the screen for reading from selected applications. Touch the **OFF/ON** button to turn Reading mode ON .
- **Daydream**: Set the device to launch a screensaver when your device is connected to a desktop dock or charging. Touch the **OFF/ON** button to turn Daydream ON .
- **Show battery percentage**: Set the device to display the remaining battery life.
- **Edit after screen capture**: Set the device to edit a screenshot after capturing it.

Multi Window

Set the device to use Multi Window.

1. From the **Settings** screen, touch **Device** tab → **Multi window**.
2. Touch the **OFF/ON** button to turn Multi window ON .
3. Touch **Open in multi window view** to automatically view content in a multi window when you open files from My Files or Video, or attachments from email and messages.

For more information, refer to “*Activating Multi Window*” on page 33.

Lock Screen

Screen Security

Choose settings for unlocking your screen. For more information about using the lock and unlock features, see “*Securing Your Device*” on page 14.

1. From the **Settings** screen, touch **Device** tab → **Lock screen**.
2. Touch **Screen lock** for these settings:
 - **Swipe**: Swipe the screen to unlock it.
 - **Pattern**: A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
 - **PIN**: Select a PIN to use for unlocking the screen.
 - **Password**: Create a password for unlocking the screen.
 - **None**: No pattern, PIN, or password is required.

Note: Additional options are available based on the **Screen lock** setting.

Swipe Options

The options available when Screen lock is set to Swipe are:

- **Multiple widgets**: Display multiple widgets on your lock screen. Appears as an options after a lock mode is enabled.
- **Clock widget options**: Set the size of the Clock widget that is displayed on your home screens, and whether to show the date.
- **Shortcuts**: Set shortcuts to appear at the bottom of the Lock screen. Touch the **OFF/ON** button to turn it ON .
- **Personal message**: Edit the personal message and touch the **OFF/ON** button to turn it ON .
- **Owner Information**: Enable or disable whether to show owner information on the lock screen.
 - Touch **Owner information** and then touch **Show owner info on lock screen** to enable or disable the option.
 - Touch the text field and use the keyboard to enter the text to display on the lock screen.
- **Unlock effect**: Set the effect you receive when unlocking the phone. You can select None, Watercolor, or Ripple.

- **Ink effect:** This setting defaults to Blue.
- **Wake up in lock screen:** Unlock the screen using wake-up command when swipe or motion lock is enabled.
- **Action Memo on lock screen:** Set the device to launch action memo when you double-tap the locked screen with the S Pen button pressed.
- **Help text:** Show help information on the Lock screen.

Additional Pattern, PIN, and Password Options

These additional options are available when Screen lock is set to Pattern, PIN, or Password:

- **Make pattern visible:** See the pattern as you draw it.
- **Lock automatically:** Set how quickly to lock the screen after the screen automatically turns off.
- **Lock instantly with power key:** Use this option to enable the lock screen when the power key is pressed. If this option is not enabled, the screen dims or brightens when the power key is pressed.

Wallpaper

You can choose a picture to display on the Home Screen, Lock screen, or to both the Home and lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From the **Settings** screen, touch **Device** tab → **Wallpaper**.
2. Touch **Home screen**, **Lock screen**, or **Home and lock screens**.

The Select wallpaper from screen displays the following options: **Gallery**, **Live wallpapers**, and **Wallpapers**.

For more information, refer to “*Wallpapers*” on page 41.

DRAFT For Internal Use Only

Font

Set the font for screen displays and the size you want it to display.

1. From the **Settings** screen, touch **Device** tab → **Font**.
2. Touch **Font style** then touch a font or touch **Get fonts online** to browse and download a new font.
3. Touch **Font size** and select a font size.

Notification Panel

Customize the Notification panel.

1. Touch  **Settings** → **Device** tab → **Notification panel**.
2. Touch **Brightness adjustment** to adjust the screen brightness from the Notification panel.
3. To customize which quick setting buttons appear at the top of the notifications panel, touch and drag buttons to reorder them.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Google Play and manage their use here.

- From the **Settings** screen, touch **Device** tab → **Accessibility**.

Configure the following settings:

- **Auto-rotate screen:** When this option is checked, the screen orientation changes when you rotate the device. When this option is not checked, the screen orientation locks in the current orientation (landscape or portrait) and the orientation does not change when you rotate the device.

Tip: From any screen, touch the top of the screen and swipe downward, to display the Quick Settings screen. Touch **Screen rotation** to enable or disable the auto-rotate feature. For more information, refer to “*Notifications Panel*” on page 36.

DRAFT For Internal Use Only

- **Screen timeout:** Select the screen delay time the screen delays shutting off after inactivity for the selected period of time.
- **Lock Automatically:** This option only appears depending on the Screen lock setting. For more information, refer to “*Screen Security*” on page 124.
- **Speak passwords:** Speaks passwords to enter them.
- **Easy touch mode:** Enable this option to stop or snooze alarms, calendar events, and timer alerts, and to accept or reject incoming calls.
- **Show shortcut:** Set this option to display an Accessibility shortcut on the Device options pop-up when you press and hold the power key.
- **Manage accessibility:** Save and update your accessibility settings or share them with another device. You can export your settings, import a previously saved file, or share your file with another device.

Services

- **TalkBack:** Activate the TalkBack feature.

Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users.

Important! TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

Vision

- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Negative colors:** Reverse the display of on-screen colors from White text on a Black background to Black text on a White background.

DRAFT For Internal Use Only

- **Color adjustment:** Adjust the display colors, if you are color blind and have difficulty reading the display because of the colors. Touch **OFF/ON** button to turn it ON . Follow the on-screen instructions.
- **Notification reminder:** Play a beep when a notification for a call, message, and so on, has been missed. Touch **OFF/ON** button to turn it ON .
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Touch **OFF/ON** button to turn it ON . Follow the on-screen instructions.
- **Text-to-speech options:** To set voice output settings, touch **Text-to-speech options** and select the preferred TTS engine. For more information, refer to *“Speech”* on page 132. Touch **Speech rate** to set the speed at which the text is spoken. Touch **Listen to an example** to play a short speech demonstration.

Hearing

- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono Audio:** When Mono audio is enabled, you can listen through one earphone to mono audio sound.
- **Turn off all sounds:** Turn off all sounds including receiver voice.
- **Flash notification:** Set your camera light to blink whenever you receive a notification.

Mobility

- **Assistant menu:** Improve the device accessibility for users with reduced dexterity. Touch **OFF/ON** button to turn it ON . Follow the on-screen instructions.
- **Press and hold delay:** Select a time interval for this action.

Recognition

- **Interaction control:** Enable or disable motions and screen timeout. You can also block areas of the screen from touch interaction. Touch **OFF/ON** button to turn it ON . Follow the on-screen instructions.

DRAFT For Internal Use Only

Blocking Mode

When enabled, notifications for selected features are disabled.

1. From the **Settings** screen, touch **Device** tab → **Blocking mode**.
2. Touch the **OFF/ON** button to turn Blocking mode ON .
3. Touch **Turn off notifications** to enable this feature.
4. The **Set time** option allows you to set Blocking mode for a specific time range or **Always**.
Touch the **Always** field to disable it and configure the **From** and **To** time fields.

Note: When this option is enabled,  displays in the Status Bar.

Controls

Use these settings to configure Language and input, Voice control, S Pen, Motions, Palm motion, and Smart screen.

Language and Input

Language

Set the language used by your device.

1. From the **Settings** screen, touch **Controls** tab → **Language and input** → **Language**.
2. Touch a language / locale from the list.

Keyboards and Input Methods

Set the keyboard used by your device.

1. From the **Settings** screen, touch **Controls** tab → **Language and input**.
2. Touch **Default** and select a keyboard.
Samsung keyboard is the only selection available for this device.
3. Touch **Set up input methods**.

DRAFT For Internal Use Only

Configuring the Samsung Keyboard

To configure the Samsung keyboard:

- Touch  next to Samsung keyboard to display the following options:
 - **Select input languages:** Used to set a default text entry language. Touch this field, scroll through the options, and touch the desired input language. When activated, a check appears in the box.
 - **Predictive text:** Enable or disable XT9 predictive text. When enabled the system suggests words matching your text entries, and, optionally, completes common words automatically. When XT9 is enabled, touch the **Predictive text** field to set the following options:
 - **Live word update:** Automatically update with popular new words every day.
 - **Personalized data:** Enter personalized data to improve prediction results.
 - **Learn from Facebook:** Log in to let your device learn your Facebook style.

- **Learn from Gmail:** Log in to let your device learn your Gmail style.
- **Learn from Twitter:** Log in to let your device learn your Twitter style.
- **Learn from Contacts:** Allow your device to learn your Contacts style.
- **Clear remote data:** Delete your anonymous data stored on the personalization server.
- **Clear personal data:** Remove all personalized data entered.
- **Auto replacement:** Complete or replace the word you are typing with the most probable word when you touch the space bar or a punctuation mark.
- **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
- **Auto spacing:** automatically inserts spaces between words.
- **Auto punctuate** automatically inserts a full stop in a sentence by touching the space bar twice when using the on-screen QWERTY keyboard.

DRAFT For Internal Use Only

- **Keyboard swipe:** Select one of the following:
 - **None:** Enable or disable the keyboard swipe feature.
 - **SwiftKey Flow:** Enable or disable the SwiftKey Flow feature.
When enabled, you can enter text by sliding your finger across the keyboard.
 - **Cursor control:** Enable or disable the smart keyboard navigation feature to move the cursor by scrolling the keyboard.
- **Key-tap feedback:** Select one or more of the following:
 - **Sound:** Enable or disable auditory feedback when you touch an on-screen key.
 - **Vibration:** Enable or disable vibration when you touch an on-screen key.
 - **Character preview:** Provide an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
- **Pen detection:** Set the device to open the handwriting panel when the field is tapped with the S Pen.
- **Help:** Access help information for using the Samsung keyboard.
- **Reset settings:** Reset Samsung keyboard settings.

Google Voice Typing

1. Touch **Google voice typing** to automatically use Google voice typing.
2. Touch  next to Google voice typing.

The following options are available:

- **Choose input languages:** Touch **Automatic** to use the local language or select a language from the list.
- **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.

When enabled, a check mark  appears in the check box.

- **Download offline speech recognition:** Enable voice input while offline. Touch the **All** tab to download speech recognition for other languages.

Handwriting Recognition

- Touch **Language** to select a language for handwriting search.

DRAFT For Internal Use Only

Speech

Set the speech settings for Voice search.

1. From the **Settings** screen, touch **Controls** tab → **Language and input**.
2. Touch **Voice search** to configure:
 - **Language:** Choose a language for your voice input.
 - **Speech output:** Always provides audible readout of text, or only when using Hands-free functions.
 - **Block offensive words:** Enable or disable blocking of recognized offensive words from the results of your voice-input Google searches.
 - **Hotword detection:** When enabled, saying the word Google launches voice search.
 - **Download offline speech recognition:** Enable voice input while offline. Touch the **All** tab to download speech recognition for other languages.
 - **Bluetooth headset:** Record audio through a Bluetooth headset, if available.

Voice output provides audible readout of text, for example, the contents of email messages.

1. From the **Settings** screen, touch **Controls** tab → **Language and input**.
2. Touch **Text-to-speech options** and select the preferred TTS engine.
3. Touch  next to the preferred TTS engine and configure.
4. Under General, configure the following:
 - **Speech rate:** Set the speed at which the text is spoken.
 - **Listen to an example:** Play a sample of speech synthesis (available if voice data is installed).

Mouse/trackpad

This option sets your Pointer speed.

1. From the **Settings** screen, touch **Controls** tab → **Language and input**.
2. Touch **Pointer speed** then drag the slider to the right to go faster or to the left to go slower.
3. Touch **OK** to save your setting.

Voice Control

Set the device to recognize voice commands for controlling your device. You can select the features to control with voice commands.

1. From the **Settings** screen, touch **Controls** tab → **Voice Control**.
2. Touch the **OFF/ON** button to turn Voice Control ON .
3. Touch the items you want to control. Choose from Alarm, Camera, and Music.

S Pen

Change the settings for using the S Pen.

- From the **Settings** screen, touch **Controls** tab → **S Pen**. The following options display:
 - **Turn off pen detection:** Set the screen not to respond when inserting or removing the S Pen.
 - **Pointer:** Show the pointer when you hover the S Pen over the screen. Touch the **OFF/ON** button to turn this option ON .

- **Direct pen input:** Launch handwriting pad when hovering the S Pen over a text input field. Touch the **OFF/ON** button to turn this option ON .
- **Air view:** Show the S Pen pointer when the S Pen is hovering over the screen. Touch the **OFF/ON** button to turn this option ON . Touch Air view to select what will be shown when you hover your pen over an item on the screen: Information preview, Progress preview, Icon labels, and List scrolling.
- **Air command:** While hovering over an item with the S Pen, press the pen button to display a list of options for the item or general air commands. Touch the **OFF/ON** button to turn this option ON .
- **Sound and haptic feedback:** Set the device to make a sound and vibrate when pointing at items with the S Pen.
- **Pen detachment options:** Launch action memo or air command when the S Pen is pulled out of the slot.
- **Pen attach/detach sound:** Emit a sound when the S Pen is inserted into, or pulled out of, the slot.

Motions

Activate the motion recognition feature and change the settings that control motion recognition on your device.

- From the **Settings** screen, touch **Controls** tab → **Motions**.

Touch the **OFF/ON** button to turn each of the following options ON .

- **Zoom:** Zoom in or out while viewing images in Gallery or browsing webpages, when you tap and hold two points with your fingers and then tilt the device back and forth.
- **Move an icon:** Set the device to make a sound and vibrate when pointing at items with your finger.
- **Browse an image:** Set the device to scroll through an image by moving the device in any direction when the image is zoomed in.

Palm Motion

Activate the palm motion feature to control the device by touching the screen.

- From the **Settings** screen, touch **Controls** tab → **Palm motion**.

Touch the **OFF/ON** button to turn each of the following options ON .

- **Capture screen:** Set the device to capture an image of the screen when you sweep your hand to the left or right across the screen.
- **Mute/Pause:** Set the device to pause media playback when you touch the screen with your palm.

DRAFT For Internal Use Only

Smart Screen

To set Smart screen options:

- From the **Settings** screen, touch **Controls** tab → **Smart screen**.

The following options display:

- **Smart stay**: Prevent the display backlight from turning off while you are looking at the display.
- **Smart rotation**: Set the interface not to rotate according to the orientation of your face.
- **Smart pause**: Pause video playback when you look away from the screen.

- **Smart scroll**: Touch the **OFF/ON** button to turn this option ON . The following options are available:
 - **Scroll by**: Select a method to scroll the screen up or down.
 - **Speed**: Adjust the speed for scrolling the screen.
 - **Visual Feedback display**: Display a signal icon when the device recognizes your action.

Note: This feature may not work properly in bright light, in dark conditions, or when the device is being moved or shaken.

DRAFT For Internal Use Only

General

This tab provides the ability to create and modify your accounts. It also provides access to settings for Cloud accounts, the backup and reset features, date and time, Accessory, Application manager, Battery, Power saving mode, Storage, Security, Developer options, and About device.

Accounts

Set up and manage accounts, including your Google accounts, Samsung accounts, and email accounts.

Your device provides the ability to synchronize information from a variety of accounts, including Email, Facebook, Google, and your Samsung account. Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

With synchronization, you can ensure that the information on your device is updated with any information that changes in your accounts.

Managing Accounts

To view the accounts you have added:

1. From the **Settings** screen, touch **General** tab → *(account)*.

The *(account)* is either Google, Samsung account, or some other account you have added, such as Email.

Each of your accounts (Google, Samsung, and so on) are listed under Accounts.

2. Touch **Sync all** to synchronize all accounts listed. Touch **Cancel sync** to stop the synchronization.
3. Touch an account to view the sync settings for that account.
 - Touch **Sync now** to synchronize all data for the selected account.
— or —
Touch the account data to synchronize, such as, Calendar, Contacts, and so on.
 - To remove the account, touch **Remove account** and then touch **Remove account** at the prompt to remove the account and delete all its messages, contacts, and other data.

DRAFT For Internal Use Only

4. For Google accounts, touch one of the items listed under Privacy to view various settings for that item.
– or –

For Samsung accounts, touch **Account settings** to manage Samsung account settings or **Backup** to set Samsung account back up and restore options.

– or –

For Email accounts, touch **Settings** to manage various settings for that account.

Adding an Account

To add a new account:

1. From the **Settings** screen, touch **General tab** → **Add account**.
2. Touch one of the account types.
3. Follow the prompts to enter your credentials and set up the account.

Tip: For more information about the types of accounts that you can add, see “Accounts” on page 46.

Sign in to Your Samsung Account

Several applications and options require that you create and sign in to a Samsung Account.

To sign in to your Samsung account:

1. From the **Settings** screen, touch **General tab** → **Add account**.
2. Touch  **Samsung account**.
3. Touch **variety of services** to display information about Samsung services that are available.
4. If you have no Samsung account, touch **Create new account**.

– or –

If you do have a Samsung account, touch **Sign in**.

The Samsung account screen displays.

DRAFT For Internal Use Only

5. Use the keyboard to enter the required information and touch **Sign up** or **Sign in**.

Tip: The password is for your Samsung account, not the password you use for the email address you are entering. Plus, you can use only letters, numbers, !, @, \$, %, &, ^, and * for your Samsung account password.

6. If you are creating a new account, the Terms and Conditions screen displays. Read the Terms and conditions, Special terms, and Privacy policy and touch **I accept all the terms above**.

The Settings screen displays with Samsung account listed under Accounts.

Cloud

Back up your personal data using your Samsung Account or use Dropbox to sync your device content.

1. From the **Settings** screen, touch **General** tab → **Cloud**.
2. Under **Personal data management**:

If you have not signed in to your Samsung Account, touch **Add account**. For more information about Samsung accounts, see “*Sign in to Your Samsung Account*” on page 137.

If you have signed in to your Samsung Account:

- Touch your Samsung Account to manage your sync settings or remove your Samsung Account.
- Touch **Storage usage** to show the storage used and the remaining storage available.
- Touch **Sync settings** to sync your calendar, contacts, Internet, S Note, and Scrapbook settings with your Samsung Account.
- Touch **Backup** to manage your back up and restore options.
- Touch **Restore** to retrieve data from your Samsung account.

DRAFT For Internal Use Only

3. Under **Content sync (with Dropbox)**:

If you have not signed in to your Dropbox account, touch **Link Dropbox account**. For more information, refer to “Dropbox” on page 96.

Backup and Reset

You can also back up your data to the Google server and reset your device to its factory defaults.

Backup and Restore

To enable or disable backup of your information to the Google server.

1. From the **Settings** screen, touch **General tab** → **Backup and reset**.
2. Touch **Back up my data** to enable or disable back up of application data, Wi-Fi passwords, and other settings to the Google server.

Once the **Back up my data** option is enabled, then the **Backup account** and the **Automatic restore** options are available.

3. Touch **Backup account** and touch your Google Gmail account or touch **Add account** to set your Google Gmail account to be backed up to the Google server.
4. Touch **Automatic restore** to enable automatic restoration of settings from the Google server. When enabled, backed-up settings are restored when you reinstall an application.

Factory Data Reset

Use Factory data reset to return your device to its factory defaults. This setting erases all data from the device, including Google or other email account settings, system and application data and settings, and downloaded applications, as well as your music, photos, videos, and other files. If you reset the tablet in this way, the next time you turn on your tablet you are prompted to reenter the same kind of information as when you first started Android.

1. From the **Settings** screen, touch **General tab** → **Backup and reset**.
2. Touch **Factory data reset**.

The Factory data reset screen displays reset information.

3. Touch **Reset device**, then follow the prompts to perform the reset.

Date and Time

By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date & time settings.

1. From the **Settings** screen, touch **General tab** → **Date and time**.
2. Configure the following settings:
 - **Set date**: Enter the current date (only available when the Automatic setting is disabled).
 - **Set time**: Enter the current time (only available when the Automatic setting is disabled).
 - **Select time zone**: Choose your local time zone (only available when the Automatic setting is disabled).
 - **Use 24-hour format**: Set the format for time displays.
 - **Select date format**: Set the format for date displays.

Accessory

To change accessory settings:

- From the **Settings** screen, touch **General tab** → **Accessory**.
 - **Dock sound**: play a sound when your device is connected to or removed from a desktop dock.
 - **Audio output mode**: use the dock speaker when your device is connected to a desktop dock.
 - **Audio output**: Select a sound output format to use when connecting your device to HDMI devices. Some devices may not support the surround sound setting.
 - **Daynote**: show the quick note pad when the cover is flipped open.
 - **Unit**: Set unit options.

DRAFT For Internal Use Only

Application Manager

You can download and install applications from Google Play or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From the **Settings** screen, touch **General** tab → **Application manager**.
2. Touch **DOWNLOADED**, **SD CARD**, or **RUNNING** to display memory usage for that category of applications. The graph at the bottom of the **DOWNLOADED** tab shows used and free device memory. The graph at the bottom of the **RUNNING** tab shows used and free RAM.

Downloaded

Displays apps you have downloaded onto your device.

1. From the **Settings** screen, touch **General** tab → **Application manager**.
2. Touch **DOWNLOADED** to view a list of all the downloaded applications on your device.
3. To switch the order of the lists displayed in the **DOWNLOADED** tabs, touch  **Menu** → **Sort by size** or **Sort by name**.
4. To reset your application preferences, touch  **Menu** → **Reset app preferences**.
5. Touch an application to view and update information about the application, including memory usage, default settings, and permissions.

The following options are displayed:

- **Force stop:** Stops an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
- **Uninstall:** Deletes the application from the tablet.

For more information, refer to *“Installing Applications”* on page 103.

- **Move to SD card:** Move this app to your microSD card.
- **Clear data:** Clears application data from memory.
- **Clear cache:** If the app stores data in a temporary area of the device's memory, and the amount of information stored is displayed, touch this button to clearing the temporary storage.
- **Clear defaults:** If you have configured an app to launch certain file types by default, clear that setting.
- **Permissions:** Lists the kinds of information about your device and data to which the app has access.

Running Services

View and control services running on your device.

1. From the **Settings** screen, touch **General** tab → **Application manager**.
2. Touch the **RUNNING** tab.

All the applications that are currently running on the device display.

3. Touch **Show cached processes** to display all the cached processes that are running. Touch **Show services in use** to switch back.
4. Touch one of the applications to view application information.

The following options display:

- **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application.

Warning! Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

- **Report:** Report failure and other application information.

Note: Options vary by application.

DRAFT For Internal Use Only

Battery

See how much battery power is used for device activities.

1. From the **Settings** screen, touch **General** tab → **Battery**.
The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.
2. Touch **Screen**, **Android System**, or **Android OS** to view how the display and the Android system are affecting battery use.

Note: Other applications may be running that affect battery use.

3. Touch **Show battery percentage** to display the device battery status next to the battery icon.

Power Saving Mode

When enabled, your device automatically analyzes the screen and adjusts the brightness to conserve battery power.

1. From the **Settings** screen, touch **General** tab → **Power saving mode**.
2. Touch the **OFF/ON** button to turn Power saving ON  or OFF .
3. Turn Power saving on and touch the Power saving mode settings (**CPU power saving**, **Screen power saving**, or **Turn off haptic feedback**) to enable or disable them.
4. Touch **Learn more about power saving** to display more information about saving power mode.

DRAFT For Internal Use Only

Storage

From this menu you can view the device memory or mount, unmount, or format an SD card.

Device Memory

- From the **Settings** screen, touch **General** tab → **Storage**.

The Device memory displays as Total space, System memory, Used space, Cached data, Miscellaneous files, and Available space.

SD Card

Once a memory card has been installed in your device, the SD card memory displays as Total space and Available space.

Mounting an SD Card

1. Install an SD card. For more information, refer to “*Installing a Memory Card*” on page 12.
2. From the **Settings** screen, touch **General** tab → **Storage**.
3. Touch **Mount SD card**.

Unmounting an SD Card

1. From the **Settings** screen, touch **General** tab → **Storage**.
2. Touch **Unmount SD card**.
3. At the prompt, select **OK** to safely unmount the memory card.
4. Remove the SD card from the slot. For more information, refer to “*Removing a Memory Card*” on page 13.

Note: Unmounting an SD card will stop some applications from functioning. Applications may not be available until you mount the SD card again.

Formatting an SD Card

When formatting an SD card you will want to backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From the **Settings** screen, touch **General** tab → **Storage**.
2. Touch **Format SD card** and then touch **Format SD card** again on the warning screen.
3. Touch **Delete all**.

Security

Use the Security settings to secure your device.

Encryption

To require a numeric PIN or password to decrypt your tablet each time you power it on or encrypt the data on your SD card each time it is connected:

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Encrypt device**. For more information, read the displayed help screen.
3. Touch **Encrypt external SD card** to enable the encryption on SD card data that requires a password be entered each time the microSD card is connected.

Tip: Make sure your battery is charged more than 80 percent. Encryption takes an hour or more.

Find My Mobile

Use this option to allow your device to be locked and tracked, and for your data to be deleted remotely. You must sign up for a Samsung account and enable Google location service to use Remote controls.

Sign In To Your Samsung Account

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Remote controls**. Read the information and touch **OK** to acknowledge the information.
3. Touch **Add account** to create a Samsung account. For more information about Samsung accounts, see “*Sign in to Your Samsung Account*” on page 137.

DRAFT For Internal Use Only

Enable or Disable Remote Controls

Once you have signed in to your Samsung Account, you can enable or disable Remote controls.

1. From the **Settings** screen, touch **General** tab → **Security** → **Remote controls**.

2. Enter your Samsung account password in the pop-up **Enter password** field and touch **Done**.

The Introduction to remote controls screen displays.

Touch **Do not show for 90 days** to temporarily disable this screen.

3. Touch **OK**.

The Remote controls screen displays.

4. Touch the **OFF/ON** button in the upper right corner of the screen to turn Remote controls ON  **ON** or **OFF** .

5. Touch **Use wireless networks** to enable location information using the wireless network.

Find My Mobile Web Page

To launch the Find My Mobile web page:

1. From the **Settings** screen, touch **General** tab → **Security** → **Go to the find My mobile webpage**.

2. Select which application to launch the application. Touch **Internet** or **Chrome** and select **Always** or **Just once**.

The Find My Mobile webpage displays.

3. Follow on-screen instructions.

Passwords

When enabled, password characters display briefly as you touch them while entering passwords.

1. From the **Settings** screen, touch **General** tab → **Security**.

2. Touch **Make passwords visible** to enable or disable brief displays of password characters.

DRAFT For Internal Use Only

Device Administration

To add or remove device administrators:

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Device administrators**.

Enable or disable installation of non-Google Play applications.

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Unknown sources**.
An informational pop-up displays.
3. Read the message and touch **OK** to allow installation of non-Google Play applications.

Warning! Enabling this option causes your tablet and personal data to be more vulnerable to attack by applications from unknown sources.

4. To block or warn before installing apps that may cause harm, touch **Verify apps**.
5. Touch **Change security level** to modify the security level for credential files.

Security Update Service

To set security update service settings:

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Auto update security** to automatically check for changes to the security policy and download any updates to improve security.
3. Touch **Via Wi-Fi only** to only update security policy automatically when your device is connected to a Wi-Fi network.

DRAFT For Internal Use Only

Credential Storage

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From the **Settings** screen, touch **General** tab → **Security**.
2. Touch **Storage type** to set a storage type for credential contents.
3. Touch **Trusted credentials**.

The trusted credentials screen has two tabs:

- **System**: Displays CA certificates that are permanently installed in the ROM of your device.
- **User**: Displays any CA certificates that you installed, for example, in the process of installing a client certificate.

4. Touch a CA certificate to examine its details.

A scrolling screen displays the details.

Scroll to the bottom of the details screen and touch

Turn off to disable a System certificate.

Caution! When you disable a system CA certificate, the **Turn off** button changes to **Turn on**, so you can enable the certificate again, if necessary.

Touch **OK** to return to the certificate list.

5. Touch **Install from device storage**, then choose a certificate and follow the prompts to install encrypted certificates stored on the USB storage.

Note: You must have installed a memory card containing encrypted certificates to use this feature.

6. Touch **Clear credentials** to erase the credential contents from the device and reset the password.

Note: This setting only appears if you have installed encrypted certificates.

DRAFT For Internal Use Only

About Device

View information about your device, including status, legal information, hardware and software versions, and battery use.

1. From the **Settings** screen, touch **General** tab → **About device**.

2. Touch items to view details:

- **Software update**: Connect to the network and download new software. For more information, refer to “*Software Update*” on page 149.
- **Status**: View Battery status, Battery level, IP address, Wi-Fi MAC address, Bluetooth address, Up time, and Device status.
- **Legal information**: Touch an option to display open source licenses, Google and Samsung legal information, and Privacy Alert.
- **Model number**: Display your device’s model number.
- **Android version**: Display the firmware version of your device.

- **Kernel version**: Display the kernel version of your device.
- **Build number**: Display your device’s build number.
- **SELinux status**: Display the status of SELinux. SELinux is a set of security policies and modules that is applied to the device to improve the overall security.

Software Update

The Software Update feature enables you to use your device to connect to the network and download any new software directly to your device. The device automatically updates with the latest available software when you access this option.

DRAFT For Internal Use Only

Software Update Options

To register your device and check for a software update:

1. From the **Settings** screen, touch **General** tab → **About device** → **Software update**.
2. Touch **Update**.
Your device is connected to the server and a search is performed for a software update.
3. Touch **Auto update** to check for updates automatically.

DRAFT For Internal Use Only