



Draft 6
2012-8-29
Only for Marketing

User manual

SPH-P600

Samsung P600

User Guide



©2013 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

DRAFT For Internal Use Only

Table of Contents

Get Started.....	1
Your Device at a Glance.....	1
Set Up Your Device	1
Activate Your Device	3
Complete the Setup Application	4
Sprint Account Information and Help	5
Sprint Account Passwords	5
Manage Your Account.....	5
Device Basics	7
Your Device's Layout.....	7
Front View	7
Back View.....	8
Turn Your Device On and Off	9
Turn Your Screen On and Off.....	9
Touchscreen Navigation	10
S Pen.....	13
S Pen Overview.....	14
Remove the S Pen from your Device	14
S Pen Gestures	15
S Pen Features	15
Turn Your Device On and Off	17
Turn Your Screen On and Off.....	17
Your Home Screen	18
Creating Shortcuts.....	19
Adding and Removing Primary Shortcuts	20
Adding and Removing Widgets	20
Extended Home Screens	21
Recent Applications.....	21
Quick Launch	22
Mini App Tray.....	22

DRAFT For Internal Use Only

Status	22
Enter Text	24
Text Input Methods.....	24
Google Voice Typing	25
Samsung Keyboard.....	25
Swype.....	27
Tips for Editing Text	29
Settings	30
Wi-Fi Settings	31
Bluetooth Settings.....	31
Data Usage Settings.....	32
More Settings.....	33
Airplane Mode	33
Mobile Networks.....	33
Tethering	34
Wi-Fi Direct.....	35
VPN	35
Nearby Devices	36
Roaming	37
Sound Settings	37
Volume	38
Default Notifications	38
Touch Sounds	38
Screen Lock Sounds	38
Display Settings	39
Brightness	39
Screen Timeout.....	39
Auto-rotate Screen	39
Font Style	40
Font Size	40
Quick Launch	40
Wallpaper Settings.....	40
Home Screen Wallpaper	41

DRAFT For Internal Use Only

Lock Screen Wallpaper	41
Home and Lock Screens Wallpaper	41
Power Saving Settings.....	41
Storage Settings	43
Device Memory	43
SD Card.....	44
Battery Settings	45
Application Manager	45
Manage Applications	45
Running Services	46
Memory Use	46
Accounts and Sync Settings	46
Set Up a New Account	47
Manage Existing Accounts	47
Location Services Settings	47
Use Location Services.....	48
Use GPS Satellites	48
Location and Google Search.....	48
Security Settings.....	48
Screen Lock	49
Encrypt Device	51
Encrypt SD card	52
Make Passwords Visible	52
Device Administrators	52
Unknown Sources	53
Trusted Credentials	53
Install from Device Storage	53
Clear Credentials.....	53
Language and Input Settings.....	54
Language	54
Default Input Method	54
Google Voice Typing Settings	55
Samsung Keyboard Settings.....	55

DRAFT For Internal Use Only

T9 Trace	56
Swype Settings.....	56
Voice Search	56
Text-to-speech Output.....	57
Pointer Speed.....	57
Back Up and Reset Settings.....	57
Backup and Restore	58
Factory Data Reset	58
Accessory Settings	58
Date and Time Settings	59
Accessibility Settings	59
TalkBack Settings.....	60
Developer Options Settings	61
USB Debugging.....	61
Development Device ID.....	61
Allow Mock Locations	62
Desktop Backup Password	62
User Interface Options	62
Application Options	63
System Update Settings	63
Update PRL	63
Update Profile.....	63
Update Samsung Software	64
Update Firmware.....	64
About Device	64
Contacts.....	66
Get Started With Contacts	66
Add a Contact.....	68
Edit a Contact	69
Add or Edit Information for a Contact	69
Assign a Stored Picture to a Contact	70
Assign a New Picture to a Contact.....	70
Join a Contact	71

DRAFT For Internal Use Only

Delete a Contact.....	71
Synchronize Contacts.....	71
Add Entries to Your Favorites.....	72
Add Facebook Content to Your Contacts	73
Add Your Facebook Friends to Your Contacts	73
Create Groups	73
Share a Contact.....	74
Accounts and Messaging.....	76
Gmail / Google.....	76
Create a Google Account.....	76
Sign In to Your Google Account	77
Access Gmail	77
Send a Gmail Message	78
Read and Reply to Gmail Messages	78
Email.....	79
Add an Email Account.....	79
Add a Corporate Email Account	80
Compose and Send Email.....	81
View and Reply to Email	82
Manage Your Email Inbox	82
Corporate Email Features	83
Edit Email Account Settings	84
Delete an Email Account	85
Add an Email or Gmail Widget	85
Social Networking Accounts	86
Facebook.....	86
YouTube.....	87
Google Talk	87
Applications and Entertainment	89
DivX.....	89
DivX Legal Information	89
Locate Your VOD Registration Number	90
Register Your DivX Device for VOD Playback of Purchased Movies	90

DRAFT For Internal Use Only

Google Play Store.....	91
Find and Install an App.....	92
Create a Google Checkout Account.....	92
Request a Refund for a Paid App.....	93
Open an Installed App.....	93
Uninstall an App	93
Get Help with Google Play	94
Navigation.....	94
Google Maps	94
Google Navigation.....	95
Latitude.....	95
Music	96
Music Player.....	96
Google Play Music	96
Google Play Movies & TV.....	100
AllShare Play	101
Configure AllShare Settings	101
Set Up Web Storage	102
Share Files via Web Storage.....	102
Share Media via AllShare Play to a Target Device	103
AllShare Play Screen Sharing via Group Cast.....	103
Peel Smart Remote	104
Media Hub	104
Creating a New Media Hub Account	104
Use Media Hub.....	105
Media Hub Notices	105
Web and Data	107
Wi-Fi	107
Turn Wi-Fi On and Connect to a Wireless Network	107
Check the Wireless Network Status	109
Connect to a Different Wi-Fi Network.....	109
Sprint Connections Optimizer.....	109
Data Services (Sprint 3G).....	110

DRAFT For Internal Use Only

Your Data Services User Name	110
Launch a Web Connection	111
4G Services	111
Virtual Private Networks (VPN).....	112
Prepare Your Device for VPN Connection	112
Set Up Trusted Credential Storage	112
Add a VPN Connection	113
Connect to a VPN.....	113
Disconnect from a VPN	113
Internet	113
Learn to Navigate Internet.....	114
Internet Options.....	115
Select Text on a Web Page.....	116
Go to a Specific Website	116
Adjust Internet Settings	116
Reset the Internet Options to Default	119
Set the Home Page	119
Create Bookmarks.....	119
Create a New Homepage	120
Add Bookmarks to Your Home Screen	120
Sprint Hotspot.....	121
Camera and Video	122
Take Pictures.....	122
Open the Camera.....	122
Viewfinder Screen	122
Review Pictures and Videos.....	123
Take a Picture	125
Close the Camera	125
Record Videos	125
Camera Settings	126
Camcorder Settings.....	127
View Pictures and Videos Using Gallery	128
Open Gallery.....	128

DRAFT For Internal Use Only

View Photos and Videos	129
Zoom In or Out on a Photo	129
Watch Video	129
Working with Photos	130
Rotate and Save a Photo	130
Crop a Photo	130
Photo Editor	130
Share Photos and Videos	132
Send Photos or Videos by Email	132
Send Photos or Videos Using Bluetooth	132
Share Photos or Videos on Google+	133
Share Photos on Picasa	133
Share Videos on YouTube	133
Tools and Calendar	135
Calendar	135
Add an Event to the Calendar	135
Event Alerts	137
View Events	137
Erase Events	138
Alarm	139
Set an Alarm	139
Delete an Alarm	140
Calculator	140
World Clock	140
Memo	140
S Suggest	141
Transfer Files Between Your Device and a Computer	141
My Files	142
Dropbox	143
Download the Dropbox Desktop Application	143
Accessing Dropbox on Your Device	143
Bluetooth	143
Turn Bluetooth On or Off	144

DRAFT For Internal Use Only

Bluetooth Settings	144
Change the Device Name	144
Pair with a Bluetooth Device	145
Connect to a Paired Device.....	145
Disconnect from a Bluetooth Device	146
Unpair from a Bluetooth Device	146
Send Information via Bluetooth	146
Receive Information via Bluetooth.....	147
microSD Card	148
Insert a microSD Card	148
Remove a microSD Card	149
View microSD Card Memory	150
Format a microSD Card	150
Unmount a microSD Card	150
Update Your Device.....	151
Update the PRL.....	151
Update Your Profile	151
Update Your Samsung Software.....	151
Update Firmware.....	151
Index	154

DRAFT For Internal Use Only

Get Started

The following topics give you all the information you need to set up your device and Sprint service the first time.

[Your Device at a Glance](#)

[Set Up Your Device](#)

[Activate Your Device](#)

[Sprint Account Information and Help](#)

Your Device at a Glance

The following illustration outlines your device's primary external features and buttons.



 
Set Up Your Device

Charge the battery to begin setting up your device.


1. Plug the wide end of the USB cable into the Charger/Accessory Jack on the bottom of your device.

DRAFT For Internal Use Only

Warning! While the device is charging, if the touchscreen does not function due to an unstable power supply, unplug the USB power adapter from the power outlet or unplug the USB cable from the device.

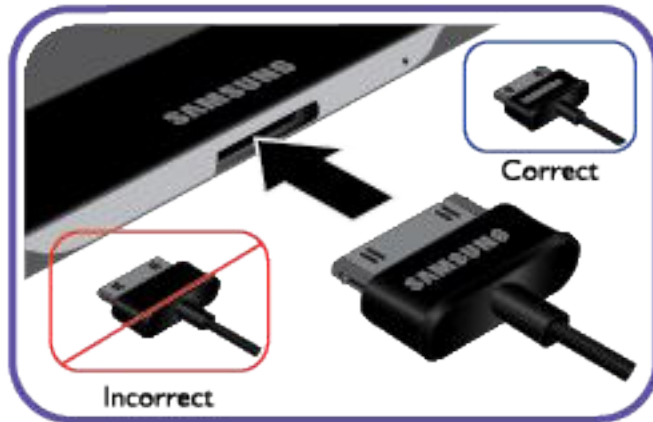

 
2. Plug the USB end of the USB cable into the Charging Head, and then plug the Charging Head into an electrical outlet to charge your battery. Fully charging a battery may take up to three hours.

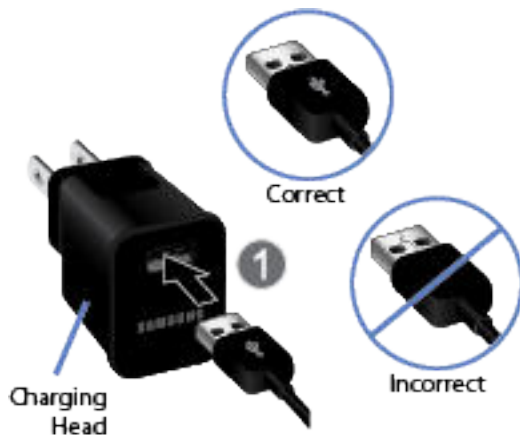

Note: Your device's battery should have enough charge for the device to turn on and find a signal, and set up the device. You should fully charge the battery as soon as possible.

3. Press and hold the **Power/Lock** button to turn the device on.

 DRAFT For Internal Use Only

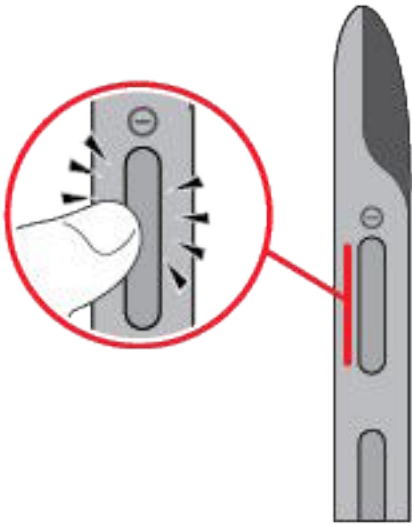

- If your device is activated, it will turn on, search for Sprint service, and begin the setup application.
- If your device is not yet activated, see [Activate Your Device](#) for more information.

Activate Your Device

Depending on your account or how and where you purchased your device, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
 - When you turn the device on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your device in the mail and you are activating a new device for an existing number on your account (you're swapping devices), you can activate on your computer online or directly on your device.
 - Activate on your computer: Go to sprint.com/activate and complete the online instructions to activate your device.
 - Activate on your device:
 - Turn on your new device. (Make sure the old one is turned off.) Your device will automatically attempt Hands-Free Activation.
 - Tap **Activate** to override auto-activation and start the manual activation wizard.

DRAFT For Internal Use Only

- Follow the onscreen prompts to complete the activation process.
- To confirm activation, launch Internet. If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Tip: Do not press the **Power/Lock** button while the device is being activated. Pressing the **Power/Lock** button cancels the activation process.

Note: If you are having any difficulty with activation, contact Sprint Customer Service by calling **1-888-211-4727** from any other device.

Complete the Setup Application

The Setup application helps you set up certain features and preferences on your device. Once your device has been turned on and activated, you will see a Welcome message. You can then complete the Setup application.

Note: You may be able to complete the setup application before your device has been activated on your Sprint account.

1. Once your device is activated, you will see the Welcome screen. Choose a language, and then tap **Start** to get started.
2. Follow the onscreen instructions to complete each section. For each topic, you will have an option to skip it and continue to the next screen.
 - **Samsung account:** Your Samsung account provides access to a variety of services.
 - **Create new account** - Follow the instructions to create a new Samsung account.
 - **Sign in** - Enter your credentials to sign in to your current Samsung account.
 - **Make it Google** - Complete the steps to sign in to your current Google account, or tap **Get an account** to sign up for a new Google account right from your device.
 - **Sign in** - Enter your Gmail address and password and tap **Sign in** to set up your current Google account on this device. Follow the instructions to set up options, including enable purchases, Backup and restore options, Google location services, and information to personalize some apps. Tap **Next** to continue after each step.
 - **Get an account** - Follow the instructions to sign up for a new Google account. There will be screens to enter your first and last names, create an email address (Gmail), create a password, enter recovery information (including a backup email address and a recovery question in case you forget your Google account sign-in information), an option to join Google+, and an option to enable purchases from the Google Play Store app. Tap **Next** between each screen.

DRAFT For Internal Use Only

- **Not now** - Skip this step. You can always set up a Google account on your device later, in Settings.
3. When setup is complete, tap **Finish**. Follow the onscreen instructions to learn about basic touch/tap navigation.

Note: As you use your device, you may see a notice to turn on Sprint Connections Optimizer, to allow your device to automatically connect to the best available network, including Wi-Fi networks. Follow the prompts on the notice to turn on Sprint Connections Optimizer, or turn it on or off at any time by tapping **Home > Apps > Settings > More settings > Mobile networks > Connection optimizer**.

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

[Sprint Account Passwords](#)

[Manage Your Account](#)

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information and data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to [sprint.com](#). (Click **Sign in/Register** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [sprint.com](#).

Data Services Password

With your Sprint device, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [sprint.com](#) or call Sprint Customer Service at **1-888-211-4727**.

Manage Your Account

Manage your Sprint account from your computer, your Sprint device, or by phone.

Online at [sprint.com/mysprint](#)

- Access your account information.

DRAFT For Internal Use Only

- Check your data usage (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint devices.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ring tones, screen savers, and more.

From your Sprint device

- Press  >  **Apps > Sprint Zone** to access your Sprint account, get device information and help, find recommended apps, and more.

From your phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-888-788-4727**.

DRAFT For Internal Use Only

Device Basics

Your device is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The following topics will introduce the basic functions and features of your device.

Your Device's Layout

Turn Your Device On and Off

Turn Your Screen On and Off

Touchscreen Navigation

Your Home Screen

Status Bar

Enter Text

Your Device's Layout

The following illustrations outline your device's basic features.

Front View

 
The following illustration outlines your device's primary external features and buttons.



- **Power/Lock Button** lets you turn the device on or off, turn the screen on or off, enable or disable data network mode or airplane mode, or restart the device.
- **Volume Button** allows you to adjust volume.
- **Memory Card Slot** allows you to install an optional microSD card (not included), for additional storage.
- **Light Sensor** controls screen brightness automatically and when taking photos with the Front-facing Camera.
- **Self Camera Lens** allows you to take photos or video recordings while looking at the screen, using the Self-portrait/Self-recording options of the Camera.
- **Speakers** are used for music or video playback, notification tones, and for other sounds.
- **Microphone** captures audio.
- **Touchscreen** allows you to control your device with your finger, or with S Pen

Back View

The following illustration outlines your device's primary external features and buttons.

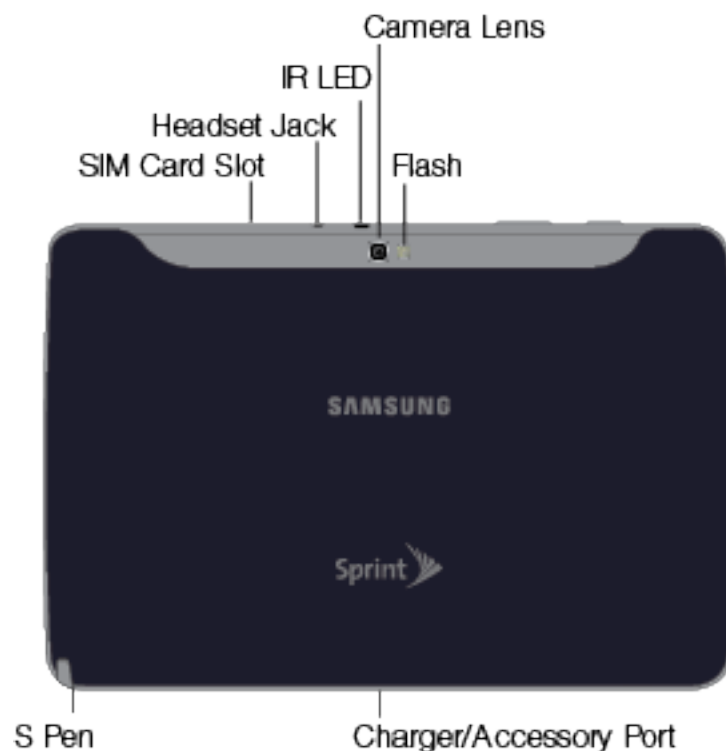

- **SIM Card Slot** allows you to install a SIM card, for access to the Sprint network.
- **3.5 mm Headset Jack** allows you to plug in an optional stereo headset (not included).

DRAFT For Internal Use Only

- **IF LED** emits infrared signals used for controlling external devices. For more information, see [Peel Smart Remote](#).
- **Camera Lens** lets you take pictures and videos.
- **Charger/Accessory Port** allows you to connect the device charger/USB cable (included).
- **S Pen** provides a new way to interact with your device, by writing inputs, or using the special S Pen features.

Turn Your Device On and Off

The instructions below explain how to turn your device on and off. Your screen remains blank while your device is off (unless the battery is charging).

Turn Your Device On

- ▶ Press and hold .

Turn Your Device Off

- ▶ Press and hold  until the Device options menu displays, and then tap **Power off** > **OK**.

Turn Your Screen On and Off

Your device allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- ▶ To quickly turn the screen off, press . Pressing  again will turn on your device screen and show the lock screen.

To save battery power, the device automatically turns off the screen after a certain period of time when you leave it idle. Your device will still be able to receive email, sync with your accounts, and perform other functions while the screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

Turn the Screen On and Unlock It

- To turn the screen on, press .
 - Swipe the screen in any direction to unlock the screen. If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. See [Screen lock](#).

DRAFT For Internal Use Only

Touchscreen Navigation

Your device's touchscreen lets you control actions through a variety of touch gestures.

Tap

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap them with your finger.



Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

DRAFT For Internal Use Only



Slide

To slide means to quickly drag your finger across the screen (for example, when entering text with Swype or drawing on the screen).



DRAFT For Internal Use Only

Drag

To drag, touch and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



DRAFT For Internal Use Only

Rotate

For most screens, you can automatically change the screen by turning the device sideways. When entering text, you can turn the device sideways to bring up a bigger keyboard.



Note: You can control whether the screen automatically rotates when you turn the device. To

make this selection, tap  >  > **Settings** > **Display** > **Auto-rotate screen**. See [Auto-rotate screen](#) for more information.

Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Tip: Pinching any Home screen will let you see thumbnails of all Home screens (up to seven). Tap a thumbnail to go straight to another Home screen.

S Pen

The S Pen is an intuitive stylus for device input. It integrates seamlessly with, allowing you to perform a host of operations.

[Understanding the S Pen](#)

[Removing the S Pen from your Device](#)

DRAFT For Internal Use Only

Using the S Pen

Screen Capture

Air View

S Pen Overview

Below is a brief overview of the S Pen capabilities:

- Write directly into an email.
- Write directly onto the calendar.
- Annotate documents (Word, Excel, PPT, PDF).
- Write a note on the back of a picture.
- Access S-Note quickly from the lock screen.



The following list defines the features listed in the above illustrations.

 
- **Pen button:** by pressing the Pen button, you can add functionality to the S Pen.
- **Stylus tip:** the tip of the S Pen is used for tapping or writing and drawing on the screen.

Remove the S Pen from your Device

The S Pen stores inside your device, to keep it protected and easy to locate.

1. Use your fingernail to pull the end of the S Pen out of the device.

DRAFT For Internal Use Only

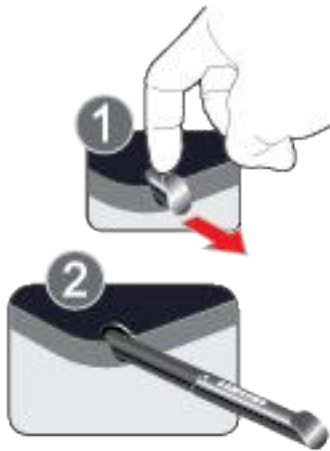

2. Slide the S Pen out of the device.

S Pen Gestures

Use S Pen to perform functions, by simply drawing or tapping on the screen while holding the S Pen button.

- **Go back:** Hold the S Pen button and draw  to return to the previous screen.
- **Open menu:** Hold the S Pen button and draw  to open a menu on any screen.
- **Screen capture:** Hold the S Pen button and touch and hold on the screen to save a copy of the screen to the Clipboard,
- **Select text:** Hold the S Pen button and drag over the text. When you lift S Pen off the screen, the text is saved to the clipboard and the editing toolbar appears.
- **Popup note:** Hold the S Pen button and tap the screen twice to launch Popup Note.

S Pen Features

Explore S Pen's unique features to create and collaborate.

Easy Clip

Instantly outline and crop images on the screen, in any shape, to share or paste. You can edit the cropped content, or personalize it with your own handwriting.

1. Press and hold the S Pen button, then draw around the image you want to clip, making sure to close the shape.
2. Tap the app you want to paste the image into, or if you do nothing, the image is pasted to the screen.

DRAFT For Internal Use Only

Write on Any Screen After Capture

To write on a screen capture, use the pen to draw or write.

Air View

Hover S Pen over the screen to preview content, or view information about an item on the screen. For example:

- Hover over an email in a list to preview the message before opening it.
- Hover over a photo album to preview the contents, or see a picture enlarged.
- Hover over the timeline during video playback to preview and navigate to specific scenes.
- In Calendar, hover over dates and events to see details.
- Hover over an icon or screen button to view the item's title.

For more information, and to configure Air View settings, . Tap  >  >  > **S Pen** > **Air view**.

Quick Command

Multitask like never before. Launch Quick Command pad from any screen, to hand-write tasks. Use S Pen to draw a Quick Command to launch a feature, or draw a Quick Command followed by a keyword to personalize the command. For example:

- Draw a question mark “?” to search the Internet.
- Draw a question mark followed by a search term to search on the term.

For more information, and to configure Quick Command settings, . Tap  >  >  > **S Pen** > **Quick command**.

Photo Notes

Write a note on the back of pictures to add detail to your memories.

1. Tap  >  > .

2. Choose a picture, and then tap  > **Draw on image**.

3. Use S Pen to write a note on the back of the picture, and then tap **Done** to save the note with the picture.

Note: Photo notes are saved with the picture on your device, but are not transferred when you share the picture.

Popup Video

Multitask with Popup Video - transform your video player into a popup window floating on the screen. The video will continue to play, and the popup window can be resized or moved anywhere on the screen.

- ▶ While watching a video, tap in the lower right corner of the screen.

Popup Browser

Multitask with Popup Browser - Launch a new, floating browser window by selecting a web link from any application.

- ▶ In any app, tap a web link, and then choose **Popup Browser** from the menu.

Turn Your Device On and Off

The instructions below explain how to turn your device on and off.

Turn Your Device On

- ▶ Press and hold  ①.

Turn Your Device Off

1. Press and hold  ①.
2. Tap **Power off** and then tap **OK** to power the device off.

The screen remains blank while your device is off (unless the battery is charging).

Turn Your Screen On and Off

You can turn the screen off when not in use, and then turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- ▶ To quickly turn the screen off, press  ①. Pressing the  ① again turns the screen on.

To save battery power, the device automatically turns off the screen after a certain period of time when you leave it idle.

Note: For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

DRAFT For Internal Use Only

Turn the Screen On and Unlock It

1. To turn the screen on, press  ①.
2. Swipe the screen in any direction to unlock the screen.

If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. See [Screen lock](#).

Your Home Screen

The home screen is the starting point for your device's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Drag the screen left or right to display additional screens.

Creating Shortcuts

 
Adding and Removing Primary Shortcuts

Adding and Removing Widgets

Extended Home Screens

Recently Used Applications

Mini App Tray

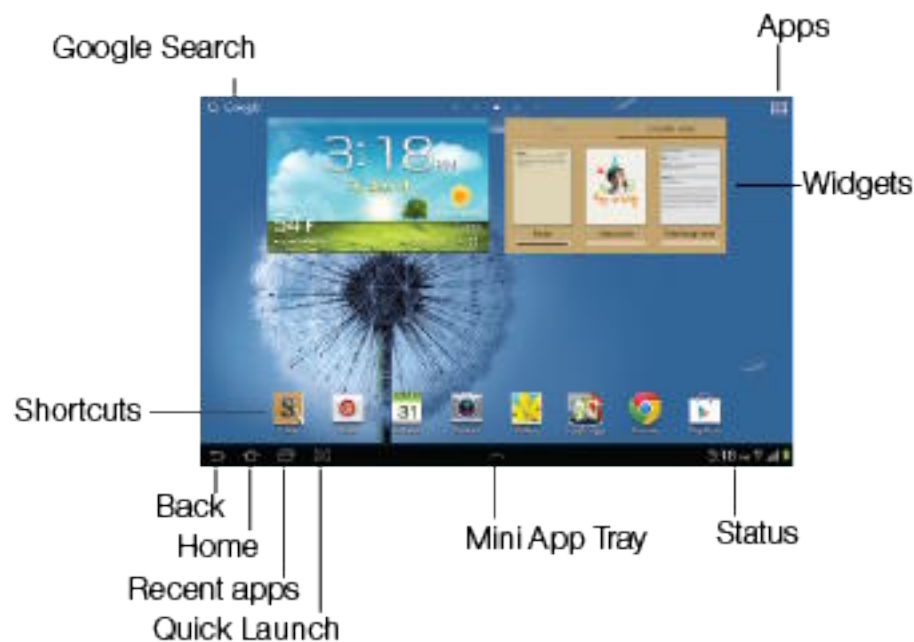

Note: Drag the screen left or right to display additional screens. The dots at the top of the screen let you know your current position.

DRAFT For Internal Use Only

Tip: Press  to return to the main home screen from any other screen.

Creating Shortcuts

Learn how to add, move, or remove items from the home screen.

Adding Shortcuts from the Applications Menu

1. Press  to display the main Home screen, and then navigate to the desired Home screen.
2. Tap  to display applications, and then scroll through the icons to locate your desired application.
3. Touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the Applications tab.
4. While still holding the onscreen icon, position it on the current page. Once complete, release the screen to place the new shortcut on the screen.

Adding Shortcuts from the Home screen

1. Press  to display the main Home screen, and then navigate to the desired Home screen.
2. Touch and hold an empty area of the Home screen, and then tap **Apps and widgets > Apps** tab.
3. Scroll through the icons to locate your desired application, and then touch and hold the application icon. This creates an immediate shortcut of the selected icon and closes the Applications tab.
4. While still holding the onscreen icon, position it on the screen. Release the icon to place the shortcut on the screen.

Deleting a Shortcut

1. Press  to display the main Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon to the Delete icon and release it. As you place the shortcut into the Trash, both items turn red.

DRAFT For Internal Use Only

Note: This action does not delete the application, it simply removes the shortcut from the current screen.

Adding and Removing Primary Shortcuts

You can change any of your shortcuts, except the Apps shortcut.

Note: Before replacing a primary shortcut, you must first add the replacement shortcut to the Home Screen. For more information, see [Creating Shortcuts](#).

Adding a Primary Shortcut

1. Press  to display the main Home screen.
2. Touch and hold an empty area of the Home screen.
3. Tap **Apps and widgets**, and then touch and hold an app to add it to the current screen.

Removing a Primary Shortcut

1. Press  to display the main Home screen.
2. Touch and hold the shortcut you want to remove. This unlocks it from its location on the current screen.
3. Drag the shortcut to the Delete icon and release it. As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the application, it just removes it from the current screen

Adding and Removing Widgets

Widgets are self-contained applications that reside in your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an onscreen application. Widgets can include Contacts shortcuts, bookmarks, Facebook status windows, Gmail and email accounts, and many other types of apps.

Adding a Widget

1. Press  to display the main Home screen, and then navigate to the desired Home screen.
2. Touch and hold an empty area of the Home screen, and then tap **Apps and widgets > Widgets** tab.
3. Touch and hold a Widget to place it on the current screen.

DRAFT For Internal Use Only

Removing a Widget

1. Press  to display the main Home screen, and then navigate to the desired Home screen.
2. Touch and hold the desired widget. This unlocks it from its location on the current screen.
3. Drag the widget to the Delete icon and release it. As you place the widget into the Trash, both items turn red.

Note: This action does not delete the widget, it simply removes it from the current screen

Extended Home Screens

In addition to the main Home screen, your device can display up to six extended home screens to provide more space for adding icons, widgets, and more. Touch and hold the icon or widget and then drag across the screen to move it from the main screen to an extended screen.

To go directly to a particular screen:

1. From any home screen, pinch the screen to display thumbnail images of all screens.

- or -

Touch and hold an empty area of the Home screen and then tap **Page**.
2. Tap the screen you want to open.

To Add a Home screen

By default, your device displays the main Home screen, plus four extended screens. You can add screens (up to the maximum of seven) from the Home screen menu.

1. From any home screen, pinch the screen to display thumbnail images of all screens.

- or -

Touch and hold an empty area of the Home screen and then tap **Page**.
2. From the thumbnail view, tap a thumbnail with a plus sign (+) to add a new home screen.

Recent Applications

Access recent applications from the Recent apps display.

1. Tap  **Recent apps** from any screen to open the recently used applications window.
2. Tap an app to open it.

DRAFT For Internal Use Only

Quick Launch

Quick Launch is a multifunctional soft key that allows you to quickly launch a favorite app or feature. By default, it is set to Screen Capture, but take a picture of the screen and save it to the Clipboard.

You can select a function for Quick Launch. Tap  >  >  > **Display** > **Quick Launch**.

Mini App Tray

There are shortcuts available that link to apps that you might need while working in other apps, such as Alarm, Calculator, Calendar, Email, Music player, Task manager, and World clock. In some cases, these shortcuts are actually links to the part of the app you need most and they contain a link to the actual app where you can use other functions.

1. From any screen, touch  at the bottom, center of the screen. The Mini App Tray icons display.
2. Touch one of the icons to display a mini app pop-up. The pop-up varies depending on the application. Various controls display at the top of the pop-up and other information is displayed in the body of the pop-up.
3. Touch items in the body of the pop-up, such as an email entry or keys on the Calculator.
4. Touch  to link to the application.
5. Touch  to close the mini app tray.

Customize the Mini App Tray

You can choose applications to display on the Mini App Tray and arrange them in any order.

1. Touch **Edit** at the right side of the tray to customize the Mini App Tray.
2. Touch and drag apps in and out of the tray or to another position in the tray.
3. Touch **Done** to save your changes.

Status

The status area at the bottom right of the display provides device and service status information. To view notifications, touch the status area.

DRAFT For Internal Use Only

Status Icons

Icon	Description
	Bluetooth® active
	Wi-Fi® active
	Network (full signal)
	Network (roaming)
	3G (data service)
	4G (data service)
	Airplane Mode
	Sync Active
	Alarm Set
	Battery (charging)
	Battery (full charge)

Notification Icons

Icon	Description
	New email
	New Gmail
	Event
	USB connection
	Updates available
	Download complete
	Downloading

DRAFT For Internal Use Only

	Connected to a Digital Living Network Alliance (DLNA) certified device using AllShare Play.
	Wi-Fi Direct is active and configured for a direct connection to another compatible device in the same direct communication mode.
	Device is tethered via a supported USB cable connection.
	Keyboard is active.

Enter Text

You can type on your device using the available touchscreen QWERTY keyboard, or by speaking your inputs.

[Text Input Methods](#)

[Google Voice Typing](#)

[Samsung Keyboard](#)

[Swype](#)

[Tips for Editing Text](#)

Text Input Methods

Your device offers several text input methods.

- **Google voice typing** allows you to speak your entries.
- **Samsung keyboard**: allows you to enter text by touching keys on a virtual QWERTY keyboard. Samsung keyboard includes optional predictive text, which matches your key touches to common words so you can select a word to insert it into your text.
- **Swype** lets you enter words by swiping across the virtual QWERTY keyboard. Instead of tapping each key, use your finger to trace over each letter of a word. You can also tap letters to enter words.

Select a Default Text Input Method

You can select a default Text Input Method from Settings, or choose on at any time while entering text.

From Settings:

► Press  and tap  >  > **Language and input** > **Default**.

While entering text:

DRAFT For Internal Use Only

- From a screen where you can enter text, tap  in the Status bar, and then tap an input method.

Google Voice Typing

This feature uses Google voice recognition to convert your spoken words into text.

Use Google Voice Typing to Enter Text

1. From a screen where you can enter text, tap  in the Status bar, and then tap **Google voice typing**.
2. Speak into the microphone and watch your text being entered onscreen.
3. If the text is incorrect, tap **DELETE**.
4. Once you have completed entering your text, tap **Done**. The onscreen keyboard will reappear.

Note: Select a language by tapping at the bottom of the **Listening** area. Tap **Add more languages** to assign a new language via the Google voice typing menu. Removing the check mark from the **Automatic** field allows you to select additional languages.

Configure Google Voice Typing

- Tap  and tap  >  > **Language and input** > **Google voice typing** >  .

- or -

From a screen where you can enter text, tap  in the Status bar, and then tap  next to **Google voice typing**.

Samsung Keyboard

With Samsung Keyboard, it's easy to enter text, symbols, and numbers.

Use Samsung Keyboard to Enter Text

1. From a screen where you can enter text, tap  in the Status bar, and then tap **Samsung keyboard**.
2. Tap keys to enter text. While entering text, use these options:
 - If you make a mistake, tap  to delete incorrect characters. Touch and hold  to delete a whole word or field.

DRAFT For Internal Use Only

- Tap  to change the case of the text. Tap  twice to switch to all capitals.
- Tap  to switch to a symbols keyboard, to enter symbols. There are two symbol keyboards. Tap  to switch between the symbol keyboards.
- Tap  to switch to Google Voice typing, to enter text by speaking.

Configure Samsung Keyboard

1. Tap  and tap  >  > **Language and input**, and then tap  next to **Samsung keyboard**.

- or -

From a screen where you can enter text, tap  in the Status bar, and then tap  next to **Samsung keyboard**.

2. Set any of the following options:
 - **Input languages:** allows you to select the text input language.
 - **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Tap **Predictive text** to access settings.
 - **My word list** to add a list of words you commonly use within your sentences.
 - **Swiftkey flow** allows you to enter words by swiping between onscreen keys.
 - **Pen detection** detects when S Pen is detached.
 - **Handwriting** enables the device to recognize onscreen handwriting and convert it to text.
 - **Advanced** allows you to configure more settings:
 - **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Auto-punctuate** automatically inserts a period at the end of a sentence when you tap the space bar twice while using the onscreen QWERTY keyboard.
 - **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
 - **Key-tap vibration** enables vibration feedback when you tap an onscreen key.

DRAFT For Internal Use Only

- **Key-tap sound** enables auditory feedback when you tap an onscreen key.
- **Tutorial** launches a brief onscreen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

Swype

Swype lets you enter words by swiping across the virtual QWERTY keyboard. Instead of tapping each key, use your finger to trace over each letter of a word. You can also tap letters to enter words.

Swype provides next-letter prediction and regional error correction, which can compensate for tapping the wrong keys on the virtual QWERTY keyboards.

Use Swype to Enter Text

1. From a screen where you can enter text, tap  in the Status bar, and then tap **Swype**.
2. Swipe your finger continuously over the letters to form a word. As you swipe over letters, words matching your pattern display at the top of the Swype keyboard. To enter a word, lift your finger, or tap a word at the top of the keyboard.
3. While entering text, use these options:
 - If you make a mistake, tap  to delete a single character. Touch and hold  to delete an entire word or field.
 - By default, Swype starts with a capital at the beginning of text. Tap  to start with a capital letter, or tap  twice to enter all capitals.
 - Tap  to switch to a symbols keyboard, and then tap keys to enter symbols.

Configure Swype

1. Press  and tap  >  > **Language and input**, and then tap  next to **Swype**.

- or -

From the Swype keyboard, touch and hold  to access Swype settings.

2. Tap **How to Swype** to view an on-screen manual for Swype.

DRAFT For Internal Use Only

3. Tap **Preferences** and configure options. A green check mark indicates the feature is enabled.
 - **Vibrate on keypress** enables sounds generated by the Swype application.
 - **Sound on keypress** enables sounds generated by the Swype application.
 - **Show helpful tips** enables the device to display helpful tips as you enter text.
 - **Auto-spacing** inserts spaces automatically when you pause entering text.
 - **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Show complete trace** briefly displays the Swype trace.
 - **Next word prediction** predicts the next word you are likely to enter.
 - **Reset Swype's dictionary** deletes any words you have added to Swype's dictionary.
 - **Version** displays the software version information.
4. Tap **Language Options** to activate and select the current text input language.
5. Tap **Swype Connect** to activate social media personalization and configure data settings.
 - **Register now** allows you to register with Swype.
 - **Twitter**: allows you to sign into your existing Twitter account from where names and words are added to your personal dictionary. Helps recognize familiar names and words.
 - **Backup & sync** allows you to configure options for backing up and synchronizing with Swype.
 - **Contribute usage data** allows the Nuance® application to collect usage data for better word predictions.
 - **Cellular data** activates cellular data usage by the Swype application so it can receive program updates, language downloads, and other related features via your existing data connection.
6. Tap **Personal dictionary** to access and manage your personal dictionary and other personalizations.
7. Tap **Updates** to update the application if new software is available.

DRAFT For Internal Use Only

Tips for Editing Text

These tips allow you to cut or copy selected text and paste it into a separate selected area.

1. Touch and hold an active text entry field.
2. Double-tap the text you want to select.
3. Touch and drag one side of the slider across the screen and highlight the desired text.
4. Tap an onscreen option from the Edit text menu bar:

-  **Select all** highlights all characters in the selection.

-  **Cut** removes the selected text and saves it to the clipboard.

-  **Copy** copies the selected text.

5. Tap another area where you want to place text, and then tap an option:

-  **Paste** pastes the copied text into the selected field.

-  **Clipboard** stores the copied text. Tap this option to view and select any clipboard content.

DRAFT For Internal Use Only

Settings

The following topics provide an overview of items you can change using your device's Settings menus.

Wi-Fi Settings

Bluetooth Settings

Data Usage Settings

More Settings

Sound Settings

Display Settings

Wallpaper Settings

Power Saving Settings

Storage Settings

Battery Settings

Application Manager

Accounts and Sync Settings

Location Services Settings

Security Settings

Language and Input Settings

Back Up and Reset Settings

Accessory Settings

Date and Time Settings

Accessibility Settings

Developer Options Settings

System Update Settings

About Device

DRAFT For Internal Use Only

Wi-Fi Settings

The Wi-Fi settings menu lets you control your device's Wi-Fi settings.

Your device lets you take advantage of Wi-Fi for high-speed data access using available computer networks. For details on your device's Wi-Fi features and settings, see [Wi-Fi](#).

1. Press  and tap  >  (**Settings**) > **Wi-Fi**.
2. Tap the ON/OFF slider to turn Wi-Fi on or off.

Advanced Wi-Fi Settings

The advanced Wi-Fi settings allow you to set up and manage wireless access points.

1. Press  and tap  >  > **Wi-Fi**.
2. Tap  > **Advanced**. The following options are available:
 - **Network notification**: alerts you when a new open network is available.
 - **Keep Wi-Fi on during sleep**: allows you to specify when to disconnect from Wi-Fi.
 - **Check for internet service**: allows the device to check if Internet service is available when connected to Wi-Fi.
 - **Wi-Fi timer**: allows you to select the amount of time that Wi-Fi is enabled.
 - **MAC address**: allows you to view your device's MAC address, required when connecting to some secured networks (not configurable).
 - **IP address**: allows you to view your device's IP address.

Bluetooth Settings

Your device's Bluetooth capabilities let you use wireless headsets to send and receive pictures and files, and more.

1. Press  and tap  >  > **Bluetooth**.
2. Tap the ON/OFF slider to turn Wi-Fi on or off.
3. Tap  to access Bluetooth settings:

DRAFT For Internal Use Only

- **Rename device:** allows you to change the name of your device. The device name is how other Bluetooth devices identify your device.
- **Visibility timeout:** allows you to choose the length of time your device is visible to other devices, when you enable visibility.
- **Received files:** allows you to view files received via Bluetooth.

Data Usage Settings

From this screen you can view the Mobile or Wi-Fi data usage. By default, only the mobile data usage displays.

1. Press  and tap  >  > **Data usage**.
2. Tap **Mobile data** to enable access to the mobile data network. A green check mark indicates the option is enabled.
3. Tap **Set mobile data limit** to disable a data connection when a certain level is reached. Drag the red limit line on the graph to the desired limit.
4. Tap the **Data usage cycle** drop-down menu and select a date.

Data usage displays as a chart, and a breakdown of data usage by application.

5. Tap  for more options:
 - Tap **Restrict background data** to enable background data restrictions. You can only enable this feature if you have set mobile data limits. Tap **Set mobile data limit** to add a checkmark and activate the feature.
 - Tap **Auto sync data** to enable or disable synchronization with your accounts automatically.
 - Tap **Show Wi-Fi usage** to display the Wi-Fi tab. The data usage displays as a visual (chart) with a list of each application with a breakdown of how many MB were used per application.
 - Tap **Mobile hotspots** to configure data usage when connected to mobile hotspots. You can restrict background apps from using these networks, and you can also set apps to warn you before using these networks for large downloads.

Note: Data is measured by your device. Your service provider may account for data usage differently.

DRAFT For Internal Use Only

More Settings

The **More settings** menu provides additional settings for your device's connections.

[Airplane Mode](#)

[Mobile Networks](#)

[Tethering](#)

[Wi-Fi Direct](#)

[VPN](#)

[Nearby Devices](#)

[Roaming](#)

Airplane Mode

Airplane Mode allows you to use many of your device's features, such as Gallery, Camera, and Music, when you are on an airplane or in any other area where making data connections is prohibited. When you set your device to Airplane mode, it cannot access online information.

To turn Airplane Mode on or off:

1. Press  and tap  >  > **More settings**.
2. Tap **Airplane mode** check box, and then touch **OK** to enable or disable airplane mode.

While in Airplane mode,  will display in the status bar.

Mobile Networks

Before you use applications such as Google Maps to find your location or search for places of interest, you must enable the Mobile networks options.

Mobile Data

1. Press  and tap  >  > **More settings** > **Mobile networks**.
2. Tap **Mobile data** to create a checkmark and activate the feature.

Network mode

1. Press  and tap  >  > **More settings** > **Mobile networks** > **Network mode**.
2. Tap your preferred network mode. Choose from **LTE**, **CDMA**, or **CDMA**.

DRAFT For Internal Use Only

Connections optimizer

1. Press  and tap  >  > **More settings** > **Mobile networks** > **Connections optimizer**.
2. Tap the check box next to **Sprint Connections Optimizer** to find and connect automatically to the best available data network including the Sprint network and “remembered” Wi-Fi networks on your device.

Tethering

Tethered Mode allows your computer to obtain an external data connection by using the device’s wireless data services and a wired USB connection or a separate Bluetooth connection.

Before attempting a tethered connection:

- Go to www.samsung.com and visit the SPH-P600 Product page, where you can navigate to the [Download Center](#) to obtain this driver.
- The online FAQ also provide detailed information about this driver.
- A wireless data connection can be made by using the device’s Sprint Hotspot feature.

To activate USB tethering:

1. Press  and tap  >  > **More settings**.
2. Tap **Tethering** > **USB tethering** to add a checkmark and activate the feature. While in USB tethering, the status bar will display .

Note: The **USB tethering** option is only available when the device is connected to the computer. Otherwise, it is grayed out.

To activate Bluetooth tethering:

1. Press  and tap  >  > **More settings**.
2. Tap **Tethering** > **Bluetooth tethering** to add a checkmark and activate the feature. The Bluetooth tethering icon displays in the status area.

To access help:

1. Press  and tap  >  > **More settings**.

DRAFT For Internal Use Only

2. Tap Tethering > Help.

Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

Activate a Connection

1. Press  and tap  >  > **More settings**.
2. Tap the ON/OFF slider to turn Wi-Fi direct On .
3. Tap **Wi-Fi Direct** to set up a peer-to-peer connection over Wi-Fi. While Wi-Fi Direct mode is On,  **Wi-Fi Direct is on** displays in the Status bar.

Note: The target device must also have Wi-Fi Direct service active and running before it can be detected by your device.

Assign a Unique Name

1. Press  and tap  >  > **More settings** > **Wi-Fi Direct**.
2. Tap  > **Device name**.
3. Modify the current name and then tap **OK**.

VPN

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

Before you add a VPN you must determine which VPN protocol to use: **PPTP**, **L2TP/IPSec PSK**, **L2TP/IPSec RSA**, **IPSec Xauth PSK**, **IPSec Xauth RSA**, or **IPSec Hybrid RSA**.

Note: You must configure a PIN or alphanumeric password before using credential storage functions.

1. Press  and tap  >  > **More settings**.
2. Tap **VPN** > **Add VPN network**.
3. Enter a name for the VPN network in the **Name** field.
4. Select a VPN type from the **Type** drop-down menu. The options are

DRAFT For Internal Use Only

- PPTP (Point-to-Point Tunneling Protocol)
 - L2TP/IPSec PSK (Layer 2 Tunneling Protocol / Internet Protocol Security Pre-Shared Key)
 - L2TP/IPSec RSA
 - IPSec Xauth PSK
 - IPSec Xauth RSA
 - IPSec Hybrid RSA
5. Enter the Server address and any other required fields that are dependent upon the **Type** you entered previously.
 6. Tap the **Show advanced options** check box to display additional VPN options.
 7. Tap **Save** to save your VPN settings.

Nearby Devices

This option allows you to share your media files with nearby devices using DLNA.

1. Press  and tap  >  > **More settings** > **Nearby devices**.
2. Verify Wi-Fi Direct is enabled and you are paired with the device you wish to detect and share content with.
3. Tap the ON/OFF slider to turn File sharing On.
4. At the Nearby devices prompt, tap **OK**.
5. Tap **Shared contents** and then check the media you would like to share. Tap **OK**.
6. Tap **Device name** and then use the onscreen keyboard to change the name shown to others. Tap **Save**.
7. Tap **Access control** and then tap what devices are allowed access. Choose from **Allow all** or **Only allowed devices**. The allowed devices are configured in the following Allowed devices list.
8. Tap **Allowed devices list** and then select the connected devices you would like to allow.
9. Tap **Not-allowed devices list** and then select the connected devices you would like to exclude.
10. Tap **Download to** and then select the destination of any downloaded (shared) content. Choose from **USB storage (device)** or **SD card**.

11. Tap **Upload from other devices** and then select the actions you'll take when you upload content from other devices. Choose from either **Always accept**, **Always ask**, or **Always reject**.

Roaming

Your roaming settings allow you to connect to your service provider's partner networks and access voice and data services when you are out of your service provider's area of coverage.

Roaming Network

1. Press  and tap  >  > **More settings**.
2. Tap **Roaming** > **Roaming network**. Choose from the following:
 - **Sprint Only** to access only the home area mobile network, which is the Nationwide Sprint Network. This option also prevents roaming on other networks.
 - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the device searches for an alternate system.

Roaming Settings

1. Press  and tap  >  > **More settings**.
2. Tap **Roaming** > **Roaming settings** and select your roaming options.
 - Under **Domestic**, select or deselect **Data**.
 - Under **International**, select or deselect **Data**.

Roaming Guard

1. Press  and tap  >  > **More settings**.
2. Tap **Roaming** > **Roaming guard**. Choose from the following:
 - Under **Domestic**, select or deselect **Data**.
 - Under **International**, select or deselect **Data**.

Sound Settings

The Sound settings menu lets you control your device's audio, from ringtones and alerts to touch tones and notifications.

Volume

DRAFT For Internal Use Only

Default Notifications

Touch Sounds

Screen Lock Sounds

Volume

The **Volume** menu provides access to various volume settings within one onscreen popup menu. You can adjust the volume settings to suit your needs and your environment.

1. Press  and tap  >  > **Sound**.
2. Tap **Volume**.
3. Touch and drag the onscreen sliders to assign volume level settings for the following:
 - Music, video, games, and other media; Notifications; and System.
4. Tap **OK** to assign the volume levels.
 - You can adjust the media volume in standby mode by using the volume button on the top of your device.

Default Notifications

The notification area displays icons associated with user notifications such as email messages or upcoming events. You can select the sound that plays when your device receives new notifications.

1. Press  and tap  >  > **Sound**.
2. Tap **Default notifications** and then tap a notification type from the available list. The sound briefly plays when selected.
3. Tap **OK** to assign the sound.

Touch Sounds

When enabled, sounds play when you touch the screen to make selections.

1. Press  and tap  >  > **Sound**.
2. Tap the checkbox to enable playing a sound when making a screen selection.

Screen Lock Sounds

When enabled, sounds play when locking and unlocking the screen.

DRAFT For Internal Use Only

1. Press  and tap  >  > **Sound**.
2. Tap the checkbox to enable playing a sound when locking and unlocking the screen.

Display Settings

Adjusting your device's display settings not only allows you to personalize the look and feel of your device, it can also help increase battery life.

[Brightness](#)

[Screen Timeout](#)

[Auto-rotate Screen](#)

[Font Style](#)

[Font Size](#)

[Quick Launch](#)

Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press  and tap  >  > **Display**.
2. Touch **Brightness** and select the checkmark next to **Automatic brightness** to allow the device to adjust brightness automatically.
3. Clear the checkmark and then touch and drag **Brightness** slider left or right to adjust the screen contrast and tap **OK**.

Screen Timeout

Screen timeout lets you select how long the display screen remains lit after you press any key.

1. Press  and tap  >  > **Display** > **Screen timeout**.
2. Tap a time setting. Choose from **15 seconds**, **30 seconds**, **1 minute**, **2 minutes**, **5 minutes**, **10 minutes**, or **30 minutes**.

Auto-rotate Screen

The Auto-rotate Screen feature can be manually enabled to change the orientation for all screens when rotation is detected. See [Rotate](#) for more information.

DRAFT For Internal Use Only

1. Press  and tap  >  > **Display**.
2. Touch **Auto-rotate screen** (enabled by default). A green checkmark indicates the feature is enabled.

Font Style

You can set the font for all text that displays on your device.

1. Press  and tap  >  > **Display**.
2. Tap **Font style**. Choose from **Default font**, **Choco cooky**, **Helvetica S**, or **Rosemary**.

Tip: To acquire additional font options, tap **Get fonts online** to access new fonts in the Google Play Store app.

Font Size

This option allows you to select which size of font is displayed.

1. Press  and tap  >  > **Display**.
2. Tap **Font size**. Choose from **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.

Quick Launch

This multifunctional key allows you to quickly open an application or perform a task. You can change or remove Quick Launch key (the default is screen capture).

1. Press  and tap  >  > **Display**.
2. Tap **Quick launch** and select one of the features. Select **None** to remove the key from the menu bar.

Wallpaper Settings

The Wallpaper settings option allows you to set the Wallpaper for your Home screen, Lock screen, or both. Wallpapers consist of either Gallery images (user taken), Live wallpapers (animated backgrounds), or Wallpaper gallery (default device wallpapers).

[Home Screen Wallpaper](#)

[Lock Screen Wallpaper](#)

[Home and Lock Screens Wallpaper](#)

DRAFT For Internal Use Only

Home Screen Wallpaper

You can select a unique picture to display as your wallpaper on the Home Screen. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. Press  and tap  >  > **Wallpaper**.
2. Tap **Home screen** and then tap a wallpaper type from the available list. Choose from **Gallery**, **Live wallpapers**, or **Wallpapers**.

Note: You can also assign wallpaper preferences by pressing and holding a spot on a Home screen and selecting Set wallpaper for **Home screen**, **Lock screen**, or **Home and lock screens**.

Lock Screen Wallpaper

You can select a unique picture to display on the Lock Screen. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. Press  and tap  >  > **Wallpaper**.
2. Tap **Lock screen** and then tap a wallpaper type from the available list. Choose from **Gallery** or **Wallpapers**.

Note: You can also assign wallpaper preferences by pressing and holding a spot on a Home screen and selecting Set wallpaper for **Home screen**, **Lock screen**, or **Home and lock screens**.

Home and Lock Screens Wallpaper

This feature assigns the same image to both the Home screen and Lock screens.

1. Press  and tap  >  > **Wallpaper**.
2. Tap **Home and lock screens** and then tap a wallpaper type from the available list. Choose from **Gallery**, **Live wallpapers**, or **Wallpapers**.

Note: You can also assign wallpaper preferences by pressing and holding a spot on a Home screen and selecting Set wallpaper for **Home screen**, **Lock screen**, or **Home and lock screens**.

Power Saving Settings

Control your device's data delivery and battery usage through this settings menu.

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Turn 4G off when not in use.
- Turn off Sprint Hotspot (Wi-Fi hotspot) services when not in use. This is one of the largest drains on your battery as it is not only transmitting a Wi-Fi connection to your device but is also doing it while using a 4G connection.
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Use the **Power saving** widget to deactivate hardware functions such as Wi-Fi, Bluetooth, GPS, Synchronization, or LCD brightness setting.
- Check the Battery use screen to review what features or functions have been consuming your battery resources.
- Check the Running Services and close any unnecessary applications.
- Animated wallpapers use an increased amount of power and memory. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.

Access Power Saving Settings

1. Press  and tap  >  > **Power saving**.
2. Tap the ON/OFF slider to ON to **Use Power saving** to allow the device to switch to power saving mode when the battery is low.
3. Choose from the following options to customize the settings:
 - **CPU power saving**: allows you to limit the maximum performance of the CPU.
 - **Screen power saving**: allows you to lower the screen power level.

DRAFT For Internal Use Only

- **Learn about power saving:** provides additional information about **Power saving** settings.

Storage Settings

You can manage the information and configuration related to both your microSD card and built-in device storage memory. You can choose to store items either in the built-in device storage memory or in the optional microSD card. For information about transferring files from a computer to either device storage option, see [Transfer Files Between Your Device and a Computer](#).

Device Memory

SD Card

Device Memory

From this menu you can view the memory allocation for the memory.

► Press  and tap  >  > **Storage**.

Total Space

Total space indicates the total size of the device's memory. This includes both available and used space information.

Apps

Applications displays the amount of memory occupied by running applications.

Pictures, videos

Pictures, videos displays the amount of memory occupied by pictures and videos stored on your device.

Audio (music, ringtones, podcasts)

Audio displays the amount of memory occupied by any audible files.

Downloads

Downloads displays the amount of memory occupied by files downloaded from an email account, the Internet, or other outside sources.

Miscellaneous files

Miscellaneous files displays the amount of memory dedicated to files such as information stored on the clipboard or downloaded application files.

DRAFT For Internal Use Only

Available Space

Available Space indicates the total amount of space within the device's memory.

SD Card

Your device lets you use a microSD™ (also referred to as a memory card) to expand available memory space. This section provides information about mounting, unmounting and formatting it.

► Press  and tap  >  > **Storage**.

Total Space

Total space indicates the total size of the currently inserted microSD card. This includes both available and used space information.

To determine the amount of memory currently used on the card, take the total space and subtract the remaining available space.

Note: Not all of the microSD card is registered in the available space, as a small percentage of the storage is unread. A 16GB microSD card will show approximately 14.73GB of total space.

Available Space

Available space indicates the amount of remaining free memory space available on the microSD card.

Unmount SD Card

1. Press  and tap  >  > **Storage**.
2. Tap **Unmount SD** card to release the microSD card from its use by the device. When the memory card is safe to remove, a notification displays in the status area.
 - The microSD card must first be mounted in order to unmount it.

Format SD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press  and tap  >  > **Storage**.
2. Tap **Format SD card** > **Format SD card** > **Delete all**.

DRAFT For Internal Use Only

- If you have a lock code or pattern set, you will be prompted to enter it before proceeding with the formatting.
- Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).
- The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Battery Settings

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained.

At 5% of charge capacity, the device sounds an audible alert, displays a critical charge icon, and then turns off.

Battery Use

Use the battery settings menu to view what apps or processes have been using the battery.

► Press  and tap  >  > **Battery**.

Application Manager

Manage your device's applications, control running applications, and monitor your memory use from the Application manager.

Manage Applications

Running Services

Memory Use

Manage Applications

Use the Application manager menu to quickly erase selected content and uninstall third-party applications stored in your device.

To clear an application's cache:

1. Press  and tap  >  > **Application manager**.
2. Tap  and tap **Sort by size**. This option sorts the current applications listing to display those applications by amount of memory or cache usage.

DRAFT For Internal Use Only

3. Tap the application whose cache you wish to delete.
4. From the Application info screen, tap **Clear data** and/or **Clear cache**.

To uninstall third-party applications:

1. Press  and tap  >  > **Application manager**.
2. Tap the third-party application, and from the Application info screen, tap **Uninstall**.

Running Services

This service efficiently manages power consumption and processor/memory resources. Processes can be stopped until the device is restarted.

To stop a currently running service:

1. Press  and tap  >  > **Application manager**.
2. Tap **Running**, select an onscreen process entry, and tap **Stop**.
3. Read the **Stop system service?** dialog and tap **OK**.
 - These stopped processes restart once the device is restarted (power cycled).
 - Third-party Task Manager applications are also available from the Google Play Store app.

Note: You can also access the most recently used applications by touching . For more information, refer to [Recently Used Applications](#).

Memory Use

View storage used by currently running applications.

- ▶ Press  and tap  >  > **Application manager**. The bottom of the screen displays the amount of RAM used by all running services.

Accounts and Sync Settings

Your device provides the ability to synchronize data from a variety of different sources or sites. These accounts can range from Google, a Corporate Microsoft Exchange Email Server, and other social sites. Corporate and Google accounts provide the ability to synchronize Calendar events and Contacts.

[Set Up a New Account](#)

DRAFT For Internal Use Only

Manage Existing Accounts

Set Up a New Account

You can set up a new account using the following procedures.

1. Press  and tap  >  > **Accounts and sync**.
2. Tap **Add account** and tap an account type.
 - **Samsung account, Dropbox, Email, Facebook (for syncing), Google, LDAP, and Microsoft Exchange ActiveSync.**
3. Enter your account information and tap **Next**.
 - Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Corporate Exchange Email Server accounts, contact your server administrator to determine what information you will need.
4. Tap **Done** when you are finished.

Manage Existing Accounts

You can manage a current account by using the following procedures.

1. Press  and tap  >  > **Accounts and sync**.
2. Tap an account to edit its settings.
 - Tap a field to edit its settings.
 - Tap **Remove account** to delete the account from your device.
3. Tap **Done** when you are finished.

Location Services Settings

Your device is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

- Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your device. No application or service

DRAFT For Internal Use Only

may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

Use Location Services

Use GPS Satellites

Location and Google Search

Use Location Services

Use the following steps to use wi-fi or mobile networks to determine your device's location.

1. Press  and tap  >  > **Location services**.
2. Tap **Use wireless networks**. A green checkmark indicates the feature is enabled.
 - This service uses available wireless networks to pinpoint your location within certain applications such as [Google Maps](#).
3. Tap **Agree**. Enabling this feature allows Google to collect anonymous location data whether or not any location application or other related feature is active or in use.

Use GPS Satellites

Use the following steps to enable your device's GPS location feature.

1. Press  and tap  >  > **Location services**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled.

Location and Google Search

This option allows you to quickly refine your search results by permitting Google to use your location data.

1. Press  and tap  >  > **Location services**.
2. Tap **Location and Google search** and tap **Agree** to enable the positioning sensors.

Security Settings

This menu contains features that allows you to configure the device's security parameters.

Screen Lock

Encrypt Device **DRAFT For Internal Use Only**

[Encrypt SD card](#)

[Make Passwords Visible](#)

[Device Administrators](#)

[Unknown Sources](#)

[Trusted Credentials](#)

[Install from Device Storage](#)

[Clear Credentials](#)

Screen Lock

You can increase the security of your device by creating a screen lock. When enabled, you either swipe the screen, detect accessibility through facial recognition, draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the device's control keys, buttons, and touchscreen.

You can choose among these lock options, listed in approximate order of strength:

Use Swipe

1. Press  and tap  >  > **Security**.
2. Tap **Screen lock** > **Swipe**.

Note: If you previously had a pattern, PIN, or password assigned, you will need to enter it before changing the screen lock type.

Use Face Unlock

1. Press  and tap  >  > **Security**.
2. Tap **Screen lock** > **Face unlock**.
3. Tap **Set it up**, find a location with mid-strength lighting (not too bright or too dim), and tap **Continue**.
4. Face the screen toward yourself, hold the device at eye level, and position your face within the boundaries of the dotted oval.

Note: If the device cannot detect all of your facial features, the screen will display, “**Can’t find part of your face**”.

5. After the device recognizes your face, a checkmark will display within the oval and the screen displays, “**Face captured**.”

6. Tap **Continue** and create a security pattern or PIN. You will use one of these security features if the device does not recognize your face when you attempt to unlock the device.
7. Set your backup **Pattern** or **PIN** and tap **OK**.

Note: If your screen lock is currently set to **Face unlock**, you can improve its performance by capturing your face data again under different lighting conditions. To improve facial recognition, tap **Settings > Security > Improve facial recognition**.

Use a Screen Unlock Pattern

1. Press  and tap  >  > **Security**.
2. Tap **Screen lock > Pattern**, read the information on the screen, and tap **Next**.
3. Draw a screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
4. The device records the pattern. Tap **Continue**.
5. When prompted, draw the pattern again, and then tap **Confirm**.
6. Set a backup PIN. If you forget your screen unlock pattern, you can enter your backup PIN to unlock your device.

When unlocking the screen, If you fail to draw the correct unlock pattern on the screen five times, you will be prompted to wait for 30 seconds before you can try again.

What if I Forget My Pattern?

If you forget your lock pattern, you can unlock your device with the backup PIN you set up with your unlock pattern.

To unlock the tablet using a PIN code:

1. Tap **Forgot pattern?** (located at the bottom of the screen).
2. Tap **Type PIN code** and enter the backup PIN you set up when you created your lock pattern.
3. Tap **OK**.

Use a Screen Unlock PIN

1. Press  and tap  >  > **Security**.
2. Tap **Screen lock > PIN**.

DRAFT For Internal Use Only

3. Enter a PIN, tap **OK**, and then enter your PIN again to confirm it.

If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock Password

1. Press  and tap  >  > **Security**.
2. Tap Screen lock > Password.
3. Enter a password, tap **Continue**, and then enter your password again to confirm it.

Note: If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Disable the Screen Lock

1. Press  and tap  >  > **Security**.
2. Tap **Screen lock**, provide your security information, and then tap **None**.

If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Encrypt Device

Data encryption allows you to encrypt all data that is on your device to enhance security after you turn it off.

Important! Password screen lock protection represents the highest level of security; therefore, you must setup a screen lock password in order to use device decryption. For more information, see [Screen Lock](#).

1. Press  and tap  >  > **Security**.
2. Read the general encryption information and tap **Encrypt device**.
3. At the Encrypt device prompt, tap **OK**. Your device will restart.
4. Unlock the device. The data on your device is encrypted and your device will restart again. The icon is displayed on the top bar of your display showing that your data is encrypted.

DRAFT For Internal Use Only

Encrypt SD card

Prevent another user from accessing information stored on your SD card by protecting the information using a password. When enabled, your device will ask for a password each time you use the device. Using this option you can also change your SD card PIN number.

Important! Password screen lock protection represents the highest level of security; therefore, you must setup a screen lock password in order to use SD card encryption. For more information, see [Screen Lock](#).

1. Press  and tap  >  > **Security**.
2. Tap Encrypt external SD card.

Make Passwords Visible

When enabled, this feature allows you to view the text being entered into a password field as you type it. Many times, other applications insert an asterisk (*) as you type. This can cause issues and confusion. What if you mis-typed the password or used the wrong case? When enabled, you can see your entry. This feature is enabled by default.

Disable Visible Passwords

1. Press  and tap  >  > **Security**.
2. Tap **Make passwords visible** (to remove the checkmark on the option).

Device Administrators

Activating this feature allows Google to administrate your device in a way similar to IT security settings on a corporate PC. This would be beneficial in the case that your device was lost or stolen. The device could be “deactivated” or “restricted” (through administration) from a remote location.

Select Device Administrators

The Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your device is lost or stolen).

These applications enforce remote or local device security policies. Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

DRAFT For Internal Use Only

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

1. Press  and tap  >  > **Security**.
2. Tap **Device administrators** and tap an account.
3. Tap **Deactivate** to remove the current administrator.

Unknown Sources

This feature allows you to download and install applications from sources other than Google Play™ Store.

1. Press  and tap  >  > **Applications**.
2. Tap **Unknown sources** and then tap **OK** to confirm. A green checkmark indicates the feature is enabled.

Trusted Credentials

Use this feature to allow applications to access secure certificates and other credentials.

To use secure credentials:

1. Press  and tap  >  > **Security**.
2. Tap **Trusted credentials** to display the list of your device's trusted CA certificates. A green checkmark indicates the certificate is enabled.

Install from Device Storage

Use this setting to install encrypted certificates from your USB storage.

1. Press  and tap  >  > **Security**.
2. Tap **Install from device storage** and then tap a certificate file and follow the onscreen prompts.

Clear Credentials

Use this setting to clear the credential storage of all contents and reset the password.

1. Press  and tap  >  > **Security**.
2. Tap **Clear credentials**.

DRAFT For Internal Use Only

Language and Input Settings

Your device's Language settings let you select a language for the device's screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more.

[Language](#)

[Default Input Method](#)

[Google Voice Typing Settings](#)

[Samsung Keyboard Settings](#)

[T9 Trace](#)

[Swype Settings](#)

[Voice Search](#)

[Text-to-speech Output](#)

[Pointer Speed](#)

Language

Use these procedures to change the language that displays on your device.

1. Press  and tap  >  > **Language and input**.
2. Tap **Language** and tap either **English** or **Español**. All menus are then updated to the new language.

Default Input Method

The following procedure allows you to select the default method for entering text.

1. Press  and tap  >  > **Language and input**.
 2. Tap **Default**, and then select **Samsung keyboard** or **Swype**.
- or -
1. From a screen where you can enter text, touch  in the notification bar.
 2. Tap an available input method.

DRAFT For Internal Use Only

Note: Within either dialog box, you can tap the  icon to access Keyboard and input methods settings. For more information about the applicable input method setting procedures, refer to [Text Input Methods](#).

Google Voice Typing Settings

This feature listens to your voice input and translates it into text.

1. Press  and tap  >  > **Language and input**.
2. Tap  to the right of **Google voice typing** to access the following options:
 - **Select input languages:** allows you set the language you will be using for your voice input and output.
 - **Block offensive words:** allows you to hide recognized offensive words.

Samsung Keyboard Settings

The Samsung Keyboard is an onscreen QWERTY keyboard.

1. Press  and tap  >  > **Language and input**.
2. Tap  to the right of **Samsung keyboard** to access the following options:
 - **Input language:** allows you to select the text input language. Choose from either **English (US)** or **Español**.
 - **Predictive text** enables predictive text entry mode. This must be enabled to gain access to the advanced settings. Tap **Predictive text** to access the advanced settings.
 - **My word list** to add a list of words you commonly use within your sentences.
 - **T9 Trace** allows you to enter words by swiping between onscreen keys.
 - **Handwriting** enables the device to recognize onscreen handwriting and convert it to text.
 - **Voice input** activates the Voice input feature. This feature uses Google's networked speech recognition application to convert speech into text.
 - **Auto capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
 - **Auto-punctuate** automatically inserts a period at the end of a sentence when you tap the space bar twice while using the onscreen QWERTY keyboard.

DRAFT For Internal Use Only

- **Character preview** provides an automatic preview of the current character selection within the text string. This is helpful when multiple characters are available within one key.
- **Key-tap sound** enables auditory feedback when you tap an onscreen key.
- **Tutorial** launches a brief onscreen tutorial covering the main concepts related to the Samsung keyboard.
- **Reset settings** resets the keyboard settings back to their original configuration.

T9 Trace

T9 Trace is built into the Samsung keyboard. This method allows you to enter a word by sliding your finger from letter to letter and lifting it between words. T9 Trace uses error correcting algorithms and a language model to predict the next word and includes a touch predictive text system.

Enabling T9 Trace

When T9 Trace is enabled, the onscreen keyboard can be used to enter text by tapping or swiping across the onscreen keys.

1. Press  and tap  >  > **Language and input**.
2. Tap  to the right of **Samsung keyboard**.
3. Touch the check mark to the right of **T9 Trace** to enable T9 Trace text entry.

Swype Settings

Swype provides next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.

1. Press  and tap  >  > **Language and input**.
2. Tap  (adjacent to the **Swype** field) to display the **Swype settings** screen. For information about Swype, see [Swype](#).

Voice Search

The Voice Search feature is a voice-activated application that allows you to tell the device what to search for and then the device activates a Google search based on what you said.

1. Press  and tap  >  > **Language and input**.
2. Tap **Voice Search** to access the following options:

DRAFT For Internal Use Only

- **Language:** allows you set the language you will be using for your voice input and output.
- **SafeSearch:** allows you to filter explicit images when performing voice searches. You can set to **Off**, **Moderate**, or **Strict**.
- **Block offensive words:** allows you to block recognition of known offensive words or language. (A green check mark indicates the feature is active).

Text-to-speech Output

The Text-to-speech output feature allows the device to provide a verbal readout of onscreen data such as messages and incoming caller information (based on Caller ID). Tap **Text-to-speech output** to access the following options:

1. Press  and tap  >  > **Language and input**.
2. Tap **Text-to-speech output** to access the following options:
 - **Preferred TTS engine**
 - **Google text-to-speech Engine:** allows you to use and modify Google Text-to-speech settings. Tap  to the right of **Google text-to-speech** for additional settings.
 - **General**
 - **Speech rate:** adjusts the rate at which onscreen text is spoken by the device. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
 - **Listen to an example:** plays a short example of what the text-to-speech feature sounds like on your device when activated.
 - **Driving mode:** allows new notifications to be automatically read aloud.

Pointer Speed

This feature allows you to adjust the speed of the Mouse/trackpad.

1. Press  and tap  >  > **Language and input**.
2. Tap **Pointer speed**, adjust the slider according to your speed preference, and tap **OK**.

Back Up and Reset Settings

Your device's Privacy menu includes the **Factory Data Reset** option. This option lets you reset your device to the original factory settings, which erases all data from the device's application storage.

DRAFT For Internal Use Only

Backup and Restore

Factory Data Reset

Backup and Restore

The device can be configured to back up your current settings, application data and settings.

1. Press  and tap  >  > **Back up and reset**.
2. Tap **Back up my data** to create a backup of your current device settings and applications.
3. Tap **Backup account** to assign the account being backed up.
4. Tap **Automatic restore** to assist in the re-installation of a previously installed application (including preferences and data).
5. Tap **Factory data reset** to reset your device and sound settings to the factory default settings. For more information, see [Factory Data Reset](#).

Factory Data Reset

From this menu you can reset your device and sound settings to the factory default settings.

1. Press  and tap  >  > **Backup and reset** > **Factory data reset**.
2. Read the onscreen reset information.
3. Tap **Reset device**.
4. If necessary, enter your password and tap **Delete all**. The device resets to the factory default settings automatically and when finished displays the Home screen.

Accessory Settings

Configure settings for attaching your device to optional accessories, such as a dock, or to another devices with an HDMI cable (accessories not included).

1. Press  and tap  >  > **Dock**.
2. Tap **Dock sound** to play sounds when inserting or removing the device from the dock.
3. Tap **Audio output** to use the external dock speakers when the device is docked.

DRAFT For Internal Use Only

Date and Time Settings

When in network coverage, your device obtains its time and date information from the network. In cases where you are not in network coverage, you can use Date and time settings to manually set the date and time. You can also choose the format for displaying the date and time.

1. Press  and tap  >  > **Date and time**.
2. Configure options:
 - **Automatic date and time:** When enabled, your device obtains date and time from the network. When disabled, you can use Set date and Set time to set the current time and date.
 - **Set date:** When Automatic date and time is disabled, tap to set the current date.
 - **Set time:** When Automatic date and time is disabled, tap to set current time.
 - **Automatic time zone:** When enabled, the device obtains the time zone from the network.
 - **Select time zone:** When Automatic time zone is disabled, tap to select a time zone.
 - **Use 24-hour format:** Choose 12-hour or 24-hour format.
 - **Select date format:** Select how the date information is displayed on your device. The selected date format is also used in the Alarm app.

Accessibility Settings

Use Accessibility settings to configure options to simplify device use and improve accessibility for users with vision or hearing issues.

This service is able to collect all the text you type, including personal data credit card numbers except passwords. It may also log your user interface interactions. With TalkBack, every interaction and key press is explained in audio. The Accessibility menu also allows you to set various vision, hearing, and access options.

TalkBack Settings

Access Accessibility Settings

1. Press  and tap  >  > **Accessibility**.
2. Select your settings from the following options:

DRAFT For Internal Use Only

- Tap **Auto-rotate screen** to allow automatic rotation from the screen between landscape and portrait.
- Tap **Speak passwords** to allow the device to read aloud password information.
- Tap **Accessibility shortcut** to have a link to Accessibility settings appear on the Device options menu, which appears when you press and hold the power key.
- Tap the **Screen timeout** option to timeout the accessibility feature after a defined amount of time.
- Tap **TalkBack** to activate the TalkBack feature. For more information, see [TalkBack Settings](#).
- Tap **Install Web scripts** to allow apps to install scripts from Google that make their Web content more accessible. Tap **Allow**.
- Tap **Font size** to change the size of the fonts used on the device. Choose from: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
- Tap **Mono audio** to enable stereo audio to be compressed into a single mono audio stream for use with a single earphone.
- Tap **Turn off all sounds** to mute every sound made by the device during taps, selections, notifications, etc.
- Tap **Tap and hold delay** to select a time interval to wait before interpreting a tap as a tap and hold. Choose **Short**, **Medium**, or **Long**.

TalkBack Settings

TalkBack provides spoken feedback, to describe what you touch, select and activate on the device.

1. Press  and tap  >  > **Accessibility** > **TalkBack**.
2. Tap the ON/OFF slider to turn on TalkBack.
3. Tap **Settings** and choose from the following options:
 - **Ringer volume**: instructs the TalkBack program to provide voice feedback at all ringer volumes or not to provide voice feedback during silent or vibrate mode.
 - **Speak when screen is off**: instructs the TalkBack program to provide voice feedback when the screen is off.
 - **Speak caller ID**: instructs the TalkBack program to provide voice feedback for caller ID.

DRAFT For Internal Use Only

- **Bluetooth output:** instructs the TalkBack program to provide voice feedback through Bluetooth connections when available.
- **Sound feedback:** allow you to enable sound feedback when you touch the screen.
- **Sound volume:** allows you to customize the volume return based upon the volume of your voice. Choose from **Match speech volume**, **75% of speech volume**, or **50% of speech volume**.
- **Assign sounds:** allows you to select sounds to differentiate between touchable and clickable items.

Developer Options Settings

Use the Developer Options to set options for application development.

Important! These features are used for development purposes only.

► Press  and tap  >  > **Developer options.**

USB Debugging

Development Device ID

Allow Mock Locations

Desktop Backup Password

User Interface Options

Application Options

USB Debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

1. Press  and tap  >  > **Developer options.**
2. Tap **USB debugging** to enable or disable the setting. When enabled, a check mark appears in the check box.

Development Device ID

The identification number for your tablet when using it as a development tool displays in this field.

DRAFT For Internal Use Only

Allow Mock Locations

If you are a developer who is testing a GPS applications using this device, you can use mock locations to tell the device that the device is at different GPS locations. In other words, the device is allowed to “mock” the coordinates. This feature is used for development purposes only.

1. Press  and tap  >  > **Developer options**.
2. Tap **Allow mock locations** to enable or disable the setting. When enabled, a check mark appears in the check box.

Desktop Backup Password

Protect the desktop with a backup password ID.

1. Press  and tap  >  > **Developer options**.
2. Tap Desktop backup password.
3. In the Settings screen, enter the current full backup password, the new password for full backups and then enter the new password again.
4. Tap **Set backup password** to save the password change.

User Interface Options

Configure the user interface by setting the behavior for the way the screen behaves when using applications or displaying data.

1. Press  and tap  >  > **Developer options**.
2. Tap the check box next to each option to enable:
 - **Strict mode:** Makes the screen flash when applications perform long operations on the main thread.
 - **Show pointer location:** Highlights the data that was touched on the screen.
 - **Show touches:** Displays touch interactions on the screen.
 - **Show screen updates:** Areas of the screen flash when they update.
 - **Show CPU usage:** Screen highlights the current CPU usage.
 - **Force GPU rendering:** Uses a 2D acceleration in applications.

DRAFT For Internal Use Only

- **Window animation scale:** Configure the scale for animation (ranges from off to 10x).
- **Transition animation scale:** Configure the scale for transitioning when using animation (ranges from off to 10x).

Application Options

These options allow you to manage applications that are running in the background.

1. Press  and tap  >  > **Developer options**.
2. Tap **Do not keep activities** to destroy every activity as soon as the application is closed.
3. Tap **Limit background processes** to set the number of processes that can run in the background. Options are: Standard limit, No background processes, and 1 to 4 processes at most.
4. Tap **Show all ANRs** to display a prompt when applications running in the background are not responding.

System Update Settings

This feature contains tools that allow you to update your device to the latest PRL, Profile, Samsung Software, and Firmware. Access this menu on a regular basis to ensure that your device maintains the most recent system enhancements and security features.

[Update PRL](#)

[Update Profile](#)

[Update Samsung Software](#)

[Update Firmware](#)

Update PRL

This option allows you to download and update the preferred roaming list (PRL) automatically.

1. Press  and tap  >  > **System Update** > **Update PRL**.
2. Follow the onscreen instructions.

Update Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

DRAFT For Internal Use Only

1. Press  and tap  >  > **System Update > Update Profile.**
2. Follow the onscreen instructions.
 - If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Samsung Software

Use this feature to upgrade your device to the latest software.

1. Press  and tap  >  > **System Update > Update Samsung Software.**
2. Follow the onscreen instructions.

Update Firmware

Once you have backed up all your data, use the Update Firmware option to update your device firmware.

1. Press  and tap  >  > **System Update.**
2. Tap **Update Firmware.** Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.

About Device

The About Device menu lets you access important device information, such as the device model number, Android version, Baseband version, Kernel version, Build , signal strength, mobile network type, service state, roaming status, mobile network state, IMEI number, Wi-Fi MAC address, Bluetooth address, mobile device number (MDN), software version network, and legal information.

Status

This option displays the battery status, the level of the battery (percentage), the MDN for this device, battery status and level, User name, and signal strength.

- Press  and tap  >  > **About device > Status.**

Legal Information

This option displays information about Open source licenses as well as Google legal information. This information clearly provides copyright and distribution legal information and

DRAFT For Internal Use Only

facts as well as Google Terms of Service, Terms of Service for Android-powered Devices, and much more pertinent information as a reference.

► Press  and tap  >  > **About device** > **Legal information**.

DRAFT For Internal Use Only

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your device as well as contacts synchronized with your Google account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

[Get Started With Contacts](#)

[Add a Contact](#)

[Edit a Contact](#)

[Synchronize Contacts](#)

[Add Entries to Your Favorites](#)

[Add Facebook Content to your Contacts](#)

[Create Groups](#)

[Share a Contact](#)

Get Started With Contacts

Before using Contacts, it's best to learn a few basics.

Your device automatically sorts the Contacts entries alphabetically. You can create a Google contact, a device contact, or a Corporate (Microsoft Exchange ActiveSync) contact.

- **Device** contacts are stored locally on the device.

Note: If the device is ever reset to its factory default parameters, locally stored contacts (device contacts) can be lost.

- **Google** contacts are shared with your existing Google account and can also be imported to your device after you have created a Google Mail account.
- **Microsoft Exchange ActiveSync** (also known as Work or Outlook) contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.

The Contacts List

Your device automatically sorts the Contacts entries alphabetically. You can create either a **Google**, **Microsoft Exchange ActiveSync**, or **Device** contact.

DRAFT For Internal Use Only

► Press  and tap  > . You will see the Contacts list.

- **Contacts List:** The Contacts list displays all contacts currently stored in your device, including Google contacts, Exchange ActiveSync contacts, Device contacts, and Facebook contacts.
- **Create Contacts:** Tap  to add a contact.

Scroll through the list to view all your contacts. To see a specific entry, scroll to it and tap it.

Tip: To quickly move to a specific section in your contact list, tap a letter on the right side of the list to go directly to that letter in the alphabetical list.

Contacts List Options

- From the Contacts list, tap  to display the main contacts list options.
- **Delete contacts:** erases the currently selected contact or contacts.
 - **Merge with Samsung account:** allows you to join your device contacts with an existing Samsung account.
 - **Merge with Google:** allows you to join your device contacts with an existing Google account.
 - **Send email:** allows you to send an email to the selected contact via **Gmail** or **Email**.

Note: Prior to sending an email, you must first add a Google or Email account.

- **Send namecard via:** allows you to send contact entry information to a selected contact.
- **Contacts to display:** allows you to select a specific location from which to pull contacts which will display in your Contacts list.
- **Import/Export:** imports or exports the selected contact information from a specified location.
- **Accounts:** displays your managed accounts.
- **Settings:** displays options for viewing contacts, including whether to show only contacts with phone numbers and whether to list or display by first name or last name. There is also an option to select how contacts are transferred to another device, either individually or as a full group.

DRAFT For Internal Use Only

Add a Contact

You can add contacts directly from the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Press  and tap  > .
2. From the top of the screen, tap .
3. Tap a destination for the contact, such as **Google**, **Samsung account**, **Microsoft Exchange ActiveSync**, or **Device**.

Note: Available options depend on the accounts set up on your device. You will not see the option to select a destination unless you have previously set up a Google or Microsoft Exchange Active Sync account on the device.

1. On the **Create contact** screen, tap  and assign a picture to the new entry by choosing one of three options:
 - **Picture:** retrieve a previously stored image from Dropbox or Gallery and assign it to this entry. Tap an image to assign the image to the contact and then tap **Done**. After selecting the picture, you will be prompted to **Crop** it to fit the contact picture ID area. Crop the picture and then tap **Done** to assign it.
 - **Take picture:** use the camera to take a new picture and assign it to this entry and then tap **Done**. After you take a picture, you will be prompted first to **Save** and **Crop** the picture before assigning it to the contact.
2. Tap the **Name** field and use the onscreen keyboard to enter the full name.
– or –

Tap  next to the **Name** field to display additional name fields.

3. Tap the **Phone number** field and use the numerical keyboard to enter the number.
 - Tap the menu next to the Phone number field to select a label for the number, from **Mobile**, **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom** (add your own label), or **Callback**.
 - Tap  to add another **Phone number** field or tap  to delete a field.

4. Tap the **Email address** field and use the keyboard to enter the email address.

DRAFT For Internal Use Only

- Tap the menu next to the Email address field to select a label for the address, from **Home**, **Work**, **Other**, or **Custom** (add your own label).
 - Tap  to add another Email address field or tap  to delete a field.
5. Tap the **Address** field and use the keyboard to enter the address.
- Tap the menu next to the **Address** field to select a label for the address, from **Home**, **Work**, **Other**, or **Custom** (add your own label).
 - Tap  to add another address field or tap  to delete a field.
6. Tap any of the following fields that you want to add to your new contact:
- **Events:** tap  to add a Birthday, Anniversary, Other, or Custom.
 - **Groups:** assign the contact to **Not assigned**, **Co-workers**, **Family**, or **Friends**. You may add other groups to the list. For more information, see [Create Groups](#).
 - **Add another field:** tap this button to add another field such as **Phonetic name**, **Organization**, **IM**, **Notes**, **Nickname**, **Website**, **Internet call**, or **Relationship**.
7. Tap **Save** to save the new contact.

Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign a picture, and more.

[Add or Edit Information for a Contact](#)

[Assign a Stored Picture to a Contact](#)

[Assign a New Picture to a Contact](#)

[Join a Contact](#)

[Delete a Contact](#)

Add or Edit Information for a Contact

You can modify existing contact information to keep your information up-to-date.

1. Press  and tap  > .

2. Tap a contact to display it, and then tap .

DRAFT For Internal Use Only

Tip: You can also touch and hold the contact and then tap **Edit**.

3. Tap any field you want to change or add. See [Add a Contact](#).
4. Add or edit the information, and then tap **Save**.

Assign a Stored Picture to a Contact

Adding a picture to a contact entry creates a more personal and easily recognized entry. Below are procedures for adding a picture already stored in your Gallery.

1. Press  and tap  > .
2. Tap a contact to display it, and then tap .

Tip: You can also touch and hold the contact and then tap **Edit**.

3. Tap  or the currently assigned picture, and then tap **Picture**. See [Open Gallery](#) for more information.
4. Tap an onscreen image to prepare it for use.
5. Touch and drag along the sides of the blue border box to begin cropping the desired area, tap **Done**, and then tap **Save** to assign selected picture.

Assign a New Picture to a Contact

Below are procedures for adding a picture to a contact through taking a new photo.

1. Press  and tap  > .
2. Tap a contact to display it and then tap .

Tip: You can also touch and hold the contact and then tap **Edit**.

3. Tap  or the currently assigned picture, and then tap **Take picture**.
4. Tap  until the shutter sounds. See [Take Pictures](#) for more information.
5. Tap **Save**.

DRAFT For Internal Use Only

6. Touch and drag along the sides of the blue border box to begin cropping the desired area.
7. Tap **Done** to assign the picture. Tap **Save** to save the contact.

Join a Contact

When you have contacts from various sources (Gmail, device, Facebook, etc.), you may have multiple similar entries for a single contact. Your device's Contacts application lets you link multiple entries into a single contact.

1. Press  and tap  > .
2. Tap a contact to display it, and then tap  > **Join contact**.
3. Tap another entry to link it to the original contact.

Note: You can join up to five contacts in a single entry.

Delete a Contact

You can delete a contact from the contacts details page.

1. Press  and tap  > .
2. Tap a contact to display it, and then tap .

Tip: You can also touch and hold the contact and then tap **Delete**.

3. Tap **OK**.

Synchronize Contacts

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

For more information about syncing existing managed accounts.

To synchronize Gmail contacts:

1. Press  and tap  >  > Accounts and sync.

2. Tap the Gmail account to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to synchronize. A green checkmark indicates the feature is enabled.

Note: In order to use **Sync Picasa Web Albums**, Picasa must be downloaded through your Gmail credentials.

4. Tap  to return to the previous screen.

To synchronize Microsoft Exchange ActiveSync contacts:

1. Press  and tap  >  > **Accounts and sync**.
2. Tap the **Microsoft Exchange ActiveSync** account to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to immediately synchronize.
 - **Sync Calendar** synchronizes your Exchange calendar entries between your device and the remote Exchange server.
 - **Sync Contacts** synchronizes the contacts between your device and the remote Exchange server.
 - **Sync Email** synchronizes your exchange email to any updated email existing on the remote Exchange server.
 - **Sync Tasks** synchronizes your exchange calendar task entries between your device and the remote Exchange server.

Note: Any change on either side (**Device**, **Google**, or **Microsoft Exchange ActiveSync Contacts**), is reflected on the other side after a sync process. The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat steps 2-3.

Note: Your Contacts tab then reflects any updated Contact information.

Note: Syncing of contacts requires you are logged into your Gmail and Corporate accounts via the device.

Add Entries to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

DRAFT For Internal Use Only

1. Press  and tap  > .
2. Touch and hold the entry name from the Contacts tab listing.
3. From the context menu, tap **Add to favorites**.

Note: Another method to add or remove an entry from your favorites is to toggle the state of the star icon on the Contact's details page next to the name. Tap to add the entry to your favorites (star is lit), tap again to remove.

Add Facebook Content to Your Contacts

You can add your Facebook contacts' information, such as pictures, email, and phone numbers directly to your Contacts list. All of the current contacts' information is then migrated over to your device.

Note: You must first have an active Facebook page populated with friends sharing their contact information.

If a Contacts entry already exists in with a slightly different name, separate entries are created and can later be linked (joined) together into a single entry. See [Join a Contact](#).

Add Your Facebook Friends to Your Contacts

Before you can add your friends, you must add your [Facebook account](#) to the list of managed and synchronized accounts. This process is similar to synchronizing your email accounts.

This process not only synchronizes your contact information but also your status, events, and more.

1. Press  and tap  >  > **Accounts and sync**.
2. Tap the Facebook account to reveal the account's synchronization settings screen.
3. Tap **Sync Contacts** to sync your Facebook contacts. If you want to synchronize immediately, tap **Sync now**.

Create Groups

This feature allows you to add a new or existing contact to a group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.

To create a new group:

1. Press  and tap  >  > **Groups**.

DRAFT For Internal Use Only

2. Tap .
3. Tap the **Group name** field and enter a name for the new group.
4. Tap **Add member** and select a member or members to add to the new Group list.
5. Tap **Done** when you are finished adding members, and then tap **Save**.

To add an existing contact to a current group:

1. Press  and tap  >  > **Groups**.
2. Tap the existing group and tap .
3. From the list of contacts, tap the contact(s) you want to add. (A green check-mark appears next to the selected entries.)
4. Tap **Done** > **Save**.

To send an email message to a group:

1. Press  and tap  >  > **Groups**.
2. Tap an existing group and then tap  > **Send email**.
3. Select the recipients of the new message (indicated by a green checkmark) and then tap **Done**.
4. If prompted, select an email account for the message.
5. Type your message, and then tap .

Share a Contact

You can quickly share contacts using Bluetooth, email, or Gmail.

1. Press  and tap  > .
2. Tap a contact to display it, and then press  and tap **Share namecard via**.
3. Send the current contact information to an external recipient via one of the following:

DRAFT For Internal Use Only

- **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
- **Dropbox**: to upload the entries to your remote Dropbox Web storage location.
- **Email** to send the information as an email attachment. If prompted, select an email account. Address the message, add a subject and a message, and then tap **Send**. See [Compose and Send Email](#) for details on sending email.
- **Gmail** to send the information as a Gmail attachment. Address the message, add a subject and a message, and then tap **Send**. See [Send a Gmail Message](#) for details.
- **Wi-Fi Direct** to send the information via a device-to-device connection.

Note: Prior to using the Bluetooth feature, it must first be enabled, and the recipient's device must be visible.

DRAFT For Internal Use Only

Accounts and Messaging

With Sprint service and your device's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

[Gmail / Google](#)

[Email](#)

[Social Networking Accounts](#)

Gmail / Google

You will need a Google account to access several device features such as Gmail, Google Maps, Google Talk, and the Google Play applications. Before you can access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

[Create a Google Account](#)

[Sign In to Your Google Account](#)

[Access Gmail](#)

[Send a Gmail Message](#)

[Read and Reply to Gmail Messages](#)

Create a Google Account

If you do not already have a Google account, you can create one online or using your device.

Note: You can also create and sign into your Google/Gmail account through your device's setup screens.

Although you need a Gmail account to use certain features of your device, such as Google Play, you do not need to use Gmail as the default account for your device.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, click **Sign in > SIGN UP**.
3. Follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

DRAFT For Internal Use Only

Create a Google Account Using Your Device

You will need a Google account to access several device features such as Gmail, Google Maps, Google Talk, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

1. Press  and tap  >  > **Accounts and sync**.
2. Tap **Add Account** > **Google** > **New**.
3. Follow the onscreen prompts to create your free account.

Sign In to Your Google Account

Below are procedures for signing into your Google account.

1. Press  and tap  >  > **Accounts and sync**.
 2. Tap **Add Account** > **Google** > **Existing**, and then enter your Google Account name and password.
 3. Tap **Sign in** and follow the prompts to configure any additional options.
- or -
1. Launch an application that requires a Google account (such as Play Store or Gmail).
 2. Tap **Existing** and then enter your existing user name and password.

Note: If you do not already have a Google account, tap **New** and follow the onscreen prompts to create your new account.

3. Tap **Sign in**. Your device communicates with the Google servers to confirm your information.

Access Gmail

Below are procedures for accessing your Gmail account.

1. Press  and tap  >  (**Gmail**).
2. Do any of the following:
 - **View more email messages:** If the Inbox is full, swipe your finger up the screen to view more messages and conversations.

DRAFT For Internal Use Only

- **Read a new email message:** Tap the unread message or the conversation with an unread message (just-arrived items display in bold).
- **Select messages and conversations:** Tap the box before the email or conversation.
- **View the Inbox of another Gmail account:**
 - Tap **Inbox** at the top of the screen and then tap the inbox of the Gmail account you want to view.

Send a Gmail Message

Below are procedures for sending a Gmail message.

1. Press  and tap  > .
2. From the Inbox, tap .
3. Enter the message recipient's email address in the **To** field.
 - You can add as many message recipients as you want.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients tap **+CC/BCC**.

4. Tap the **Subject** field and enter the email subject.
5. Tap the **Compose email** field and compose your email.
 - To add a picture attachment, tap .
6. To send the message, tap  **SEND**.
 - To save the current email as a draft, tap  > **Save draft**. To later view your draft email messages, from the Inbox, tap **Inbox** and then tap **Drafts**.
 - To delete the current email message, tap  > **Discard**.

Read and Reply to Gmail Messages

Below are procedures for reading and replying to Gmail messages.

1. Press  and tap  > .
2. Tap a message to display its contents.

DRAFT For Internal Use Only

Tip: You can also access new messages through the Notifications bar. When a new Gmail message arrives, you'll see the icon in the Notifications bar. Touch the notifications area to display notifications. Tap a message to display it.

3. Tap  for Reply,  for Reply All, or  for Forward.
 - For **Reply** or **Reply All**, enter an additional message.
 - For **Forward**, enter or select recipients and then enter an additional message.

Tip: To change your selected action, you can tap the drop-down box at the top of the compose screen () and then tap **Reply**, **Reply All**, or **Forward**.

4. To send the message, tap  **SEND**.

Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP. You can also access your Exchange ActiveSync email and other features on your device.

[Add an Email Account](#)

[Add a Corporate Email Account](#)

[Compose and Send Email](#)

[View and Reply to Email](#)

[Manage Your Email Inbox](#)

[Corporate Email Features](#)

[Edit Email Account Settings](#)

[Delete an Email Account](#)

[Add an Email or Gmail Widget](#)

Add an Email Account

Email allows you to review and create email using various email services. You can also receive text message alerts when you receive an important email.

1. Press  and tap  >  > **Accounts and sync** > **Add account** > **Email**.

DRAFT For Internal Use Only

Note: You can also add email and corporate email accounts from the Email application. Tap



> **Settings**, and then tap



to display the **Set up email** screen.

2. Enter your email address in the **Email address** field.
3. Enter your password in the **Password** field and then tap **Next**.
 - Tapping **Next** prompts your device to attempt a “regular” email setup and test the incoming and outgoing servers.
 - If you have custom settings you need to configure, tap **Manual setup** and enter your settings. These may include mail type, user name, password, server, security type, etc.

Tip: If you want to see your password as it is being typed, tap **Show password**.

4. At the **Account options** screen, tap the **Email check frequency** drop-down list box and select how often you would like your email to be checked.
5. Tap any of the other options you would like to create a checkmark.
6. Tap **Next**.
7. Enter a name for this email account (optional), and then enter your name for outgoing messages.
8. Tap **Done**.

Add a Corporate Email Account

The main Email application also provides access to your Outlook Exchange server via your device. If your company uses Microsoft Exchange Server 2003, 2007, or 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company’s Exchange server.

Important! This Outlook application does not utilize Microsoft® ActiveSync® to synchronize the device to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

Use the following procedure to synchronize your device with a corporate email account.

1. Press  and tap  >  > Accounts and sync > Add account > Microsoft Exchange ActiveSync.

Note: You can also add email and corporate email accounts from the Email application. Tap



> **Settings**, and then tap



to display the **Set up email** screen.

DRAFT For Internal Use Only

2. Enter your **Email address** and **Password** information, and then tap **Manual setup**. Consult your Network Administrator for further details.

- **Email address:** your Outlook work email address.
- **Password:** typically your network access password (case-sensitive).

3. Enter a Domain\user name, Password, and Exchange Server information.

- **Domain\user name:** Use the arrow keys to place your cursor before your user name and enter your network domain\desktop login user name.

Important! Key info here is the **Domain** information. Maintain the “\” between the Domain and user name.

- **Password:** typically your network access password (case-sensitive).
- **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator. Do not accept the default entry as this is a guess based on returned information.
- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a checkmark in the box and activate this additional level of security.

Important! If your exchange server requires this feature, leaving this field unchecked can prevent connection.

Note: Signal interruptions or incorrect user name or password information can cause completion issues.

4. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
5. Configure your **Email check frequency**, **Amount to synchronize** (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.
6. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Note: You can have multiple Work Email (Microsoft Exchange ActiveSync) accounts active on your device.

Compose and Send Email

Compose and send email using any account you have set up on your device. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. Press  and tap .

DRAFT For Internal Use Only

2. From the Inbox, tap .
3. Select an email account. Tap the  icon in the **From** field and select an available account.
4. Enter the message recipient's email address in the **To** field.
 - You can add as many message recipients as you want.
 - To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap **+Cc/Bcc**.
5. Tap the **Subject** field and enter the email subject.
6. Tap the text entry field and compose your email.
 - To add an attachment, tap . Choose from the following: **My Files, Images, Take picture, Video, Record video, Audio, Record audio, Memo, Calendar, Contacts, or Location**.
 - Tap  to delete a selected attachment from your current email.
7. To send the message, tap .

Note: To delete the current email message, tap  and choose whether or not to save it in drafts.

View and Reply to Email

Reading and replying to email on your device is as simple as on your computer.

1. Press  and tap .
2. On the email account Inbox, tap a message to view it.
3. Tap  (**Reply**) to reply to the sender, or  (**Forward**) to forward the message.
 - If you're forwarding the message, add recipients in the **To** field.
4. Add a message (if desired) and then tap .

Manage Your Email Inbox

The following procedures allow you to view, refresh, sort, and delete your email messages.

DRAFT For Internal Use Only

View Your Email Inbox

1. Press  and tap .
2. Tap the account name field (upper-left) to open the complete email account list page.
3. Select an email account and tap an email message.

Refresh an Email Account

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

1. Press  and tap .
2. Select an email account.
 - If you are already in an email account, tap the account name field (upper-left) to open the complete email account list page.
 - Select an available email account.
3. Tap  (**Refresh**).

Sort Email Messages

1. On the email account Inbox, tap  > **Sort by**.
2. Select from the options to sort email messages by date received, sender, read/unread, favorites, attachments, or priority.

Delete an Email Message

1. On the email account Inbox, tap a message to display it..
2. Tap  (**Delete**).

Delete Multiple Email Messages

- ▶ Tap the checkmark boxes to the left of each email you want to delete and then tap  (**Delete**). Tap **Delete** to confirm.

Corporate Email Features

The following information provides details about specific email features that can enhance your experience.

DRAFT For Internal Use Only

Synchronize Exchange ActiveSync Email

You can set Exchange ActiveSync to automatically check for new Exchange ActiveSync email messages. See [Synchronize Contacts](#) for more information.

Flag Email Messages

For an Exchange ActiveSync account, you can flag email messages to help you keep track of them.

1. Press  and tap .
2. On the email account Inbox, tap the flag icon to the right of the email message you wish to mark. The flag will turn red.

Set Out of Office Status

You can set your Out of Office status and auto-reply message right from your device.

1. Press  and tap .
2. Tap  > **More** > **Account settings** > **Out of office settings**.
3. Tap **On** and set the dates and times for the period when you will be out of the office.
4. Tap **Internal message settings** to modify the auto-replies to inter-office e-mail. Tap **External message settings** to modify the auto-replies to email received outside of your immediate office location
5. Tap **Set**.

Set Email Message Priority

You can set the priority for an email message you send with your Exchange ActiveSync account.

1. While composing the message, tap  > **Priority**.
2. Choose from one of the following: **High**, **Normal**, or **Low**.

Edit Email Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more. Available settings depend on the account.

1. Press  and tap .

DRAFT For Internal Use Only

2. Choose an email account from the menu at the left of the toolbar, and then tap  > **Settings**.
3. Configure settings:
 - Tap **General preference** for general email preferences:
 - **Auto-advance**: allows you to select the screen that displays after you delete a message. Options include **Newer message**, **Older message**, and **Message list**.
 - **Message preview line**: lets you select how many lines of text to display in the message list.
 - **Email title**: lets you choose between **Subject** and **Sender** as the first, main line of each message.
 - **Confirm deletions**: allows you to choose whether to have your device prompt you to confirm when deleting emails.
 - **Quick responses**: allows you to create simple message responses to use as quick replies.
 - Tap the account name to configure additional account settings.

Note: Not all options will be available for all email account types.

4. Press  twice to return to the previous screen.

Delete an Email Account

If you no longer want an email account on your device, you can delete it through the mail settings menu.

1. Press  and tap .
2. Choose an email account from the menu at the left of the toolbar, and then tap  > **Settings > Delete account**.
3. Tap account(s) to mark them for deletion, and then tap **Delete**.

Add an Email or Gmail Widget

Add an Email or Gmail widget to view your email messages on a Home screen.

1. Touch and hold an open space on one of the home screens.
2. Tap **Add to Home screen > Apps and widgets**.
3. Tap the **Widgets** tab, and then tap and hold an Email or Gmail widget.

DRAFT For Internal Use Only

4. Release the widget into an open space on one of your home pages.

Social Networking Accounts

Stay in touch on the go with all your social networking accounts. Post updates on Facebook and Twitter, review your LinkedIn contacts, see what everyone's talking about from YouTube, and more.

Facebook

YouTube

Google Talk

Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Note: Before using Facebook on your device, you will need to download and install the Facebook app from the Google Play Store app. For more information, see [Find and Install an App](#).

Sign in to Your Facebook Account

1. Press  and tap  >  > **Accounts and Sync** > **Add account**.
2. Tap **Facebook (for syncing)**. If prompted, perform the following actions:
 - Read the disclaimer and tap **Agree** to continue.
 - Read the setup overview and tap **Next** to continue.
3. Enter your Facebook user name and password and tap **Log in**.
4. Select the information you want your Facebook account to synchronize with your device. Choose from:
 - **Sync all** to sync all of your Facebook friends and their information and status with your device.
 - **Sync with existing contacts** to sync Facebook messages with your existing Contact list.
 - **Don't sync** to prevent the device from syncing any of your Facebook information.
5. Tap **Sync**.

DRAFT For Internal Use Only

Note: You can also sign in to your Facebook account from the Facebook app. After downloading and installing the app, launch it from Google Play or from the apps screen. Follow the prompts to sign in to your account and select your sync preferences.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Press  and tap  >  (**YouTube**).
2. Tap **Search YouTube** to open the onscreen keyboard and enter search terms to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
3. To view a video, tap an available preview thumbnail or tap the title link.
4. Tap  to return to the previous page.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options tap the **ACCOUNT** tab. Select an account (if available) or create a new account. (Even if you sign in to YouTube via the Web, you must separately sign in via your device.)

Google Talk

Google Talk is a free Windows and Web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

For more information, visit www.google.com/talk/.

1. Press  and tap  >  (**Talk**).
2. Tap **ADD ACCOUNT** to add a Google account to Google Talk.
 - Tap **New** to create a new Google account, or tap **Existing** to sign in to an existing Google account.
3. After entering your user name and password, tap **Sign in**.

DRAFT For Internal Use Only

4. Begin using Google Talk.

Note: The Network confirms your login and processes. This could take up to 5 minutes to complete.

If you have already signed into your Google account, it displays on the Talk application screen

DRAFT For Internal Use Only

Applications and Entertainment

All your device's features are accessible through the Applications list.

DivX

Google Play Store App

Navigation

Music

Google Play Movies & TV

AllShare Play

Media Hub

DivX

DivX is a digital media format that provides your device with high-quality videos.

DivX Legal Information

Locate Your VOD Registration Number

Register Your DivX Device for VOD Playback of Purchased Movies

DivX Legal Information

This device recognizes DivX[®] encoded media files. DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (tap **Apps** > **Settings** > **About device** > **Legal information** > **License settings** > **DivX[®] VOD** > **Register**). Go to www.divx.com/vod for more information on how to complete your registration. Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Talk, Picasa, YouTube and other marks are trademarks of Google Inc.

DRAFT For Internal Use Only

If you try to play DivX VOD content not authorized for your device, the message "Authorization Error" will be displayed and your content will not play.] Learn more at www.divx.com/vod.

Important! DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to only registered DivX Certified devices.

Locate Your VOD Registration Number

Follow these procedures to locate your VOD registration number.

1. Press  and tap  >  > **About device** > **Legal information** > **License settings** > **DivX® VOD** > **Register**.
2. Write down your Registration code.
3. Tap **OK**.

Register Your DivX Device for VOD Playback of Purchased Movies

To play purchased DivX movies on your device, you will first need to complete a one-time registration using both your device and your computer.

1. Write down the DivX registration code that appears onscreen. Copy this 8 or 10-digit number down.
2. Verify you have the latest DivX software running on your computer. Download the free player (for your computer) from www.divx.com/.
3. Open the DivX Player on your computer and from within the **VOD** menu and tap **Register a DivX Certified Device...**
 - You are prompted to log in or create a DivX account if your account information has not already been saved in DivX Player.
4. Follow the instructions in DivX Player to enter the registration code from step 2 and create a device nickname.
5. Choose a location on your computer to download the DivX registration video with the same title as your device nickname (for example, Kate.divx).
6. Follow the onscreen instructions to download the file and initiate the transfer process.
7. Connect your device to the computer via USB and transfer this video.
8. From the **Registration** screen (Transfer), select **USB** (the device) as the target destination for the registration video (created in step 6) and tap **Start**.

DRAFT For Internal Use Only

9. Press  and tap  >  (My files).

10. Tap a folder and scroll down or up until you locate your registration DivX video file.

11. Tap the file to play it. Once you play the registration file on your device, your registration is complete.

Return to the DivX VOD Manager screen (from within your computer's DivX Player) and confirm both your computer and your new device appears in the list of registered DivX devices.

Note: There is no special registration or configuration necessary to play back DRM-free DivX movies.

Registration of your device is only required for play back of protected DivX material.

Google Play Store

Google Play™ Store is the place to go to find new Android apps, games, movies, music, and books for your device. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your device.

To access Google Play™ Store, you must first connect to the Internet using your device's Wi-Fi or Sprint 4G or 3G data connection and sign in to your Google Account. See [Web and Data](#) and [Sign In to Your Google Account](#) for details.

Important! Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

[Find and Install an App](#)

[Create a Google Checkout Account](#)

[Request a Refund for a Paid App](#)

[Open an Installed App](#)

[Uninstall an App](#)

[Get Help with Google Play](#)

DRAFT For Internal Use Only

Find and Install an App

When you install apps from the Google Play™ Store app and use them on your device, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your device. Download and install only apps that you trust.

1. Press  and tap  (**Play Store**).
2. Browse through the categories (**Apps**, **Music**, **Magazines**, **Books**, **Movies & TV**, or **Games**), find an app you're interested in, and tap the name.
3. Read the app descriptions.
4. Tap **Install** or **Download** (for free applications) or the price (for paid applications).

Important! Use caution with apps which request access to any personal data, functions, or significant amounts of data usage times.

Note: You need a Google Checkout account to purchase items from the Google Play Store app. See [Create a Google Checkout Account](#) to set up a Google Checkout account if you do not have one.

5. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your device. If you agree to the conditions, tap **Accept & download** (for free apps) or **Accept & buy** (for paid apps) to begin downloading and installing the app.
6. If you selected a paid app, after tapping **Accept & buy**, you're redirected to the Google Checkout screen to pay for the application before it's downloaded to your device.

Warning! **Read the notification carefully!** Be especially cautious with apps that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your device.

Create a Google Checkout Account

You must have a Google Checkout account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to checkout.google.com to create a Google Checkout account.
- or -

DRAFT For Internal Use Only

- The first time you use your device to buy an item from the Google Play Store app, you're prompted to enter your billing information to set up a Google Checkout account.

Warning! When you've used Google Checkout once to purchase an item from the Google Play Store app, the device remembers your password, so you don't need to enter it the next time. For this reason, you should secure your device to prevent others from using it without your permission. (For more information, see [Security Settings](#).)

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 24 hours of the purchase. Your credit card is not charged and the app is uninstalled from your device.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. Press  and tap .
2. Tap  > **INSTALLED** and tap the application you want removed and refunded.
3. Tap **Refund** and then tap **Yes** to confirm.

Open an Installed App

There are several options for opening an installed app.

- Press  and tap  > (the application).
- or -
1. Press  and tap .
 2. Tap  > **INSTALLED** and tap the app to open it.

Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. Press  and tap  >  > **Application manager** > **Downloaded**.
2. Tap the app you want to uninstall, and then tap **Uninstall**.
3. When prompted, tap **OK** to remove the app from your device.

DRAFT For Internal Use Only

4. Once the app is removed, tap **OK** again to return to the Application manager.

Get Help with Google Play

If you ever need help or have questions about the Google Play Store app, tap  >  > **Help**. The Web browser will take you to the Google Play Help Web page.

Navigation

Your device offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

[Google Maps](#)

[Google Navigation](#)

[Latitude](#)

Google Maps

Use the Google Maps application to find directions, location information, business addresses, etc. Determine your current location with or without GPS, get driving and transit directions and get phone numbers and addresses for local businesses.

Before you begin using this feature you must activate your GPS hardware and agree to share location information with Google.

To enable your device's GPS Location feature:

1. Press  and tap  >  > **Location services**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled.
 -  appears in the Notification area when the GPS is active.
 -  appears in the Notification area when the GPS is communicating.

To launch the Google Maps application:

- Press  and tap  >  (**Maps**).

To use Google Maps:

1. Press  and tap  > .

DRAFT For Internal Use Only

2. Tap the magnification icons to zoom in or out of the current map view. If the magnification icons aren't displayed, use the spread and pinch gestures to zoom in and out.
3. Tap  to use other Google Map features.
4. Choose from: Clear Map, Make available offline, Latitude, My Places, Offers, Settings (Display, Cache, Location Settings, Labs, What's New, About, Feedback, Terms, Privacy & Notices), or Help.

To search for a keyword:

1. Press  and tap  > .
2. Tap , and then enter your search terms.
 - Search terms can be a category name (such as pizza, steak, burger), a business name (Samsung, Sprint), or a Google friend who is sharing their location.
3. Tap a result from the list of matches to see a detailed list of information corresponding to those matches now displayed on your screen with lettered pins.

Google Navigation

Navigation is another Google Maps navigation application available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press  and tap  >  (**Navigation**).
2. Read the onscreen disclaimer and tap **Accept**.
3. Choose from the following onscreen options:
 - **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
 - **Type Destination** to manually enter a destination address.
 - **Go home** to set your home address for easy access.
 - **Map** to display your current location on a map.

Latitude

With Google Latitude, you can see the location of all of your friends on a map or on a list. You can also share or hide your location.

You must first set up your device to use wireless networks to help pinpoint your location. Latitude works best when Wi-Fi is enabled.

► Press  and tap  >  (**Latitude**).

Music

Your device lets you discover, download, and listen to your favorite music through a variety of applications.

Music Player

Google Play Music

Music Player

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Note: For information about loading music onto your device, see [Transfer Files Between Your Device and a Computer](#).

Playing Music

1. Press  and tap  >  (**Music Player**).
2. Tap a library category at the side of the screen (**Songs, Playlists, Albums, Artists, Genres, Folders, Composers, Years, or Music Square**) to view the available music files.
3. Scroll through the list of songs and tap an entry to begin playback.

Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

Note: For information about loading music from your own music library, see [Transfer Files Between Your Device and a Computer](#).

1. Press  and tap  >  (**Play Music**).

DRAFT For Internal Use Only

2. If prompted, follow the onscreen instructions to link your current account to Google Play Music.
3. Tap an onscreen account to add it or select **Add account** to use a new account.
4. At the free songs screen, select either **Get free songs** or **Skip**.
 - Get free songs are downloaded via either the Internet or the Google Play Store app.
 - Follow the onscreen download and installation instructions.
5. Swipe left or right to browse through your music groupings (Recent, Artists, Albums, Songs, Playlists, and Genres).
6. Tap a category and then tap a song to open it and begin playback.

Changing Library View

You can change the way you view the contents of your music library.

1. Press  and tap  > .
2. Tap  and then tap a view option: **Recent**, **Albums**, **Artists**, **Songs**, **Playlists**, or **Genres**.

Note: The contents of your library display in a scrolling grid or list view, depending on the view.

Searching for Music in Your Library

1. Press  and tap  > .
2. Tap  to search through your available songs.
3. Type the name of an artist, album, song, or playlist. Matching songs are displayed in a list below the search box.
4. Tap a matching song to play it, tap a matching album, artist or playlist to view a list of its songs.

Changing Music Settings

1. Press  and tap  > .

DRAFT For Internal Use Only

2. Tap  and then make a selection.

- **Shuffle all:** Play all songs in a random order.
- **Show/hide now playing bar:** Display or hide the now playing bar when you are using your tablet outside of Google Play Music.
- **Choose on-device music:** Allows you to choose which albums, artists, or playlists to add to your device's storage.
- **On device only:** Displays only the music that exists in your device's storage.
- **Settings:** Provides access to the Play Music settings.
- **Help:** Displays application help information.

Listening to Music

You can listen to music by using your device's built-in speakers, through a wired headset, or through a wireless Bluetooth stereo headset.

Press the volume keys on the top of the device to activate onscreen volume control and then touch and drag on the scale to set volume.

Playing Music

1. Press  and tap  > .

2. Tap a song in your library to listen to it.

- or -

While viewing a list of songs, tap  next to a song and tap **Play**.

- or -

While viewing a list of albums, artists, playlists, or genres, tap  adjacent to the label and tap **Play**.

The song you touched or the first song in the album or playlist starts to play. The tracks in the current list play in order until you reach the end of the list (unless you choose a repeat option). Otherwise, playback stops only if you stop it, even when you switch applications.

Displaying the Now Playing Screen

If you navigate away from the Now playing screen, to return to the Now playing screen from other Music screens:

- ▶ Tap the name of the current song in the Now Playing bar.

Tab Options

There are various options available from the various tabs:

1. Press  and tap  > .
2. Select one of the following tabs and tap  to access an available option.
 - **RECENT:** to display the most recently played songs and albums
 - **ALBUMS:** Play, Add to queue, Add to playlist, More by artist, or Shop for artist.
 - **ARTISTS:** Play, Add to queue, Add to playlist, or Shop for artist.
 - **SONGS:** Play, Add to queue, Make instant mix, Add to playlist, Shop for artist, Share, or Delete.
 - **PLAYLISTS:** Play, Add to queue, Keep on device, Rename, or Delete.
 - **GENRES:** Play or Add to queue.

Options While Playing a Song

When you play a song, the Now playing screen displays. There are various options and controls available while a song is playing:

1. Press  and tap  > .
2. Tap an album or song.
3. From the Now playing screen, tap  to display the following options:
 - **Clear queue:** Lets you clear your current music queue.
 - **Save queue:** Lets you save your current music queue for later access.
 - **Settings:** Allows you to view all the Google Play Music settings.
 - **Google account:** allows you to connect to Google Play using your Gmail account.
 - **Hide unavailable music:** allows you to only display available music when offline.
 - **Automatically cache:** allows you to automatically store music without being prompted to do so.

- **Stream via Wi-Fi only:** allows you to reduce data charges by only streaming music via Wi-Fi.
 - **Stream high quality:** allows you to stream music at the highest quality by default.
 - **Refresh:** allows you to refresh music from Google Play.
 - **Download via Wi-Fi only:** allows you to reduce data charges by only downloading music via Wi-Fi.
 - **Download queue:** allows you to display the songs currently downloading.
 - **Nexus Q settings:** allows you to navigate to the Internet or Play Store in order to download the Nexus Q app. If already installed, this option allows you to assign settings to the app itself. For more information, about the Nexus Q app., see play.google.com/store/apps/details?id=com.google.android.setupwarlock.
 - **Open source licenses:** allows you to view Open source licensing information for this application.
 - **Music version:** displays the software version of this application.
 - **Help:** opens the browser to the Google Play Help Web page.
4. Tap  > **Add to playlist** to add the song to a playlist.
 5. Tap the **ARTIST** name to view songs related to this artist.
 6. Tap the **ALBUM** name to view or play other songs on the album.

Google Play Movies & TV

The Google Play Movies & TV application allows you to connect to the Google Play Store app, download a movie or TV show, and then watch it instantly. Choose from thousands of movies and TV shows, including new releases and HD titles in Google Play and stream them instantly on your Android device. Previously rented titles are automatically added to your library across your devices. Learn more about Google Play Movies & TV at: play.google.com/about/movies.

1. Press  and tap  >  (**Play Movies & TV**).
2. Log in to your Google account if you have not already done so. A list of videos displays in the Video list.
3. Follow the onscreen instructions for renting and viewing movies.
4. Tap the **My Rentals** tab to view movies you have rented.

DRAFT For Internal Use Only

5. Tap the **Personal Videos** tab to view movies you have on your device or memory card.

AllShare Play

Samsung's AllShare Play™ makes staying connected easy. Use AllShare Play to share content from your device with DLNA (Digital Living Network Alliance) devices.

Important! Both devices must be connected to the same Wi-Fi network and be using an active/registered Samsung account prior to using this application.

[Configure AllShare Settings](#)

[Set Up Web Storage](#)

[Share Files via Web Storage](#)

[Share Media via AllShare Play to a Target Device](#)

[AllShare Play Screen Sharing via Group Cast](#)

1. Press  and tap  >  (**AllShare Play**).
2. Follow the prompts to sign in to your Samsung account or create a new account. If prompted, read the onscreen message about network charges and tap **Yes** to continue and return to the main AllShare Play screen.
3. Tap **Start** and follow the onscreen prompts.

The application contains two separate streaming media options:

- **Registered storage** allows you to stream content from a Web storage service.
- **Registered devices** allows you to stream/share selected multimedia content from your device to DLNA-compliant devices connected to the same Wireless Access Point.

Configure AllShare Settings

The AllShare Play™ application must first be configured prior to its initial use. You must set up parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. Press  and tap  > .
2. Tap  **Settings** and configure the following settings as desired:
 - **Refresh:** syncs the connection with other devices, to show available registered devices and storage.

DRAFT For Internal Use Only

- **Register storage:** allows you to add a Web storage location, such as SugarSync. Without a storage service/location added, you will not be able to use AllShare Play.
- **Join Group Cast:** allows you to share your device's screen with friends and colleagues. While you view documents and photos, or listen to music, your friends can also see or listen, in real time, on their own devices.
- **Nearby devices:** searches for nearby DLNA devices.
- **My account:** allows you to configure your Samsung account settings on your device.
- **Settings:** allows you to configure AllShare Play settings.
- **FAQ:** displays information about using AllShare Play.

Set Up Web Storage

SugarSync is a Web storage service that allows you to use up to 5GB of storage space to store your files and share them in the “cloud”.

Note: If you are using another Web storage service, log into that service first before using AllShare Play.

1. Press  and tap  > .
2. Under **Registered storage**, tap , follow the prompts to sign in to SugarSync, or sign up for an account.
3. You can choose to download the SugarSync app or tap **Skip** to continue.
4. Once the process is complete, the Web storage icon or name appears in the **Registered storage** area of the AllShare Play screen.

Share Files via Web Storage

Files can be uploaded to a Web storage location, such as SugarSync, by either logging in to the service and sharing a folder on your computer with the storage location, or sharing files, images, and videos from your device.

Upload Files from Your Device to Web Storage

1. Press  and tap  > .
2. Tap the device name, and then tap the check box on each item you want to upload. Tap **Select all** to mark all files.

DRAFT For Internal Use Only

Note: To select multiple images, touch and hold an image to place a colored border around the selected images.

3. Tap , and then follow the prompts to upload the files to your registered web storage service.

Share Media via AllShare Play to a Target Device

Follow the procedures below to share media with a device through AllShare Play.

Important! Make sure all communicating devices are connected to the same Wi-Fi network.

1. Launch AllShare on a target device, such as an Internet TV, Samsung Tablet, etc.
2. On your device, press  and tap  > .
3. Tap your device name under the **Registered devices** list.
4. Tap an available category tab (**Photos**, **Music**, **Videos**, or **Files**) and select a file.
 - A file with  in the upper left indicates it is stored remotely on a Web storage location. Selecting this media causes your device to access the file currently stored on your services' servers.
5. Tap an available onscreen file, image, or video and then tap , and select a target to begin streaming the selected files.
6. On a target device (such as Internet TV), select the onscreen **Allow** button to continue.

Note: At this stage your device is requesting access to share media with the external source.

AllShare Play Screen Sharing via Group Cast

Follow the procedures below to share via Group Cast.

Important! Verify all of your recipients are connected to the same Wi-Fi network.

1. Press  and tap  > .
2. Select one or more items.
3. Tap  > **Group Cast**.
4. Enter a security PIN and tap **Done**.

DRAFT For Internal Use Only

5. Your device waits for other connected recipients to accept the connection and enter the PIN on their screens.

- or -

Tap **Start Group Cast anyway** to continue the process while your users connect.

Peel Smart Remote

Peel lets you turn your tablet into a remote control. It's also a smart app that provides personalized TV recommendations. The more Peel learns about your TV preferences, the better the recommendations. You can tag shows as Favorites or Guilty Pleasures, or cut shows that don't interest you.

In addition, you can find and follow your friends to see their tagged shows, give and receive program recommendations, add your comments, and see what others are watching.

► Press  and tap  >  (Smart Remote).

Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available, entertaining your family on the go was never easier. You can rent or purchase your favorite content and watch from any location. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

[Creating a New Media Hub Account](#)

[Use Media Hub](#)

[Media Hub Notices](#)

Note: You must have the Samsung Account application installed and registered prior to using Media Hub.

Important! You must be using an active Wi-Fi/4G connection to preview and download a media file. The internal memory acts as a storage location for your downloaded rental or purchase.

Important! The Samsung account manages the access information (user name/password) to several applications, such as AllShare Play and Media Hub.

Creating a New Media Hub Account

Before you can rent or buy media using Samsung MediaHub, you must first create an account. Enter the required information.

DRAFT For Internal Use Only

1. Press  and tap  >  (**Media Hub**).
2. Read the Terms and Conditions screen and then tap the **I agree to the Terms and Conditions** check box.
3. Tap **Accept** to continue or **Decline** to exit. The Media Hub screen displays.
4. Tap  > **My Profile**.
5. Confirm your Samsung account email address and enter your password. Tap **Done** to confirm.

Use Media Hub

Follow the below procedures to use Media Hub.

1. Press  and tap  >  (**Media Hub**).
2. **What's New** displays recently-added media, or use the tabs at the top of the screen, to browse for content:
 - **Home**: displays the Media Hub main screen.
 - **Movies**: displays movies that are available for rent or purchase. Scroll through the top navigation bar and select a movie category.
 - **TV Shows**: displays TV shows that are available for purchase. Scroll through the top navigation bar and select a TV category.
 - **My Media**: allows you to view media you have purchased or rented.
3. Tap an item you would like to purchase or rent, and then follow the prompts to enter payment information and download the media (if applicable). Downloaded media is stored in the **My Media** folder.

Media Hub Notices

The following information outlines notices regarding the use of Media Hub.

- Any media item (Media Content) may be rented or purchased after you create an account in Media Hub.
- Media Content that is downloaded may be viewed concurrently on up to five (5) devices with Media Hub that are also registered to the same account.
- You may choose to remove a device from your account no more than once every 90 days.

DRAFT For Internal Use Only

- You may remove Media Content from a device as many times as you'd like. You will have the ability to re-download the Media Content at a later point in time subject to content re-download availability and studio permissions.
- You MUST be in network coverage to license Media Content you have acquired through the Service.
- You can use 3G, 4G, or Wi-Fi connectivity in order to download Media Content.
- Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account.
- Media Content is downloaded and saved onto the SD card.
- Your Media Content may pause/stop or not download in networks where there is a weak signal.
- You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
- You must finish watching rented Media Content within 24 consecutive hours of start of playback.
 - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
 - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (for example, if you begin viewing rented Media Content on the 29th day after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).
- You cannot play any media content downloaded from Media Hub through any output on your mobile device, including All Share.

DRAFT For Internal Use Only

Web and Data

The following topics address your device's data connections and Internet use. Additional data-related features can be found in [Accounts and Messaging](#), [Applications and Entertainment](#), and [Tools and Calendar](#).

Your device's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

[Wi-Fi](#)

[Data Services \(Sprint 3G\)](#)

[4G Services](#)

[Virtual Private Networks \(VPN\)](#)

[Internet](#)

[Sprint Hotspot](#)

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your device's Wi-Fi, you need access to a wireless access point or "hotspot".

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

[Turn Wi-Fi On and Connect to a Wireless Network](#)

[Check the Wireless Network Status](#)

[Connect to a Different Wi-Fi Network](#)

[Sprint Connections Optimizer](#)

Note: The **Sprint Connections Optimizer** allows your device to connect automatically to the best available data network, including "remembered" Wi-Fi networks. To turn Sprint

Connections Optimizer on or off, tap  and tap  >  > **More settings** > **Mobile networks** > **Connections optimizer** and check or uncheck the box.

Turn Wi-Fi On and Connect to a Wireless Network

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range Wi-Fi networks (or WAPs - wireless access points).

DRAFT For Internal Use Only

Turn Wi-Fi on:

- Press  and tap  >  > **Wi-Fi**. The ON/OFF slider displays ON when Wi-Fi is active.

Tip: You can also turn Wi-Fi on and off through the Notifications panel. Tap the notifications bar to display the notifications panel and tap **Wi-Fi** to enable or disable Wi-Fi.

Note: Wi-Fi networks are self-discoverable, which means no additional steps are required for your device to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

To connect to a Wi-Fi network:

1. Press  and tap  >  > **Wi-Fi**.
2. The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed.
 - When you select an open network, you will be automatically connected to the network.
 - When you select a secured network, you will need to enter the wireless password to connect to the network. Enter the password and tap **Connect**. You can use the **show password** option to display the password as you enter it.

To manually add a new network connection:

1. Tap **Add Wi-Fi network**.
2. Enter the Network SSID. This is the name of your Wi-Fi network.
3. Tap the **Security** field and select a security option. This must match the current security setting on your target network.
 - If you're adding a network secured by a password, enter it in the Password field.
4. Tap **Save** to store the new information and connect to the Wi-Fi network.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the wireless password again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press  and tap  >  > **Wi-Fi**

2. Tap **Scan**.

Check the Wireless Network Status

The following information is designed to help you check your wireless connection.

1. Press  and tap  >  > **Wi-Fi**.
2. Tap the wireless network that the device is currently connected to. You will see a message box showing the Wi-Fi network name, status, speed, signal strength, and other details.

Note: If you want to remove the device's wireless network settings, tap **Forget** on this window. You will need to enter the settings again if you want to connect to this wireless network.

3. The following icons show your Wi-Fi connection status at a glance:



Wi-Fi is connected and active.



Wi-Fi active but there is a communication issue with the target Wireless Access Point (WAP).

Connect to a Different Wi-Fi Network

The following information is designed to help you connect your device to a different Wi-Fi network.

1. Press  and tap  >  > **Wi-Fi**.
 - Detected Wi-Fi networks are displayed. To manually scan for available Wi-Fi networks, on the Wi-Fi settings screen, tap **Scan**.
2. Tap another Wi-Fi network to connect to it.

Note: If the wireless network you want to connect to is not in the list of detected networks, scroll down the screen, and tap **Add network**. Enter the wireless network settings and tap **Save**.

Sprint Connections Optimizer

The Sprint Connections Optimizer is a tool that automatically selects the best mobile network for your device, including "remembered" Wi-Fi networks.

The Sprint Connections Optimizer helps you manage and enhance your data experience by finding and connecting to "remembered" Wi-Fi networks on your device. Remembered Wi-Fi networks are networks with which you have previously chosen to connect. Active Wi-Fi

DRAFT For Internal Use Only

connections may offer improved performance and generally improve battery life. The Sprint Connections Optimizer works by searching for available "remembered" Wi-Fi networks. If you do not leave your Wi-Fi antenna on all the time, you will only notice the Sprint Connections Optimizer operating at certain times of the day in a small number of locations on the Sprint network. Your Wi-Fi antenna will conserve battery by scanning for connections periodically (not continuously), and if no connection is achieved, the antennas will be turned off. You may also manually turn the antennas off during the scan period. To facilitate quality assurance and enable feature enhancements, information is collected about your battery levels, Wi-Fi and Sprint Network connections and usage. No personal information is collected.

Enable Sprint Connections Optimizer

1. Press  and tap  >  > **More settings** > **Mobile networks** > **Connections optimizer**.
2. Read the disclaimer and tap **I Agree** to turn Sprint Connections Optimizer on.

Disable Sprint Connections Optimizer

3. Press  and tap  >  > **More settings** > **Mobile networks** > **Connections optimizer**.
4. Uncheck the box on the Sprint Connections Optimizer page.

Data Services (Sprint 3G)

With your Sprint service, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your device.

Important! Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact it is functioning properly. Allow the device some time to process your data usage request.

Your Data Services User Name

Launch a Web Connection

Your Data Services User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com". (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

DRAFT For Internal Use Only

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name is automatically programmed into your device. You don't have to enter it.

Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your device.

1. Press  and tap  >  > **System update**.
2. Tap Update Profile.

Launch a Web Connection

Follow the below procedure to launch a Web connection.

- Press  and tap  (**Internet**). (Your data connection starts and you see the home page.)

The Internet browser automatically launches when a Web link is touched from an email.

4G Services

4G is a service that must be included in your service plan and also available within your area. 4G coverage is currently available in only certain markets. For more details on 4G availability go to: www.sprint.com/4G and click **See the coverage map**.

Note: If 4G service is not included in your service plan, the 4G icon will not appear in the Notifications area.

4G is up to 10x faster than 3G (based on download speed comparison of 3G's ~600 kbps vs. 4G's ~ 6 Mbps). (Actual speeds may vary.)

Not all services are available on 4G and coverage may default to 3G/separate network where 4G unavailable.

Important! 4G service must be added to your account before attempting a connection to the 4G network.

Depending on which icons appear within the Notifications area, your services and features will change. The following table indicates what functions and features are available when combinations of these service icons appear:

Icon	Description
------	-------------

DRAFT For Internal Use Only

	3G Service – Sprint 3G service is available and active. The arrows are colored when data is transferring.
	4G Service – Sprint 4G data service is available and active. The arrows are colored when data is transferring.

Virtual Private Networks (VPN)

From your device, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

[Prepare Your Device for VPN Connection](#)

[Set Up Trusted Credential Storage](#)

[Add a VPN Connection](#)

[Connect to a VPN](#)

[Disconnect From a VPN](#)

Prepare Your Device for VPN Connection

Depending on the type of VPN, you may be required to enter your login credentials or install security certificates before you can connect to the local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, establish a Wi-Fi or data connection. For information about setting up and using these connections on your device, see [Launch a Web Connection](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).

Set Up Trusted Credential Storage

If your network administrator instructs you to download and install security certificates for VPN access, you must first set up the device's secure credential storage.

1. Press  and tap  >  > **Security**, and then tap **Screen lock > Password**.
2. Enter a new password (at least eight characters without any spaces), tap **Continue**, re-enter the password, and then tap **OK**.
3. From the Security menu, tap **Trusted credentials** and then tap your preferred System and User credentials.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

DRAFT For Internal Use Only

Add a VPN Connection

The following procedures outline the method to use when adding a VPN connection.

1. Press  and tap  >  > **More settings** > **VPN**.
2. Tap **Add VPN network**, and then enter the information for the VPN you want to add.
 - Information includes **Name**, **Type**, **Server address**, **PPP encryption (MPPE)**, and **Show advanced options**.
3. When finished, tap **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.

Connect to a VPN

The following describes how to connect to a VPN.

1. Press  and tap  >  > **More settings** > **VPN**.
2. In the VPNs section, tap the VPN that you want to connect to.
3. When prompted, enter your login credentials, and then tap **Connect**. When you are connected, the VPN connected icon appears in the notification area of the title bar.
4. Open the Web browser to access resources such as intranet sites on your corporate network.

Disconnect from a VPN

The following describes how to disconnect from a VPN connection.

1. Touch and hold the title bar, and then drag down to open the Notifications panel.
2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

When your device has disconnected from the VPN, the VPN disconnected icon displays in the notification area of the title bar.

Internet

The Internet app provides a browser for access to the Web on the go, using 3G, 4G, or Wi-Fi data connections.

[Learn to Navigate Internet](#)

[Internet Options](#) **DRAFT For Internal Use Only**

Select Text on a Web Page

Go to a Specific Website

Adjust Internet Settings

Reset the Internet Options to Default

Set the Home Page

Create Bookmarks

Create a New Homepage

Add Bookmarks to Your Home Screen

Learn to Navigate Internet

Navigating menus and websites during a data session is easy with a few basics.

Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll through a website's page:

- Touch and drag across or up and down a page.

Selecting

To select onscreen items or links:

- Drag across a page, and then tap an onscreen link to select the link.

Links, which are displayed as underlined text, allow you to jump to Web pages or select special functions.

Pinching and Zooming

Zooming in and out on a Web page can be done now without the need of an onscreen zoom tool. Just use your fingers to pinch in or spread out on the screen.

To zoom in:

1. Place your thumb and index finger on the screen.
2. Expand them outward (spread) to zoom in.

To zoom out:

DRAFT For Internal Use Only

1. Place your thumb and index finger on the screen.
2. Bring them together (pinch) to zoom out.

Go Back

To go back one page:

- ▶ Touch  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Go to a Web Page

1. Tap the **Address** field (top of the browser window) and enter a new Web address.
 - As you enter the address, possible matches are displayed within an onscreen list. Tap an entry to launch the desired website.
2. Tap **Go** to launch the new page.

Internet Options

The Internet menu offers additional options to expand your use of the Web on your device.

1. Press  and tap .
2. Tap  for options:
 - **New tab:** opens a new browser tab.
 - **New incognito tab:** opens a new browser tab, for browsing incognito.
 - **Add shortcut to home screen:** allows you to add a shortcut to your Home screen.
 - **Share page:** allows you to share the page using Gmail or as a message.
 - **Find on page:** allows you to search in the current page.
 - **Desktop view:** allows you to assign the browser to display the current page in the desktop view (to closely mimic the display as it would appear on a Desktop computer).
 - **Save for offline reading:** saves the Web page so you can read it later even when offline.
 - **Downloads:** displays the download history.
 - **Print:** allows you to print the screen or Web page on a Samsung printer using Wi-Fi.

DRAFT For Internal Use Only

- **Settings:** allows you to modify your Web settings. For more information, refer to [Adjust Internet Settings](#).

Select Text on a Web Page

You can highlight text on a Web page and copy it, search for it, or share it.

1. While on an active Web page, scroll to the area containing the desired text.
2. Touch and hold the screen area to select any word or character within the content.
3. Touch and drag across the screen and highlight the desired text. The selected text will appear highlighted.
4. Select an onscreen option:
 -  (**Select all**): Tap to select all text on the Web page.
 -  (**Copy**): Tap to copy the selected text.
 -  (**Share**): Tap to share the item using one of the following options: **Bluetooth**, **Dropbox**, **Email**, **Gmail**, **Google+**, or **Wi-Fi Direct**.
 -  **Find**: to search for all instances of the selected text within the Web page.
 -  **Web Search**: to search for the selected text on the Web.

Go to a Specific Website

Just like any other browser, you can use the URL field to enter a website address and go to a specific website.

1. Tap the **URL** field and enter a website address.
 - As you type the address, if your desired website appears within the suggested sites list, tap the entry to begin surfing.
2. Tap **Go**.

Note: Not all websites are viewable on your device.

Adjust Internet Settings

You can change the page settings for your browser, including default zoom level, pop-up blocking, display options, and setting your home page. You can also change your browser's security and privacy settings, including history, cache, whether or not to save passwords, and other data settings.

DRAFT For Internal Use Only

1. Press  and tap .
2. From any open Web page, tap  > **Settings**.
3. Select from one of the following settings:
 - **General**
 - **Set home page:** Sets the current home page for the Web browser.
 - **Form auto-fill:** allows you to fill in Web forms with a single tap.
 - **Auto-fill text:** allows you to enter text to be used in the Form auto-fill feature.
 - **Privacy and security**
 - **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
 - **Show security warnings:** Notifies you if there is a security issue with the current website.
 - **Accept cookies:** Allows sites that require cookies, to save and read cookies from your device.
 - **Clear all cookie data:** Deletes all current browser cookie files.
 - **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
 - **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
 - **Enable location:** Allows websites to request access to your location.
 - **Clear location access:** Clears location access for all websites. Tap **OK** to complete the process.
 - **Remember passwords:** Stores user names and passwords for visited sites. Remove the checkmark to disable this function.
 - **Clear passwords:** Deletes any previously stored user names or passwords. Tap **OK** to complete the process.
 - **Enable notifications:** Enables notifications for all websites. Choose from: **Always on**, **On-demand** (user driven), or **Off**.

DRAFT For Internal Use Only

- **Clear notifications:** Clears Web notification access for all websites. Tap **OK** to complete the process.
- **Accessibility**
 - **Force zoom:** allows you to override the website's request to control zoom.
 - **Text size:** allows you to preview the text size. You can also adjust the following using a slider bar: **Scale text up and down**, **Zoom amount on double tap**, and **Minimum font size**.
 - **Minimum font size:** allows you to set the minimum font size using a slider bar.
 - **Inverted rendering:** allows you to preview a website with inverted colors (black becomes white and vice versa). Tap **Inverted rendering** to activate the feature and tap the **Contrast** slider bar to adjust the color contrast.
 - **Contrast:** allows you to set the contrast when using Inverted rendering.
- **Advanced**
 - **Select search engine:** allows you to set your default search engine to Google, Yahoo!, or Bing.
 - **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
 - **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
 - **Enable plug-ins:** Allows the download of plug-ins such as Adobe Flash.
 - **Default storage:** Allows you to set your default storage to Device or Memory Card.
 - **Website settings:** View advanced settings for individual websites.
 - **Default zoom:** Adjusts the zoom feature. Set to Far, Medium, or Close.
 - **Open pages in overview:** Shows an overview of newly opened Web pages.
 - **Auto-fit pages:** Allows Web pages to be resized to fit as much of the screen as possible.
 - **Block pop-ups:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
 - **Text encoding:** Adjusts the current text encoding.

DRAFT For Internal Use Only

- **Reset to default:** Clears all browser data and resets all settings to default.
- **Bandwidth management**
 - **Preload search results:** Allows the browser to preload high confidence search results in the background to help speed up searches.
 - **Load images:** Allows Web page images to be loaded along with the other text components of a loaded website.
- **Labs**
 - **Quick controls:** allows you to open quick controls and hide the app and URL bars by swiping your thumb from the left or right edge of the screen.
 - **Google Instant:** allows the browser to display results as you type search terms.

Reset the Internet Options to Default

You always have the option to restore your browser to its default settings.

1. Press  and tap .
2. Tap  > **Settings** > **Advanced** > **Reset to default**.
3. Tap **OK** to complete the process.

Set the Home Page

Customize your Web experience by setting your browser's home page.

1. Press  and tap .
2. Tap  > **Settings** > **General** > **Set home page**.
3. Select **Current page**, **Blank page**, **Default page**, **Most visited sites**, or **Other**. If you select **Other**, enter a URL for the new home page and tap **OK**.

Create Bookmarks

Make browsing easier by setting up and using custom bookmarks.

1. From any open Web page, tap . Three tabs are revealed:
 - **Bookmarks:** Displays a list of your current Web bookmarks.

DRAFT For Internal Use Only

- **History:** Displays a record of your browsing history. These records are organized into folders such as: **Today** and **Last 7 days**.
- **Saved pages:** Displays a list of Web pages that have been visited the most.

2. Tap .

3. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.

Create Bookmarks From Other Tabs

1. From any open Web page, tap .

2. Tap either the **History** or **Saved pages** tab.

3. Touch and hold an entry from the list to display an onscreen popup menu.

4. Tap **Add bookmark** to add the selected entry to your current list of bookmarks.

- or -

1. Repeat steps 1 and 2 above.

2. Tap the star icon adjacent to a website address. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

Create a New Homepage

Follow the below procedures to create a new homepage.

1. From any open Web page, tap .

2. Tap either History or Saved pages.

3. Touch and hold an entry from the list to display an onscreen popup menu.

4. Tap **Set as homepage** to assign the selected entry as your new homepage.

Add Bookmarks to Your Home Screen

Follow the below procedures to add bookmarks to the device's home screen.

1. From any open Web page, tap .

2. Touch and hold an existing entry from the list to display an onscreen popup menu.

DRAFT For Internal Use Only

3. Tap **Add shortcut to Home** to add the selected entry to your Home screen.

Sprint Hotspot

Sprint Mobile Hotspot allows you to turn your device into a Wi-Fi hotspot. The feature works best when used in conjunction with 4G data services (although 3G service can also be used). See [4G Services](#) for more information.

To set up Sprint Hotspot:

1. Press  and tap  >  (**Sprint Hotspot**)
2. Tap the ON/OFF slider next to **Sprint Hotspot** to toggle Sprint Hotspot ON and activate the service.
 - When active, the Notifications area of the status bar shows **Hotspot activated**.

Note: Connect your charger to your device if you plan to use Sprint Hotspot for an extended period.

Important! Upon activation, any current Wi-Fi connection to an access point is terminated.

To connect to Sprint Hotspot:

1. Enable Wi-Fi on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your hotspot from the network list.
 - The network name for Sprint Hotspot on your device will be in the form of **SPH-P600XXX**. ("XXX" represents a number unique to your device.) You can change the name by tapping **Sprint Hotspot settings** from the Sprint Hotspot screen.
3. Select this device and follow your onscreen instructions to enter the passkey (provided on the Sprint Hotspot page).
4. Launch your Web browser to confirm you have an Internet connection.

To adjust your Sprint Hotspot settings:

1. Press  and tap  >  > **Configure**.
2. Configure the Sprint Hotspot name (**Network SSID**), visibility to other devices (**Hide my device**), security (**Security, Password, Show password**), and advanced options (including Broadcast channel and Maximum connections).
3. Tap **Save** to store the new hotspot settings.

DRAFT For Internal Use Only

Camera and Video

You can use the camera or camcorder to take and share pictures and videos. Your device comes with a 3.0 megapixel camera with an autofocus feature that lets you capture sharp pictures and videos.

[Take Pictures](#)

[Record Videos](#)

[Camera Settings](#)

[Camcorder Settings](#)

[View Pictures and Videos Using Gallery](#)

[Working with Photos](#)

[Photo Editor](#)

[Share Photos and Videos](#)

Take Pictures

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, and then tapping the camera key.

[Open the Camera](#)

[Viewfinder Screen](#)

[Review Pictures and Videos](#)

[Take a Picture](#)

[Close the Camera](#)

Open the Camera

Follow the below procedure to access your device's camera.

- To open the camera in photo mode and take photos, press  and tap .

Viewfinder Screen

You'll find the following controls on the Viewfinder screen.

DRAFT For Internal Use Only

Note: You can customize the onscreen shortcuts. Tap and hold an icon to display available options, and then drag a new icon to replace the existing icon.

-  (**Front/back lens**): allows you to set the front camera so you can take pictures of yourself or video chat.
-  (**Shooting mode**): allows you to set the mode type for image output.
-  (**Timer**): allows you to set a delay between tapping the Shutter release button and taking a picture.
-  (**Effects**): allows you to apply an effect to pictures you take.
-  (**Contrast**): allows you to set the contrast for pictures.
-  (**Settings**): allows you to configure options for the Camera.
-  (**Camera / Camcorder Mode**): allows you switch between Camera mode to take pictures, and Camcorder modes, to record videos . Slide the button up for Camera, or down for Camcorder.
-  (**Shutter release**): takes a picture, or starts recording video. Tap again to stop recording.
-  (**Gallery**): allows you to browse and view the photos and videos on your storage card.

Review Pictures and Videos

After capturing a photo or video, you can tap  (**Gallery**) to view, send, or delete the picture or video.

DRAFT For Internal Use Only

Available options are:

-  (**Share**): offers several ways to share your picture or video. Options include: **Group Cast**, **Dropbox**, **Picasa**, **Photo editor**, **Google+**, **Bluetooth**, **Wi-Fi Direct**, **Gmail**, and **Email**. Other options may be available, depending on account set up on your device, and the type of file.
-  (**Slideshow**) allows you to see your photos in a slideshow or access the slideshow settings.
-  (**Delete**): allows you to delete the current picture. Tap **OK** to delete or **Cancel**.
-  (**Menu**): allows you to select one of the following:
 - **Face tag**: allows you add embedded tag information about those in your image.
 - **Copy to clipboard**: allows you to copy one or more pictures to a different folder.
 - **Rotate left**: allows you to rotate the view of the current image in a counterclockwise direction.
 - **Rotate right**: allows you to rotate the view of the current image in a clockwise direction.
 - **Crop**: provides an on-screen box that allows you to crop the current picture. Tap **Save** to update the image with the new dimensions or tap **Discard** to ignore any changes.
 - **Edit**: launches the photo editor application. This application can be downloaded from the Google Play Store app.
 - **Set as**: allows you to assign the current image as a Contact photo, or as wallpaper for the Home screen, Lock screen, or both Home and Lock screens.
 - **Buddy photo share**: allows you to share the current image with people in the picture.
 - **Print**: allows you to print the current image on a optional, compatible Samsung printer (not included).
 - **Rename**: allows you to rename the current file.
 - **Details**: files details such as Title, Type, Date taken, Album, Location, Latitude, Longitude, etc.

DRAFT For Internal Use Only

Take a Picture

You can take high-resolution pictures using your device's 3.0 MP digital camera.

Note: By default, the main Home screen contains a shortcut to Camera. If you delete it, or if you want to access the camera from another Home screen, tap **<icon> Home > <icon> Apps > <icon> Settings** .

1. Press  and tap  (**Camera**).
2. Using the device's main display screen as a viewfinder, compose your picture by aiming the camera at the subject. If desired, before taking the photo, you can tap onscreen icons to access various camera options and settings.

3. Tap .

Note: To enable the GPS icon, tap **<icon> > GPS tag > On**.

Close the Camera

Follow the procedure below to close your device's camera.

- On the camera screen, tap .

Record Videos

In addition to taking pictures, you can record, view, and send videos with your device's built-in video camera.

1. Press  and tap  (**Camera**).
2. Slide  to activate camcorder mode.
3. Use the display screen as a viewfinder and aim the camera lens at your subject.

4. Tap  to begin recording.

DRAFT For Internal Use Only

5. When you want to pause or stop recording, tap



Camera Settings

Use Camera settings to configure Camera options.

- ▶ Tap  in the menu panel to display the Settings menu and access more camera settings. You can change the following settings from the Settings menu.
 - **Edit shortcuts:** allows you to set shortcut icons for the settings that you use the most.
 - **Self-portrait:** allows you to set the front camera so you can take pictures of yourself or video chat.
 - **Shooting mode:** allows you to set the shooting mode. Choose from the following options:
 - **Single shot:** take a single photo and view it before returning to the shooting mode.
 - **Smile shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
 - **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area wherein the second part of the panoramic picture should fall.
 - **Scene mode** allows you to set the Scene to help take the best pictures possible. Options include **None**, **Landscape**, **Night**, **Sports**, **Party/Indoor**, **Beach/Snow**, **Sunset**, **Dawn**, **Fall Color**, **Firework**, **Candlelight**, and **Backlight**.
 - **Exposure value** allows you to adjust the overall image brightness. Use the slider to adjust the value.
 - **Timer:** allows you to set a timer for how long to wait before taking a picture. Options include: **Off**, **2 sec**, **5 sec**, and **10 sec**.
 - **Effects:** allows you to change the color tone or apply special effects to the photo. Options include: **No effect**, **Negative**, **Black and white**, and **Sepia**.
 - **Resolution:** allows you to set the image size, to **3.2M (2048x1536)**, **W2.4M (2048x1152)**, **2M (1600x1200)**, **W1.3M (1536x864)**, **1.3M (1280x960)**, **W0.9M (1280x720)**, or **0.3M (640x480)**.

DRAFT For Internal Use Only

- **White balance:** allows you to set this option to one of the following choices: **Auto**, **Daylight**, **Cloudy**, **Incandescent**, or **Fluorescent**.
- **Metering:** allows you to set how the camera measures or meters the light source: **Center-weighted**, **Spot**, or **Matrix**.
- **Guidelines:** allows you to turn the guidelines **On** or **Off**.
- **GPS tag:** allows you to turn GPS **On** or **Off**. The location where the picture is taken is attached to the picture. (Only available in Camera mode.)
- **Storage:** allows you to configure the default storage location for images or videos as **Device** or an optional **Memory card** (not included), if a memory card is installed.
- **Reset:** allows you to reset all camera or camcorder settings to the default values.

Camcorder Settings

Configure options for recording video.

- Tap  in the menu panel to display the Settings menu and access camcorder settings. You can change the following settings from the Settings menu:
- **Edit shortcuts:** allows you to set shortcut icons for the settings that you use the most.
 - **Self-recording:** allows you to set the front camera so you can take videos of yourself or video chat.
 - **Recording mode:** allows you to set the recording mode to either **Normal** (limited only by available space on the storage location) or **Limit for Email** (limited by Email attachment size restrictions).
 - **Exposure value:** allows you to adjust the brightness level.
 - **Timer:** allows you to set a timer for how long to wait before taking a video. Choose from: **Off**, **2 sec**, **5 sec**, or **10 sec**.
 - **Effects:** allows you to change the color tone or apply special effects to the photo. Choose from: **No effect**, **Negative**, **Black and white**, or **Sepia**.
 - **Resolution:** allows you to set the image size to **1280x720**, **720x480**, **640x480**, or **320x240**.
 - **White balance:** allows you to adjust color casts in your video. Choose from: **Auto**, **Daylight**, **Cloudy**, **Incandescent**, or **Fluorescent**.
 - **Guidelines:** allows you to turn the guidelines **On** or **Off**.

DRAFT For Internal Use Only

- **Storage:** allows you to configure the default storage location for images or videos as **Device** or an optional **Memory card** (not included), if a memory card is installed.
- **Reset:** allows you to reset all camera or camcorder settings to the default values.

View Pictures and Videos Using Gallery

Using the Gallery application, you can view photos and watch videos that you've taken with your device's camera, downloaded, or copied onto your storage card.

For photos that are on your storage card, you can do basic editing such as rotating and cropping. You can also easily make a photo as your contact picture or wallpaper and share photos with your friends.

[Open Gallery](#)

[View Photos and Videos](#)

[Zoom In or Out on a Photo](#)

[Watch Video](#)

Open Gallery

The Gallery is where you can access the Gallery of stored camera images.

1. Press  and tap  (**Gallery**).
2. Select a folder location (such as Camera) and tap an image to view your picture.
3. From the image folder, do one of the following:
 - Touch and hold any desired images to select them (indicated by a light blue outline).
 - Tap an image to display it in full screen view.

Note: A complete list of **More** menu options is available only if a single image is selected.

4. Press  to close the Gallery.

Folders in your storage card that contain photos and videos will also be treated as albums and will be listed below the preset albums. The actual folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **All downloads** album.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply tap an album to view the photos or videos in that album.

DRAFT For Internal Use Only

Note: Depending on the number of pictures stored on the microSD card, it may take some time for Gallery to load all your photos on the screen.

View Photos and Videos

After selecting an album from the Albums tab, you can browse through the photos and videos of that album in either photo pile or grid view. Tap a photo or video to view it in full screen.

Viewing Photos

- ▶ Tap a thumbnail to view the picture. See [Review Pictures and Videos](#).

Viewing Videos

Note: If no control icons are displayed on the screen in addition to the picture, tap anywhere on the screen to display them.

1. Touch and hold a video to select it. A light blue outline will appear around the thumbnail. Choose from the following options:

-  (**Share**): offers several ways to share your picture or video. Options may include: **Bluetooth**, **Wi-Fi Direct**, **Dropbox**, **Google+**, **YouTube**, **Gmail**, or **Email**.
-  (**Delete**): allows you to delete the current video. Tap **OK** to delete or **Cancel**.

2. Tap a thumbnail to play the video.

Zoom In or Out on a Photo

There are two ways you can zoom in or out of a photo.

- ▶ Tap the screen twice quickly to zoom in and then tap the screen twice quickly again to zoom out.

- or -

You can also use pinch and spread to zoom in or out. See [Touchscreen Navigation](#).

Watch Video

The screen automatically switches to landscape mode when you play a video. Use the onscreen controls to play, pause, or stop the video.

The video is displayed in full screen size. You can tap <icon> to make it fit on the screen based on the video size. Tap the button again to change back to full screen size.

DRAFT For Internal Use Only

Working with Photos

You can touch and hold on a photo to open a selection menu and choose what to do with it. You can choose to delete the photo, rotate or crop it, and more.

Rotate and Save a Photo

Crop a Photo

Rotate and Save a Photo

To rotate or save your photo, follow the below procedures.

1. Press  and tap  (**Gallery**).
2. Select a folder location (such as Camera) and tap an image to view your picture.
3. Tap  > **Rotate left** or **Rotate right**.

The rotated picture is saved in your default storage location as a copy.

Crop a Photo

To crop your photos, follow the below procedures.

1. Press  and tap  (**Gallery**).
2. Select a folder location (such as Camera) and tap an image to view your picture.
3. Tap  > **Crop**.
4. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
5. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
6. Tap **Done** to apply the changes to the picture.

The cropped picture is saved along with the original copy in your default storage location.

Photo Editor

The Photo Editor application provides basic editing functions for pictures that you take on your device. Along with basic image tuning like brightness, contrast, and color, it also provides a wide variety of effects used for editing the picture.

Follow the below procedures to use Photo Editor.

1. Press  and tap  (**Photo editor**).
2. Tap **Select picture** to edit a picture in your Gallery, or tap **Take picture** to take a new picture with the Camera.
3. Tap the picture to load it into Photo editor.
4. Use the following Photo editor controls to edit your picture:
 - **Selection:** allows you to drag your finger over the picture to select an area of the picture. Choose **Magnetic**, **Lasso**, **Brush**, **Round**, or **Square** selection patterns. When Selection is active, tap **Selection size** to choose the size of selections, or **Inverse** to invert a selection.
 - **Rotate:** allows you to rotate a photo in all 4 directions. You can also mirror image a photo.
 - **Resize:** allows you to resize the current image.
 - **Crop:** allows you to crop a photo to customize a size.
 - **Color:** allows you to access color options including **Auto adjustment**, **Exposure**, **Saturation**, **Contrast**, **Brightness**, **Hue**, **Grey-scale**, or **Temperature**.
 - **Effect:** allows you to add various effects to your photo.
 - **Tools:** access other picture options.
 - **Undo:** undo the most recent photo adjustment.
 - **Redo:** redo the most recent undone photo adjustment.
 - **Crop:** allows you to crop a photo to customize a size.
5. Tap  to access the following options:
 - **Select picture:** selects an existing image from your Gallery and starts a new Photo editor project. Be sure and save the photo you are working on before starting a new project.
 - **Take picture:** launches the camera and allows you to take a new picture to then use as a new Photo editor project.
 - **Share via:** allows you to share your photo via **Bluetooth**, **Dropbox**, **Email**, **Email**, **Gmail**, **Google+**, **Group Cast**, **Picasa**, or **Wi-Fi Direct**.

DRAFT For Internal Use Only

- **Set as:** sets the new image as either your **Contact photo**, **Home and lock screens**, **Home screen wallpaper**, or **Lock screen wallpaper**.

Share Photos and Videos

The Gallery application lets you send photos and videos via Email or Gmail, or share photos on your social networks (such as Facebook and Picasa) and share videos on YouTube. You can also send them to another device or your computer using Bluetooth, Wi-Fi Direct, Group Cast, or Dropbox.

[Send Photos or Videos by Email](#)

[Send Photos or Videos Using Bluetooth](#)

[Share Photos or Videos on Google+](#)

[Share Photos on Picasa](#)

[Share Videos on YouTube](#)

Send Photos or Videos by Email

You can send several photos, videos, or both in an email message. They are added as file attachments in your email.

1. Press  and tap  (**Gallery**).
2. Tap the album that contains the photos or videos you want to share.
3. Tap the photos you want to send.
4. Touch the screen and then tap  > **Gmail** or **Email**.
5. Compose your message and then tap  or .

Note: If you selected **Email** and you have multiple email accounts, the default email account will be used.

Send Photos or Videos Using Bluetooth

You can select several photos, videos, or both and send them to someone's device or your computer using Bluetooth.

1. Press  and tap  (**Gallery**).
2. Tap the album that contains the photos or videos you want to send.

DRAFT For Internal Use Only

3. Select the photos or videos you want to send.

4. Touch the screen and then tap  > **Bluetooth**.

In the next few steps, you'll be asked to turn on Bluetooth on your device and connect to the receiving Bluetooth device so the files can be sent. For more information, see [Bluetooth](#).

Share Photos or Videos on Google+

You can select several photos, videos, or both and upload them to Google+.

1. Press <icon> and tap <icon>.
2. Tap the album that contains the photos or videos you want to send.
3. Tap the photo or video you want to send.
4. Touch the screen and then tap <icon> > **Google+**.

Note: You may be prompted to select an account for Google+, or configure additional options.

5. Compose your message and then tap <icon>.

Share Photos on Picasa

You need to be signed in to a Google Account to upload pictures to the Picasa™ photo organizing service.

1. Press  and tap  (**Gallery**).
2. Tap the album that contains the photos or videos you want to share.
3. Select the photos you want to share.
4. Touch the screen and then tap  > **Picasa**.
5. Select the online album where you want to upload the pictures.
6. Tap **Upload**. You can view the photos online at picasaweb.google.com.

Share Videos on YouTube

You can share your videos by uploading them to YouTube™. Before you do this, you must create a YouTube account and sign in to that account on your device.

DRAFT For Internal Use Only

1. Press  and tap  (**Gallery**).
2. Tap the album that contains the videos you want to share.
3. Select the video you want to share.
4. Touch the screen and then tap  > **YouTube**.
5. Enter the prompted information, such as description and tags, and select a privacy option.
6. Tap **Upload**.

DRAFT For Internal Use Only

Tools and Calendar

Learn how to use many of your device's productivity-enhancing features.

[Calendar](#)

[Alarm](#)

[Calculator](#)

[World Clock](#)

[Memo](#)

[S Suggest](#)

[Transfer Files Between Your Device and a Computer](#)

[My Files](#)

[Dropbox](#)

[Bluetooth](#)

[microSD Card](#)

[Update Your Device](#)

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your device's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, and Outlook calendar.

[Add an Event to the Calendar](#)

[Event Alerts](#)

[View Events](#)

[Erase Events](#)

Add an Event to the Calendar

Add events to your Calendar to help you organize your time and remind you of important events.

DRAFT For Internal Use Only

Note: To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your device. See [Accounts and Messaging](#) for more information.

1. Press  and tap  >  (**Calendar**).
2. Double-tap a day to which you would like to add an event to reveal the **Add event/Add task** screen. The default view for the Calendar is the **Month** view, or you can choose another view, from **Year**, **Month**, **Week**, **Day**, **List**, and **Task**.
3. On the **Add event** screen, choose options for the event. Available options depend on the accounts you have set up on your device.
 - Tap **My calendar** to assign the event to a specific account. **My calendar** is stored locally on the device and not part of an account. If you have accounts set up on your device, you can choose an account to synchronize the new event with the account .
 - Tap **Tap to enter event** and enter a title for the event.
 - Tap **Edit event details** to configure other details for the event:
 - By default, new events are All day events. To set a start and stop time instead, tap **All day** to remove the checkmark, and then select **From** and **To** times for the event.
 - Select a **Time zone**.
 - Select recurrences for the event by tapping the **Repeat** field. Choose from **One-time event**, **Daily**, **Every weekday (Mon~Fri)**, **Weekly (every [day])**, **Every 2 weeks ([day])**, **Monthly (every [number] [day])**, **Monthly (on day [number])**, or **Yearly (on [month] [day])**.
 - Choose options for **Reminders** for the event, including time period and type.
 - Enter a location for the event in the **Location** field or tap  to select the location on the a map.
 - Enter a description for the event in the **Description** field.
 - Enter participants in the **Participants** field (available for Google calendar).
 - Tap **Privacy** to select who is allowed to see this event. Private allows only the selected participants to view the event on your calendar. Public allows anyone with access to your calendar to view the event (available for Google calendar).

DRAFT For Internal Use Only

- Tap  to the right of **Images** to add an image from the Gallery or take a new picture using the camera.

4. Tap **Save** to store the new event and synchronize it with your selected account.

Event Alerts

When your device is turned on and you have an event alarm scheduled, your device alerts you and displays the event summary. There are several ways your device alerts you to scheduled events:

- By playing the assigned ringtone.
- By showing the **Alert** screen.

Event Reminders

When your device is turned on and you have an event alarm scheduled, there are several ways your device alerts you to scheduled events:

- By playing a short beep.
- By indicating an icon within the Status bar.

To view additional options:

1. Tap the **Status** bar to open the **Notifications** panel.
2. Tap the upcoming event name from the onscreen list to display the event within the **Calendar** notifications screen.
3. Tap an option.
 - **Set snooze duration** to set the length of time to allow before you are reminded of the event. Choose from: **3 minutes**, **5 minutes**, **10 minutes**, **15 minutes**, or **30 minutes**.
 - **Snooze** to be reminded of the event at a future time.
 - **Dismiss** to dismiss the reminder.

View Events

The following procedure helps you view your calendar events.

1. Press  and tap  >  (**Calendar**). Once an event has been created, entries are shown in the default view.
2. To view a Calendar event farther out, tap either **Week** or **Month**.

DRAFT For Internal Use Only

3. Tap the day for which you would like to view events. (Your device lists events in chronological order.)
4. To display an event's details, tap it from the current screen.

Day and List Views

Day view displays a list of the events of one day.

List view shows a list of all your events in chronological order.

The color bars on the left side of the events indicate the type of calendar that includes the event.

When in Day view, slide left or right across the screen to view earlier or later days.

Week View

Week view displays a chart of the events of one week.

When in Week view:

- You can touch and hold on a time slot to create a new event at that time.
- Tap an event to view its details.
- Slide left or right across the screen to view earlier or later weeks.

Month View

In Month view, you'll see markers on days that have events.

When in Month view:

- Tap a day to view the events of that day.
- Touch and hold a day to create a new event.
- Slide up or down to view earlier or later months.

Erase Events

The following procedures show you how to erase your calendar events.

1. Press  and tap  >  (**Calendar**).
2. Open the calendar event details:
 - In **Agenda**, **Day**, and **Week** views, tap the calendar event you want to delete.

DRAFT For Internal Use Only

- In **Month** view, tap the date where the calendar event occurs, and then tap the calendar event.
- In **Year** view, tap the month in which the event is located.

3. Tap  > **Delete**.

4. In the Delete confirmation box, tap **OK**.

- or -

If the calendar event is recurring, select **Only this event**, **This & future events**, or **All events**, and tap **OK**.

Alarm

Set alarms for reminders.

[Set an Alarm](#)

[Delete an Alarm](#)

Set an Alarm

Use the following methods to create an alarm event.

1. Press  and tap  >  (**Alarm**).

2. Tap  (**Create alarm**) to create an alarm.

- Set a time for the alarm by tapping the arrows to select a time and AM/PM.
- For **Alarm repeat**, tap the days of the week to play the alarm.
- Tap **Repeat Weekly** to have the alarm repeat every week.
- Drag the Volume slider to set the volume for the alarm notification.
- Choose an **Alarm type**, for to select a ringtone that will sound for the alarm. Tap **Sounds** and then tap a ringtone to hear an audio sample. Tap **Go to My Files** to select a music or other audio file from your library.
- Tap **Snooze** to activate snooze delays for the alarm. When Snooze is active, set a **Duration** and **Repeat**.
- Tap **Smart alarm** to track body movements and calculate the best time for sounding the alarm. Place the device somewhere on your bed, and then the device's

movement sensor (also known as accelerometer) is sensitive enough to work from any part of the bed. Set the **Interval** and the **Tone**.

- Select a unique name for this alarm event by tapping the **Name** field and entering a new name.

3. Tap **Save** to store the new alarm event.

Delete an Alarm

To delete an Alarm event:

1. Press  and tap  >  (**Alarm**).
2. Touch and hold an alarm.
3. From the onscreen context menu, tap **Delete**.

Calculator

Your device comes with a built-in calculator.

1. Press  and tap  >  (**Calculator**).
2. Enter numbers by tapping the onscreen keyboard.
3. Touch and hold **C** to clear all numbers.

World Clock

View the date and time in any city.

- Press  and tap  >  (**World Clock**).

Memo

Use Memo to create text memos.

View Memos

Follow the steps below to explore Memo.

1. Press  and tap  >  (**Memo**).

2. From the Memo screen, tap  to access the following options:

DRAFT For Internal Use Only

- **Sort by:** Set whether to sort the memo list by **Date**, **Title**, or **Color**.
- **Share via:** Select one or all memos, tap **Send**, and then choose **Bluetooth**, **Dropbox**, **Email**, **Gmail**, or **Wi-Fi Direct**.
- **Print:** Choose memos to print on an optional compatible Samsung printer (not included).
- **Sync memo:** Choose memos to sync with Google docs..
- **PIN lock:** Set a PIN to secure memo contents.
- **Font size:** Choose the size for memo text.

Create a Memo

Use Memo to create a new memo.

1. Press  and tap  >  (**Memo**).
2. Tap  to start a new memo
3. When you are finished, tap **Done**.

S Suggest

S Suggest provides recommendations for applications that are specifically supported and made for use on your device.

1. Press  tap  >  (**S Suggest**).
2. Read the terms and conditions.
3. Place a check mark in the Agree field then tap **Agree**.
4. Select an application from one of the available categories (Picks, Categories, Games, Friends, and Info).
5. Follow the onscreen download and installation instructions.

Transfer Files Between Your Device and a Computer

You can use the supplied USB charging/cable to connect your device directly to your computer and transfer music, pictures, and other content files. For example, if you have a music album stored on your computer that you want to listen to on your device with the music player, Google

Play Music, or Sprint Music Plus, just attach your device to the computer and copy the files to the music folder.

1. Connect your device to your computer using the USB/charging cable supplied with your device.
 - Insert the larger end of the cable to the charger/accessory jack at the bottom of the device.
 - Insert the smaller end of the cable into an available USB port on your computer.
2. The  **USB connected** icon appears in Notifications, with the notification **Connected as a media device** or **Connected as a camera**. Touch the notification to choose a connection mode from USB PC Connection settings.
 - **Media device (MTP)**: Transfer media files in Windows, or using Android file transfer on a Mac.
 - **Camera (PTP)**: Transfer photos using camera software, and transfer files onto a PC that does not support MTP.
3. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.
4. If available, select a drive (**Card** for microSD card, **Tablet** for internal device storage).
5. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
6. When you are done, disconnect your device from your computer.

My Files

Use My files to manage files stored on your device, or on an optional installed memory card (not included). You can launch a file if the associated application is already on your device.

1. Press  and tap  >  (**My files**).
2. Browse files:
 - Tap **sdcard** for files stored in device memory.
 - Tap **extSdCard** for files saved on an optional installed memory card (not included).

DRAFT For Internal Use Only

Dropbox

Dropbox provides 2GB of free “cloud” storage, so you can bring your photos, docs, and videos anywhere. You can edit files in your Dropbox from your device, upload photos and videos to Dropbox, and share your selected files with family and friends.

The Dropbox app on your device works with a partner program installed on a computer, via the Internet.

Dropbox creates a folder that automatically synchronizes its contents across all of your connected devices on your account. Update a file to your dropbox on your computer, and it's automatically updated to the same folder on your other devices.

[Download the Dropbox Desktop Application](#)

[Accessing Dropbox on Your Device](#)

Download the Dropbox Desktop Application

Follow the procedures below to download the desktop application.

1. Use your computer's browser to navigate to: <http://www.dropbox.com/>.
2. Follow the prompts on your computer to install.

Important! The computer application must be installed on the computer containing the desired files. This computer must have an active Internet connection.

Note: You might need to configure your router's firewall settings to allow this application to access to the Internet.

Accessing Dropbox on Your Device

Follow the procedures below to access the Dropbox app.

1. Press  and tap  >  (**Dropbox**).
2. Tap **Start**, and then follow the onscreen instructions to log in, or create an account..

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, and Bluetooth-enabled computers, printers, and other wireless devices. The Bluetooth communication range is approximately 30 feet.

[Turn Bluetooth On or Off](#)

[Bluetooth Settings](#)

[Change the Device Name](#)

DRAFT For Internal Use Only

[Pair with a Bluetooth Device](#)

[Connect to a Paired Device](#)

[Disconnect from a Bluetooth Device](#)

[Unpair from a Bluetooth Device](#)

[Send Information via Bluetooth](#)

[Receive Information via Bluetooth](#)

Turn Bluetooth On or Off

The following procedures will guide you through turning your device's Bluetooth feature on or off.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals.

4. Press  and tap  >  > **Bluetooth**.
5. Tap the ON/OFF slider to move it into the **ON** position to turn Bluetooth on.

Tip: You can also turn Bluetooth on and off on the Notifications panel. Touch the notifications area, and then tap **Bluetooth**.

Bluetooth Settings

Configure your device's Bluetooth settings.

- Press  and tap  >  > **Bluetooth**.

Change the Device Name

The device name identifies your device to other devices.

1. Press  and tap  >  > **Bluetooth**.
2. If Bluetooth is not on, tap the ON/OFF slider to turn it on.
3. Tap  > **Rename device**.
4. Enter a name for your device, and then tap **OK**.

DRAFT For Internal Use Only

Pair with a Bluetooth Device

Search for a Bluetooth device and pair with it, to establish a connection between your device and the target device. After pairing, your device and the target device will recognize each other, and you can connect without entering a passcode or PIN.

To listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

1. Press  and tap  >  > **Bluetooth**.
2. If Bluetooth is not on, tap the ON/OFF slider to turn it on.
3. Make sure that the headset is discoverable, so that your device can find the headset. Refer to the instructions that came with the headset to find out how to set it to discoverable mode.
4. Tap **Scan** to scan for Bluetooth devices within range.
5. When you see the name of your headset displayed in the Bluetooth devices section, tap the device. Your device then automatically tries to pair with the headset. If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the target device name in the Paired devices section. When the target device is connected to your device, (Bluetooth connected) displays in the status bar.

Connect to a Paired Device

When you have paired another Bluetooth device with your device, you should be able to reconnect it automatically by turning on Bluetooth on both devices. However, sometimes you will need to reconnect manually, for example if you have been using your headset with another Bluetooth device.

1. Press  and tap  >  > **Bluetooth**.
2. If Bluetooth is not on, tap the ON/OFF slider to turn it on.
3. Make sure that the headset is discoverable.
4. Tap the headset's name in the Bluetooth devices section.

Note: If you cannot reconnect to the target device, follow the instructions in [Disconnect from a Bluetooth Device](#), and then follow the instructions in [Pair with a Bluetooth Device](#).

Disconnect from a Bluetooth Device

Disconnecting does not unpair the devices, so you can connect the devices at another time.

1. Press  and tap  >  > **Bluetooth**.
2. In the Bluetooth devices section, tap  next to the device to unpair.
3. Tap **Disconnect**.

Unpair from a Bluetooth Device

When you unpair from a Bluetooth device, the devices will no longer connect automatically. To connect to the other device again, you'll need to pair with the device again.

1. Press  and tap  >  > **Bluetooth**.
2. In the Bluetooth devices section, tap  next to the device name, and then tap **Unpair**.

Send Information via Bluetooth

Use Bluetooth to transfer information between your device and another Bluetooth-enabled device paired with your device. Follow the instructions at [Pair with a Bluetooth Device](#) for information about pairing with another Bluetooth device.

Not all Bluetooth devices can accept all types of information. Depending on the device, you can share pictures and videos, Calendar events, Contacts, music, and other types of information.

1. On your device, open the application that contains the information or file you want to

send. For example, if you want to send a photo, press  and tap .

2. Follow the steps for the type of item you want to send:

- **Photo or video** (in Camera). After capturing a photo, on the preview screen, tap

 > **Bluetooth**.

- **Photos and videos** (in Gallery). On the **Albums** tab, tap an album, and then tap

 > **Bluetooth**.

Tip: If your device remembers Bluetooth as a previous selection within the Camera or

Gallery, you can tap the Bluetooth icon (to the right of the  icon).

DRAFT For Internal Use Only

- **Calendar event.** In the Calendar's Day view, Agenda view, or Week view, tap the event and then tap  > **Share via** > **Bluetooth**.
 - **Music track.** This feature is available through the **Music Player**. With the track displayed on the Now playing screen, tap  > **Share via** > **Bluetooth**.
3. If you are prompted to turn on Bluetooth, tap **Yes**.
 4. Tap the name of the receiving device.
 5. If prompted, accept the connection on the receiving device, and enter the same passcode on both your device and the other device, or confirm the auto-generated passcode.
 6. On the receiving device, accept the file.

The location where the information is saved depends on the type of information and the receiving device:

- If you send a calendar event or contact, it is normally added directly to the corresponding application on the receiving device. For example, if you send a calendar event to a compatible device, the event is shown in that device's calendar application.
- If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.
 - On Windows XP, the path may be: C:\Documents and Settings\[your user name]\My Documents\Bluetooth Exchange.
 - On Windows Vista, the path may be: C:\Users\[your user name]\Documents.
- If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another wireless device, it may be saved in a folder named "Images."

Receive Information via Bluetooth

Use Bluetooth to receive information from another Bluetooth-enabled device paired with your device. Follow the instructions at [Pair with a Bluetooth Device](#) for information about pairing with another Bluetooth device.

Your device can receive a variety of file types via Bluetooth, including photos, music, contact records, and documents such as PDFs.

1. Press  and tap  >  > **Bluetooth**.
2. If Bluetooth is not on, tap the ON/OFF slider to turn it on.

DRAFT For Internal Use Only

3. On the sending device, send one or more files to your device. Refer to the device's documentation for instructions on sending information via Bluetooth.
4. Follow the prompts on both devices to confirm the transfer.
5. When the transfer is complete, a notification displays in your device's Status bar. Touch the notification to view a list of transferred item(s). You can select an item to view information about it, or to open a file.
 - For media files and documents, you can open them, if a compatible application is installed on your device. For example, you can save a song, and then play it in Music Player.
 - For events (vCalendar) you can choose to open the event, or import it into Calendar. For more information on using the Calendar, see [Calendar](#).
 - For contact records (vCards), you can choose to import one, several, or all of the contacts to Contacts.

microSD Card

You can install an optional microSD™ (Secure Digital) memory card (not included), for additional storage of images, videos, music, documents, and other information.

Important! You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling it.

Do not over-insert the card as this can damage the contact pins.

Be sure to use only recommended microSD cards (up to 64GB). Using non-recommended microSD cards could cause data loss and damage your device.

Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

[Insert a microSD Card](#)

[Remove a microSD Card](#)

[View microSD Card Memory](#)

[Format a microSD Card](#)

 
[Unmount a microSD Card](#)

Insert a microSD Card

Use the following procedures to insert a microSD card into your device.

DRAFT For Internal Use Only

1. Open the Memory Card Slot cover and turn it to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.

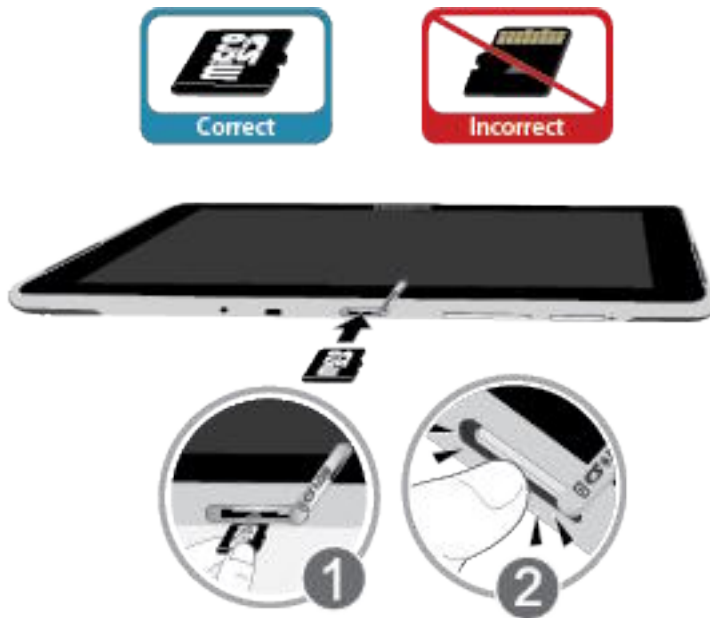

3. Replace the Memory Card Slot cover.

Remove a microSD Card

Use the following procedures to remove a microSD card from your device.

Important! To prevent damage to information stored on the memory card, unmount the card before removing it from the device. Unmounting a memory card prepares it for removal from the device.

1. Press  and tap  >  > **Storage**.
2. Tap **Unmount SD card** to prepare the memory card for removal from your device. A notification appears the Notifications area when it's safe to remove the card.
4. Open the Memory Card Slot cover and turn it to expose the slot.
5. Gently press on the memory card, so that it pops out from the slot, and then carefully pull the card out.

DRAFT For Internal Use Only



6. Replace the Memory Card Slot cover.

View microSD Card Memory

View total and available memory available on an installed microSD memory card.

- Press  and tap  >  > **Storage**. See [Device Memory](#) for more information.

Format a microSD Card

Formatting a microSD card permanently removes all files stored on the card. See [SD Card](#) for more information.

Note: Formatting removes all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

1. Press  and tap  >  > **Storage**.
2. Scroll down the screen, tap **Format SD card** > **Format SD card** > **Delete all**.

Unmount a microSD Card

Before removing a memory card, you must unmount card first to prevent corrupting the data stored on it or damaging the microSD card..

1. Press  and tap  >  > **Storage**.
2. Tap **Unmount SD card**.
3. Remove the microSD card. See [Remove a microSD Card](#).

DRAFT For Internal Use Only

Update Your Device

From time to time, updates may become available for your device. You can review available updates, and install them from your device.

[Update the PRL](#)

[Update Your Profile](#)

[Update Your Samsung Software](#)

[Update Firmware](#)

Update the PRL

This option allows you to download and update the PRL (Preferred Roaming List).

1. Press  and tap  >  > **System Update > Update PRL.**
2. Follow the onscreen instructions.

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press  and tap  >  > **System Update > Update Profile.**
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seem to stop unexpectedly, use this setting to reconnect with the network.

Update Your Samsung Software

This option allows you to update the Samsung software on your device via an over-the-air connection.

1. Press  and tap  >  > **System Update > Update Samsung Software.**
2. Follow the onscreen instructions.

Update Firmware

You can update your device's software using the **Update Firmware** option.

DRAFT For Internal Use Only

Back Up Information Before Updating Firmware

Updating your device firmware will erase all user data from your device. To preserve your information, you must back up all critical information before updating device firmware.

Back up Gmail information:

1. Press  and tap  >  > **Accounts and sync**.
2. Tap the **Auto-sync** option to enable the feature (checkmark).
 - If the **Auto-sync** option is on, email, Calendar and Contacts automatically synchronize whenever a change is made.
 - If the **Auto-sync** option is off, tap the sync icon within the account field to reveal the account's synchronization settings screen.

Back up Exchange Mail information:

1. Press  and tap  >  > **Accounts and sync**.
2. Tap the sync icon within the Corporate account field to reveal the account's synchronization settings screen.
3. Toggle the onscreen checkmark to manually synchronize the desired parameters (Contacts or Calendar).

Back up data to your Google account :

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied.

1. Log into your Google account via the device.
2. Press  and tap  >  > **Backup and reset**.
3. Configure these options:
 - Tap **Back up my data** to back up app data, Wi-Fi passwords, and other settings to Google servers.
 - Tap **Backup account** to choose a Google account as the backup account.
 - Tap **Automatic restore** to enable or disable automatic restore. When enabled, this option automatically restores your backed-up settings and data when you reinstall an app.

DRAFT For Internal Use Only

4. From Settings, tap **Accounts and sync**, and then tap **Sync all**.

As an added precaution, to preserve any data on an optional installed microSD card (not included), please remove it from your device prior to starting the update process.

Update Device Firmware

After backing up your information, use the **Update Firmware** option to update your device firmware.

1. Press  and tap  >  > **System Update**.
2. Tap **Update Firmware**. Your device automatically downloads and installs any available updates. Follow the prompts to complete the update. You may be required to power your device off and back on to complete the software upgrade.

Confirm Firmware Version

1. Press  and tap  >  > **About device**.
2. Locate the **Baseband version** (read-only).

DRAFT For Internal Use Only

Index

- 4G Services, 112
- About Device, 65
- Accessibility, 60
 - Settings, 60
 - TalkBack, 61
- Account
 - Manage, 5
- Account Passwords, 5
- Accounts, 76
 - Add new, 47
 - Email, 79
 - Gmail, 77
 - Google, 76
 - Manage, 47
 - Set Up, 47
 - Social Network, 86
- Accounts and Sync, 47
- Activation, 3
- Air View, 16
- Airplane Mode, 33
- AllShare Play, 101
 - Group Cast, 104
 - Settings, 102
 - Sharing Files, 103
 - Web Storage, 102
- Application Manager, 45
- Applications, 89
- Backup and Reset, 58
- Battery
 - Settings, 45
- Bluetooth, 134, 144
 - Connect to a Car Kit, 146
 - Receive Information, 148
 - Send Information, 147
 - Turn On or Off, 145
 - Unpair, 147
- Brightness, 39
- Browser, 114
 - Bookmarks, 120
 - Menu, 116

DRAFT For Internal Use Only

- Navigating, *115*
- Settings, *117*
- Calculator, *141*
- Calendar, *136*
- Camera, *123*
 - Photo Editor, *132*
 - Settings, *127*
 - Take Pictures, *123*
 - Viewing Pictures, *129*
- Contacts, *66*
 - Add, *68*
 - Adding Entries to Your Favorites, *73*
 - Adding Your Facebook Friends, *73*
 - Edit, *69*
 - Groups, *74*
 - Share, *74*
 - Synchronize, *71*
- Corporate Email
 - Creation, *80*
- Credentials, *53*
- Data, *114*
- Data Services, *111*
 - Password, *5*
- Data Usage, *32*
- Date and Time, *59*
- Developer Options, *62*
- Device
 - Layout, *7*
 - Navigation, *10*
- Display Settings, *39*
- DivX, *89*
- Drag, *12*
- Dropbox, *144*
- Editing Text, *29*
- Email, *79*
 - Compose, *82*
 - Corporate, *84*
 - Corporate Accounts, *80*
- Encryption, *52*
- Enter Text, *24*
- Entertainment, *123*
- Extended Home Screen, *21*
- Face Unlock, *50*
- Facebook, *86*

DRAFT For Internal Use Only

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your device.



WARNING

Safety warnings

Keep your device away from small children and pets

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the eardevices into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install devices and equipment with caution

Ensure that any devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the device in potentially explosive environments

Do not use your device at refuelling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION Safety precautions

Drive safely at all times

Avoid using your device while driving and obey all regulations that restrict the use of devices while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a device in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your device or cause injury.

Turn off the device near medical equipment

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the device or disable the wireless functions when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.

Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.

Never use a damaged charger or battery.

Handle your device carefully and sensibly

Do not allow your device to get wet—liquids can cause serious damage. Do not

handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.

- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is a complex electronic device— protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- Avoid using the device's camera flash or light close to the eyes of children or animals.
- Your device and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your device in the normal position

Avoid contact with your device's internal antenna.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal

objects. If dirty, wipe the card with a soft cloth.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless devices to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model device are performed in positions and locations as required by the FCC.

SAR information on this and other model devices can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search, A3LSPHP600. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular device, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular device. Additional product specific SAR information can also be obtained at <http://www.fcc.gov/encyclopedia/specific-absorption-rate-sar-cellular-teledevices>

Consumer Information on Wireless Devices

The U.S. Food and Drug Administration (FDA) has published a series of Questions

and Answers for consumers relating to radio frequency (RF) exposure from wireless devices. The FDA publication includes the following information:

What kinds of devices are the subject of this update?

The term wireless device refers here to hand-held wireless devices with built-in antennas, often called “cell,” “mobile,” or “PCS” devices. These types of wireless devices can expose the user to measurable radio frequency energy (RF) because of the short distance between the device and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the device is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless devices,” which have a base unit connected to the teledevice wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless devices pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless devices. There is no proof, however, that wireless devices are absolutely safe. Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless devices?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless devices before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless devices are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless devices to notify users of the health hazard and to repair, replace or recall the devices so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless device industry to take a number of steps, including the following:

- “Support needed research into possible biological effects of RF of the type emitted by wireless devices;
- “Design wireless devices in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- “Cooperate in providing users of wireless devices with the best possible information on possible effects of wireless device use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- “National Institute for Occupational Safety and Health
- “Environmental Protection Agency

- “Federal Communications Commission
- “Occupational Safety and Health Administration
- “National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless devices with the Federal Communications Commission (FCC). All devices that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless devices.

FCC also regulates the base stations that the wireless device networks rely upon. While these base stations operate at higher power than do the wireless devices themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless devices. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless devices have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless devices, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless devices and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless devices RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of device use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless devices poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless devices would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure

during day-to-day use of wireless devices. Many factors affect this measurement, such as the angle at which the device is held, or which model of device is used.

What is FDA doing to find out more about the possible health effects of wireless device RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless device safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless device users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless device?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless device will reduce RF exposure.

- “If you must conduct extended conversations by wireless device every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless device away from your body.

Again, the scientific data do not demonstrate that wireless devices are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless device use.

What about children using wireless devices?

The scientific evidence does not show a danger to users of wireless devices, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless devices. Reducing the time of wireless device use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless devices at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in

December 2000. They noted that no evidence exists that using a wireless device causes brain tumors or other ill effects. Their recommendation to limit wireless device use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless devices reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless devices, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless devices for convenience and comfort. These systems reduce the absorption of RF energy in the head because the device, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the device is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless devices marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless device accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless devices, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special device cases, while others involve nothing more than a metallic accessory attached to the device. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the device. The device may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless device users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless device interference with medical equipment?

Radio frequency energy (RF) from wireless devices can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless teledevices. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless device EMI. FDA has tested wireless devices and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless devices so that no interference occurs when a person uses a compatible device and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless devices for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.hpa-radiationservices.org.uk/rpa>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellDevices/default.htm>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position.

Using Your Device Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless device. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the device more than 15 cm (6 inches) from their pacemaker when the device is switched on.
- should not carry the device in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your device off immediately.

Hearing Aids

Some digital wireless devices may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the device off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Restricting Children's access to your Device

Your device is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the device or make data connections that increase your device bill.

FCC Notice and Cautions

FCC Notice



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the device if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio device, not expressly approved by Samsung, will void the user's authority to operate the equipment.

The use of any unauthorized accessories may be dangerous and void the device warranty if said accessories cause damage or a defect to the device.

Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

- Check regularly that all wireless device equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the device, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your device off before boarding an aircraft. The use of wireless device in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of teledevice services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each data connection you make or receive depends on the signal strength in your area. Your device informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your device is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your device is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your device returns to standby mode.

Maintaining Your Device's Peak Performance

For the best care of your device, only authorized personnel should service your device and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your device properly and maintaining safe, satisfactory service.

- Place the device's acoustic output next to your ear for proper orientation.
- Do not tamper or alter the device's antenna.
- Don't use the device if the antenna is damaged.
- Speak directly into the device's receiver.
- Avoid exposing your device and accessories to rain or liquid spills. If your device does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Usage Time

Usage times will vary depending on device usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of mobile data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the device near the network's base station, it uses less power; usage and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (usage time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A device with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the device and all its parts and accessories out of the reach of small children.
- Keep the device dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the device with a wet hand. Doing so may cause an electric shock

to you or damage to the device.

- Do not use or store the device in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device warms up to its normal operating temperature, moisture can form inside the device, which may damage the device's electronic circuit boards.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the device. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the device in or on heating devices, such as a microwave oven, a stove or a radiator. The device may explode when overheated.
- When the device or battery gets wet, the label indicating water damage inside the device changes color. In this case, device repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your device has not expired.
- If your device has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the device and violate regulations governing radio devices.
- If the device, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



Correct disposal of this product

(Waste Electrical & Electronic Equipment)

 
(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item

for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

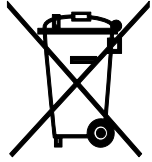

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.