

* Some contents in this manual may differ from your phone depending on the software of the phone or your service provider.



TDMA MOBILE TELEPHONE STH-A325



Draft version
(2002/10/30)

The reference page number
and index will updated when
the manual is complete.

FCC RF EXPOSURE INFORMATION

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm. separation distance between the user's body and the back of the phone. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. Contact your local dealer for optional accessory items.

Vehicle Mounted External Antenna (optional, if available.)

A minimum separation distance of 7.9 inches (20cm) must be maintained Between a person and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Contents

Unpacking	7
----------------------------	---

Your Phone

Phone Layout	8
Display	11

Getting Started

Installing the Battery	14
Charging the Battery	16
Switching the Phone On/Off	18
Locking Your Phone	19

Call Functions

Making a Call	20
Making a Call from the Phonebook	21
Redialing the Last Number	21
Adjusting the Volume	22
Answering a Call	23
Viewing Missed Calls	24
Quickly Switching to Silent Mode	26

Selecting Functions and Options

Using the Soft Keys	27
Selecting Functions and Options	28
Example: Setting the Display Language	29

Phonebook

Storing a Phone Number with a Name	32
Speed Dialing by Memory Location	33
Entry Options	34
Searching for a Number in the Phonebook	37
Phonebook Options	38

Entering Text

Changing the Text Input Mode	42
Using the T9 Mode	43
Using the Upper/Lower-case Character Mode	44
Using the Number Mode	45

Options During a Call

Muting/Sending Key Tones	46
Searching for a Number in the Phonebook	47
Using the SMS Service	48
Making a Calling card call	48
Making a Private Voice Call	49
Putting a Call on Hold	49
Answering a Second Call	50
Making a 3-way Conference Call	51

Using the Menus

Accessing a Menu Function by Scrolling	52
Accessing a Menu Function by Using its Shortcut ...	53
List of Menu Functions	54

Call Records

Missed Calls (<i>Menu 1.1</i>)	58
Incoming Calls (<i>Menu 1.2</i>)	58
Outgoing Calls (<i>Menu 1.3</i>)	59
Call Time (<i>Menu 1.4</i>)	59

Messages

Voice Mail (<i>Menu 2.1</i>)	60
Read Messages (<i>Menu 2.2</i>)	61
Write Messages (<i>Menu 2.3</i>)	63
Preset Message List (<i>Menu 2.4</i>)	64
Setup (<i>Menu 2.5</i>)	65
Picture Message (<i>Menu 2.6</i>)	66
Receiving Pictures, Ring Tones or Caller Line Icons ...	68

Tones

Ring Tone (<i>Menu 3.1</i>)	71
Ring Volume (<i>Menu 3.2</i>)	71
Alert Type (<i>Menu 3.3</i>)	72
Keypad Tone (<i>Menu 3.4</i>)	72
Message Tone (<i>Menu 3.5</i>)	73
Error Tone (<i>Menu 3.6</i>)	73
Minute Minder (<i>Menu 3.7</i>)	74
Connect Tone (<i>Menu 3.8</i>)	74
Function Sound (<i>Menu 3.9</i>)	75

Settings

Infrared Activate (<i>Menu 4.1</i>)	76
LCD Display Control (<i>Menu 4.2</i>)	77
Auto Redial (<i>Menu 4.3</i>)	79
Active Folder (<i>Menu 4.4</i>)	80
Language (<i>Menu 4.5</i>)	80
Reset Settings (<i>Menu 4.6</i>)	81
Calling card (<i>Menu 4.7</i>)	81
Short Cut Key (<i>Menu 4.8</i>)	84

Organizer

Calendar (<i>Menu 5.1</i>)	85
To Do List (<i>Menu 5.2</i>)	87
Time & Date (<i>Menu 5.3</i>)	89
Alarm (<i>Menu 5.4</i>)	91
Calculator (<i>Menu 5.5</i>)	92

Security

Change Lock Code (<i>Menu 6.1</i>)	93
Change Security Code (<i>Menu 6.2</i>)	93
Call Restriction (<i>Menu 6.3</i>)	94
SOS Call List (<i>Menu 6.4</i>)	95

Network Services	
Call Diverting (<i>Menu 7.1</i>)	96
Call Waiting (<i>Menu 7.2</i>)	97
Network Selection (<i>Menu 7.3</i>)	98
Voice Privacy (<i>Menu 7.4</i>)	99
NAM Selection (<i>Menu 7.5</i>)	99
Set Service Code (<i>Menu 7.6</i>)	100
Public System Selection (<i>Menu 7.7</i>)	101
Games	102
Voice Functions	
Voice Dial (<i>Menu 10.1</i>)	103
Voice Memo (<i>Menu 10.2</i>)	105
Solving Problems	107
Health and Safety Information	109
Glossary	124
Index	127
Quick Reference Card	131

Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal. For more detailed safety information, see “Health and Safety Information” on page 109.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in Aircraft

Wireless phones can cause interference. Using them in aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch off your phone near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Radio frequency exposure information

In August 1996, the Federal Communications Commission (FCC) of the U.S. adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. The design of this phone complies with the FCC guidelines and these international standards.

Sensible Use

Use only in the normal position (held to the ear).
Avoid unnecessary contact with the antenna when the phone is switched on.

Accessories and Batteries

Use only Samsung-approved accessories and batteries.

Qualified Service

Only qualified service personnel may install or repair your phone.

 
Unpacking

Your package contains the following items:

Handset



Travel Charger



Battery



Hand Strap



User's Manual



The illustrations above may look different from your phone and accessories.

In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Hands-free kit
- Standard battery
- Cigarette lighter adapter
- Ear-microphone
- Leather case

Your Phone


Phone Layout

The following illustrations show the main elements of your phone.

Open view



Closed view

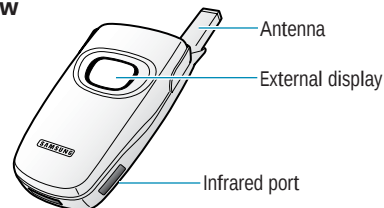

Key Description



Perform the functions indicated by the text above them on the bottom line of the display.



In menu mode, scroll through the menu options and phonebook memory.
In idle mode, enter your favorite menus directly. For more information about shortcut keys, see page 83.



In menu mode, returns to the previous menu level and selects the current menu respectively.
In idle mode, enter your favorite menus directly. For more information about shortcut keys, see page 83.
When entering text, moves the cursor to the left and to the right respectively.



Makes or answers a call.
In idle mode, enters the Last Call logs. Also, redials the last number you dialed when held down.

Key Description (continued...)



Deletes characters from the display.
In menu mode, returns to the previous menu level.
In idle mode, quickly enters or exits silent mode when held down.



Ends a call. Also switches the phone on and off when held down.
In menu mode, cancels your input and returns to idle mode.



In idle mode, allows you to quickly access your voice mail box when held down.



Enter numbers, letters and some special characters.



Enter special dial characters. Also use these keys for various purposes in different functions.



(on the side of the phone)
During a call, adjust the earpiece volume.




In idle mode with the folder open, adjust the key volume.
In menu mode, scroll through the menu options or Phonebook memory.

Display

Layout

The display comprises three areas.

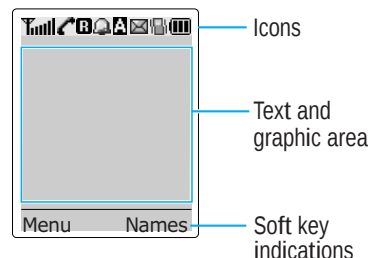

Area	Description
First line	Displays various icons (see page 12).
Middle lines	Display messages, instructions and any information that you enter, number to be dialed, for example.
Last line	Shows the functions currently assigned to the two soft keys.

Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the better the signal.
	Appears when a call is in progress.
	Appears when a new text message is received.
	Appears when silent mode is active and when the Alert Type menu option (Menu 3.3) is set to Vibration or Vibra + Melody .
	Appears when you set an alarm.
	Shows the level of your battery. The more bars you see, the more power you have left.
	Appears when you are out of your home area and have registered onto a different network; when travelling in other countries, for example.
	Appears when a new voice mail message is received.
	Appears when you activate mute mode.
	Appears when the IrDA port is active. For details, see page 83.

Backlight

The display is illuminated by a backlight. When you press any key or open the folder, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on the **Back Light** option set in the **Lcd Display Control** menu.

To specify the length of time for which the backlight is active, set the **Back Light** menu option (**Menu 4.2.4**); see page 77 for further details.

You can also set the phone to use the backlight only during a specified period of time in the **Auto Light** menu option (**Menu 4.2.5**); see page xx for further details.

External Display


Your phone has an external display on the folder. It indicates that you have an incoming call or a message, and notifies you at the specified time when you have set an alarm.

Getting Started


Installing the Battery

To Install the Battery

1. Insert the battery as shown to fit the tabs on the battery into the notches on the bottom of the phone.

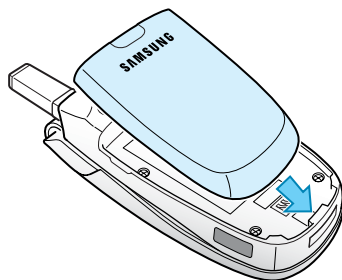


2. Press down the battery until it clicks into place.

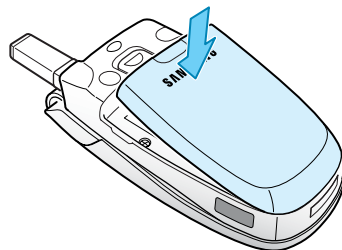

To Remove the Battery

1. If necessary, switch the phone off by holding down the  key until the power-off image begins to play.
2. Remove the battery. To do so:
 - ① pull the catch above the battery upwards and hold it in the position, then
 - ② take the battery out of the phone. It will easily lift out.

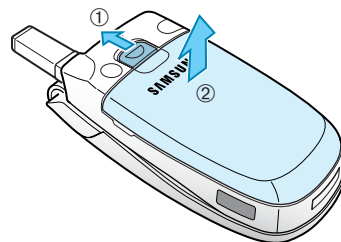


Charging the Battery

Your phone is powered by a rechargeable Li-Ion battery. A travel charger is provided with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

The phone can be used while the battery is charging.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel charger into the jack at the bottom of the phone.

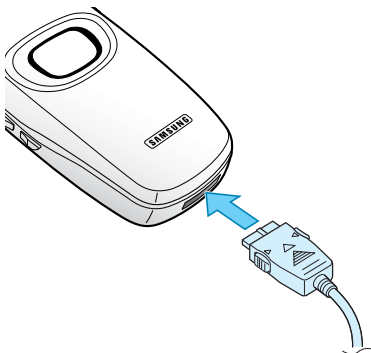


2. Plug the charger into a standard AC wall outlet.

3. When charging is finished (the lamp on the charger turns green), unplug the charger from the power outlet and remove it from the phone by squeezing the two tabs on the connector (①) and unplug the connector (②).

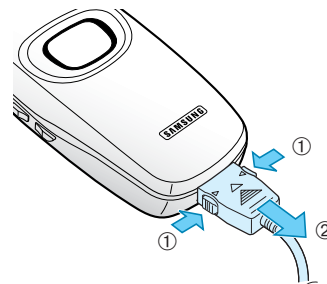

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and the following message will be repeated at regular intervals on the display, along with the empty battery icon:

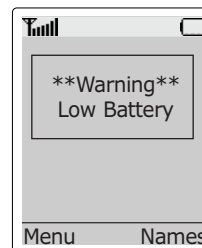

When the battery becomes too weak for the phone to operate, it switches off automatically.

Switching the Phone On/Off

1. Open the folder.
2. Hold down the  key for more than one second to switch the phone on.
3. The phone searches for your service system. When it finds the system, the idle screen, illustrated below, appears on each display.

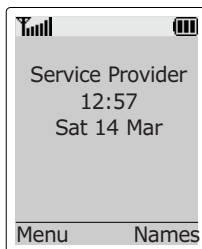

Note: To change the language, use the **Language** menu option (**Menu 4.5**); for further details, refer to page 80.


4. When you wish to switch the phone off, hold down the  key for more than two seconds.

Locking Your Phone

You can lock your phone to protect it against unauthorized use. When your phone is locked, you cannot use the phone's features until you enter the lock code.

To lock your phone:

Press and hold down the **#** key for more than two seconds in idle mode. "Phone Locked" appears on the idle screen.

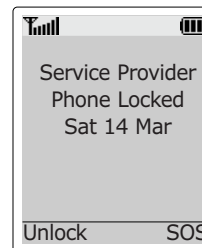

To unlock the phone:

Press the **Unlock** soft key, enter the 4-digit lock code and then press the **OK** soft key. Your phone's lock code is preset to "0000" at the factory. For further details about the lock code, see page 92.

Even if the phone is locked, you can place an SOS call to one of the emergency numbers stored in the SOS Call List (**Menu 6.4**). See page 94 for further details.

To place an SOS call, press the **SOS** soft key, select an emergency number by pressing the **—** or **—** key and press the **Yes** soft key.

Call Functions

Making a Call

When the idle screen is displayed, enter the area code and phone number and press the  key.

Note: If you have set the **Auto Redial** menu option (**Menu 4.3**) to **ON** (see page 79), the number is automatically redialed up to ten times when the person you called does not answer or is already on the phone. If the network answers the call by voice mail greeting, the phone will not attempt to redial.

Correcting the Number

To clear	Press the
the last digit displayed	C key.
any other digit in the number	(or) key until the cursor is immediately to the right of the digit to be cleared. Press the C key. You can also insert a missing digit simply by pressing the appropriate key.
the whole display	C key and hold down for more than two seconds.

Ending a Call

When you want to finish your call, briefly press and release the  key or close the folder.

Making a Call from the Phonebook

You can store the frequently-dialed phone numbers with an appropriate name in the phone memory, which is called Phonebook. You then simply select the required name to recall the associated number. For further details about the Phonebook feature, refer to page 32.

Redialing the Last Number

The phone stores the last 10 numbers dialed. To recall any of these numbers:


1. If you have typed any characters on the display, press the  key to return to idle mode.
2. Press the  key to display the last dialed numbers.
3. Press the  or  key to scroll through the numbers until the required number displays.

To	Press the
dial the number displayed	 key.
edit the number displayed	• Edit soft key and change the number, referring to “Correcting the Number” for details (see page 20). • Save soft key to save the number or the  key to dial the number.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.


Press the ▲ key to increase the volume level and the ▼ key to decrease the level. The more bars you see, the louder the sound is.

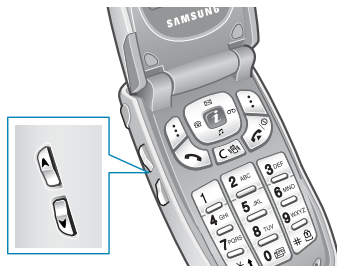

In idle mode with the folder open, you can adjust the keypad tone volume using the ▲ and ▼ keys.

Answering a Call

When somebody calls you, the phone rings and the following screens appears on each of the displays.

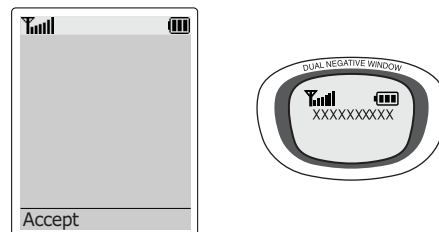

If the caller can be identified, the caller's phone number or name, if stored in your Phonebook, is displayed.

1. Open the folder. Then, press the ↶ key or the **Accept** soft key.
2. End the call by closing the folder or pressing the ↶/ⓞ key.

Note: You can answer a call while using the Phonebook or menu features. The current operation will be interrupted.

Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who was calling you, provided that the Caller Line Identification service is available, so that you can call the person back, if necessary.

The number of missed calls is displayed on the idle screen immediately after the call was missed.

To view the missed call immediately:

- 1. If the folder is closed, open it.
- 2. Press the **View** soft key.

The number corresponding to the most recent missed call is displayed, if available.

To	Press the
scroll through the missed calls	 or  key.
call the number displayed	 key.
edit or delete a missed call number	Options soft key (refer to the following page).

Editing a Missed Call Number

Note: If the caller's number associated with the missed call is not available, the **Edit** option is not displayed.

- 1. Press the **Options** soft key.
- 2. If necessary, press the  or  key to highlight the **Edit** option.
- 3. Press the **Select** soft key.
- 4. Change the number as required.

To...	Press the...
call the number	 key.
store the number	Save soft key and enter the name and location required (for further details, refer to page 32).

Deleting a Missed Call

- 1. Press the **Options** soft key.
- 2. If necessary, press  or  key to highlight the **Delete** option.
- 3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the **Missed Calls** menu option (**Menu 1.1**); for further details, see page 58.

Quickly Switching to Silent Mode

You can quickly switch your phone to silent mode with a touch of a key to mute the phone's sound. Press and hold the **C** key until the  icon and "Silent Mode" appears on the display. Your phone goes to silent mode immediately.

In silent mode, your phone switches the sound settings as listed below:

Option	New setting
Alert Type (Menu 3.3)	Vibration
Keypad Tone (Menu 3.4)	off
Message Tone (Menu 3.5)	Vibration
Error Tone (Menu 3.6)	OFF
Minute Minder (Menu 3.7)	OFF
Connect Tone (Menu 3.8)	OFF

To exit silent mode, press and hold the **C** key again until "Exit Silent Mode" appears.

This feature is convenient when you are in a hurry to mute the phone sound, such as when in a theater.

Selecting Functions and Options

Using the Soft keys

Your phone offers a set of functions that allow you to customize your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

Example:



Press the left soft key to enter menu mode.

Press the right soft key to search a Phonebook entry by entering its name.

Selecting Functions and Options

To view the various functions/options available and select the one required:


1. Press the appropriate soft key.

To	Press the
select the: • function displayed - or • option highlighted	Select soft key or) key.
view the next function or highlight the next option in a list	— key or ▼ key on the left side of the phone.
move back to the function or option in a list	— key or ▲ key on the left side of the phone.
move back up one level in the structure C key.	(key, ↶ soft key or C key.
exit the structure without changing the settings	☎ / ⓪ key.

In some functions, you may be asked for a lock code or security code. Enter the required code and press the **OK** soft key.

Example: Setting the Display Language


1. When the idle screen is displayed, press the **Menu** soft key to enter menu mode.

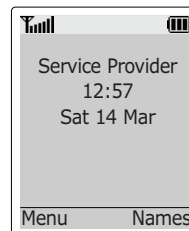


2. Scroll through the menus until you reach the **Settings** menu, by pressing the **—** or **—** key.




3. To select the **Settings** menu, press the **Select** soft key or the **)** key.

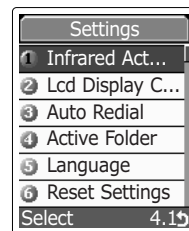


4. Scroll through the sub-menus until you reach the **Language** sub-menu, by pressing the **←** or **→** key.

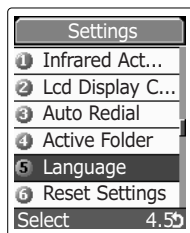

5. To select the Language menu, press the **Select** soft key or the **↵** key.

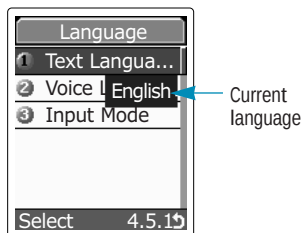

6. When **Text Language** highlights, press the **Select** soft key or the **↵** key. The current setting is highlighted.

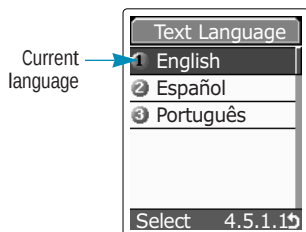

7. Scroll through the list of the languages until the appropriate one is highlighted, by pressing the **←** or **→** key.
8. Press the **Select** soft key or the **↵** key to confirm your selection.
9. Press the **C** or **(** key twice to exit the menu structure.

Phonebook

The Phonebook allows you to store frequently used phone numbers and the associated names in your phone to make it easy for you to make a call without having to remember or enter the phone number. You can store up to 500 (1 ~ 500) entries.

Storing a Phone Number with a Name

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the Phonebook.

1. Enter the number to be stored.

Note: If you make a mistake while entering a number, correct it using the **C** key. For further details, refer to page 21.

2. When you are sure that it is correct, press the **Save** soft key.
3. Select a label of your number by pressing the  or  key, and press the **Select** soft key.

The available labels are **Home**, **Office**, **Mobile**, **Pager**, **Fax** and **E-Mail**.

4. Enter the corresponding name.

For information about how to enter characters, see page 41.

5. Press the **OK** soft key.
The phone now prompts you to select a location in the phone memory.

6. If necessary, press the **C** key to clear the displayed number and enter a location number by pressing the number keys.
7. Press the **OK** soft key. The entry is saved and the display shows the name and number you just have saved.
8. To make a call to the displayed number, press the  key.

To send an SMS message to the displayed number, press the  **SMS** soft key. See page 63 for further details about sending a message.

To access the Entry options, press the **Options** soft key. See page 34 for further details.

9. Press the /⏏ key to return to the idle screen.

Speed-dialing by Memory Location

Once you have stored phone numbers in the Phonebook memory, you can dial them easily whenever you want.

To speed dial the desired number:

For the 1-digit memory location number (1 through 9), press and hold the appropriate digit down.

For the 2 or more-digit memory location number (10 through 500), press first digit(s) briefly and hold the last digit down.

Note: If you enter the location number and press the **#** key, your phone displays the details on the entry, such as name, number, location number and label. If you have stored more than one number for a name, scroll through the entry by pressing the **(** or **)** key repeatedly.

Entry Options

When you are viewing an entry in the Phonebook, **Options** appears above the right soft key to allow you to access various entry options.

Accessing the Options

To access the Entry options:

1. While viewing a Phonebook entry, press the **Options** soft key. The first available option is highlighted.

2. To	Press the
select the highlighted option	Select soft key.
highlight a different option	— or — key until the required option is highlighted.

Add Number

This option allows you to store up to seven numbers per entry by assigning them to different categories. Note that you cannot duplicate same categories for one entry. For example, you can only have one number labeled “Mobile” for the selected entry.

Change Name

This option allows you to change the name for the number. Clear the old name by pressing the **C** key and enter a new name. For information about entering characters, see page 41.

Change Number

This option allows you to change the number. Clear the old number by pressing the **C** key and enter a new number.

Change Type

This option allows you to change the label type of a stored number. Note that you cannot duplicate same categories for one entry. For example, you can only have one number labeled “Mobile” for the selected entry.

Caller Group

This option allows you to set the number as a member of the caller group. Select a caller group from the list. For more details about the Caller Group feature, see page 38.

Erase Number

This option allows you to erase a stored number. If you saved two numbers under a name, only the currently selected number will be erased. You are asked to confirm that you wish to erase the number by pressing the **Yes** soft key.

Erase Name

This option allows you to erase a name stored in the Phonebook so that all numbers under the name are erased. You are asked to confirm that you wish to erase the name by pressing the **Yes** soft key.

Move

This option allows you to move a Phonebook entry to another location. When prompted, enter the location number to which you are moving the number, and press the **OK** soft key.

Set Priority NO.

This option allows you to set the selected number as a speed dial number for the entry if it has more than one number. Press the **Set** soft key.

Searching for a Number in the Phonebook

1. When the idle screen is displayed, press the **Names** soft key. You are asked to enter a name.
2. Enter the first few letters of the name that you want to find and press the **Search** soft key.

Note: You can also scroll through all Phonebook entries by pressing the **Search** soft key directly.

The Phonebook entries are listed, starting with the first entry matching your input.

3. To...	Press the...
view the highlighted entry	View soft key.
select a entry	 or  key different until the required entry is highlighted.
look for a name starting with a different letter	key labeled with the required letter.

4. Once you have found the required entry, press the  key to dial the number.

To send an SMS message to the displayed number, press the  **SMS** soft key. See page 63 for further details about sending a message.

To access the Entry options, press the **Options** soft key. See page 34 for further details.

Phonebook Options

When you access your Phonebook by pressing the **Names** soft key, **Options** appears above the right soft key. This key allows you to enter the options for the Phonebook.

Accessing the Options

1. In idle mode, press the **Names** soft key.
2. Press the **Options** soft key. The first available option is highlighted.

3. To...	Press the...
select the highlighted option	Select soft key.
highlight a different option	 or  key until the required option is highlighted.

New Entry

This option allows you to create a new entry in the Phonebook. For details about storing a phone number, see page 32.

Caller Group

You can set the phone to ring by a specific ringer and display a preselected graphic icon when a person calls you. To do so, you need to:

- define your caller groups
- assign the numbers in the Phonebook to the appropriate group

Defining a caller group

Select the group to be defined and set the appropriate options. The following options are available:

Call ring tone: allows you to select the ring tone to be used when you receive a voice call from a person in the group.

SMS tone: allows you to select the ring tone to be used when you receive a text message from a person in the group.

Graphic: allows you to select the graphic icon to be displayed when you receive a call from a person in the group.

Group Name: allows you to assign a name to the group; for further details about how to enter characters, refer to page 41.

Assigning numbers to a group

1. View the required number in the Phonebook.
2. Press the **Options** soft key.
3. Select the **Caller Group** option.
4. Select the required group.

To remove a number from a group, select the **No Group** option.

Own Number

This function is a memory aid, which you can use to check your own phone number if you need to do.

Memory Status

You can check the used memory and free memory you have for the Phonebook. The display shows how many entries are currently stored and can be saved in future in the Phonebook.

Erase All

This option allows you to erase all of the Phonebook entries.

When a confirming message appears, press the **Yes** soft key to erase all Phonebook entries. To cancel, press the **Cancel** soft key.

When prompted, enter the lock code. All entries in the Phonebook are then erased.

Entering Text

When using your phone, you will often need to enter text, for example, when storing a name in the phonebook, entering a text message or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

You are provided with the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter - when you press the  key once, J, K or L may be displayed. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Upper/lower-case character modes**

These modes allow you to enter letters by pressing the key labeled with the required letter once, twice or three times until the letter displays.


- **Number mode**

This mode allows you to enter numbers.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: When you are entering message text

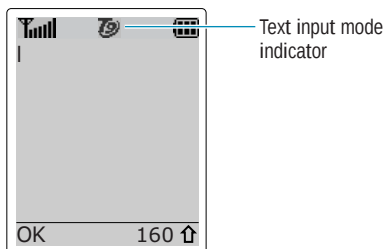

To select...	Press the  soft key until...
Upper-case characters	 is displayed. See page 44.
Lower-case characters	 is displayed. See page 44.
Numbers only	 is displayed. See page 45.
The T9 mode	 is displayed. See page 43.

Using the T9 Mode

The T9 predictive text input mode allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press each key only once for one letter.

Example: to enter *HELLO* in the T9 mode, press , , ,  and .

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting any keystrokes.
3. If the word is correct, start entering the next word.

Otherwise, press the ,  or  key repeatedly to display alternative word choices for the keys that you have pressed.

Example: Both *OF* and *ME* have the key sequence of  and . The phone displays the most commonly used choice first.
4. Put a space between each word by pressing the  key.

- To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

- To enter full stops, hyphens or apostrophes, press . The T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: is used twice to display two punctuation marks:



- To shift the case in the T9 mode, use the * key.
- You can move the cursor by using the (and) keys. To delete letters, press the C key. Press and hold down the C key to clear the display.

Using the Upper/Lower-case Character Mode

Use the keys to to enter your text.

1. Press the key labeled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move automatically to the right and then select the next letter.

2. Select other letters in the same way.

Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space 1	Space 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	0	0
*	* / + - = < > ()	. @ # , : ; ! ? '
	% & _ Φ Θ Ψ Π Σ Ξ	“ ” \$ ¥ ¤ ß Ω

- To insert a space, press the # key.
- You can move the cursor by using the (and) keys. To delete letters, press the C key. Press and hold down the C key to clear the display.

Using the Number Mode

The Number mode enables you to enter numbers in a text message; entering a telephone number for example. Press the keys corresponding to the required digits before manually switching back to the appropriate text input mode.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Muting/Sending Key Tones

You can turn the key tones which were generated each time you press a key off or on.

To turn the key tone off:

1. During a call, press the **Options** soft key.
2. Press the — or — key to select the **Mute Keys** option. Now, the option is replaced with **Send Keys**.
3. Press the **OK** soft key.
Your phone does not send the key tones. It allows you to press keys without hearing annoying key tones during a call.

To turn the key tone on:

1. During a call, press the **Options** soft key.
2. Press the — or — key to select the **Send Keys** option. Now, the option is replaced with **Mute Keys**.
3. Press the **OK** soft key.

Note: To communicate with answering machines or computerized telephony systems, the **Send Keys** option must be selected.

Searching for a Number in the Phonebook

You can search for a number in the Phonebook during a call.

1. During a call, press the **Options** soft key.
2. Press the — or — key to select the **Phonebook** option.
3. Press the **OK** soft key.
The Phonebook entries are listed.
4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Phonebook entries are listed, starting with the first entry matching your input. The entry is also highlighted.

5. To view the highlighted entry, press the **View** soft key.

For more detailed description of the Phonebook feature, refer to page 32.

Using the SMS Service

If you receive an SMS (Short Message Service) message during a call, the icon  flashes on the display. The **SMS Service** option enables you to use this feature. You can also create and send an SMS message during a call.

Read Messages: allows you to read the messages that you have received.

Write Messages: allows you to write a message.

For further details about the SMS service, refer to page 60.

Making a Calling Card Call

If you save the calling card information in the **Calling Card** menu option (**Menu 4.7**), you can send automatically the code number required for the service when you make a call using the prepaid calling card. Use the **Callcard Service** option.

For further details about making a calling card call, refer to page 80.

Making a Private Voice Call

You can make the current call private so that nobody eavesdrops your call.

1. During a call, press the **Options** soft key.
2. Press the  or  key to select the **Voice Privacy** option.
3. Press the **Select** soft key.
4. Press the  or  key to select **Activate** or **Deactivate**.

Select **Activate** to secure your call or **Deactivate** not to do.
5. Press the **Select** soft key.

Putting a Call on Hold

You can make another call while you have a call in progress, if this service is supported by the network. Of two calls, one is active and the other is on hold and you can switch between the calls.

Note: The procedure to put a call on hold may vary depending on your network. For further details, contact your service provider.

To make a call while you have a call in progress:

1. During a call, key in the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call. The first call is automatically put on hold.
3. To switch between the two calls, simply press the  key.
4. To end the current call, press the /⓪ key.

Answering a Second Call

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call Waiting** menu option (**Menu 7.2**) to **Activate** (see page 96). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. When you hear a call waiting tone, press the  key to answer the incoming call.
The first call is automatically put on hold.
2. To switch between the two calls, press the  key.
3. To end the current call, press the /⓪ key.

Making a 3-way Conference Call

You can conduct conference calls with two separate parties at the same time. A conference call is a network service. For more information, contact your service provider.

Note: The procedure may vary depending on your network. Contact the service provider for details.

1. Call the first participant in the normal way.
2. Call the second participant in the normal way.
The first call is automatically put on hold.
3. When the second person answer, press the  key to merge the calls.
4. End the conference call by closing the folder or pressing the /⓪ key.

During a conference call, if one of the callers hangs up, you and the remaining caller will stay connected. If the caller who initiated the call hangs up first, all three parties are disconnected.

Using the Menus

The phone offers a range of functions that allows you to customize the phone to your needs. These functions are arranged in menus and submenus.

The menus and submenus can be accessed by scrolling or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In idle mode, press the **Menu** soft key to access menu mode.
2. Press the **Left** or **Right** key to reach the desired main menu, for example, **Settings**. Press the **Select** soft key or the **Enter** key to enter the menu.
3. If the menu contains any submenus, for example, **Language**, find the one you want by pressing the **Left** or **Right** key. Press the **Select** soft key or the **Enter** key to enter the submenu.

If the menu you selected has submenus, repeat this step.

4. Press the **Left** or **Right** key to find the setting of your choice. Press the **Select** soft key or the **Enter** key to confirm the selection.


Notes:

- You can return to the previous menu level by pressing the **C** key or the **Back** key.
- You can exit the menu without changing the menu settings by pressing the **End Call** key.

Accessing a Menu Function by Using its Shortcut

The menu items, such as menu, submenu and setting options are numbered and can be quickly accessed by using their shortcut number. The shortcut number is shown at the bottom right next to the **Soft** key on the display.

Note: The numbers assigned to each menu function are indicated on the list on page 54.

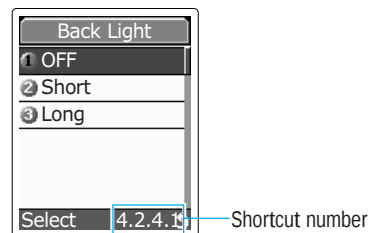

1. In idle mode, press the **Menu** soft key.
2. Within three seconds, enter the first digit of the shortcut number. Repeat this for each digit of the shortcut number.

Example: Setting the **Back Light** option to **Short**

Press the **Menu** soft key, and enter **4, 2, 1, 2**.

Menu for entering the menu, **4** for **Settings**, **2** for **LCD Display Control**, **4** for **Back Light**, **2** for **Short**.

List of Menu Functions

The following illustration shows the menu structure available and indicates the:

- number assigned to each option.
- page on which you can find a description of each feature.

1. Call Records

- 1.1 Missed Calls
- 1.2 Incoming Calls
- 1.3 Outgoing Calls
- 1.4 Call Time
 - 1.4.1 Last Call Time
 - 1.4.2 Total Call Time
 - 1.4.3 Display Call Time
 - 1.4.4 Reset Timers

Page 58



2. Messages

- 2.1 Voice Mail
 - 2.1.1 Connect to Voice Server
 - 2.1.2 Voice Server Number
- 2.2 Read Messages
 - 2.2.1 New Inbox
 - 2.2.2 Old Inbox
 - 2.2.3 Outbox
 - 2.2.4 Delete All
- 2.3 Write Messages
- 2.4 Preset Message List
- 2.5 Setup
- 2.6 Picture Messages

Page 60



3. Tones

- 3.1 Ring Tone
- 3.2 Ring Volume
- 3.3 Alert Type
- 3.4 Keypad Tone
 - 3.4.1 Volume
 - 3.4.2 Key Sound
 - 3.4.3 DTMF Length
- 3.5 Message Tone
- 3.6 Error Tone
- 3.7 Minute Minder
- 3.8 Connect Tone
- 3.9 Function Sound

Page 71



4. Settings

- 4.1 Infrared Activate
- 4.2 LCD Display Control
 - 4.2.1 Screen Mode
 - 4.2.2 Select Image
 - 4.2.3 Color Theme
 - 4.2.4 Back Light
 - 4.2.5 Auto Light
 - 4.2.6 Contrast
- 4.3 Auto Redial
- 4.4 Active Folder
- 4.5 Language
 - 4.5.1 Text Language
 - 4.5.2 Voice Language
 - 4.5.3 Input Mode
- 4.6 Reset Settings
- 4.7 Calling Card
- 4.8 Short Cut Key

Page 77



5. Organizer

Page 84



- 5.1 Calendar
- 5.2 To Do List
- 5.3 Time & Date
 - 5.3.1 Set Time
 - 5.3.2 Set Date
 - 5.3.3 World Time
 - 5.3.4 Format
- 5.4 Alarm
 - 5.4.1 Alarm 1
 - 5.4.2 Alarm 2
 - 5.4.3 Alarm 3
 - 5.4.4 Alarm Tones
- 5.5 Calculator

6. Security

Page 92

- 6.1 Change Lock Code
- 6.2 Change Security Code
- 6.3 Call Restriction
 - 6.3.1 restrict all outgoing call
 - 6.3.2 restrict all incoming call
 - 6.3.3 restrict outgoing call
- 6.4 SOS Call List

7. Network Services

Page 95



- 7.1 Call Diverting¹
 - 7.1.1 Divert Always
 - 7.1.2 Busy
- 7.2 Call Waiting¹
- 7.3 Network Selection
 - 7.3.1 Automatic
 - 7.3.2 Manual
 - 7.3.3 New Search
- 7.4 Voice Privacy
- 7.5 NAM Selection
- 7.6 Set Service Code
 - 7.6.1 Call Diverting
 - 7.6.2 Call Waiting
- 7.7 Public System Selection²

¹ is shown when you set the service code in the **Set Service Code** menu option (**Menu 7.6**).

² may be unavailable depending on your service provider.

8. Games

Page 101



- 8.1 AirShooting
- 8.2 SpaceWar

9. WWW Services



For further details on the WAP browser, refer to the WAP Browser user's guide supplied with the phone.

10. Voice Functions

Page xx

- 10.1 Voice Dial
- 10.2 Voice Memo

Call Records

In this menu, you can view the:

- missed calls
- incoming calls
- outgoing calls
- call time

The number and name, if available, are displayed, together with the date and time when the call was made.

Note: Your phone can store up to ten numbers in each record.

Missed Calls

Menu 1.1

This option lets you view the last unanswered calls. Pressing the **Options** soft key allows you to:

- edit the number, if available, and dial or save it in the Phonebook.
- delete the call from the list.

Incoming Calls

Menu 1.2

This option lets you view the last calls received. Pressing the **Options** soft key allows you to:

- edit the number, if available, and dial or save it in the Phonebook.
- delete the call from the list.

Outgoing Calls

Menu 1.3

This option lets you view the last numbers dialed. Pressing the **Options** soft key allows you to:

- edit the number and dial or save it in the Phonebook.
- delete the call from the list.

Call Time

Menu 1.4

This option lets you view the timers for calls made and received.

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so forth.

The following timers are available:

Last Call Time: shows the duration of the last call.

Total Call Time: shows the total duration of all calls made from or receive to your phone since the timer was last reset using the **Reset Timers** option.

Display Call Time: allows you to set the phone to display the call time when the call is made or received. Select **Enable** to display the call time and **Disable** not to display it.

Reset Timers: allows you to reset the call timers; you must first enter the phone's security code (see page 93) and then press the **OK** soft key.

Messages

The SMS (Short Message Service) function is a network service and may not be supported by your network. Messages can be sent by text, fax and messaging systems, provided that these services are supported by your network.

When you receive new text messages, the  icon appears on the top line of the display. If the message memory is full, an error message is displayed and you cannot receive any new message.

Your phone also has the function to allow you to receive messages containing pictures, ring tones or caller group icon. For details about receiving these messages, see page 68.

Voice Mail

Menu 2.1

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

Note: Please contact your service provider for more information. Depending on the service provider, you may be charged for accessing the voice server.

Connect to Voice Server: Before using this feature, you must enter the voice server number obtained from your service provider (see menu option **2.1.2**). You can then select this option to listen to your voice mails.

Note: You can connect to the voice mail server of the service provider quickly by pressing and holding down the  key in idle mode.

Voice Server Number: allows you to change the voice mail server number.

To	Press the
enter the server number	corresponding numeric keys.
correct a digit	C key.
save the entered number	Save soft key.

Read Messages

Menu 2.2

Three message boxes are available:

New Inbox: used to store the messages that you have received but not read.

Old Inbox: used to store the messages that you have received and read.

Outbox: used to store the messages that you have already sent or will send.

1. Select the required box. The first message in the box is displayed with the following information:
 - message number
 - message status; New, Old, Not Sent, SentIf you have set the **Delivery Ack** menu option to **ON**, the report is also shown; see page 66 for further details.
 - date and time when the message was received (Inboxes only)

2. Press the  or  key to select the message you want to read.
3. To view the message, press the **View** soft key.
The screen shows the:
 - sender's phone number if the message was sent, or recipient's phone number
 - message text
4. To scroll through the message text, press the  or  key.

While you are viewing a message, you can choose the following options, by pressing the **Options** soft key.

Delete: allows you to delete the message.

Cut Number: allows you to extract a number from the message text, so that you can call the number or save it in the Phonebook.

Send: allows you to send the message that you have received or saved. You can:

- send the message
- save and send the message
- save but not send the message

Edit And Send: allows you to edit a message for sending.

Note: The available options may vary, depending on the message status; New, Old, Not Sent or Sent.

To delete all of the messages, you can select **Delete All (Menu 2.2.4)**.

Write Messages

Menu 2.3

In this menu, you can write a text message and send it to multiple destinations.

1. Press the  or  key to select one of the five setting groups preset via the **Setup** menu (**Menu 2.5**) and press the **Select** soft key.

For details on the setting groups, see page 65.

2. Enter your message and press the **OK** soft key. For further information about how to enter characters, see page 41.
3. Select one of the following options by pressing the  or  key and press the **Select** soft key.
 - **Send Only:** After transmission, the message will be cleared.
 - **Save and Send:** allows you to save a copy of the message. When you read the message in your Outbox, **Sent** displays to indicate the message status.
 - **Save Only:** allows you to save the message so that it can be sent later. You do not take the next step. When you read the message in your Outbox, **Not sent** displays.
4. Select an Empty cell for the destination, phone number or e-mail address, by pressing the  or  key and press the **Edit** soft key.

5. Enter the desired destination and press the **OK** soft key.

Note: The **Names** soft key, which is visible when you do not enter anything, allows you to search for a number in your Phonebook.

- If you want to send the message to multiple destinations, repeat steps 4 and 5 as needed.

To delete an entered destination, select it from the list and press the **Delete** soft key.

- When you finish entering the destinations, press the  key to send the message.

Preset Message List

Menu 2.4

Using this menu, you can preset up to five messages that you send most frequently to retrieve when writing a new message. Scroll through the list by pressing the  or  key. When the required message number highlights, press the **Options** soft key.

The following options are available:

Edit: allows you to write a new message or edit the selected preset message.

Note: For further information about how to enter characters, refer to page 41.

Send Message: allows you to retrieve the selected message for sending. Once you have completed the message, you can send, save and send or simply save it.

Delete: allows you to delete the selected message.

Setup

Menu 2.5

In this menu, you can set up default information for the SMS feature. A setting group is a collection of settings required to send messages. Five setting groups are available.

Select a setting group by pressing the  or  key, and press the key or the **Select** soft key. Then, set up the options for the group.

The available setup options are:

Setting Name: allows you to give a name to the setting group currently being defined.

Callback Number: allows you to set the phone number to which the recipient of your SMS message may send you a reply message via your message center, if the service is provided by the network.

Manual Ack: allows you to activate or deactivate the manual acknowledgement function. When this function is activated, the recipient can send you an answer to your message by one touch of a number key.

Delivery Ack: allows you to activate or deactivate the delivery acknowledgement function. When this function is activated, the network informs you whether or not your message has been read by the recipient.

Privacy: allows you to set the restriction feature. When this option is set to **Restricted**, the recipient must enter her/his password to see the message from you. If you do not want to use the feature, select **Not Restricted**.

Urgency: allows you to set the urgency status of messages. **Bulk**, **Normal**, **Urgent** and **Very Urgent** are available.

Type: allows you to set the type of messages. The available types are **Text** and **E-mail**.

Picture Message

Menu 2.6

In this menu, you can send an SMS message containing pictures. Your phone has 10 preset pictures that can be replaced with pictures received from the Internet or other phones.

Select a picture from the list and press the **View** soft key. When the picture is displayed, press the **Options** soft key. The following options are available:

Delete: deletes the picture. The preset picture will be restored.

Text Reply*: allows you to send a text reply to the sender.

Call Back*: allows you to call the sender back.

Cut Number*: allows you to extract a number from the message, so that you can call the number or save it in the Phonebook.

Send: allows you to send a picture message using the selected picture. Note that the recipient's phone must support the Picture Messaging feature.

Edit Text*: allows you to edit text from the message.

Rename: allows you to change the name of the picture. For further details about entering characters, see page 41.

Note: Each picture message is made of several text messages. Therefore, sending one picture message may cost more than sending one text message.

*: unavailable when the selected picture is one of the preset pictures.

Receiving Pictures, Ring Tones, or Caller Line Icons

When you receive a message from the Internet or other phones, you will hear an alert beep and a text notification will appear on the display; “Picture Message,” “Ring Tone” or “Caller Line Icon.” You have the option of saving these items in the phone’s memory or discarding them.

Picture Message

You may send a received picture as an SMS message to another phone that supports this feature. You may save up to 10 pictures. When you receive a picture message:

To	Then
view the picture	press the View soft key.
save the picture	- press the Options soft key. - select Save Picture and press the Select soft key. - select a preset picture to be replaced and press the Select soft key.
discard the picture	- press the Options soft key. - select Discard and press the Select soft key.
use the saved pictures	go to page 66.

Ring Tone

You may set a received tone as your phone’s ring tone. You may save up to 5 tones. When you receive a ring tone message:

To	Then
listen to the ring tone	- press the Options soft key. - select Playback and press the Select soft key. - press the Stop soft key to stop playing back.
save the ring tone	- press the Options soft key. - select Save and press the Select soft key. - select a location and press the Select soft key. - select the Yes or No soft key when the phone asks if you want to set the ring tone to the received tone.
discard the message	- press the Options soft key. - select Discard and press the Select soft key.
use the saved ring tones	go to page 71.

Caller Line Icon

You may use the icons as a graphic for a caller group. You can save up to five icons. When the memory for icons is full, you are allowed to select an old one to replace. Note that the eight default icons cannot be replaced by the downloaded ones.

When you receive a caller line icon message:

To	Then
view the icon	press the View soft key.
save the icon	• press the Options soft key. • select Save and press the Select soft key. • if necessary, select an icon to be replaced, and press the Select soft key.
discard the icon	• press the Options soft key. • select Discard and press the Select soft key.
use the saved icons	go to page 38.

Tones

You can use the Tones feature to customize various sound settings, such as the:

- ringer tone or melody, volume and type
- sounds made when you press a key, make an error or receive a message

Ring Tone

Menu 3.1

This option allows you to select the desired ringer tone. You can choose from various preset tones. Also, you can use the tones received from other sources, such as the Internet or other phones.

Each time you select a tone, it sounds for a few seconds.

Ring Volume

Menu 3.2

This option allows you to adjust the volume level of the ringer.

Press the  or  key to increase or decrease the level. You can also use the  or  key on the left side of the phone. The greater the number of bars you see, the greater the volume is.

Alert Type

Menu 3.3

This option allows you to indicate how you are to be informed of any incoming calls.

The following options are available:

Light Only: only the backlight of the display comes on; the phone neither rings nor vibrates.

Melody: the phone rings using the ringer tone selected via the **Ring Tone** menu option (**Menu 3.1**).

Vibration: the phone vibrates but does not ring.

Vibra+Melody: the phone first vibrates three times and then starts ringing.

Keypad Tone

Menu 3.4

In this menu, you can change the settings for the sound that the phone makes when you press any key.

The following setting options are available:

Volume: you can adjust the volume level of the keypad tone.

Key Sound: you can select the sound type of the keypad tone. Select one from **Pure Sound**, **Piano**, **Person** and **Beep**.

DTMF Length: the tone length setting enables you to select **Short** or **Long** DTMF (dual-tone multi-frequency) tones. DTMF tones are what your phone transmits to access to teleservices, such as a bank account. The system used by the bank or other service determines if you need short or long DTMF. If the service is digital which most are these days, short DTMF tones will almost always work.

Message Tone

Menu 3.5

This option allows you to select how the phone informs you that a new message is received.

The following options are available:

Light Only: only the backlight of the display comes on; the phone neither rings nor vibrates.

Vibration: the phone vibrates but does not ring.

Single Beep: the phone beeps once.

SMS Tone: the phone uses a tone.

Error Tone

Menu 3.6

This option allows you to select how the phone informs you that you have made a mistake.

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps to indicate an invalid entry.

Minute Minder

Menu 3.7

This option allows you to specify whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps every minute.

Connect Tone

Menu 3.8

You can set your phone to beep when your call is connected to the remote phone or the remote phone is ringing depending on your network.

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps when your call is connected.

Function Sound

Menu 3.9

In this menu, you can select ???????

Settings


Many different features of your phone can be customized to suit your preferences via the **Settings** menu.

Infrared Activate

Menu 4.1

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection, you must:

- configure and activate an IrDA-compliant infrared port on your PC
- activate the infrared feature on the phone; the IrDA icon (📡) appears on the top line of the display
- align the IrDA port on the phone with the IrDA port on your computer

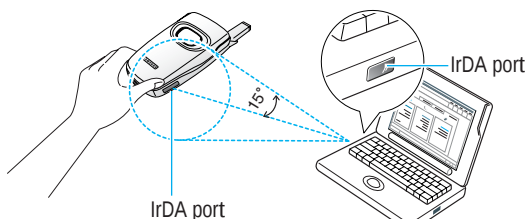

The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

Note: For the best performance, it is highly recommended that you use a data link cable. You can purchase one from your local Samsung dealer.

LCD Display Control

Menu 4.2

Using this menu option, you can set various settings for the display.

Screen Mode

You can select the screen to be displayed in idle mode.

The following options are available:

Normal: the display shows the service provider's name and the current time and date.

Calendar: the display shows the calendar of the current month.

Image Display: the display shows the image selected in the **Select Image** option.

Clock: the display shows the clock.

Select Image

This option allows you to select the image to be displayed when you set the **Screen mode** option to **Image Display**.

Color Theme

You can change the color setting of the display components, such as text, soft key display area or the menu names and icons. Five different color settings are available.

Back Light

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off.

The following options are available:

OFF: the backlight is not used.

Short: the backlight comes on when you press a key or receive a call and switches off 10 seconds after the last key is pressed.

Long: the backlight comes on when you press a key or receive a call and switches off 20 seconds after the last key is pressed.

Auto Light

Using this feature, you can specify the time period for which the backlight is to be used. This feature helps conserve your battery power.

The following options are available:

Disable: the backlight is used according to the setting in the **Back Light** menu option (**Menu 4.2.4**); see page 83.

Enable: the backlight is used only during the specified period of time. Set the time when the phone will turn on the light and turn it off, using the appropriate number keys.

Contrast

This option allows you to adjust the contrast of the LCD screen to make it brighter or darker, by pressing the  or  key. You can also use the  or  key on the left side of the phone. Each time you slide the key, you can see the LCD screen changing according to the current value.

Auto Redial

Menu 4.3

With the Auto Redial function, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two call attempts varies depending on your network.

The following options are available:

OFF: the number is not redialed.

ON: the number is redialed automatically.

Active Folder

Menu 4.4

This option allows you to set the phone to start voice dialing by opening the folder.

The following options are available:

Off: the phone does not use this feature.

Voice Dial: the phone use this feature. You need to use the **Act** menu option in the **Voice Dial** menu (**Menu 10.1**) to activate the voice dialing.

For further details about the voice dialing feature, see page xx.

Language

Menu 4.5

In this menu, you can change the language for the display or enable/disable the voice prompt.

The following options are available:

Text Language: you can select a language to be used to display text from **English**, **Español**, and **Português**.

Voice Language: enable or disable the voice prompt when using the voice functions. When this option is disabled,

Input Mode: you can change the default text input mode.

Reset Settings

Menu 4.6

You can easily reset the menu settings to its factory default status.

Enter the 4-digit security code and press the **OK** soft key. The phone immediately resets all settings to default status.

Note: The security code is preset to "0000." To change this code, refer to page 92.

Calling Card

Menu 4.7

When you use a calling card for long distance calls, you must send the service code and the card number to the calling card service system. Using this menu, you can save these calling card information to send them automatically when you make calling card calls. You can store up to 5 calling cards.

Enter the 4-digit security code and press the **OK** soft key to access the Calling Card menu.

Saving Calling Card Information

1. Scroll to a calling card number by pressing the  or  key and press the **Select** soft key.
2. If you want to set the card name, press the **Select** soft key. Enter the name as needed.

For further details about entering characters, see page 41.

3. When you finish entering name, press the **OK** soft key. The name is saved.
4. Press the  key to move to the **Card Number** menu, and press the **Select** soft key.
5. Enter the card number (and/or PIN if required) as listed on the back of the calling card.

To enter a pause, "P" before the second number, press and hold the * key. The number after "P" will be sent only by pressing the  key when you make a call with the calling card.

Note: The order of the numbers which you must enter may vary depending on the dialing sequence your card uses.

6. When you finish entering the number, press the **OK** soft key.
7. To return to idle mode, press the /⓪ key.

Selecting a Calling Card

You can set a default card to use for making a calling card calls. The number stored in the selected card will be sent when you make calling card calls.

1. Scroll to the desired calling card by pressing the  or  key and press the **Select** soft key.
2. Select **Set Default** by pressing the  or  key, and press the **Select** soft key.
3. The display shows the number saved for the calling card. If you are satisfied, press the **Set** soft key.

4. To return to idle mode, press the /⓪ key.

Making Calls Using the Calling Card

Note: The following procedure may not apply to all calling cards. Please look at the back of your calling card or contact your phone company for instructions.

1. Make a call to the calling card service system.
2. When you are connected, press the **Options** soft key and select **Callcard Service** by pressing the  or  key.
3. Press the **OK** soft key.
4. When you hear the prompting tone from the service system, press the  key to transmit the card numbers.
5. Dial the number of the desired remote phone.

Short Cut Key

Menu 4.8

The navigation keys can also be used as shortcut keys. In idle mode, they allow you to access specific menu options directly.

Using this menu, you can change the shortcut assignments on each key.

1. Select the key to be used as a shortcut key by pressing the  or  key and press the **Select** soft key:
 - **Key up**
 - **Key down**
 - **Key left**
 - **Key right**
2. Select the menu option to be assigned to the key by pressing the  or  key and press the **Select** soft key.

Note: To deactivate a shortcut key, select the **None** option.

Organizer

The Organizer feature enables you to:

- view the calendar and organize your schedule
- define a list of things to do
- set the current date and time
- set the alarm so that the phone rings at a specific time, to remind you of an appointment, for example
- use the phone as a calculator

Calendar

Menu 5.1

With the Calendar feature, you can:

- consult the calendar.
- write memos to keep track of your schedule and trigger an alarm, if necessary.

Consulting the Calendar

When you select the **Calendar** menu option (**Menu 5.1**), the calendar is displayed. The following options are available when you press the **Options** soft key.

Search all: displays all memos set, regardless of the day and starting with the oldest. To scroll through the memos, press the  or  key.

Delete all: allows you to delete all memos. You are asked to confirm your selection.

Go to date: allows you to jump to a specific date.

Writing a Memo

To write or edit a memo on a specific date:

1. Select the required date on the calendar, by pressing the navigation keys.

Note: Press the **▲** key to skip to the previous month or the **▼** key to skip to the next month.

2. Press the **Select** soft key.
An empty memo screen is displayed to allow you to enter your memo.
3. Enter your memo and then press the **OK** soft key.

Note: For further details about how to enter characters, refer to page 41.

You are asked if you wish to set an alarm.

4. If you want an alarm to ring on the chosen day, press the **Yes** soft key.
Otherwise, press the **No** soft key.
5. If you pressed **Yes**, set the time for the alarm and press the **OK** soft key.
The color of the date changes to green to indicate that a memo exists.

Editing a Memo

If you select a day for which a memo already exists, you can press the **Edit** soft key to edit the memo displayed.

Note: For further details about how to enter characters, refer to page 41.

Once you have finished editing the memo, press the **OK** soft key. The following options are available when you press the **Options** soft key:

Alarm: allows you to set the alarm to ring on the chosen day.

Erase: allows you to delete the memo.

Copy to: allows you to copy the memo to another date.

Move to: allows you to change the date and time of the memo.

To Do List

Menu 5.2

This feature allows you to:

- enter up a list of tasks to be done
- assign a priority and deadline to each task
- sort the tasks by priority and status mark

Creating the To Do List

To create the To Do List:

1. Press the **New** soft key.
2. Enter the first task.

Note: For further details about how to enter characters, see page 41.

3. Press the **OK** soft key.
4. Select high, normal or low priority by pressing the **—** or **—** key and press the **Select** soft key.

5. Enter your deadline. If you do not want to define the deadline, press the **Skip** soft key.

6. Press the **OK** soft key to save the task.

Editing the To Do List

If tasks are already defined in the To Do List when you select the **To Do List** menu option (**Menu 5.2**), the current contents are displayed with the associated a status mark and priority (🔴 for High, 🟡 for Normal and for 🟢 Low).

To	Then
view the details for a specific task	- highlight the task. - press the View soft key.
change the status of a specific task	- highlight the task. - press the * key to mark the task as completed as of the current date and time. or - highlight the task. - press the Options soft key. - select the Mark option. - select the appropriate status.
create a new task	- press the Options soft key. - select the New option. - enter the text, priority and deadline for the task.
edit an existing task	- highlight the task. - press the Options soft key. - select the Edit option. - change the text, priority and deadline for the task.

To...	Then...
sort the existing tasks by priority or status	- press the Options soft key. - select the Sort option. - select the sort criterion (High, Low, Done, Undo).
copy a task	- highlight the task. - press the Options soft key. - select the Copy option. - change the text, priority and deadline for the task as needed.
delete a task	- highlight the task. - press the Options soft key. - select the Delete option.
delete all tasks	- press the Options soft key. - select the Delete all option. - confirm the deletion by pressing the OK soft key.

Time & Date

Menu 5.3

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

The following options are available:

Set Time: allows you to enter the current time. You can choose the time format via the **Format** menu option (**Menu 5.3.4**).

Note: Before setting the time, you must specify your time zone, via the **World Time** menu option (**Menu 5.3.3**).

Set Date: allows you to enter the day, month and year. You can change the date format via the **Format** menu option (**Menu 5.3.4**).

World Time: allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, by using the (**⏮** and **⏭**) keys.

The screen shows the:

- city name.
- current date and time.
- time difference between the selected city and your city if you have set the local time (see below for further details) or GMT (by default).

To select your time zone:

1. Select the city corresponding to your time zone by pressing the (**⏮** or **⏭**) key.
The local date and time are displayed.
2. Press the **Set** soft key.

Format: allows you to change the time and date formats.

Time format: 24 Hours
12 Hours

Date format: YYYY/MM/DD (year/month/day)
DD/MM/YYYY (day/month/year)
MM/DD/YYYY (month/day/year)

Alarm

Menu 5.4

You can set the alarm to ring at a specific time.

Note: To meet FAA safety guidelines, the alarm does not work when the phone is off.

To set an alarm:

1. Select one of **Alarm 1 ~ 3** and press the **Select** soft key.
2. Select the alarm frequency option and press the **Select** soft key.

The following frequency options are available:

- **Once Alarm:** the alarm rings only once and is then deactivated.
- **Daily Alarm:** the alarm rings every day at the same time.
- **Monday -> Friday:** the alarm rings at the same time on Monday to Friday.
- **Monday -> Saturday:** the alarm rings at the same time on Monday to Saturday.
- **Weekly Alarm:** the alarm rings every week on the same day and at the same time.
- **Remove Alarm:** deactivates the alarm.

3. Enter the required time and press the **OK** soft key.
4. If you selected **Weekly Alarm** in step 2, select a day of the week and the **OK** soft key.

To stop the alarm when it rings, open the folder and press the **Exit** soft key.

You can select a melody for the alarm sets using the **Alarm Tones** menu option (**Menu 5.4.4**).

Calculator

Menu 5.5

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.
2. Press the right soft key until the required arithmetic symbol appears; + (add), - (subtract), * (multiply), / (divide).
3. Enter the second number.
4. Repeat steps 2 to 3 as many times as required.

Notes:

- To erase any mistakes or clear the display, press the **C** key.
 - To include a decimal point or a bracket, press the left soft key until the required symbol is displayed.
5. To get the result, press the  key.
 6. To end the calculation, press the /⓪ key.

Security

The Security feature enables you to restrict the use of your phone to the:

- people of your choice
- types of calls of your choice

Change Lock Code

Menu 6.1

The lock code is a password for locking or unlocking the phone. The lock code is preset to “0000” at the factory. This menu allows you to change your current lock code.

Before you can specify a new lock code, you must enter the current code. Then, enter a new code and enter it again to confirm.

Change Security Code

Menu 6.2

The security code is used for restriction of the use of your phone. The security code is preset to “0000” at the factory. This menu allows you to change your current security code.

Before you can specify a new security code, you must enter the current code. Then, enter a new code and enter it again to confirm.

Call Restriction

Menu 6.3

The call restriction feature allows you to restrict your calls.

Call restriction can be set up in the following ways:

restrict all outgoing call: calls cannot be made.

restrict all Incoming call: calls cannot be received.

restrict outgoing call: calls to the phone numbers which you have specified cannot be made. You can set up to 10 phone numbers.

To restrict the all outgoing or all incoming calls:

1. Select **restrict all outgoing call** or **restrict all incoming call** by pressing the  or  key, and then press the **Select** soft key.
2. Select **Enable** to turn the feature on and press the **Select** soft key.

If you want to set the restriction off, select **Disable**.

3. Enter your security code and press the **OK** soft key.

To set the phone numbers to be restricted:

1. Select **restrict outgoing call** by pressing the  or  key and press the **Select** soft key.
2. Enter your security code and press the **OK** soft key.

3. Select **Edit**, then press the **OK** soft key. If a number has already been saved, this option allows you to edit the number.

If you want to erase a saved number, select **Erase**. When a confirming message displays, press the **Yes** soft key.

4. Enter the phone number and press the **OK** soft key.

The phone number is saved and now you cannot make a call to that number.

SOS Call List

Menu 6.4

Your phone provides emergency numbers for SOS calls programmed by the service provider. Three numbers can be manually dialed at any time even though the phone is locked or all outgoing calls are restricted.

To make an SOS call when the phone is locked, press the **Select** soft key, select the desired number saved in the SOS call list. Press the **Call** soft key to make a call.

Network Services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call Diverting

Menu 7.1

Note: For using the Call Diverting service, you must set the service code for it. Depending on the Set Service Code setting, this menu may not appear. For details, see page 99.

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways:

1. Select the type of the call diverting options by pressing the  or  key, and press the **Select** soft key.
 - **Divert Always:** all calls are diverted.
 - **Busy:** calls are diverted if you are already making another call.
 - **No Reply:** calls are diverted if you do not answer the phone.
 - **Unreachable:** calls are diverted if you are not in an area covered by your service provider.
 - **Cancel All :** all call diverting options are canceled.

2. When **Activate** is highlighted, press the **Select** soft key.
3. Enter the number to which the calls are to be diverted, and press the **OK** soft key.

Note: The **Names** soft key which is visible when you do not enter anything allows you to search for a number in your Phonebook.

The phone sends your setting to the network and the network's acknowledgement is displayed.

You can deactivate each call diverting setting by selecting the **Cancel** option.

Call Waiting

Menu 7.2

This network service enables you to be informed when someone is trying to reach you during another call.

Note: For using the Call Waiting service, you must set the service code for it. Depending on the Set Service Code setting, this menu may not appear. For details, see page 99.

The following options are available:

Activate: activates the Call Waiting feature. You can answer an incoming call while you have a call in progress. See page 50 for answering a waiting call.

Cancel: deactivates the Call Waiting feature.

Network Selection

Menu 7.3

The Network Selection feature enables you to indicate whether the network to be used when roaming outside your home area is selected automatically or manually.

Note: You can select a network other than your home network only if it has a valid roaming agreement with your home network.

The following options are available:

Automatic: your phone automatically searches for a network available to you and selects the appropriate one. Every time you switch your phone on, this menu resets to **Automatic**.

Manual: your phone searches for available networks, then displays them. Press the  or  key until the preferred network highlights and then press the **OK** soft key.

New Search: your phone begins a new search for new Private and Residential systems. When finding the best new system, the phone displays it. Then you can confirm by pressing the **Select** soft key, or start another search by pressing the **Next** soft key.

Voice Privacy

Menu 7.4

Used only in digital networks, Voice Privacy encrypts the voice channel so that people cannot eavesdrop on your call conversation. If you turn this feature on and voice privacy becomes inactive for any reason your phone displays “Voice privacy not active” and beeps.

The following options are available:

Activate: turns this feature on. Your calls will be secured.

Deactivate: turns this feature off.

Note: This feature may not be available in all areas. Contact your service provider for details and availability.

NAM Selection

Menu 7.5

The service provider programs your phone with the phone number and system information when your phone is first activated. This is called a Number Assignment Module (NAM).

For example, your phone can be activated in up to 4 different service areas each giving your phone a different phone number or account.

Only one number can be active at a time. When you select a phone number, you are also selecting which system to be used as your home system. The first phone number displayed with this menu is the currently selected number.

Notes:

- It may not be necessary to have 4 NAMs for your phone if your service provider has service or roaming agreements for each area where you wish to use your phone. Contact your service provider for details.
- You need at least one active number to make a call. You cannot change from one NAM to another during a call.

Set Service Code*Menu 7.6*

For using the network services, such as the Call Diverting and Call Waiting, you must set the service codes supplied by your service provider with this menu. For more information about the service code, contact your service provider.

Call Diverting: allows you to set the codes for using each of the options (**Divert Always**, **Busy**, **No Reply**, **Unreachable** and **Cancel All**) available in the **Call Diverting** menu.

Call Waiting: allows you to set the codes for using each of the options (**Activate** and **Cancel**) available in the **Call Waiting** menu.

After selecting the desired option, enter the service code and press the **OK** soft key. The service code is saved and the option will be selectable when you access the appropriate menu.

Public System Selection*Menu 7.7*

Note: This menu may not be shown depending on your service provider.

When your system leaves its home system, it is roaming. Roaming is a feature which is only relevant in areas where there are usually at least two service providers which are referred to as “A” and “B” and have valid roaming agreements. When the phone is roaming, it can automatically search for home-type systems (same type as your home system) or non-home type systems (opposite type as your home system). Also, your service provider has programmed a list of preferred systems into your phone.

The system selection feature of your phone enables you to choose how your phone will roam. The following options are available:

Home Type: When service is not available in your home system, it will search for a home type, preferred first.

Non HomeType: When service is not available in your home system, it will search for a non-home type, preferred first.

AnySystem: When service is not available in your home system, the phone searches for a preferred system of either type, then a home type system, then a non-home type system.

Home Only: The phone uses its home system only, that is, it will not roam.

Games

You can enjoy two games with your phone; AirShooting and SpaceWar.

Scroll to the desired game using the the  and  keys and press the **Select** soft key.

The options for the game is displayed. To select an option, press the corresponding number key. The following options are available:

Newgame: starts a new game.

HighScore: shows the highest scores list. Up to 5 gamers can be ranked. Not all games have this option.

Key Info.: provides you the help screen, showing the key operation in the game.

Continue: allows you to continue the game you last played.

Voice Functions

In this menu, you can use the phone's voice features such as:

- Voice Dial
- Voice Memo

Voice Dial

MENU 10-1

When your phone is in digital mode, you can call up to 20 stored entries by speaking the associated name into the microphone. Using the Voice dialing feature requires that you first program the phone to recognize the name of the person you are calling.

Tips for Recording a Name

- Avoid recording similar names phonetically. If you record a similar name to one already in the memory, the phone requests another name.
- Speak clearly and naturally.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice is different.
- Avoid too long or too short a name. Names with two to 5 syllables are recommended.
- If this feature does not work properly, erase the name, and try again with another name.
- Practice several times to obtain the best result.
- You can record up to 20 names. If you try to record more than 20, the phone announces "Out of space to store voice tags!."

The following options are available:

Record: you can record name tags and allocate them to numbers for voice dialling.

1. Say the name you want to use for voice dialling after you hear a voice prompt. The phone stores the name as a “first” sample, and then prompts you to say the name again.
2. Respond to the prompt by repeating the name. The phone saves the name as a second sample and then requests the phone number and name.
3. Enter a number and press the **OK** soft key.
4. Enter a name and press the **Save** soft key.

For further details about entering characters, see page xx.

Act: you can activate voice dialling.

1. You hear a voice guide and “Say Name” appears on the display.
2. Say the voice tag clearly. The phone automatically dials the number of a recognized voice tag.

If no match for the voice tag is found or recognized, the phone may ask you to try again.

Note: If you set the Active Folder menu option (Menu 4.4) to Voice Dial, you can activate voice dialling simply by opening the folder.

Delete one: allows you to delete a voice dial entry.

Play all: plays back all of the voice dial entries.

Delete all: deletes all of the voice dial entries.

Voice Memo

MENU 10-2

Using this menu option, you can use the phone as a recorder.

Notes:

- Your phone can record up to 10 memos, and each memo can be up to 1 minute in length of time.
- Closing the folder while recording cancels your recording.
- If you have an incoming call while recording a voice memo or the call is disconnected while recording phone conversation, the memo recorded up to that point is saved with the stamp of the current date and time.
- When you are out of the service area (“No Service” is displayed) or in analog mode, a voice memo is not correctly recorded. It is recommended that you use this feature in digital mode in the service area.

The following options are available:

Record: you can record a memo.

Note: Recording voice conversations is illegal in some countries. Make sure the other party has stated its consent to being recorded.

1. The message “Recording” displays, along with the timer.
2. Record a memo by speaking to the microphone.
3. To stop recording, press the **Stop** soft key. You are asked to enter the title for the recorded message.

4. Enter a title using the number keypad, then press the **Save** soft key to save the recording. For details about entering characters, see page 41.

If you do not enter a title, the memo is saved with a label of **Untitled**.

Replay & Delete: you can play back a recorded message and delete it, if you want.

1. When the display shows the title of the first memo, press the  or  key to display the memo you want to play back.
 2. Press the **Play** soft key to play back the recorded message currently displayed.
 3. When you finish reviewing, press the **Stop** soft key.
 4. If you want to delete the memo, press the **Delete** soft key.
 5. When the phone confirms your selection, press the **Yes** soft key.
- If you do not want to delete the memo, press the **No** soft key.
6. Repeat steps 1 through 5 as needed.
 7. When you finish, press the /⓪ key to return to idle mode.

Edit Title: you can change the title of the selected memo.

Solving Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

“No service”, “Network failure” or “Not done” is displayed

- The network connection was lost. You may be in a weak reception area, such as in a tunnel or surrounded by buildings. Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have chosen to restrict outgoing calls.

Your correspondent cannot reach you

- Is your phone switched on (the /⓪ key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have chosen to restrict incoming calls.
- You may be in a weak signal area. Move and try again.

Your correspondent cannot hear you speaking

- Have you switched off the microphone (mute)?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom center of the phone.

The phone starts beeping and **“***Warning** Low Battery”** flashes on the display

- The battery power is weak. Replace the battery and recharge it.

The audio quality of the call is poor

- Check the signal strength indicator on the display (); the number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialed when you recall a Phonebook entry

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- the model and serial numbers of your phone.
- your warranty details.
- a clear description of the problem.

Then contact your local dealer or Samsung after-sales service.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.*

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg(w/kg) averaged over on gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safety exposure.

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only Samsung-approved accessories. When carrying the phone while it is on, use the specific Samsung belt-clip that has been tested for compliance.

Use of non-Samsung-approved accessories may violate FCC RF exposure guidelines and should be avoided.

For additional information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC) RF Safety program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):
<http://www.fcc.gov/oet/rfsafety>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

World Health Organization (WHO) International Commission on Non-ionizing Radiation Protection (select Qs & As):
<http://www.who.int/emf>

United Kingdom, National Radiological Protection Board: <http://www.nrpb.org.uk>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health:
<http://www.fda.gov/cdrh/consumer/>

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire..

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips.

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- should not carry the phone in a breast pocket
- should use the ear opposite the pacemaker to minimize potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press the <SEND> key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children's.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not touch the phone with wet hands while it is charging. Doing so may give you an electric shock or damage the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

Antenna

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Call Diverting

Ability to reroute calls to another mobile or fixed line.

Call Holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Calling Line Identification Services (Caller-ID)

Services allowing subscribers to view or block the telephone numbers of callers.

Call Waiting

Ability to inform users that they have an incoming call when engaged on another call.

Conference Calling

Ability to establish a conference call involving up to two additional parties.

Hands-Free

A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD (Liquid Crystal Display)

Commonly used to refer to the screen display on the wireless phone.

Phone Password

Lock code used to unlock the phone when you have selected the option to lock it automatically each time it switches on, and security code used to restrict the use of your phone.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

SMS (Short Message Service)

Network service for sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

Soft Keys

Keys marked  on the phone, the purpose of which:

- varies according to the function that you are currently using
- is indicated on the bottom line of the display just above the corresponding key

TDMA

Time division multiple access (TDMA) is a digital transmission technology that allows a number of users to access a single radio-frequency (RF) channel without interference by allocating unique time slots to each user within each channel. The TDMA digital transmission scheme multiplexes three signals over a single channel. The current TDMA standard for cellular divides a single channel into six time slots, with each signal using two slots, providing a 3 to 1 gain in capacity over advanced mobile-phone service (AMPS). Each caller is assigned a specific time slot for transmission.

Voice Mail

A computerized answering service that answers a call, plays a greeting and records a message.

A

Accessories • 7
Adjusting volume • 23
Alarm **(5.4)** • 90
Alert Type **(3.3)** • 72
Answering
 a call • 24
 a second call • 50
Answer mode **(4.5)** • 79
Auto Redial **(4.4)** • 79

B

Backlight • 13; 77
Batteries
 charging • 17
 installing • 15
 low battery indicator • 18
 precautions • 112
 removing • 16

C

Calculator **(5.5)** • 91
Calendar **(5.1)** • 84
Caller
 group • 38
 ID • 24
Calling Card **(4.9)** • 80
Calls
 answering • 24
 a second call • 50
 conference • 51
 diverting **(7.1)** • 95
 ending • 21
 holding • 49
 incoming **(1.2)** • 58
 making • 21
 missed • 25; 58
 outgoing **(1.3)** • 69
 redialing • 22
 automatically • 79
 restriction **(6.3)** • 93
 SOS **(6.4)** • 94

time **(1.4)** • 59
 via the phonebook • 22
 waiting **(7.3)** • 50; 96
Care • 124
Changing
 lock code **(6.1)** • 92
 security code **(6.2)** • 92
Characters
 entering • 41
Charging batteries • 17
Composer
 Melody **(3.9)** • 75
Conference calls • 51
Connect
 to Voice Mail **(2.1)** • 60
 tone **(3.8)** • 74
Contrast • 78
Correcting numbers • 21
Creating To do list • 86

D

Date
 format **(5.3.4)** • 89
 setting **(5.3.2)** • 89
Deleting
 memos • 86
 messages • 62
 missed calls • 26
 phonebook numbers • 36
 tasks • 88
 voice memo • 105
Display • 11
 backlight • 77
 contrast • 78
 external • 13
 icons • 12
 setting the
 language **(4.6)** • 80
Diverging calls **(7.1)** • 95

E

- Earpiece
 - adjusting the volume • 23
- Editing
 - memos • 85
 - messages • 62
 - missed calls • 26
 - phonebook numbers • 35
 - To Do List • 87
 - Voice memo title • 106
- Erasing
 - memos • 86
 - messages • 62
 - missed calls • 26
 - phonebook numbers • 36
 - tasks • 88
 - voice memo • 105
- Error Tone **(3.6)** • 73
- External display • 13

F

- Functions
 - selecting • 29

G

- Games **(8)** • 101
- Greeting Message **(4.1)** • 77
- Groups
 - caller • 38

H

- Holding calls • 49

I

- Icons
 - description • 12
 - ID, caller • 24
 - Identifying a caller • 24
 - Incoming Calls **(1.2)** • 58

K

- Key tones
 - adjusting the volume • 23
 - muting • 46
 - sending • 46
- Keys
 - description • 9
 - location • 8
 - navigation • 29

L

- Language **(4.6)** • 80
- Last number redialing • 22
- Length of calls • 59; 74
- Letters
 - entering • 41
- Light Control **(4.2)**
 - backlight • 13; 77
 - service • 14; 78
- Listening
 - voice mail • 60
 - voice memo • 105
- Lock code • 92
- Locking phone • 20
- Low battery indicator • 18

M

- Maintenance • 122
- Melody Composer **(3.9)** • 75
- Memory status • 40
- Memos
 - calendar • 84
 - voice • 103
- Menus
 - by scrolling • 52
 - by shortcut • 53
 - list • 54
- Message Tone **(3.5)** • 73
- Messages
 - greeting **(4.1)** • 77
 - picture **(2.6)** • 66
 - preset **(2.4)** • 64
 - reading **(2.2)** • 61
 - setup **(2.5)** • 65
 - voice mail **(2.1)** • 60
 - writing **(2.3)** • 63

M (continued)

- Minute Minder **(3.7)** • 74
- Missed calls **(1.1)** • 25; 58
- Mute
 - key tones • 46

N

- NAM, selecting **(7.5)** • 98
- Names
 - entering • 41
 - options • 34
 - searching • 37
 - storing in the
 - phonebook • 32
- Network Selection **(7.3)** • 97
- Network Services **(7)** • 95
- Number
 - correcting • 21
 - editing
 - missed call • 25; 58
 - phonebook • 35
 - erasing phonebook • 36
 - moving phonebook • 36
 - own • 40
 - redialing • 22
 - automatically • 79
 - searching • 37
 - storing in the
 - phonebook • 32

O

- Options
 - selecting • 29
- Organizer **(5)** • 84
- Outgoing Calls **(1.3)** • 59
- Own Number • 40

P

- Phone
 - locking • 20
 - switching on/off • 19
- Phonebook • 32
 - editing numbers • 35
 - erasing numbers • 36
 - moving numbers • 36
 - options • 38
 - searching • 37
 - storing numbers/names • 32
- Picture Messages **(2.6)** • 66
- Preset Message List **(2.4)** • 64
- Private call • 49; 98
- Problem solving • 107

R

- Read Messages **(2.2)** • 61
- Recording,
 - voice memo • 103
- Redialing
 - automatically • 79
 - last number • 22
- Replaying,
 - voice memo • 105
- Reset Settings **(4.7)** • 80
- Restriction, call • 93
- Ring
 - tone **(3.2)** • 71
 - type • 72
 - volume **(3.1)** • 71
- Roaming • 97; 100

S

Safety

- batteries • 112
- information • 109
- quick guide • 5

Schedule • 84

Searching Phonebook • 37; 47

Security code • 92

Selecting functions/options • 28

Sending

- key tones • 46
- messages • 64

Service code (7.6) • 99

Service light • 14; 78

Setting

- alarm (5.4) • 90
- date (5.3.2) • 89
- display language • 80
- time (5.3.1) • 88

Settings

- resetting (4.7) • 80

Shortcut (4.9) • 83

Silent mode • 27

SMS • 48, 60

Soft keys, using • 28

Solving problems • 107

Speed Dialing • 33

Switching on/off phone • 19

T

Text input modes • 41

- changing • 42

Text messages

- reading • 61
- sending • 63

Time

- calls (1.4) • 59
- format (5.3.4) • 89
- setting (5.3.1) • 88
- world (5.3.3) • 89

To Do List (5.2) • 86

Tone

- connect (3.8) • 74
- error (3.6) • 73
- length (3.4) • 72
- message (3.5) • 73
- ring (3.2) • 71

Tones (3) • 71

Travel charger • 17

T9 mode • 43

V

Vibration • 72

Voice mail (2.1) • 60

Voice memo pad • 103

Voice Privacy (7.4) • 98

Voice Server Number (2.1.2) • 61

Volume

- adjusting • 23
- ring (3.1) • 71

W

Waiting call • 50; 96

World Time (5.3.3) • 89

Write Messages (2.3) • 63

Writing memos • 85

TDMA Mobile Telephone STH-A325

Quick Reference Card

Access the Menu Function	1 Press the Menu soft key. 2 Scroll through the list of menus until you reach the required menu by pressing — or —. 3 Press the Select soft key. 4 Scroll through the list of options until the required one is selected by pressing the — or —. 5 Press the Select soft key.
--------------------------	--

• Each of the two soft keys (⏮ and ⏭) performs the function indicated by the text above it (bottom line on the display).

Switch On/Off	Press and hold  / ⏻.
Make a Call	1 Key in the number. 2 Press .
End a Call	Briefly press  / ⏻.
View Missed Calls right after they were missed	1 Open the folder and press the View soft key. 2 Scroll through the missed calls by pressing the — or —. 3 To return the call, press .



Answer a Call Open	the folder <i>or</i> Press  .
Adjust the Volume	Press  or  on the left side of the phone.
Choose the Alert Type	① Select the Alert Type menu option (3.3). ② Select an option: Light Only, Melody, Vibration and Vibra+ Melody. ③ Press the Select soft key to confirm.
Store Numbers in the Phonebook	① Key in the number. ② Press the Save soft key. ③ Select a label and press the Select soft key. ④ Enter the name, and press the OK soft key. ⑤ If necessary, change the location. ⑥ Press the OK soft key.
Search for a Number in the Phonebook	① Press the Names soft key. ② Enter the first few letters of the name. ③ Press the Search soft key. ④ To scroll through the names, press  or . ⑤ To make a call, press .