

**NOTE:** When you get an SMS message during a call, there will be a ring notification.

## Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

## Using Smilies

Liven up your messages using Smilies.

When writing a new message, press the **Menu** key, then choose **Insert smiley**.

## Changing your message settings

Your LG-C660h message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.



**WARNING:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

## Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Google Mail. The Email application supports the following account types: POP3, IMAP and Exchange.

### To open the Email application

From the Home screen, touch **Email**.

Select Email Service Provider.

A setup wizard opens to help you add an email account. After the initial setup, Email displays the contents of your Inbox (if you have only one account) or the

---

# Messaging/E-mail

Accounts screen (if you have multiple accounts).

## The Accounts screen

The Accounts screen lists your Combined Inbox and each of your email accounts.

**1** Open the **Email** application. If you're not on the Account screen, press the **Menu Key** and touch **Accounts**.

**2** Select the Email service provider.



- Touch to open your Combined Inbox, with messages sent to all of your accounts.



- Touch to open a list of just your starred messages.



- Touch the folder icon to open the account's folders. You can touch an account to view its Inbox. The account from which you send email by default is indicated with a tick.

## To open your Combined Inbox

If you have configured Email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox.

**1** Touch **Email**.

**2** Touch **Combined Inbox** (in the Accounts screen). Messages in the Combined Inbox are colour coded along their left sides, by account, using the same colours that are used for your accounts in the Accounts screen.

Only your account's most recent emails are downloaded to your phone. To download more (earlier) email messages, touch **Load more messages** at the bottom of the emails list.

## Composing and Sending Email

### To compose and send a message

- 1** While in the **Email** application, press the **Menu Key** and touch **Compose**.
- 2** Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your Contacts. Separate multiple addresses with commas.
- 3** Press the **Menu Key** and touch **Add Cc/Bcc** to be able to Cc or Bcc other contacts/email addresses.
- 4** Enter the text of the message.
- 5** Press the **Menu Key** and touch **Add Attachment** to send a photo with the message.
- 6** Touch the **Send** button. If you're not ready to send the message, touch the **Save as draft** button to save it in

a Drafts folder. Touch a draft message in a Drafts folder to resume working on it. Your message will also be saved as a draft if you touch the **Back Key**  before sending it. Touch the **Discard** button to abandon and delete a message, including any saved drafts. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your Outbox folder until you're connected to a network again. If it contains any pending messages, the Outbox is displayed on the Accounts screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself. If you want to see your sent messages in the Sent folder (or with the Sent label), you will

---

# Messaging/E-mail

often need to open the Sent folder/label and select Refresh from the options menu.

## Working with Account Folders

Each account has Inbox, Outbox, Sent, and Drafts folders. Depending on the features supported by your account's service provider, you may have additional folders.

## Adding and Editing Email Accounts

### To add an email account

- 1 Press the **Menu Key** and touch **Add account**.
- 2 Select **Email Service Provider**, and enter email account settings.
- 3 Enter a name for the account, confirm how you want your name to appear in outgoing mail, then touch the **Done** button.

### To change an account's settings

- 1 Open the Accounts screen.
- 2 Touch and hold the account whose settings you want to change. In the menu that opens, touch **Account settings**.

### To delete an email account

- 1 Open the Accounts screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens.
- 4 Touch the **OK** button in the dialog box to confirm that you want to delete the account.

## Social Networking

With your phone, you can take advantage of social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time.

You can add your Facebook and Twitter accounts to your phone. If you don't have an account, you can visit their sites to set it up.

**NOTE:** Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

## Adding your account to your phone

- 1 On the home screen, choose any SNS application you want to use.
- 2 If you don't yet have an account, touch Sign up now and input details.
- 3 Enter the e-mail address and password that you set up on your community, then tap **Log in**.
- 4 Wait while your details are checked with your community.
- 5 Check your community is turned **ON**. If you tap your community, you can see the

current status of your social community.

**TIP!** If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.

You can also access the social community directly by touching the widget.

## Viewing and updating your status

- 1 Choose a community you want to access.
- 2 You can see the current status of your social community.
- 3 You can update your status with comments or by uploading photos.

**NOTE:** This is dependent on network services.

---

# Messaging/E-mail

**Tip!** You can use information about friends only in SNS or sync all data to Contacts.

## Removing accounts on your phone

Choose **Settings** > **Accounts & sync** > Choose an account you want to delete > Touch **Remove account**.


---

# Camera

## Getting to know the viewfinder

**Brightness** – This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

**Zoom** – Zoom in or zoom out. Alternatively, you can use the side volume keys.

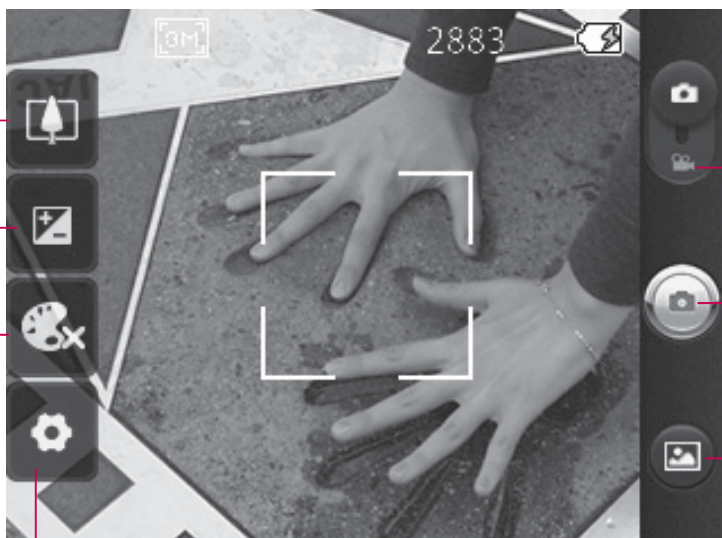

**Video mode** – Slide down this icon to switch to video mode.

**Taking a photo**

**Gallery** – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Colour effect** – Choose a colour tone for your new photo.

**NOTE:** You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture or save the picture you have taken.

# Camera

**TIP!** You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

## Taking a quick photo

- 1 Choose **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch the shutter icon .

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo as **Bluetooth**, **Email**, **Facebook**, **Gmail**, **Messaging**, **Picasa** or **Twitter**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

**NOTE:** Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

**Set as** Touch to use the image as **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the selected picture.

-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to view a gallery of your saved photos.

## Using the advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the list. After selecting the option, touch the Back key.

**Image size** – Touch to set the size (in pixels) of the picture you take. Select a pixel value

from the numerical options: **3M (2048x1536)**, **2M (1600x1200)**, **1M (1280x960)**, **VGA (640x480)**, **QVGA (320x240)**.

**ISO** – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **400**, **200** and **100**.

**White balance** – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Timer** – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 secs.**, **5 secs.** or **10 secs.** This is ideal if you want to be included in a photo.

**Image quality** – Choose from **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which

means you'll be able to store fewer photos in the memory.

**Auto review** – If you set Auto review on, it will show you the picture you have just taken automatically.

**Shutter sound** – Select one of the four shutter sounds.

**Tag location** – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

**NOTE:** This function is only available when GPS is active.

**Reset**  – Restore all camera default settings.

 – Touch whenever you want to know how this function operates. This is to provide you with a quick guide.

---

# Camera

**TIP!** When you exit the camera, all settings will return to their defaults, except image size and image quality. Any non-default settings must be reset. Check these before you take your next photo.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

## Viewing your saved photos

**1** You can access your saved photos from within the camera mode. Just touch  and touch the screen, then you will see **Slideshow** and **Menu**.

**TIP!** Flick left or right to view other photos or videos.



- Touch to see slide show.



- Touch to share the contents or to delete

Touch More for more options below.

**Detail** - Check information of contents.

**Set as** - Set as contact icon or wallpaper

**Crop** - Crop your photo.  
Move your finger across the screen to select the area.

**Rotate Left / Rotate Right**  
- Rotate left or right.

# Video camera

## Getting to know the viewfinder

**Brightness** – This defines and controls the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

**Zoom** – Zoom in or zoom out. Alternatively, you can use the side volume keys. Before starting to record a video, you can use the zoom function. You cannot control the zoom function during recording.



**Camera mode** – Slide up this icon to switch to camera mode.

**Start recording**

**Gallery** – This enables you to access your saved photos & videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

**Settings** – Touch this icon to open the settings menu. See **Using the advanced settings**.

**Duration** – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message. If you set as an MMS, you can record a 300kb video.

**TIP!** When choosing an MMS duration, the Video size will be set as QCIF and you can shoot longer videos.

# Video camera

## Shooting a quick video

- 1 Slide the camera mode button to the down position; the icon will change to .
- 2 The video camera's viewfinder will appear on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Press the capture button  once to start recording.
- 5 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

## After shooting a video

A still image representing your video will appear on the screen.

**Play** Touch to play the video.

**Share** Touch to share your video as **Bluetooth**, **Email**, **Gmail**, **Messaging** or **YouTube™**.

**NOTE:** Additional charges may apply when MMS messages are downloaded while roaming.

**NOTE:** Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

**Rename** Touch to edit the name of the selected video.



Touch to shoot another video straight away. Your current video will be saved.



Touch to delete the video you just made, and confirm by touching OK. The viewfinder will reappear.



Touch to view a gallery of your saved videos.

## Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting by scrolling the list. After selecting the option, touch the **Back** key.

**Video size** — Touch to set the video size: VGA (640x480), QVGA (320x240) or QCIF (176x144).

**White balance** — The white balance ensures that any of the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

**Colour effect** — Choose a colour tone to use for your new view.

**Video Quality** — Choose from **Super fine**, **Fine** and **Normal**.

**Audio recording** — Choose **Mute** to record a video without sound.

**Auto review** — If you have Auto review on, it will automatically show you the video you just recorded.

**Reset**  — Restore all video camera default settings.

 — Touch whenever you want to know how this function operates. This is to provide you with a quick guide.

**TIP!** You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

## Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

# Your photos and videos

## Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the side volume keys.

## Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
  - 2 Touch the screen to open the options menu.
  - 3 Touch **Set as** , then touch **Set Wallpaper**.
-

# Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

**NOTE:** Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos without Picasa images which are in your Picasa album.

## View modes

Touch **Gallery** and you will see Folder view.

Touch any folder and it will turn to Grid view mode. If you tap any photo, it will turn to Full view mode.

## Timeline view

LG-C660h **Gallery** provides a timeline view of your photos and videos. From Grid view mode, drag  to the right. The date you took your photos will be displayed starting with the most recent. If you select a specific date, all the photos you took on that day will be grouped over a white background.

## My Images options menu

Select a photo, then press **Menu** key twice to see the available options.

## Sending a photo

- 1 To send a photo, touch and hold the photo you want.
  - 2 Select **Share**. Choose from **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Facebook**, **Twitter** or **Picasa**.
  - 3 When you choose **Email**, **Gmail** or **Messaging**, your photo will be attached to a message, then you can
-

# Multimedia

write and send the message normally.

**TIP!** If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

**NOTE:** Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

## Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth**, **Email**, **Gmail**, **Messaging**, or **YouTube™**.
- 3 When you choose **Email**, **Gmail** or **Messaging**, your video will be attached to a message, then you can write and send the message normally.

## Using an image

Choose images to use as wallpaper or to identify callers.

- 1 Touch and hold a photo, then select **More > Set as**.
- 2 Choose from **Contact icon**, or **Wallpaper**.

## Creating a slide show

From Full view mode, you can create a slide show so you don't have to open and close each image.

- 1 Touch photo, then select **Slideshow**.

## Checking your photo

You can view a photo's detailed information, such as **Name**, **Date**, **Time**, **Size** and **Type**.

- 1 Touch **Menu > More > Details**.

## Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the LG-C660h to a PC using a USB cable.
- 2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings > SD card & phone storage > Activate Mass storage only**.
- 3 Touch **Turn on USB storage**, then touch OK to conform.
- 4 You can view the mass storage contents on your PC and transfer the files.

**NOTE:** You need to install an SD card first. Without an SD card, you cannot use USB mass storage.

**NOTE:** If you installed LG Android Platform Driver, you will see a pop up with 'Turn on USB storage' immediately.

## Music

Your LG-C660h has a built-in music player that lets you play all your favourite tracks. To access the music player, touch Music.

### Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the right side of the phone.

Touch and hold any song in the

---

# Multimedia

list. It will display **Play, Add To Playlist, Use As Phone Ringtone, Delete, Details,** and **Search** as options.

**NOTE:** Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

## Using the radio

Your LG-C660h has a built-in FM radio so you can tune into your favourite stations and listen on the go.

**NOTE:** You must attach your headphones to listen to the radio. Insert them into the headphone

## Searching for stations

You can tune into radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch the **Applications** tab and select **FM radio**.
- 2 Press the **Menu** key and touch **Auto scan**.
- 3 If there are pre-set channels, you will see a pop-up with '**Reset all channels and start Auto scan?**' If you choose OK, all the pre-set channels will be deleted and Auto scan will start.
- 4 During Auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels before you stop scanning will be saved.

**NOTE:** You can also manually tune into a station using the displayed wheel.

## Resetting channels

- 1 Touch the scanned channel list  > **Menu** key > **Reset**.

## Listening to the radio

- 1 Touch **Listen Via** icon   and you can set Speaker or Wired headset to listen to the radio.

**TIP!** To improve radio reception, extend the headset cord, which functions as the radio antenna.

### **WARNING:**

If you connect a headset not specifically made for radio reception, radio reception may be poor.

# Utilities

## Setting your alarm

- 1 On the home screen, touch the **Applications** tab and select **Clock**.
- 2 If you want to add a new alarm, touch  then touch on Add Alarm.
- 3 Set the time and touch  to turn on the alarm. After you set the time, the LG-C660h will let you know how much time is left before the alarm sounds.
- 4 Set Repeat, Ringtone or Vibrate and add Label to name the alarm. Touch **Done**.
- 5 Press the **Menu** key to add alarm or adjust Snooze duration or alarm volume from settings.

## Using your calculator

- 1 On the home screen, touch the **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.

- 3 For simple calculations, touch the function you want (+, −, x, or ÷), followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.

## Adding an event to your calendar

- 1 On the home screen, touch the **Applications** tab and select **Calendar**.
  - 2 First, you must create a Google account to use Calendar.
  - 3 To check the event, touch the date. Touch and hold if you want to add a New event. Then touch **New event**.
  - 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin and finish.
  - 5 Also, touch **Where**, then enter the location.
-

# Utilities

- 6 If you would like to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 8 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

## Changing your calendar view

- 1 On the home screen, touch the **Applications** tab and select **Calendar**. Press the **Menu** key.
- 2 Select the calendar view for a particular day, week, or month.

## ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited editing functions for Microsoft Word, Excel and PowerPoint. However, you cannot edit a PDF file.

- 1 Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.

## Press Menu key

-  **New** – Add Document, Spreadsheet, Presentation or Folder.
-  **Refresh** – Refresh datas.
-  **Sort** – Sort by Name, Date or Size.
-  **Preferences** – Adjust ThinkFree Office settings.
-  **Updates** – Update ThinkFree Office.
-  **About** – More information about ThinkFree Office.

## Voice recorder

Use the voice recorder to record voice memos or other audio files.

### Recording a sound or voice

- 1 On the home screen, touch the **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Press the **Menu** key and select **Use as ringtone** to set as the **Phone** ringtone.

**NOTE:** Touch **Go to list** to access your **Voice recordings**. You can listen to the saved recording.

## Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message that you write and send it normally.

# The Web

## Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.

**NOTE:** Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

## Using options

Press the **Menu** key to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.

 **Windows** – Show all your open windows.

 **Refresh** – Touch to refresh the web page.

 **Forward** – Goes to the page you connected to after the

current page. This is different from the Back key, which goes to the previous page.



### More

- **Add bookmark** – Add the current web page as bookmark.
- **Find on page** – If you enter a letter or any word, it will mark all the letters you entered from the web page.
- **Select Text** – Touch and select the lines you want to copy. Long touch any input box, then you can paste it.
- **Page info** – Show the web page information.
- **Share Page** – Send the web page.
- **Downloads** – Show downloaded history.
- **Settings** – Set browser settings.

**Tip!** To return to the previous web page, press the **Back** key.

## Adding and accessing bookmarks

- 1 Press the **Menu** key then select **Bookmarks**.
- 2 Touch a bookmark > tap on add and enter a name for the bookmark followed by its URL.
- 3 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

## Changing Web browser settings

Press the **Menu** key then select **More > Settings**. By using this settings you can customise your browser settings.

---

# Settings

## Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

**Airplane mode** — After setting Airplane mode, all wireless connections will be disabled.

## Sound

Adjust sound, notification, default settings, vibrate mode. You can manage audible and Haptic feedback also.

## Display

**Brightness** — Adjust the brightness of the screen.

**Auto-rotate screen** — Set to switch orientation automatically when you rotate the phone.

**Animation** — Set to display an animation

**Screen timeout** — Set the time for screen timeout.

## Location & Security

**Use wireless networks** — If you tick Use wireless networks, your phone will determine your approximate location by using Wi-Fi and mobile networks. When you tick this option, you're asked whether you consent to allowing Google to use your location when providing these services.

**Use GPS Satellites** — If you tick Enable GPS satellites, your phone will determine your location to street-level accuracy.

**Set up screen lock** — Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a PIN or Password instead of a Pattern or leave it as None.

When you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.



**Set up Sim card lock** – Set up SIM card lock or change SIM PIN.

**Visible passwords** – Select to show passwords as you type them or deselect to hide passwords as you type them.

**Select device administrators** – Add more administrations.

**Use secure credentials** – Allows you to access secure certificates.

**Install from SD card** – Choose to install encrypted certificates from your SD card.

**Set password** – Set or change the credential storage password.

**Clear storage** - Clear credential storage of all contents and reset its password.

## Applications

You can manage applications and set up quick launch shortcuts.

**Unknown Sources** – Default setting to install non-Market applications.

**Manage Applications** – Manage and remove installed applications.

**Running services** - Check services that are currently running

**Development** – Set options for application development.

## Accounts & sync

Activate Background data synchronisation or Auto-sync. Check or add accounts.

## Privacy

You can do Factory data reset. Be careful as this will erase all your data.

---

# Settings

## SD card & phone storage

Check total available SD card space. Touch **Unmount SD card** for safe removal. **Format the SD card**, if you want to delete all data from the SD card.

## Search

Touch Google search and you can adjust Google search settings.

Adjust Searched items so you can get necessary information effectively. Choose from **Web, Apps, Contacts, Messaging, Music, Twitter** and **Voice Search**.

## Date and time

Set date, time, time zone, and formats.

## Language & keyboard

Set local language and region, Input method and user dictionary options.

## Accessibility

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

**Note:** Requires additional plug-ins to become selectable.

## Voice input & output

You use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

## About phone

View legal information, and check phone status and software version.

# Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).

You can enjoy wireless Internet with Wi-Fi, without extra charges.

## Turn on Wi-Fi

From Home Screen , open Notification drawer and touch  on.

From Menu, choose Settings > Wireless & network settings > Wi-Fi .

## To connect to Wi-Fi

Choose the Wi-Fi network you want to connect with. If you see  , you need to enter a password to connect.

## USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

**Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering.**

For more information regarding USB tethering, click Help.

### TIP!

To use USB Tethering, you need to install PC Suite onto your PC first.

## Wi-Fi Tethering

Use your LG-C660h as a portable Wi-Fi hotspot.

**Settings > Wireless & network settings > Tethering & portable hotspot > Portable Wi-Fi hotspot.**