

# KG800 FEATURES

## Open view



**Briefly:** List of Favourites

**Briefly:** List of Contacts

**Briefly:** List of Profiles  
(**Hold down:** Activate/  
Deactivate Vibrate mode)



**Briefly:** List of Messages

• **In menu:** scroll up & down

### Navigation keys

• **In standby mode:**

Earpiece



### Main LCD

• **Top:** Icons showing signal strength, battery level and various other functions.

• **Bottom:** Soft key indications

### Alpha numeric keys

 
• **In standby mode:** Input numbers to dial.  
Hold down

**0 +w** - International calls


**1 G.D** - Dial Voice mail centre.

**2 ABC** to **9 WXYZ** - Speed dials

• **In editing mode:** Enter numbers & characters

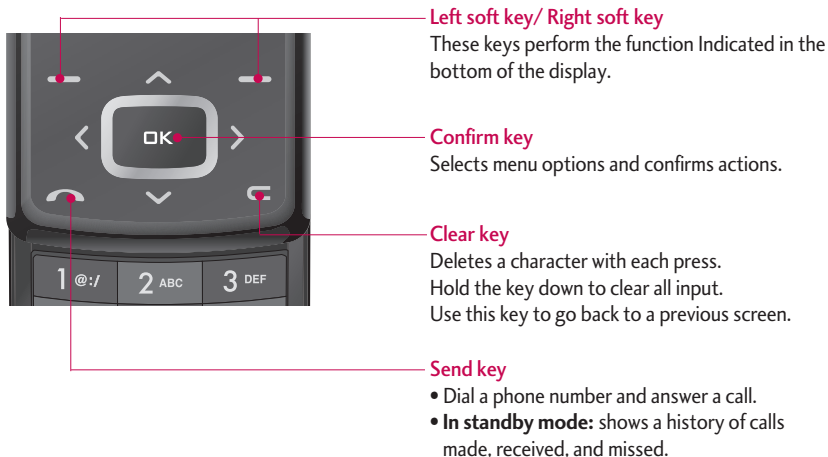

## DISPLAY INFORMATION

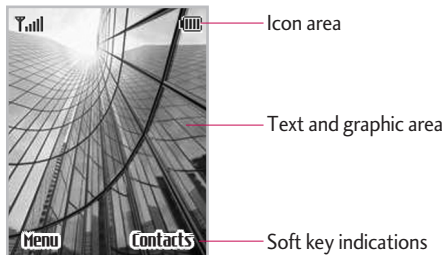 

| Area                | Description                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------|
| <b>First line</b>   | Displays various icons.                                                                         |
| <b>Middle lines</b> | Display messages, instructions and any information that you enter, such as number to be dialed. |
| <b>Last line</b>    | Shows the functions currently assigned to the two soft keys.                                    |

The screen displays several icons. These are described below.

## ON-SCREEN ICONS

| Icon/Indicator | Description                                   |
|----------------|-----------------------------------------------|
|                | Tells you the strength of the network signal. |
|                | Call is connected.                            |
|                | You can use GPRS service.                     |
|                | Shows that you are using a roaming service.   |
|                | Tells you the status of the battery.          |
|                | You have received a text message.             |
|                | You have received a voice message.            |

## Note

The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

| Icon/Indicator                                                                    | Description                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------|
|  | Vibrate only menu in profile.                  |
|  | General menu in profile.                       |
|  | Loud menu in profile.                          |
|  | Silent menu in profile.                        |
|  | Headset menu in profile.                       |
|  | You can divert a call.                         |
|  | Indicates that the phone is accessing the WAP. |
|  | Indicates that you are using GPRS.             |
|  | You have activated Bluetooth menu.             |

# INSTALLATION

## INSTALLING THE SIM CARD AND THE HANDSET BATTERY

Make sure the power is off before you remove the battery.

### 1. Remove the battery.

Hold the top edge of the battery and lift the battery from the battery compartment.



### 2. Install the SIM card.

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card      To remove the SIM card

### Note

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

### 3. Install the battery.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.



## CHARGING THE BATTERY

Before connecting the travel adapter to the phone you must first install the battery.



1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

# INSTALLATION

## CAUTION!

 
- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the SIM card while charging.

## WARNING!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.*
- *Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.*

## DISCONNECTING THE CHARGER

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

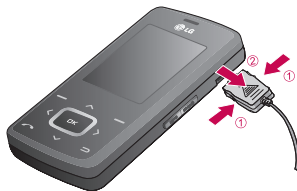

# GENERAL FUNCTIONS

## MAKING A CALL

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
  - ▶ Press and hold the  key to erase the entire number.
3. Press the  key to call.
4. When you want to finish, press the  key.

## Making a call from the call history list.

1. Press the  key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation keys.
3. Press the  key.

## Making International Calls

1. Press and hold the  key for the international prefix. The '+' character can be replaced with the

international access code.

2. Enter the country code, area code, and the phone number.
3. Press the  key.

## Ending a Call

When you have finished a call, press the  key.

## Making a Call From the Contact list

You can store names and phone numbers dialed frequently in the SIM card as well as the phone memory known as the Contact list.

You can dial a number by simply looking up a name in the contact list. For more details on the Contacts feature.

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the key volume using the side keys.



## Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo, if stored in your Address Book) is displayed.

1. Open the flip and press the  key or the left soft key to answer an incoming call. If the Any Key menu option (Menu #.3.2), has been set, any key press will answer a call except for the  key or the right soft key.

### Note

- ▶ To reject an incoming call, press and hold the side keys on the left side of the phone.

2. End the call by closing the phone or pressing the  key.

### Note

- ▶ You can answer a call while using the Address Book or other menu features. In case phone is connected with PC via USB cable, incoming call will be rejected, but after disconnecting phone from PC you can see Missed call window.

## Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding the left navigation key.

## Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator (  ) on your phone's display screen.

## ENTERING TEXT

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone.

### Note

- Some fields may allow only one text input mode (e.g. telephone number in address book fields).

## T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

## ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

## 123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  key until 123 mode is displayed.

## Symbolic Mode

This mode allows you to enter special characters.

## Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. If you want to change modes, press  .  
The available modes are changed.

# GENERAL FUNCTIONS

## Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

### Note

- ▶ You can select a different T9 language from the menu option by holding down the  key. The default setting on the phone is T9 enabled.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
  - ▶ The word changes as letters are typed—ignore what's on the screen until the word is typed completely.
  - ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.**Example:** Press     to type **Good**.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the key  or  key.  
To delete letters, press . Press and hold down  to erase the letters continuously.

### Note

- ▶ To exit the text input mode without saving your input, press . The phone returns to the idlescreen.

## Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.
2. To insert a space, press the  key once. To

delete letters, press the  key. Press and hold down the  key to erase the letters continuously.

### Note

- ▶ Refer to the table below for more information on the characters available using the keys.

| Key                                                                                 | Characters in the order display |                  |
|-------------------------------------------------------------------------------------|---------------------------------|------------------|
|                                                                                     | Upper Case                      | Lower Case       |
|  1 | ., - ? ! ' @ : 1                | ., - ? ! ' @ : 1 |
|  2 | A B C 2                         | a b c 2          |
|  3 | D E F 3                         | d e f 3          |
|  4 | G H I 4                         | g h i 4          |
|  5 | J K L 5                         | j k l 5          |
|  6 | M N O 6                         | m n o 6          |
|  7 | P Q R S 7                       | p q r s 7        |
|  8 | T U V 8                         | t u v 8          |
|  9 | W X Z Y 9                       | w x y z 9        |
|  0 | Space 0                         | Space 0          |

## Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation keys to select the desired symbol and press the [OK] key.

# SELECTING FUNCTIONS AND OPTIONS

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function. The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.



Press the left soft key to access the available Menu.

Press the right soft key to access the available Contacts.

# IN-CALL MENU

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key  [Options].

## DURING A CALL

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

### Speaker phone

During call you can activate speaker phone selecting Options/Speaker phone on, or by pressing OK button. To mute speaker phone select Options/Speaker phone off, or press OK button one more time.

### Making a Second Call (Network Dependent)

You can get a number you wish to dial from the Address Book to make a second call. Press the Right soft key then select Contacts.

### Swapping Between Two Calls

To switch between two calls, press  key or the left soft key, and then select Swap.

### Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see **Call Waiting** (Menu #.3.4, see p. 69)

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing .

### Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

### Muting the Microphone

You can mute the microphone during a call by pressing the [Options] key then selecting [Mute]. The handset can be unmuted by pressing the [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

### DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the key [Options] followed by Send DTMF – DTMF on. Select DTMF off to disable DTMF tones. DTMF tones are normally on.

## CONFERENCE CALLS

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

### Making a Second Call

You can make a second call while currently on a call. Enter the second number and press the  . When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

## Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

## Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Conference/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key  [Options] followed by Conference call.

## Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

## Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

## Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.



## MENU TREE

► Number assigned to each menu option.

## 1. Games & Apps

## 1.1 Games & Apps

## 1.2 Profiles

## 2. Contacts

## 2.1 Search

## 2.2 Add new

### 2.3 Caller groups

## 2.4 Speed dial

## 2.5 Own number

## 2.6 My business card

## 2.7 Settings

### 3. Organiser

### 3.1 Calendar

### 3.2 Memo

## 4. Multimedia

## 4.1 Camera

## 4.2 Video camera

### 4.3 Voice recorder

### 4.3 MP3

### 4.3 Photo album

### 4.3 Video album

### 4.3 Settings

## 5. Messages

## 5.1 New message

## 5.2 Inbox

### 5.3 Mailbox

## 5.4 Drafts

## 5.5 Outbox

## 5.6 Listen to voice mail

## 5.7 Info message

## 5.8 Templates

## 5.9 Settings

| 6. My stuff         |
|---------------------|
| 6.1 Videos          |
| 6.2 Photos          |
| 6.3 Music           |
| 6.4 Text            |
| 6.5 Images          |
| 6.6 Sounds          |
| 6.7 Others          |
| 6.8 Games & Apps    |
| 6.9 External memory |

| 7. Display       |
|------------------|
| 7.1 Wallpaper    |
| 7.2 Menu colour  |
| 7.3 Standby text |
| 7.4 Backlight    |
| 7.5 Network name |
| 8. Profiles      |
| 8.1 Vibrate only |
| 8.2 Silent       |
| 8.3 General      |
| 8.4 Loud         |
| 8.5 Headset      |

| 9. Tools           |
|--------------------|
| 9.1 Favourites     |
| 9.2 Alarm clock    |
| 9.3 Bluetooth      |
| 9.4 Modem          |
| 9.5 Calculator     |
| 9.6 Unit converter |
| 9.7 World time     |
| 9.8 SIM-Menu       |

**\*. Browser****\*.1 Home****\*.2 Bookmarks****\*.3 Go to URL****\*.4 Settings****0. Call register****0.1 Missed calls****0.2 Received calls****0.3 Dialed calls****0.4 All calls****0.5 Delete recent calls****0.6 Call charges****0.7 GPRS information****#. Settings****#.1 Date & Time****#.2 Language****#.3 Call****#.4 Security****#.5 Network****#.6 GPRS Attach****#.7 Memory status****#.8 Reset settings**

## GAMES & APPS

### MENU 1.1

- **Default Games:** In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option. The downloaded applications are organised in folders.

Press the left soft key  [Select] to open the selected slide or launch the selected midlet.

After selecting a folder, press [Options] and then sub menus available to several options are displayed.

- ▶ **Open:** You can see the stored games.
- ▶ **New slide:** Create a new slide.

Java™, is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers, Java MIDlet can be downloaded using a WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **Games & Apps** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

## PROFILES

### MENU 1.2

A profiles is the network information used to connect to the Internet.

If you want to see the details of a profile, please refer to Menu \*.4.1