



PIRI



Quick Start Guide

Thank you for purchasing your PIRI mobile phone. Please follow these simple but important instructions for optimal use of your new phone.

Device Layout



Charging the Battery

Connect the Type-C USB end of the data cable to the charging port on your device.

- The charging port is located on the bottom of your phone.
- Connect the USB end of the cable to the charger.
- Connect the charger to an electrical outlet to fully charge your phone.

Power Your Phone On & Off

- The Power key is located below the volume keys on the right side of the phone.
- Press and hold the Power key for a few seconds to turn on your phone.
- To turn off your phone, press and hold the Power key until the menu appears and then select Power Off. (Other options also include Restart, Screenshot and Making an Emergency Call)

Micro SD Card Slot



When opening the battery cover, the MicroSD card slot will appear as shown above. Carefully insert your MicroSD card in the slot (MicroSD card sold separately).

Home Screen

The Home Screen displays widgets, favorite apps and more. To view other panels, swipe to the side. On the home screen, tap and hold a blank area to access the available options, including Home settings, Widgets and Wallpapers.

- To move an app, tap and hold an item on the home screen and then drag it to a new location and release.
- To create a folder, tap and hold an app, then drag it over another app. Drop the app when a folder frame appears around the apps - a new folder containing the selected apps will then be created.
- To remove an item, tap and hold the item. Then drag it to Remove at the top of the screen and release.
- To add more apps to a folder, tap and hold another app and then drag it to the folder and release.

A widget

Status Bar



App folder

Notifications and Quick Setting Panel

Notifications alert you to the arrival of new messages, emails, calendar events and alarms.

- Swipe down from the top of your phone screen to open the notification panel and view details.
- When you're finished with a notification, swipe left or right to swipe it away. To dismiss all notifications, touch **CLEAR ALL**.

Use Quick Settings to easily get to frequently used settings, like turning on airplane mode and more.

- Wi-Fi:** Turn Wi-Fi on or off. To open Wi-Fi settings, tap and hold the Wi-Fi icon.
- Bluetooth:** Turn Bluetooth on or off. To open Bluetooth settings, tap and hold the Bluetooth icon.
- Do Not Disturb:** Turn Do Not Disturb mode on or off. Tap and hold the Do Not Disturb icon to access feature settings.
- Flashlight:** Turn the flashlight on or off.
- Auto-rotate:** Lock your device's orientation in portrait or landscape mode.
- Location:** Turn location service on or off.
- Mobile Data:** See mobile data usage and turn it on or off.
- Airplane Mode:** Turn airplane mode on or off.
- Display Brightness:** Slide left or right to lower or increase the brightness of your screen.



Contacts

- On the Home screen, swipe up and then tap  to enter the Contacts screen. This app easily saves all of your important contact information.
- To search for your contacts, tap  on the Contacts screen at the top right corner of the screen.
- Enter keywords in the search box. The phone will automatically display the matches.
- To add a new contact, tap  at the lower right corner of the Contacts screen. Enter the contact information and tap **SAVE**.

Messaging

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Messaging screen.

Creating a Message

- On the Messaging screen, tap  **Start Chat**. Enter the recipient's number or select a contact in the contacts list.
- Add your message. Tap  to attach media files, such as an image, a contact or a file.
- Tap to send the message. Note: A message will be sent as a media message, or MMS, when media files are included.

Phone

Making a Call

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Phone screen.

- Enter a phone number on the keypad to make a call. If the keypad does not appear on the screen, tap  to open it.
- Tap  and then choose someone to call from your contacts.
- To view recent calls, tap  Call History.
- During a call, you can tap  at the bottom of the screen to hang up.

Receiving a Call

The Incoming Call screen pops up when a call comes in, along with the caller ID and other information you've entered in the Contacts.

There are various options available when a call comes in:

- To answer a call, slide  up.
- To reject a call, slide  down.
- To reject the call and send an SMS message to the caller, slide  up from the bottom left of the screen and tap the preset text messages to send to the caller.

Camera

You can use the Camera app to take pictures and record videos.

Taking a Photo

- On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.
- Focus on your subject by looking through your phone screen.
- Tap  to take a photo.

Creating a Video

- On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.
- Swipe to the right to activate the Video mode.
- Tap  to start recording a video.
- Tap  to stop when you finish recording.

Photos

On the Home screen, swipe up and then tap  to enter the Photos screen.

- To delete an image or video, select an image or video, tap  to move to trash and it will be deleted.
- To delete multiple images and videos, tap and hold any image or video to delete, then tap other images or videos you would like to remove. A check mark icon will appear, then tap  to move them to the trash or tap on the top right of the Photos screen and tap **Delete**.
- To edit an image, select an image, tap **Edit** , select the options and tap **Save**.

Wireless Settings

- On the Home screen, swipe up and then tap  to enter the Settings screen. Then, choose **Network & internet > Wi-Fi** to turn Wi-Fi on/off.
- Drag the slider to On, enabling your phone to scan for available Wi-Fi networks.
- Tap the name of a desired network to connect to, entering the password if necessary.

Note: Previously connected and saved networks will be joined automatically. A user can join a network and forget it, removing it from the known networks list.

Trademarks and Copyrights

Google and Android are trademarks of Google Inc. Other trademarks and trade names are the property of their respective owners. Screenshots and product images are simulated; they may differ from the actual product and are subject to change. Reproduction, transfer, distribution of the contents herein in any manner without prior written permission of Hot Pepper Mobile, Inc. is prohibited. Hot Pepper Mobile, Inc. reserves the right to add, modify or delete any of the contents herein or withdraw this document at any time without prior notice and without assigning any reasons thereof.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Smart Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Smart Phone has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.