 


PLAYBULB

智能立柱氛围灯
说明书

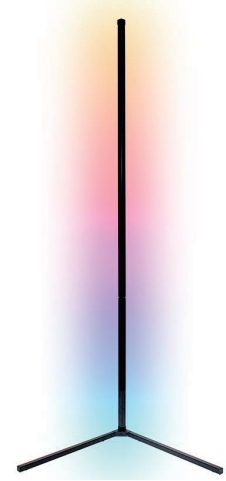

playbulb.com | mipow.com

产品参数:

型号: BTL307 品名: 智能立柱氛围灯
输入: 5V ---2A 无线距离: 10米
RGB色彩: 1680万色彩 工作温度: 0至45度
功率: 6W
执行标准: GB 7000.1-2015.GB 7000.204-2008

产品特点:

支持手机APP控制, 支持IOS和安卓系统
蓝牙连接 亮度调节 速度调节 跟随音乐律动 APP操控
1680万 色彩变换 装饰氛围 场景记忆 多组定时 TR遥控

更多智能交互功能, 敬请期待!

安装图:

- 1.先将支架腿安装到基灯杆上, 支架底部螺丝拧紧
- 2.依次连接光纤的中段和第一段
- 3.连接Type-C电源线



App下载:

 
下载并安装 PLAYBULB X 应用到移动设备上。



适用苹果设备: iPhone 8以上手机
支持大多数安卓4.3和蓝牙4.0及以上版本的安卓设备

产品连接:

- 打开移动设备上的蓝牙。
- 打开安装好的 PLAYBULB X 应用,从设备列表中选择连接PLAYbulb,连接成功后点击Playbulb图标进入应用。

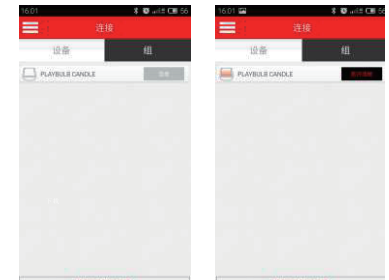


群组:

- 在组栏目下, 可选取多个Playbulb设置为一个组, 同时控制多个Playbulb.
- 可添加多个组。



APP菜单:

 - 设备
显示可连接的Playbulb列表。
- 定时器
可设置Playbulb定时开/关或显示不同的色彩(Playbulb Color还可以设置闹钟)
- 偏好
1. 可设置移动设备与Playbulb自动连接。
2. 可设置移动设备震动传感器的灵敏度。
3. 可设置APP密码。
- 关于
MIPOW公司相关信息。

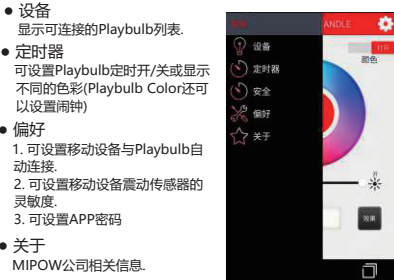

定时:

例如, 如何设置“唤醒”定时器。
1. 连接到PLAYBULB
2. 进入定时界面
3. 开启“唤醒”模式
4. 设定时间
5. 设定灯光亮起的周期时间。比如, 选择0分钟, 灯光在预定的时间立刻全亮; 选择1分钟, 灯光在预定的时间逐渐亮起, 1分钟后全亮
6. 开启颜色 (不开启的话灯光亮时为白光, 可选择亮度)
7. 设定灯的颜色
8. 保存设置, 灯光会在预设时间开启。

光控:

菜单: 设置
摇动: 颜色
颜色盘: 亮度
颜色块: 效果

摇动: 晃动手机, 灯会随之变换颜色
颜色: 可从颜色盘选取各种颜色, 关闭后只有白光
颜色盘/颜色块: 可点选颜色控制相应的色彩
亮度: 调节灯光的亮度。

效果:

- 蜡烛效果
- 闪烁
- 渐变
- 彩虹
- 彩虹渐变

场景:

- 可在默认的三个照片上点选颜色, 灯光会对应的色彩。
- 可从手机中添加照片。

设置:

- 更改Playbulb的名称
- 恢复出厂设置

效果:

- 控制不同的灯光效果。
- 蜡烛效果
- 闪烁
- 渐变
- 彩虹
- 彩虹渐变

场景:

 
- 可在默认的三个照片上点选颜色, 灯光会对应的色彩。
- 可从手机中添加照片。

设置:

- 更改Playbulb的名称
- 恢复出厂设置

遥控说明:

亮度调整
开/关
暖白光
音乐模式
睡眠模式
八色模式
动态模式
定时模式

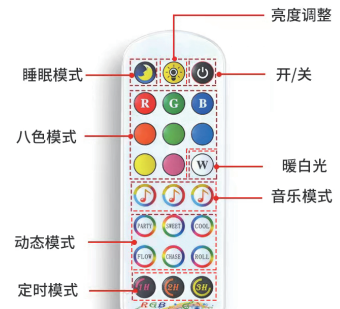

产品中有害物质含量

部件名称	有害物质					
	多溴联苯 (PBB)	多溴联苯醚 (PBDE)	六价铬 (Cr (VI))	镉 (Cd)	汞 (Hg)	铅 (Pb)
主机	○	○	○	○	○	○
配件	○	○	○	○	○	○

本表格依据RoHS 1134的指令编制。
○: 表示该有害物质在该部件所有均质材料中的含量均低于RoHS 2602规定的限量要求。
×: 表示该有害物质在该部件的所有均质材料中的含量均高于RoHS 2602规定的限量要求。
△: 表示该有害物质在该部件的所有均质材料中的含量均高于RoHS 2602规定的限量要求, 但低于RoHS 2602规定的限量要求。
印刷电路板组件: 包括印刷电路板及其零件。
根据产品型号不同, 您所购买的产品可能不会包含以上所有零件。
中华人民共和国境内销售的电子产品, 产品必须贴此标志, 标志内的数字代表产品在正常使用状态下产品的环保使用期限。

保修卡须知

多美选MIPOW产品, 本产品出厂时符合相关规定, 标准并经过严格审核。我厂为客户提供自购买之日起十二个月内的保修服务。需要保修服务时, 请出示正本和发票正本, 并详细填写保修相关内容。保修服务仅限于产品在正常使用状态下出现的质量问题。不适用于因人为损坏、粗暴操作、不正确使用、人为摔伤、外力挤压、进水、人为拆装修改、过度高温、外壳人为磨损或不可抗力的损坏(如地震、火灾、火灾、飓风或战争等)保修逾期的保修服务。

注MIPOW拥有对上述所有条件之最终裁决权, 并随时对条款和条件作出更改, 而无需另行通知。

保修卡


品名: _____
型号: _____
购买日期: _____
销售点: _____
客户姓名: _____
移动电话: _____
联系地址: _____
故障描述: _____
请仔细填写您的信息, 请将此保修卡剪下, 连同需维修产品一起寄回我司维修中心。

售后服务中心
售后客服电话: 400-064769
www.mipow.com | www.playbulb.com



PLAYBULB

 PLAYBULB Floor Instruction

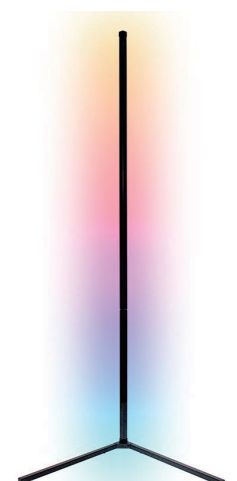

playbulb.com | mipow.com

Specification:

Model No.: BTL307
Product Name: PLAYBULB Floor
Input: 5V ---2A
Wireless Range: 10m(33ft)
Available LED Colors: 16.8 million RGB Colors
Storage Temperature: 0-45°C
Power: 6W

Installation Instruction:

1. Install the support leg on the base pole, tighten the screws at the bottom of the support
2. Connect the middle section and the first section of the leg
3. Connect the Type-C cable



PLAYBULB X App Download:

Download and install the PLAYBULB X App onto mobile device.

 


For Apple devices:
iPhone 8 and above

Android version:
Support most Android device of Android 4.3 and Bluetooth 4.0 or above version

Connection:

- Turn on your mobile device's Bluetooth.
- Open the PLAYBULB X App, choose and connect the PLAYBULB Floor from the device list, after connected, tap the PLAYBULB Floor icon /name into App main interface.

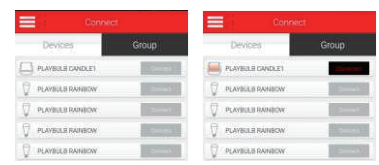


Support mobile APP control, support IOS and Android system

Bluetooth connection Dimming Speed regulation Follow the rhythm of music APP control
16.8 million Color transformation Decoration atmosphere Scene memory Multiple sets of timing TR remote control

Stay tuned for more smart interactive features!


Group:

 - choose several PLAYBULBs as one group to control them at the same time.
- available to create several groups

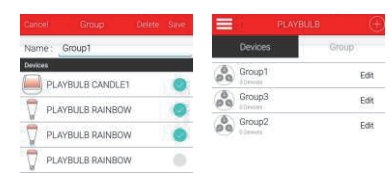

App Menu:

 - Devices
show all connectable PLAYBULBs
- Timer
set up PLAYBULB on / off or colors display at certain time (PLAYBULB color supports alarm clock.)
- Preferences
1. set up automatic reconnection.
2. Set up the sensitivity of the mobile device vibration sensor.
3. Set up App password.
- About
MIPOW introduction.

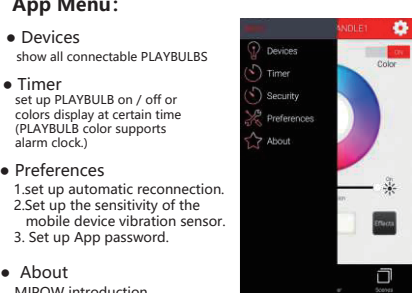

Timer:

how to set "Wake Up" timer:
1. Connect your PLAYBULB.
2. Go to "Timer".
3. Slide the OFF/ON button to ON.
4. Set the time.
5. Set cycle time for lights on.
For example, Select 0 minute, the light will be fully lit at the predetermined time.
Select 1 minute, the light will be gradually lit at the predetermined time, and full lit after 1 minute.
6. Turn on the color (default color is white when the color is turn off, brightness is optional)
7. Set the color of the light
8. Save the Settings, the light will turn on at the preset time.

Light Control:

Menu: 设置
Shake: 摇动
Color Wheel: 颜色盘
Color Block: 颜色块
Brightness: 亮度
Effect: 效果

Shake: shake your phone to change color randomly.
Color: select color on the color wheel. If turn off, PLAYBULB will only show white light.
Color wheel/block: tap to select color to make it show on PLAYBULB.
Brightness: adjust the light brightness of PLAYBULB

Effect:

- make PLAYBULB display different light effects.
- candle
- flashing
- pulsing
- rainbow
- rainbow fading

Scene:

 
- tap to select colors on the three default pictures and PLAYBULB Will display the corresponding colors.
- available to add scene pictures from your mobile device.

Setting

- rename PLAYBULB
- factory reset

Remote Control Instructions:

Brightness Adjustment
ON/OFF
Warm White Light
Musical Mode
Sleep Mode
Eight colors Mode
Dynamic Mode
Timing Mode

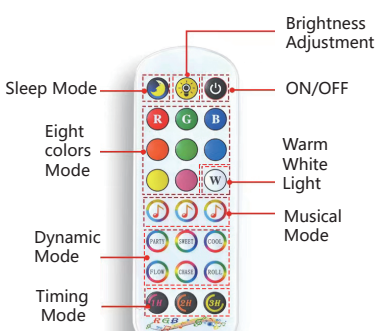

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY CARD:

Thank you for your purchase MIPOW's product. MIPOW warrants this product has been tested and proved to be qualified for delivery in conformity with standard. This Limited Warranty for the product shall last for twelve (12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided. This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme temperatures; unauthorized modifications; unauthorized opening or repair; forces of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service center.

MIPOW reserves the right to amendment and the final interpretation of the above terms without prior notice.

WARRANTY CARD

Product Name: _____
Model No.: _____
Purchase Date: _____
Dealer Shop: _____
Customer Name: _____
Order No./ Website Name: _____
Mobile Phone No.: _____
Contact Addr.: _____
Postal Code: _____
Failure Description: _____
For more efficiency on handling your case, please provide correct info and mail with the failure product to MIPOW authorized repair center.

MIPOW Customer Support Center:
www.mipow.com | support@mipow.com
www.playbulb.com

