 


Digital Camera Quick Guide

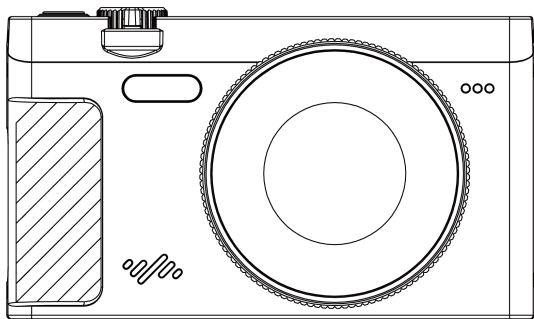

content

WARNING.....	1
CAUTION.....	1
About the camera.....	2
System requirements.....	2
Camera Parts.....	2
Charge the camera.....	5
Turn camera on/off.....	6
Set the camera.....	6
Insert and format the memory card.....	8
Formatting a memory card.....	8
Using the Camera.....	9
Focus function.....	11
Fully automatic focus.....	11
Manual focus.....	11
Fill light.....	11
Media Playback.....	12
Connect to a computer.....	13
Storage Mode.....	13
PC Camera.....	13
Charging mode.....	13
WIFI APP User Guide.....	14
Camera Cleaning and Maintenance.....	14
Troubleshooting.....	14
Supplementary Notes.....	15

WARNING

To reduce the risk of fire or electric shock,

1. Do not expose this device to rain or moisture.
2. Do not place objects filled with liquids (such as vases) on this device.
3. Do not expose the battery to excessive heat, such as sunlight or fire.
4. Do not swallow batteries to avoid chemical burns.
5. Keep new and used batteries out of the reach of children. If the battery compartment is not securely closed, stop using this product and keep it out of the reach of children.
6. If you think a battery may have been swallowed or placed in any part of the body, seek medical attention immediately.

CAUTION

If the battery pack is mishandled, it may explode, causing fire or even chemical burns.

Please observe the following precautions.

1. Do not disassemble.
2. Do not crush the battery pack or subject it to any impact or external force, such as hammering, dropping, or stepping on it.
3. Do not short-circuit the battery pack, and do not allow metal objects to come into contact with the battery terminals.
4. Do not expose to temperatures exceeding 60°C (140°F), such as in direct sunlight or in a car parked in the sun.
5. Do not incinerate or dispose of in fire.
6. Do not dispose of damaged or leaking lithium-ion batteries.
7. Keep the battery pack out of the reach of children.
8. Keep the surface of the battery pack dry.
9. Replace only with the specified type of battery. Failure to do so may result in explosion, fire, or injury.
10. Dispose of used batteries according to the instructions.
11. When using the AC adapter/battery charger, use a nearby wall outlet. If any malfunction occurs, unplug the battery pack from the wall outlet. If you are using a product with a charging light, please note that even if the light turns off, the product will not be disconnected from the power source.
12. Do not use the AC adapter/battery charger in confined spaces, such as between walls and furniture.
13. If static electricity or electromagnetic interference causes data transmission to be interrupted midway, restart the app or disconnect and reconnect the communication cable (USB, etc.).

 
About the camera

System requirements

Users can transfer videos and photos to a computer with the following configuration:

Intel Pentium 2.0GHz or higher / Microsoft Windows XP or higher operating system 2GB RAM 40GB or more available disk memory / standard USB port / 1GB GPU or higher 1920x1080 pixel or higher resolution.

Camera Parts

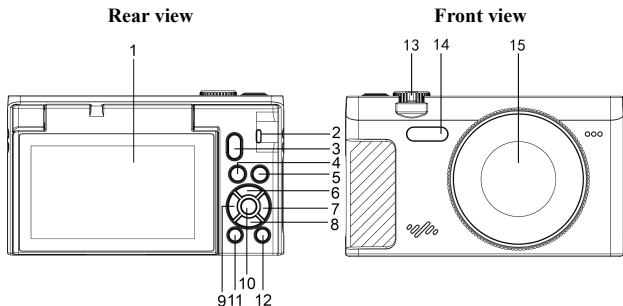

1: Display

2: Charging Indicator/Working Indicator

3: Q Button (Quick Parameter Adjustment)

4: Playback Button

5: Delete Button

6: Up Button/Fill Light Shortcut/Press and Hold to Turn on Wi-Fi

7: Right Button

8: Down Button

9: Left Button

10: OK Button/Mode Button

11: DISP Button

 
12: Menu Button

13: Digital zoom toggle button

14: Fill light


15: Rear camera

Top view

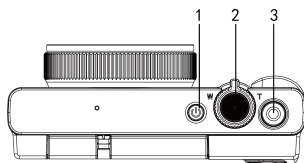


- 1: Power button
- 2: Photo button
- 3: Video recording button

 Bottom view

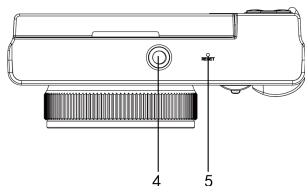

- 4: Tripod port
- 5: Reset button

 Left side view

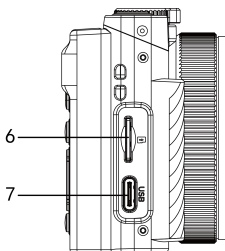


- 6: Memory card slot
- 7: Type-C USB port

Button/Indicator	Function
Power button	Power on/off
	Short press to pause the video while recording
PHOTO button	Take a photo/half-press to focus
Video button	Start recording/Stop recording
indicator light	Red charging indicator light/blue working indicator light
Q button	Quick parameter adjustment
Playback button	Open/exit media playback
Delete button	Delete photos/videos
Up button	Select Up
	Short press to turn on/off the fill light
	Long press to turn on/off WIFI
Right button	Select right
Down button	Select Down
Left button	Select Left
OK button	confirm
	Open the mode selection page
DISP button	Short press twice to lock the screen
MENU button	Open/Close menu settings
USB	USB cable charging
	Connect the computer with a USB cable

Charge the camera

 1. You can use the provided USB cable to charge your camera via the adapter (5V/1A~5V/2A).

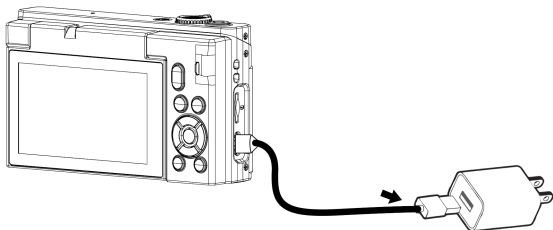

*The charging indicator lights up red while the camera is charging.

 
*When the camera is fully charged, the charging indicator turns off automatically.

A typical full charge of the battery takes about 3 hours.

A fully charged battery provides approximately 120 minutes of recording time.

Turn camera on/off

Press the power button and the camera will turn on automatically.

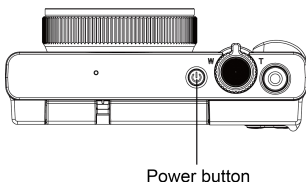


To turn off the camera, press and hold the power button for 3 seconds.

Note: The first time you use the camera, you must press and hold the power button to turn it on.


Set the camera

You can customize your camera settings.

 After turning on the camera, press the Menu button to open the Mode menu and enter System Settings.

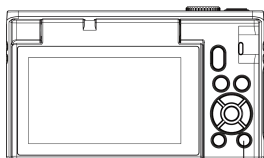

Menu Settings

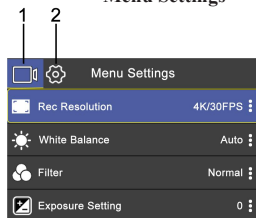 

1: Current Mode Submenu


2: System Settings

Submenu	Menu Contents
Image rotation	Turn off/Turn on
Icon display	Turn off/Turn on
Focus Mode	Auto focus/Manual focus
Wi-Fi	Turn off/Turn on
APP User Guide	Scan the QR code to view the tutorial
Light source frequency	Auto/50Hz/60Hz
LED indicators	Turn off/Turn on
AF assist lamp	Turn off/Turn on
Auto screen saver	Off/30S/1 minute/2 minutes
Auto power off	Off/3 minutes/5 minutes/10 minutes
Display brightness	High/Medium/Low
Button Prompt	High/Medium/Low/Turn Off
Startup music	Turn off/Turn on
Language	Simplified Chinese/Traditional Chinese/English/Japanese/Korean/Russian/German/French/Italian/Spanish/Portuguese/Thai/Dutch/Polish/Swedish/Romanian/Indonesian/Turkish/Greek
Time format	YYYY/MM/DD MM/DD/YYYY DD/MM/YYYY
Time Set	Hour/Minute/Second
Date Set	Year/Month/Day
Format	Confirm/Cancel
Device Info	Product model and version
Factory Reset	Confirm/Cancel

Insert and format the memory card

We recommend using a Class 10 or higher memory card for proper operation.

 1. Insert the memory card until you hear a click.

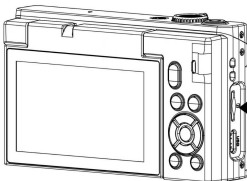



Insert the card in the direction shown, paying attention to the edges and corners.

2. To remove the memory card, push the card in and it will pop out automatically.

Formatting a memory card

It's recommended to format the memory card before first use.

  To format a memory card, press the Menu button to open the menu system. Then, press the left or right arrow key to navigate to System Settings. Press the up or down arrow key to find "Format," then press the OK button to enter the submenu. Select "Confirm" to format the memory card.

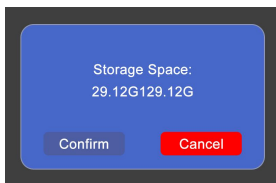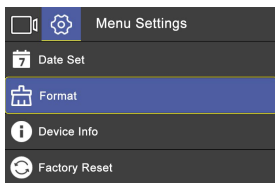


Note:

If the file system on the memory card is not supported, a prompt will appear: "Unsupported file system, format?" Please format the memory card as described above.

Formatting the memory card will delete all data stored on it, making it irrecoverable. Before formatting, please save important data on a PC.

Using the Camera

 Press the MODE button to enter the mode selection page. Press the Up/Down/Left/Right button to select the desired mode and then press the MODE button to confirm.

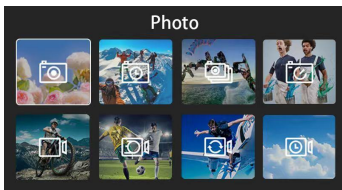


icon	model	illustrate
	Photo	Take a single photo normally
	Video	Record video in normal mode
	Auto	Automatic loop shooting after a specified number of seconds
	Slowly	Record videos in slow motion mode
	Burst	Take a specified number of photos continuously
	Loop	Record video in an infinite loop
	Timer	Take a single photo after a specified number of seconds
	Lapse	Compressed time recording video

The camera supports setting up a menu for each mode.

After selecting the desired mode, press the Menu button to open the menu and select the desired settings.

Press the Photo button to take a photo, which will automatically be saved to the memory card.

 Press the Record/Stop button to start recording, and press it again to end. You can also press the Power button to pause/resume recording during recording.

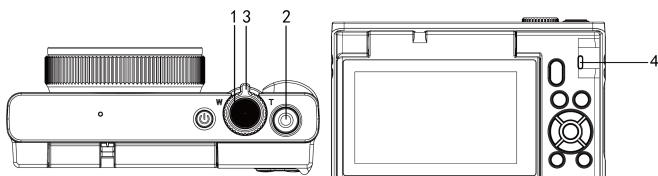

1: Photo button (takes photo/focuses)

2: Video button (starts/stops recording)

3: Digital zoom toggle

T: Digital zoom in / W: Digital zoom out

4: Indicator light

The active indicator light flashes while recording

Focus function

This function includes two focus modes: fully automatic focus and manual focus. Press the Menu button to open the menu, then press the left/right button to switch to system settings. Press the up/down button to find "Focus Mode", press the OK button to enter the focus mode, and select the mode you want.

Fully automatic focus

In this mode, simply hold the camera steady while taking a photo or video, and it will automatically focus. When you're done, press the capture button.

Manual focus

In this mode, when taking a photo or recording a video, half-press the photo button and a focus frame will appear on the display until the camera is in focus. Then press the photo button fully to take the clearest photo or start recording with the clearest image.

Fill light

In video mode, pressing the Up button quickly turns the fill light on or off. In photo mode, the fill light has three flash modes, and pressing the Up button quickly switches between them.



	No flash
	Auto flash
	Mandatory flash

Note: When the fill light is in auto-flash mode, it will only flash when taking pictures in dark environments. When switched to forced flash mode, the flash will always be on.

Media Playback

Press the Playback button to open the media library.

  Select the video or photo file you want to view, then press OK to access the corresponding file to view the videos and images stored on the camera's memory card.

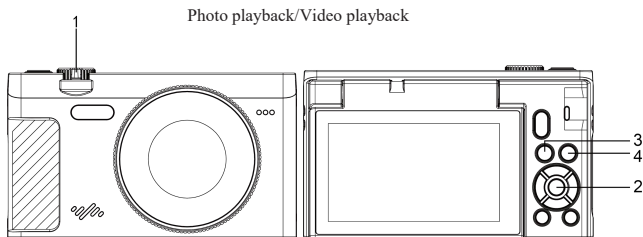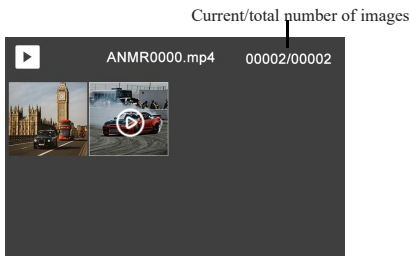

1: To view detailed information about a captured photo, toggle W/T.

Note: After zooming in, you can move up/down/left/right to view more details.

2: Press OK to play/pause the video.

 
3: Press Play to exit the video/photo playback.

4: Press Delete to delete the photo/video.


Note: Once deleted, it cannot be recovered.

Connect to a computer

1. Use the provided USB cable to connect the camera's Type-C USB port to a USB port on your computer.

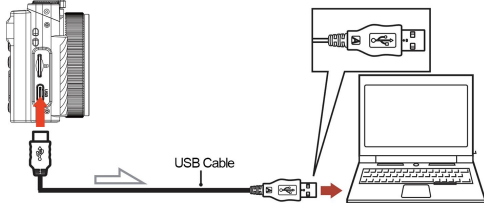

 2. With the camera powered on, the screen will display available options. Press the Up/Down button, then press the OK button to confirm your settings.

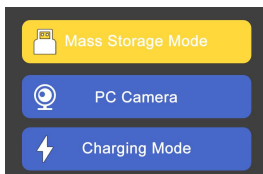

Storage Mode

Select "Storage Mode" and the computer will display the camera's memory card tray, allowing you to transfer files from the memory card to the computer.

PC Camera

Select "PC Camera" mode to use the camera as a PC camera, live streaming, and more.

Note: When using the camera as a PC camera, only the digital zoom button on the camera can be used; other functions are unavailable.

Charging mode

Select charging mode, and the camera will support normal video recording. Turning off the camera's power will fully charge faster than leaving it on.

WIFI APP User Guide

Press the MENU button to enter the menu. Press the left/right button to enter the system settings. Then press the up/down button to find the "APP User Guide" submenu. Press OK to scan and view the tutorial. To download the app, scan the QR code below.



WIFI APP User Guide QR Code



WIFI APP download QR code

Camera cleaning and maintenance

- (1) When the camera is not in use for an extended period, charge it at least once a month to extend the battery life. Store it in a dust-free, dry environment at a temperature not exceeding 30°C.
- (2) If dust or dirt gets on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.
- (3) As this is a precision instrument, do not drop it or subject it to strong shock or vibration.

Troubleshooting

If you are experiencing problems with your camera, refer to this section.

1. The camera cannot be turned on

- (1) The battery is low, please charge the camera.

2. The camera is not charging

- (1) The charging indicator light is off and the charger is not properly plugged in. Please check whether the charger is properly connected.

(2) The ambient temperature is below 10°C, which may cause slow charging or failure to charge.

4. Camera freezes

If the camera freezes unexpectedly, use a pinhole needle to poke the reset hole on the camera to reset it.

Tip: Do not press the capture button quickly while the camera is recording or taking a photo. Normally, the camera will display a waiting icon.

5. Memory card cannot be recognized:

(1) Please check whether the memory card complies with the SD card (Class 10) standard and does not exceed 256GB.

(2) Please check whether the memory card is inserted upside down.

(3) When using a memory card with a camera for the first time, it is recommended to format it first.

Supplementary Notes

(1) Do not insert any objects other than the memory card into the slot.

(2) The camera may display an unstable image for a few seconds after turning on the power. This is not a malfunction.

(3) Due to the optical characteristics of the lens, there may be color dispersion (chromatic aberration amplification) at the edges of the image. This is not a malfunction of the camera.

(4) It is normal for the memory card to heat up after prolonged use.

(5) It is normal for the camera screen to heat up after prolonged use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction