

正面

130mm

7700mAh MAGSAFE WIRELESS POWER BANK
WITH TWS EARBUDS
INSTRUCTION MANUAL
QC2288

READ ALL INSTRUCTIONS CAREFULLY BEFORE
USE AND KEEP THIS MANUAL


IN THE BOX

- 7700mAh Wireless Power Bank with TWS Earbuds(x1)
- Instruction Manual(x1)
- Magnetic Iron Ring(x1)
- Charging Cable(x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge the battery. Unplug the device when charging is complete.
- This product contains a built-in lithium-ion polymer battery and should not be disposed of with regular household waste. Please consult your local hazardous waste agency or waste service provide with instruction on how to dispose of this product.
- Any accessories attached to the back of your device can reduce wireless charging efficiency and may lead to overheating. Please remove all attachments before using the wireless power bank.
- The strong magnetic fields produced by the neodymium magnets in this device can damage items such as televisions, computers, monitors, credit and bank cards, diskettes and other data storage media, video tapes, mechanical watches, hearing aids, loudspeakers, and VCRs. Pacemakers and other electronic body implants may be damaged or switched into "test mode" when exposed to strong magnetic forces. **Maintain a minimum distance of 3 feet .**

PRODUCT DIAGRAMS

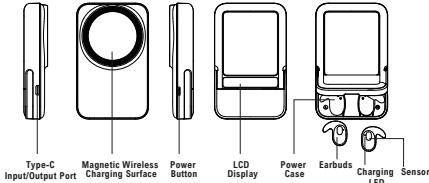

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Connect the included charging cable into the Type-C input/output port of the power bank and the other end to a certified USB wall adapter (not included). Then, plug into a wall socket.
- The LCD display will display the battery level and blink while the power bank is charging.

Note: When the power bank is being charged with an 18W or above power adapter, the fast-charging icon (⚡) will appear on the LCD display.

WIRED CHARGING

- Connect your desired charging cable between the Type-C port of the power bank and your device.
- Charging will start automatically.
- The LCD display will display the remaining battery level on the power bank while it is in use.
- When your device is fully charged, remove the cable from your device.

WIRELESS CHARGING

- For wireless charging, please ensure your device supports Qi Wireless Charging.
- Press the Power Button. The LCD display will display the battery level.

For devices that support MagSafe Wireless Charging

- Simply place the MagSafe compatible device against the magnetic wireless charging surface of the power bank. The device will begin charging automatically.
- If your device does not begin charging, try repositioning your device on the wireless charging surface.
- You may need to remove the case on your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.

100mm

反面

130mm

WIRELESS CHARGING (Continued)

For all other Qi Wireless enabled devices

Magnetic Ring Application

- Consult your device's manual to locate the correct position of your device's Qi Wireless charging coil.
- Using the magnetic iron ring (included), remove the sticker lining from the back of the ring and adhere to the wireless charging area on the back of your device or phone case.

After the magnetic ring has been applied to your device or phone case, place the device against the magnetic wireless charging surface. The will begin charging automatically.

- If your device does not begin charging, try repositioning your device on the wireless charging surface. You may need to remove the case on your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.

Safety Note: Wireless charging will automatically power off when the wireless charging surface is overheated or when a metal object, such as a coin, is place on the wireless charging surface.

USING EARBUDS

1.Charging Earbuds

- Place the earbuds securely into the charging case. The earbuds will begin charging automatically and the LED light on each earbud will turn red.
- When fully charged, the LED on the earbuds will briefly turn blue and then off.

2. Power On

- Remove the earbuds from the charging case. You will hear "Power On".
- If the earbuds have previously been paired, are outside of the case and are powered off, simply press and hold each earbud's touch sensor for 5 seconds to turn them on.

3. Pairing Both Earbuds

- Remove one or both earbuds from the case, one earbud will blink red and blue, indicating it is ready to pair.
- Upon removal, you will hear the voice prompt "Power On".
- You will hear the voice prompt "Pairing" when the earbud(s) are ready to be paired with your device.
- Open your device's Bluetooth settings and select "M2288Q."
- Once connected, you will hear the voice prompt "Connected," and you can begin enjoying your audio.

Notes:

- In pairing search mode, both earbuds will automatically power off if no pairing occurs within 5 minutes.
- Earbuds will automatically reconnect after being previously connected to a device.

4. Power Off

- In pairing search mode, both earbuds will automatically power off if no pairing occurs within 5 minutes.
- While paired with your device, you may do any of the following:
 - Press and hold one or both earbuds' touch sensors for 5 seconds to power them off. You will hear the voice prompt "Power Off."
 - Alternatively, simply place the earbuds back into the charging case.

5. Calling

- Answering/Ending Call: Touch the earbud touch sensor ONCE to answer an incoming call. To end a call, touch the earbuds touch sensor ONCE more.
- Rejecting a call: Touch and hold the earbud touch sensor to reject an incoming call.

6. Audio Touch Functions

Left Earbud

Double Tap: Volume Down, double tap again to continue reducing volume.
Triple Tap: Replay song. Then quickly triple tap again to play the previous song.

Right Earbud

One Touch: Pause/Play
Double Tap: Volume Up, double tap again to continue increasing.
Triple Tap: Next Song

TECH SPECIFICATIONS

Battery Capacity: 7700mAh/3.85V/29.65Wh/Power Bank
Battery Capacity: 30mAh/3.7V/0.11Wh/Earbuds
Output For Power Case: 5V=0.2A
Type-C Input: 5V=3A 9V=2A 12V=1.5A 18W Max
Type-C Output: 5V=3A 9V=2.22A 10V=2.25A 12V=1.67A 22.5W Max
Wireless Output: 5W/7.5W/10W/15W

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



100mm