

XTREME[®] DIGITAL LIFESTYLE ACCESSORIES PRINTER SLUG FOR TECH PACK	
BRAND: XTREME CATEGORY: SOUND PRODUCT NAME: XBE9-0145 FILE NAME: XBE9-0145_UserManual ITEM NUMBER: XBE9-0145	ADDITIONAL PRINTING PROCESSES: UV SPOT: GLOSS METALLIC FOIL: DEBOSS: EMBOSS: VARNISHING TECHNIQUE: MATTE LAMINATION
PRESS WORK: PRINT 1/1. TRIM TO SIZE, SCORE, FOLD WHEN SPECIFIED SCALE: 100% ASSEMBLED PACKAGE DIMENSIONS (in Inches) WIDTH: 3" HEIGHT: 4.9" DEPTH: DIELINE OVERALL DIMENSIONS (in Millimeters) WIDTH: 78.065mm HEIGHT: 124.873mm	PRESS SPEC COLOR REFERENCES DIELINE GLOSS UV SPOT EMBOSSING (RELIEF) DEBOSSING (SUNKEN) FOLDING LINE PRODUCT PLACEMENT FOILING GLUE FOLD Ø20mm SECURITY STICKERS PLACEMENT BLISTER OR INNER TRAY PLACEMENT CLOTH LIFT TAG
MANUAL MATERIAL, THICKNESS & SIZE SUBSTRATE TYPE: MATTE ART PAPER C25, 100gsm WINDOW: INNER TRAY: BLISTER: PLASTIC BAG: MAGNET: VELCRO: SECURITY STICKERS: HANG TAB COLOR/ MATERIAL/SIZE: FOAM CORRUGATED BOARD: PAPERBOARD: USER MANUAL: PRINT 1/1 IN BLACK ONLY	ADDITIONAL PANTONE COLORS (NOT CMYK) SOLID COLOR NAME: NEON COLOR NAME: METALLIC COLORS: VENDOR'S FOIL NAME/NUMBER:
PACKAGING TYPES FOLDING CARTON: FOLDING CARTON WITH DOOR PANEL: RIGIT GIFT BOX: CLAMSHELL: SLIDING/SLIPCASE: TRAPPED BLISTER CARD BLISTER CARD: OTHER:	FILE SAVED AS: .ai = FULLY EDITABLE -OUT.ai = OUTLINED .pdf = Acrobat .jpg = Flat image .png = DIGITAL (transparent background) APPROVAL CHECKLIST: PRIMARY DESIGNER: Rita Manukyan DATE: 12/31/25 SECONDARY DESIGNER: DATE: PROOF READ: DATE: APPROVED BY: DATE: AUTHORIZATION SIGNATURES:

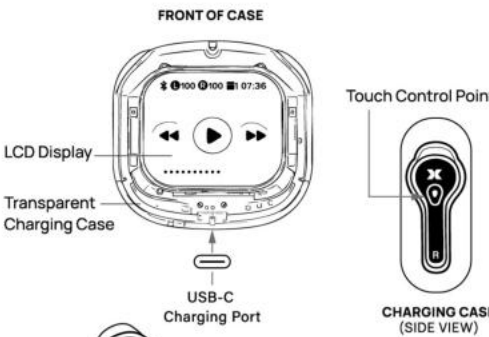 
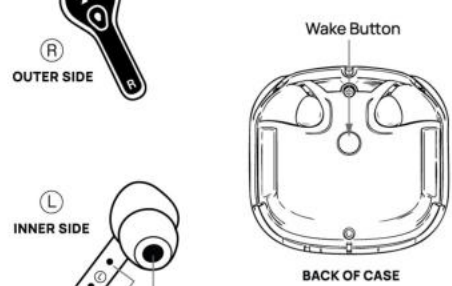 
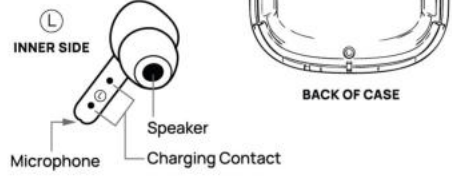 
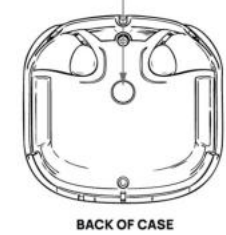 
Press Ready Artwork.
DO NOT PRINT THIS LAYER:
Printer Slug

PRINTABLE LAYER:
Manual Artwork

FRONT PAGE

SAFETY AND CARE INSTRUCTIONS		FCC STATEMENT		ONE YEAR LIMITED WARRANTY	
Read all the instructions before using the product and then store them for future reference. Failure to follow these safety instructions, could lead to fire, electrical shock, personal injury, property damage, or damage to the product. • This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines. • Do not expose to rain, moisture, or other liquid. Do not use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source. Do not handle the unit, USB cord or wall charger with wet hands. • Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product. • Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire. • Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion. • Do not dissemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. • Charge using the correct wall charger, and make sure that the charger is inserted all the way into the electrical outlet. Disconnect the charger once the product is fully charged. • This product is not a toy. Keep out of reach of children or those that require supervision. • Do not use abrasive cleaning solvents to clean the unit. Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.		FCC STATEMENT Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures: • Reorient or relocate the receiving antenna • Increase the separation between the equipment and receiver • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected • Consult the dealer or an experienced radio/TV technician for help FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. FCC ID: 2AHAS-XBE90145EL FCC ID: 2AHAS-XBE90145ER		Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied. Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com	
		Scan the QR code below, or on the front of this manual to extend your warranty from 1 Year to 2 Year Limited.		 Scan to Extend Your Warranty	
				 XBE9-0145-BLK, XBE9-0145-WHT User Manual V1.0 0126 855.999.8041 WWW.GOGETXTREME.COM	
				 Scan to Extend Your Warranty	

BACK PAGE

PRODUCT DESCRIPTION		GETTING TO KNOW YOUR PRODUCT		OPERATION	
Thank you for purchasing the ELEV8 TWS Earbuds. Please read this manual carefully to understand how to use and maintain your earbuds effectively. FEATURES Take control with an 8-in-1 smart charging case wrapped in a sleek, see-through design that showcases the inner workings while blending style with functionality. Manage music, calls, games, timers, and more right from the case, with a large LCD display that keeps you informed of battery levels at a glance. Enjoy flexible listening with a single earbud for calls and awareness or pair both earbuds for immersive sound, enhanced by built-in EQ settings, spatial audio, and a dedicated game mode for added detail and responsiveness. The case also doubles as a remote for selfies and quick controls—keeping your earbuds charged and your music playing wherever you go. • TWS Series, use earbuds individually or simultaneously • Up to 4 hours of playtime on a single charge • Charging case with LCD display • Easy-to-use touch controls SPECIFICATIONS Material: ABS Charging Specification: 5V DC 200mA Earbuds battery capacity: 30mAh Charging case: 300mAh Bluetooth range: 33ft Playback time: 4 hours (70% volume); Charging time: 2 hours USB Charging Cable: 11.8in		FRONT OF CASE  OUTER SIDE  INNER SIDE  BACK OF CASE 		NOTE: Before first use, charge the earbuds in the case for at least 1 hour. CHARGING Earbuds: Place the earbuds in the charging case. The LEDs will light up. Charging Case: Connect the included charging cable to the case and plug it into an appropriate power source. BLUETOOTH PAIRING The earbuds first pair with each other when powered on, and then go into pairing mode (The main earbud indicated light fast flash, while the secondary ears have no lights.) Turn on Bluetooth on your phone and connect to "Xtreme XBE9-0145-BLK/WHIT". CONTROLS Power On/Off: Auto on when taken from the case. Manually turn on or off by holding the touch control area for 5 sec. Play/Pause/Answer and end call: Single tap touch control area. Reject a call: Press and hold either L or R touch control area for 2 seconds Volume Control: Double press the right touch control area to raise the volume. Double press the left touch control area to lower the volume Next song: Triple press right touch control area. Previous song: Triple press left touch control area. Voice Assistant: Press and hold either touch control area for 2 seconds to activate voice assistance.	
				TROUBLESHOOTING If you are unable to connect your earbuds to your Bluetooth device, please try the following steps: 1. Ensure your earbuds are turned on and fully charged 2. Make sure your phone or Bluetooth playback device's Bluetooth setting is on 3. Please charge the earbuds and Bluetooth device 4. Restart your Bluetooth device TIPS • Performance can be affected by the environment or when the earbuds become discharged • Interruption can be caused by obstacles between the earphones and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the earbuds are brought out of range of the Bluetooth device (approx. 33 ft) • To maintain healthy battery performance, charge the charging case (and earphones) periodically, if not in use	
				CASE OPERATIONS & FEATURES Music Menu: You can play/pause, skip track, and go back to previous track here Equalizer: First turn on the equalizer toggle by pressing on the top right corner. Then you can change between 5 modes: Rock, Classic, Popular, Country, Jazz. Each present equalizer curves are designed to enhance the listening experience. Spatial Audio: You can activate music mode or game mode to enhance listening experience. Volume: Adjust volume without using your audio device! Brightness: Adjust brightness setting of case screen. Find Earbuds: Play a chime from either earbud to locate them easily. NOTE: Do not use when in ear. Take Photos: You can use your earbud phone case to take pictures from your phone's camera. NOTE: You must be on your device's phone camera app. Wallpaper: Change the home screen wallpaper for your earbud case. Background Wallpaper: Change the background wallpaper for your earbud case. Stop Timer: Set a timer from 5-60 minutes. Touch to Wake: Enable the setting to wake up your earbud case by tapping the screen. If this setting is off, you must press the button on the back to wake up case. Light: Turn on to change the case into a flashlight. Language: Change to your desired language. There are 12 languages total. Voice Assistant: Click the icon to activate the voice assistant on your connected device. Game: A preinstalled game that does not require Wifi to play! Get your highscore!	