




Full Size Wireless Keyboard

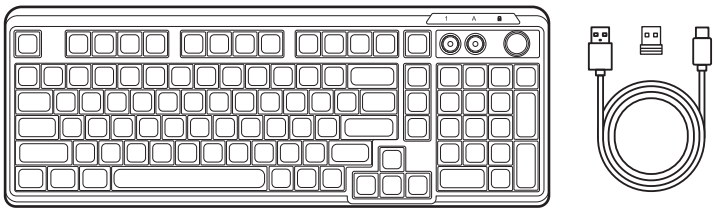

- INCLUDED:**
- 1. Full Size Wireless Keyboard
 - 2. USB-A 2.4Ghz Receiver
 - 3. USB-A to USB-C Charging Cable


CONNECTION METHOD:

- **2.4G wireless connection mode:**
- 1. Fully charge the keyboard with the provided USB cable before use, and switch the power to ON.
- 2. Hold the FN+3 key. When the Battery Indicator flashes red, the keyboard is in connecting mode.
- 3. Plug the receiver into your device. The keyboard and receiver will automatically connect. The battery Indicator will fade when connection is successful.

TIP: To use the media keys hold FN and press the secondary function (play/pause, volume up/down, etc.) you'd like to use.

- **Bluetooth connection mode:**
 - To 1 device
 - 1. Fully charge the keyboard with the provided USB cable before use, and switch the power to ON.
 - 2. To enter pairing hold FN+1, the Bluetooth Indicator will flash red.
 - 3. Use your device to pair with "Pokemon Keyboard". The indicator will fade when the keyboard has paired successfully.
 - To 2 devices
 - 1. After connecting the first device using the above method, hold FN+2 to enter pairing again, and the Caps Lock Indicator will flash red.
 - 2. Use your second device to pair with "Pokemon Keyboard". The indicator will fade when the keyboard has paired successfully.
 - 3. Press FN+1 or FN+2 to switch between the two devices.
- NOTE:** The keyboard will automatically pair the same way the next time it is powered on.

- LED INDICATORS:**
- **Bluetooth Indicator:**
 - Flashing Red - Bluetooth 1 Pairing
 - Fade - Successfully Paired
 - **Caps Lock Indicator:**
 - Flashing Red - Bluetooth 2 Pairing
 - Fade - Successfully Paired
 - Solid Red - Caps Lock
 - **Battery Indicator:**
 - Flashing Red - 2.4G wireless connecting / Low Battery
 - Solid Red - Charging
 - Fade - Successfully Paired / Fully charged

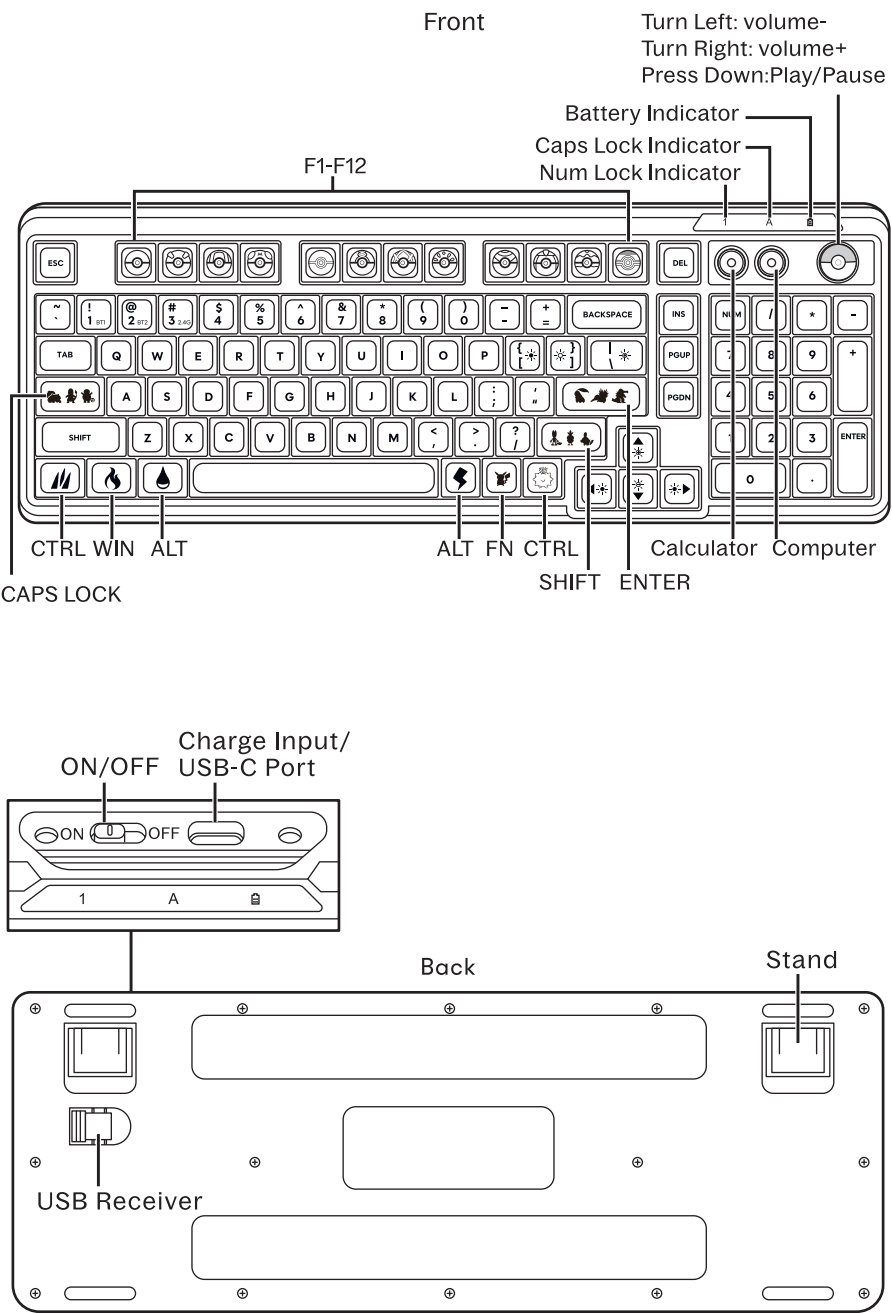

- KEYBOARD MULTIMEDIA KEYS:**
- FN Key + F1 - Media Player
 - FN Key + F2 - Volume -
 - FN Key + F3 - Volume +
 - FN Key + F4 - Mute
 - FN Key + F5 - Previous Track
 - FN Key + F6 - Next Track
 - FN Key + F7 - Play/Pause
 - FN Key + F8 - Home
 - FN Key + F9 - Stop
 - FN Key + F10 - Mailbox
 - FN Key + F11 - My Computer
 - FN Key + F12 - Collect
 - FN Key + { - Backlight ON/OFF
 - FN Key + } - Switch between 3 backlight modes
 - FN Key + \ - Turn backlight breathing mode ON or OFF
 - FN Key + "↑" - Increase Brightness
 - FN Key + "↓" - Decrease Brightness
 - FN Key + "←" - Decrease LED Speed
 - FN Key + "→" - Increase LED Speed

- CHARGING:**
- 1. A full charge requires approximately 1.5 hours.
 - 2. Plug the USB-C end of the charging cable into the charge port on the side of the keyboard.
 - 3. Plug the opposite end of the charging cable into a power supply of at least DC 5V 800mA.
 - 4. Charging is complete when the battery indicator turns off.
- WARNING:** Please use UL compliant power supply.

- TROUBLESHOOTING:**
- 1. If the keyboard is not connecting make sure the receiver is properly plugged into the computer or make sure wireless pairing is enabled on your device and pairing is successful.
 - 2. If the keyboard is not responding check if the battery is low. If it is please recharge.
 - 3. If you're still having connectivity issues, move closer to the device or reduce interference from other wireless devices by moving them away from the keyboard.
 - 4. Having trouble with your device? Be sure you're running the latest software on your devices. You can do this by doing a 'software update' in the settings of your device.

- SAFETY:**
- 1. Do not use near any water source.
 - 2. Do not modify or repair this device.
 - 3. Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

only at

© 2026 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

Keyboard Model KB598 FCC ID: 2A023-KB598; Receiver Model KB598R FCC ID: 2A023-KB598R; Keyboard Input: 5V=800mA Max Made in China
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Target Corp. Mpls. MN 55403 Phone: 1-877-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@targetbrands.com