

User's Manual

Electronic Key

FCC ID: 2AOKM-HON-V4B

IC: 24223-HNV4B

MODEL:RT-HON10A

P/N: RT-T2AAN, RT-T2AA2, RT-T2AA1, RT-TOAN, RT-TOA2, RT-TOA1, RT-TP63N, RT-TP631, RT-TP632

This remote has lock, unlock, and panic buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

LOCK Button:

When you press the LOCK button, it locks all the doors.

UNLOCK Button:

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

TRUNK Button:

Pressing the button opens and closes the trunk.

PANIC Button:

When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp. To stop the alarm, press any button on the electronic key.

REMOTE START Button:

Press the remote start button twice within 5 seconds. The vehicle will stay in the Remote Start mode for a 15-minute cycle. Press and release remote start button once to exit Remote Start mode.

FCC COMPLIANCE STATEMENT:

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

IC WARNING:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device

ADVERTENCIA IC

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS

(RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences.

(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.