

スピーカー（ハンバーガー型、ライトブルー）／スピーカー（ハンバーガー型、ライトピンク） 兼用
Compatible with Hamburger Speaker: Light Blue / Light Pink

使用方法 / HOW TO USE

- ※使い始めは、本体を充電してからお使いください。
1. 電源ボタンを長押しすると、「Power on」と発声し流れ、電源がオンになります。
 2. 電源が入るとペアリングモードとなり、本体背面の充電口左側のインジケータランプが青色に点滅します。スマートフォン等、接続先機器のBluetooth設定から本商品のデバイス名(ライトブルー：DS BT-SPK 007B/ライトピンク:DS BT-SPK 007P)を検索して接続します。ペアリングが完了すると、「Connected」と発声し流れ、インジケータランプが点滅から点灯へ変わります。音楽など再生時、青色ランプが点滅します。
 3. 一度ペアリング設定をすると、次回以降は自動でペアリングを行います。
 4. 接続先機器のBluetooth設定で接続を切ると「Disconnected」と発声し流れ、本商品とのペアリングが解除されます。
 5. 電源が入った状態で、電源スイッチボタンを長押しすると「Power off」と発声し流れ、本商品の電源が切れます。
 6. バッテリー残量が少なくなると、「Low Battery, please charge」と発声し流れ、さらにバッテリー残量が低下すると電源が切れます。
 7. 充電方法：①充電ケーブル（別売）をUSB A Cアダプター（別売）に接続してください。5Vを超える出力があるACアダプターは使用しないでください。②充電ケーブルのType-Cコネクタを本品の充電端子に接続してください。充電中はランプが赤に点灯。③充電完了後は赤ランプが消灯。充電完了後はすみやかに充電ケーブルを外してください。

- ※Charge the main unit before first use.
1. Press and hold the power button. The speaker says "Power on" and the power turns on.
 2. When the power turns on, the speaker enters pairing mode, and the indicator light on the left side of the charging port on the back of the unit flashes blue. Search for ("DS BT-SPK 007B" for Light Blue, "DS BT-SPK 007P" for Light Pink) in the Bluetooth settings of the smartphone or other connected device and connect to it. When pairing is completed, the speaker says "Connected" and the indicator light changes from flashing to a steady light. During music playback, the blue light flashes.
 3. Once paired, the speaker will automatically reconnect to the device in future uses.
 4. When the speaker is disconnected from the Bluetooth settings of the connected device, the speaker says "Disconnected" and pairing with the speaker is canceled.
 5. When the speaker is on, press and hold the power button. The speaker says "Power off" and the power turns off.
 6. When the battery level is low, the speaker says "Low battery. Please charge." If the battery level continues to drop, the power turns off.
 7. Charging Method: ①Connect the charging cable (sold separately) to a USB AC adapter (sold separately). Do not use an AC adapter with an output exceeding 5V. ②Connect the Type-C connector of the charging cable to the charging port of the unit. The indicator light will illuminate in red while charging. ③When charging is complete, the red light will turn off. Unplug the cable promptly after charging is complete.

4つのボタン（電源ボタン、曲送り／音量アップボタン、曲戻し／音量ダウンボタン、再生／停止ボタン）


① 電源ボタン 長押し毎に電源オン、 電源オフ	② 曲送り／音量アップボタン 長押しは音量アップ、 短押しは曲送り	③ 曲戻し／音量ダウンボタン 長押しは音量ダウン、 短押しは曲戻し
-------------------------------	---	---

④ 再生／停止ボタン：押す毎に 再生／一時停止

上面4つの操作ボタンは一体型構造のため、押す位置や押し方により意図しない動作となる場合があります。その際は押す位置を調整して操作してください。

4 buttons (Power button, Next track / Volume up button, Previous track / Volume down button, Play/Pause button)

- ① Power button: Press and hold to turn on or off.
 - ② Next track / Volume up button: Press and hold to increase the volume, and press to skip to the next song.
 - ③ Previous track / Volume down button: Press and hold to decrease the volume, and press to go back to the previous song.
 - ④ Play/Pause button: Press to play or pause.
- Due to the integrated structure of the four operation buttons above, unintended operations may occur depending on the pressing position or method. If this happens, please adjust the pressing position and try again.

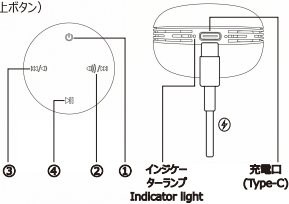

使用上の注意 / CAUTION

- 本品を安全にご使用いただくために、使用上の注意を必ずお読みになり、内容をよく理解された上でご使用ください。
- 車内など高温環境での保管・放置をしないでください。
- 火や熱源のそばに置かないでください。
- 本来の用途以外に使用しないでください。
- 落としたり、ぶつけたりしないでください。
- 分解や改造をしないでください。
- 乳幼児の手の届かない場所で使用、保管してください。
- 変形・破損した場合、直ちに使用を中止してください。
- 長時間使用しない場合は、電源を切ってください。
- 充電しながら使用しないでください。
- 使用しない場合でも3か月に一度は充電してください。
- 急速充電対応ACアダプター等、5Vを超える出力があるACアダプターは使用しないでください。
- コネクターは接続方向にまっすぐ差し込んでください。
- 一度曲がったコネクターは使用しないでください。
- 液体や異物がコネクター内に入らないよう注意してください。
- パッケージに記載の会社名及び商品名は、各社の商標または登録商標です。Bluetooth® ワードマークとロゴは、Bluetooth SIG, Inc. の所有であり、ライセンスに基づきこのマークを使用しています。
- 本体はリチウムイオン充電電池を内蔵しています。廃棄は分解せず、各自自治体の廃棄区分に従ってください。
- 生産に万全を期しておりますが、万一不良の場合にはお買い上げ店にてお取り替えさせていただきます。本品使用目的以外の使用に起因するなど、本品の欠陥に基づかない損害については当社では責任を負いかねます。あらかじめご了承の上お買い求めください。
- To ensure safe use of this product, be sure to carefully read and fully understand the safety precautions before use.
- Do not store or leave the product in high-temperature environments such as inside a vehicle.
- Do not place the product near fire or heat sources.
- Do not use the product for purposes other than its intended use.
- Do not drop or subject the product to strong impacts.
- Do not disassemble or modify the product.
- Use and store the product out of the reach of infants and children.
- If the product becomes deformed or damaged, discontinue use immediately.
- When not using the product for an extended period, turn off the power.
- Do not use while charging.
- Even when not in use, charge once every three months.
- Do not use a fast-charging AC adapter or any AC adapter with an output exceeding 5V.
- Insert the connector straight in the correct orientation.
- Do not use a connector that has been bent.
- Do not allow liquid or foreign objects to enter the connector.
- The company names and product names stated on the packaging are trademarks or registered trademarks of their respective owners. The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and are used under license.
- This product contains a built-in lithium-ion rechargeable battery. Do not disassemble. Dispose of it in accordance with local regulations.
- Every effort has been made to ensure the quality of this product. In the unlikely event of a defect, it will be replaced at the place of purchase. Please note that we cannot accept liability for damage resulting from causes other than a defect in the product itself, such as from use outside its intended purpose. Please acknowledge this before purchase.

FCC Caution:

Labeling requirements.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation. Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

本体刻印：

Model: DS BT-SPK 007P

Input: 5V $\overline{\text{---}}$ 240mA



217-241972



FCC ID: 2BCCJ-DSBT-SPK007P