 


Baby Swing

 
User Manual

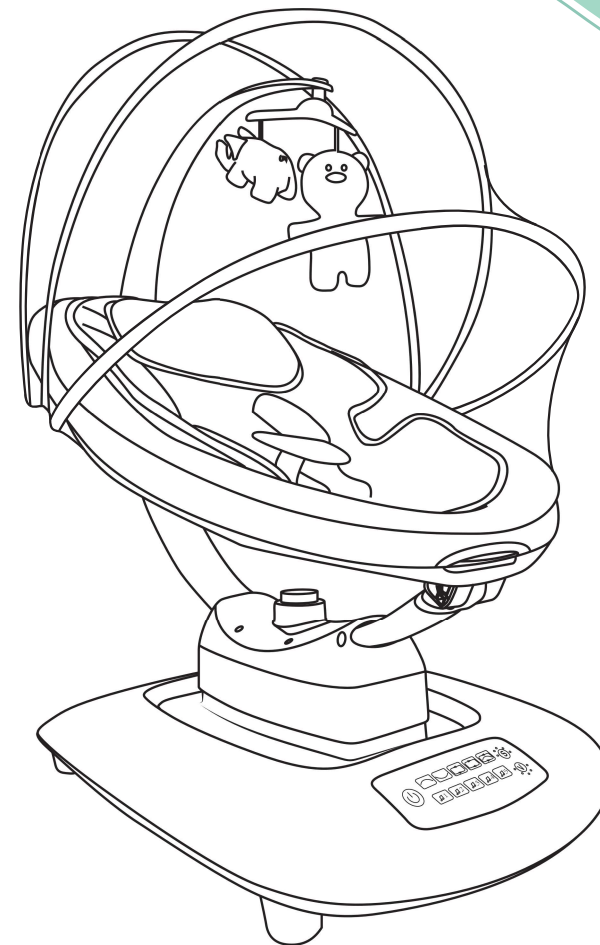

IB-801


THIS USER MANUAL CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ CAREFULLY AND KEEP WELL FOR FUTURE REFERENCE.

PACKING LIST

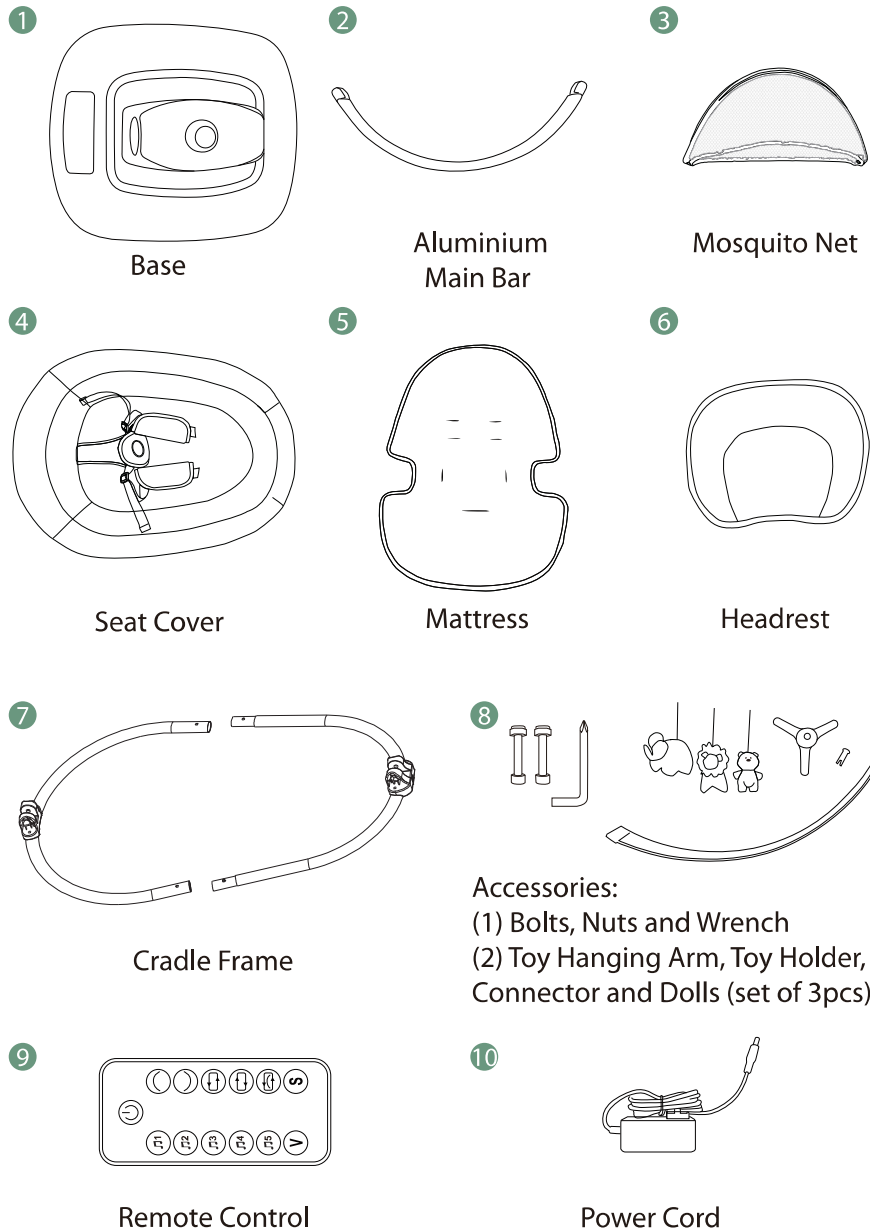


PRE-ASSEMBLY PREPARATION

 
Prior to assembly, be sure to remove the four screws on the underside of the base!

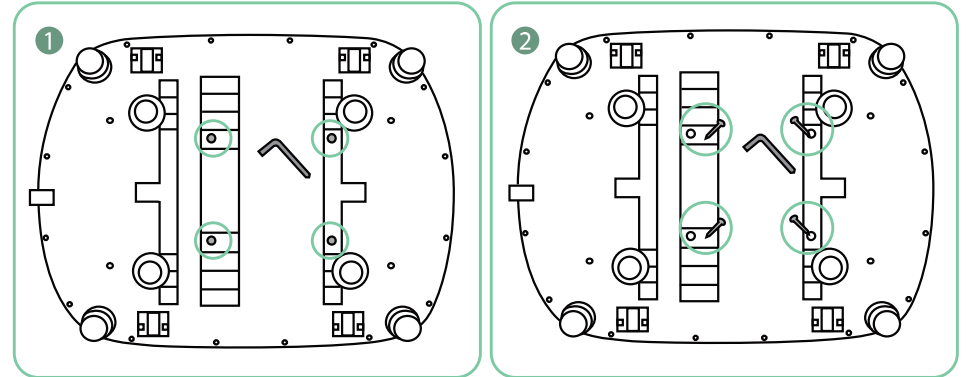


ASSEMBLY OF CRADLE

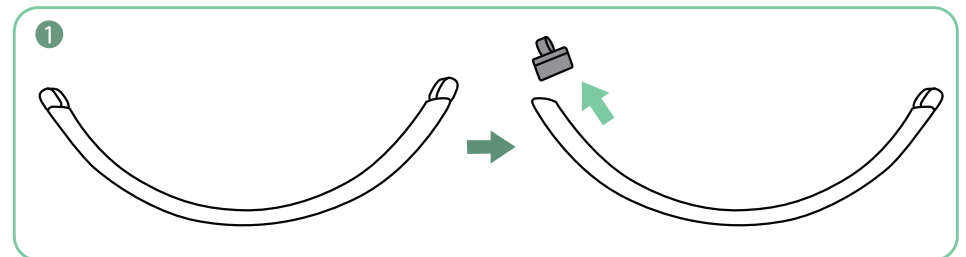 

 
1. Remove the joint at one end of the aluminium main bar.

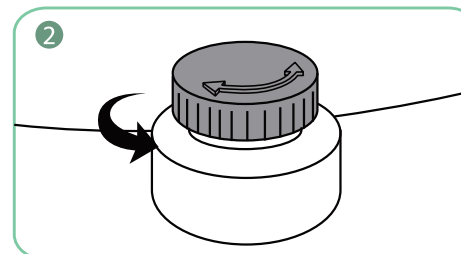

 
2. Loosen the knob on the base.

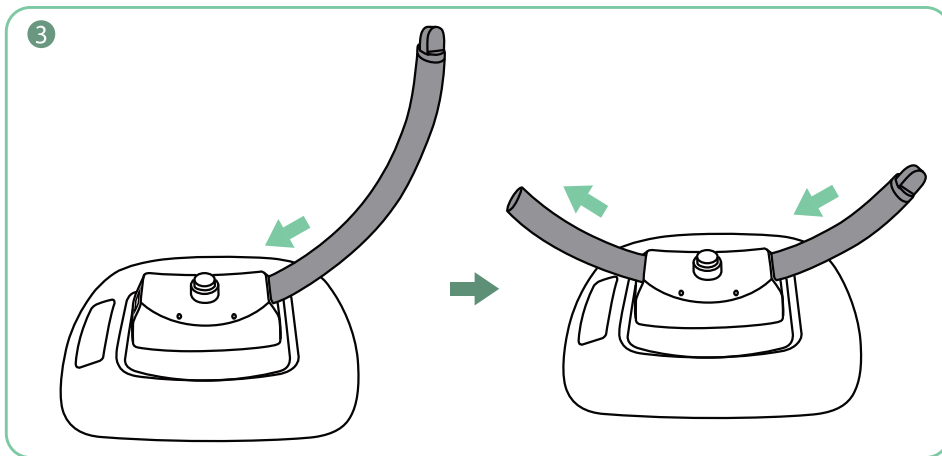

 
3. Insert the main bar into the mounting hole in the base (note that it is inserted from the rear end of the hole towards the front end).

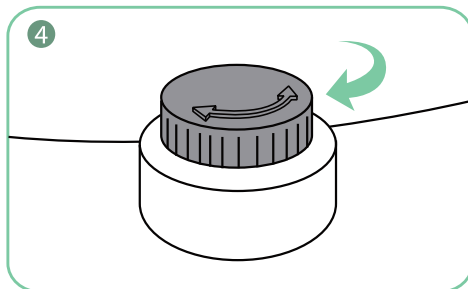

 
4. Tighten the knob.

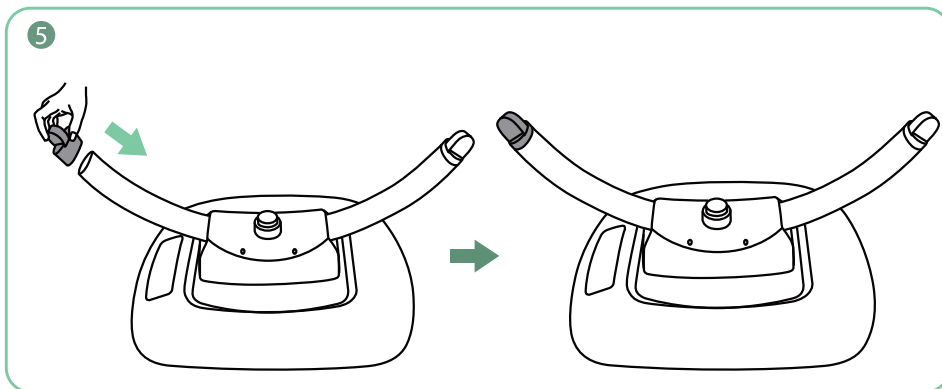

 
5. Insert the joint into the front end of the main bar.

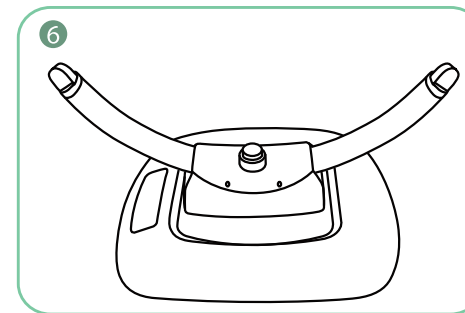

 
6. The assembly of the base and main bar is now complete.

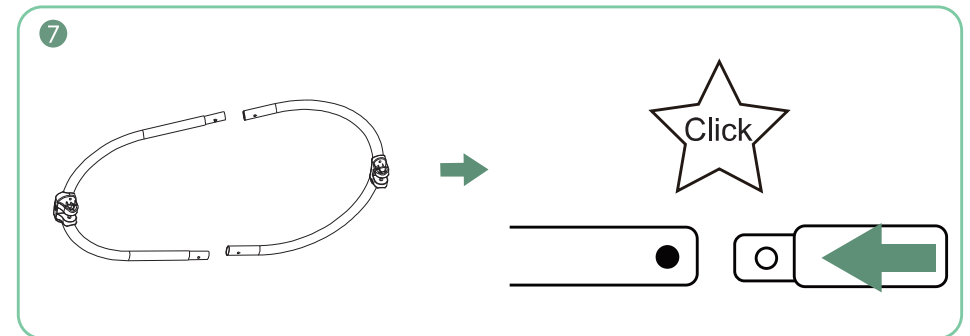

 
7. Connect 2 sections of the cradle frame by inserting the ends with beads into the ends with holes, and ensure that the beads snap into place to secure.

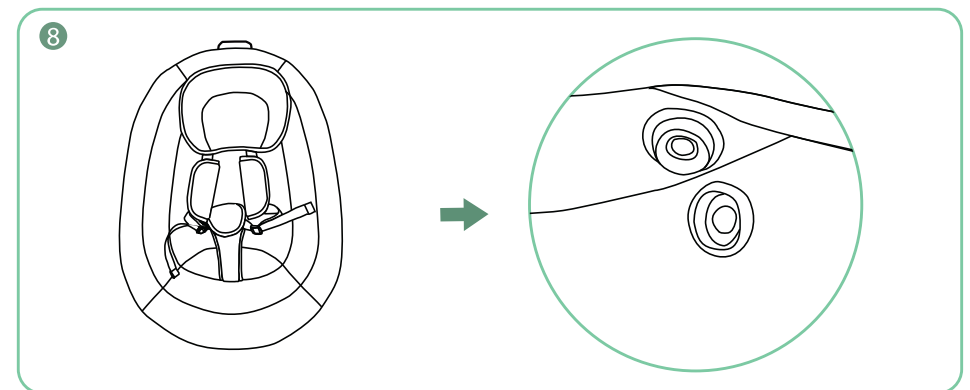

 
8. Place the seat cover (mattress and headrest pre-assembled) on the cradle frame, and fasten the snap buttons.

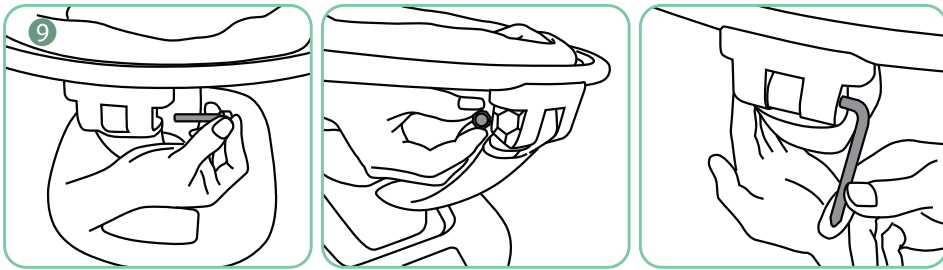

 
9. Fix the cradle frame to the front end of the main bar, and tighten the bolts and nuts.

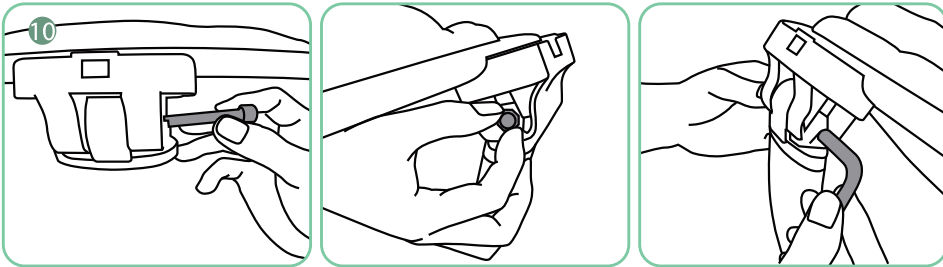

 10. Fix the other side in the same way.

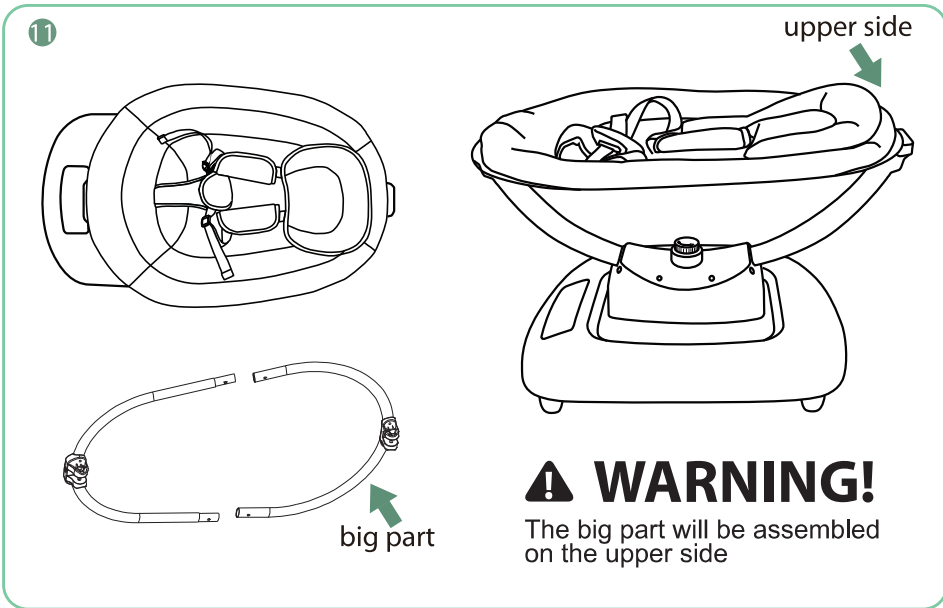


 11. The assembly of the cradle frame, seat cover and the cradle main bar is now complete.

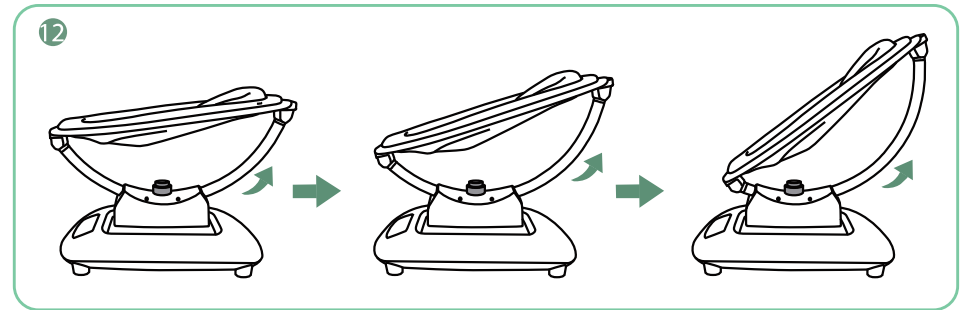


12. Loosen the knob on the base to adjust the main bar to the desired angle, and tighten it to secure in place (adjustable elevation angle: 10°-40°).

 
ASSEMBLY OF TOY COMPONENTS

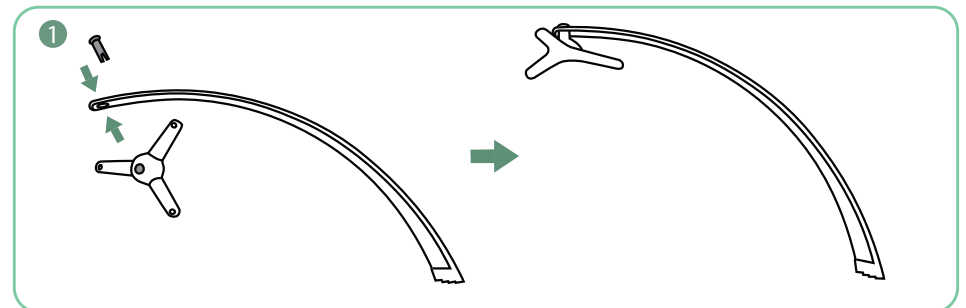

 1. Connect the toy holder to the toy hanging arm using the connector.

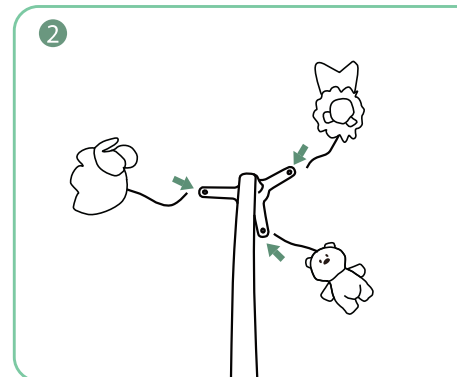


 2. Hang the dolls on the toy holder.

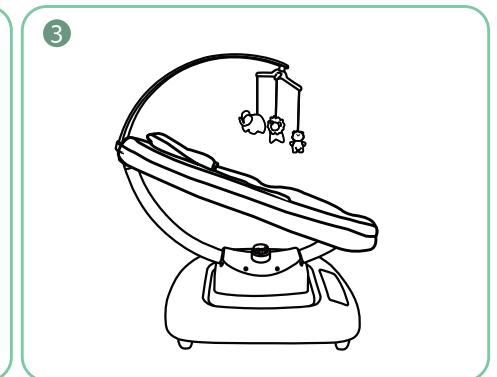


3. Mount the toy arm on the cradle frame.

 ASSEMBLY OF MOSQUITO NET

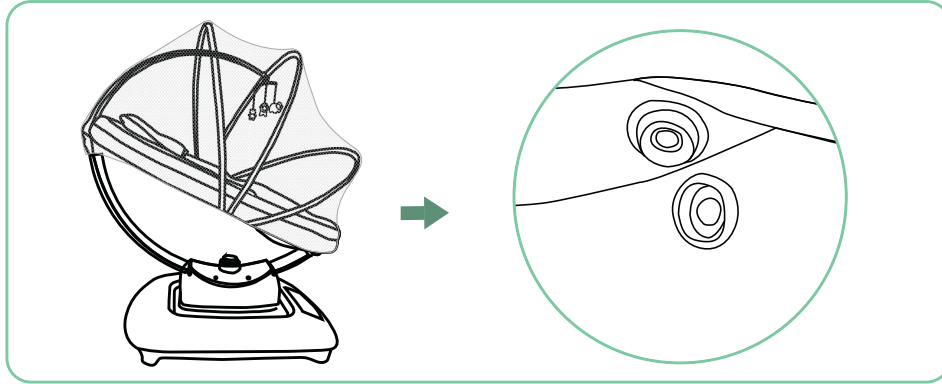


Fasten the snap buttons on the seat cover.

 USE AND OPERATION

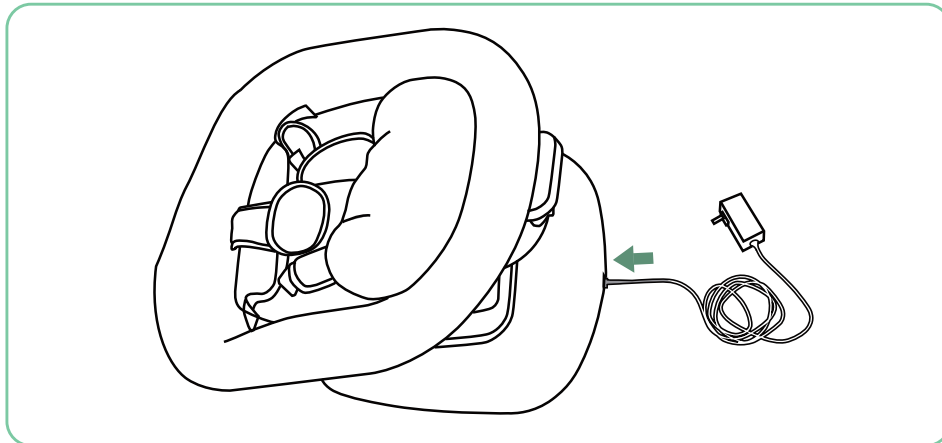


Connect the supplied 12V DC/2A power cord to the power supply to power this product.

 
TO SECURE AND ADJUST THE SEAT BELTS

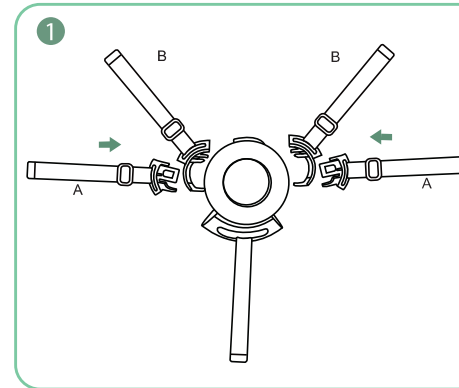

 
1. Connect seat belts A to B.

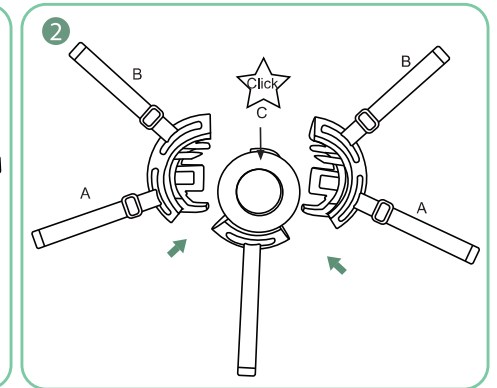

 2. Insert the plugs of belts A and B into the center buckle C to secure.

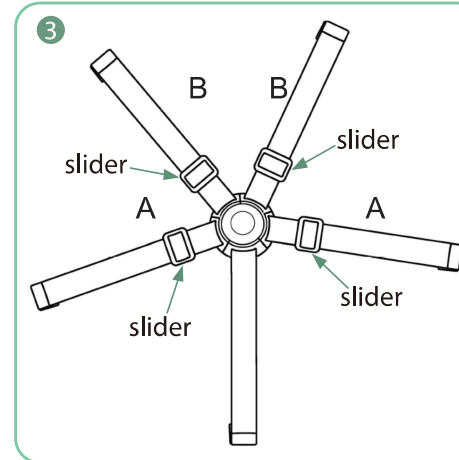


 3. Adjust the belt sliders to ensure a secure fit.

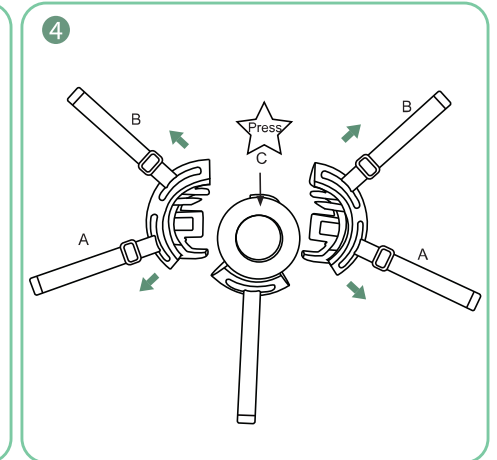


4. Press the button in the buckle C to release the belts.

PRODUCT FEATURES

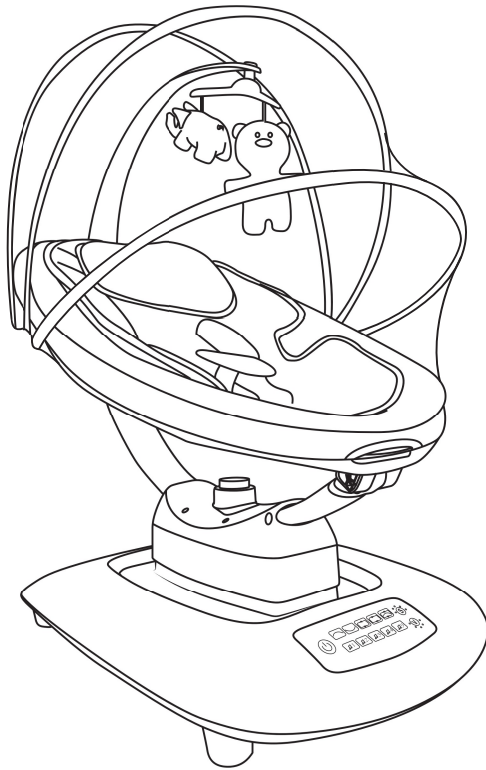

1. Swing Motion Function: 5 modes
2. Speed Adjustment Function: 5 levels
3. Built-in Music Function: 5 songs
4. Volume Adjustment Function: 5 levels
5. Bluetooth Music Function
6. Remote Control Function
7. Adjustable Elevation Angle: 10°-40°
8. Timer Function: 30 mins

 OPERATING INSTRUCTIONS FOR THE CONTROL PANEL

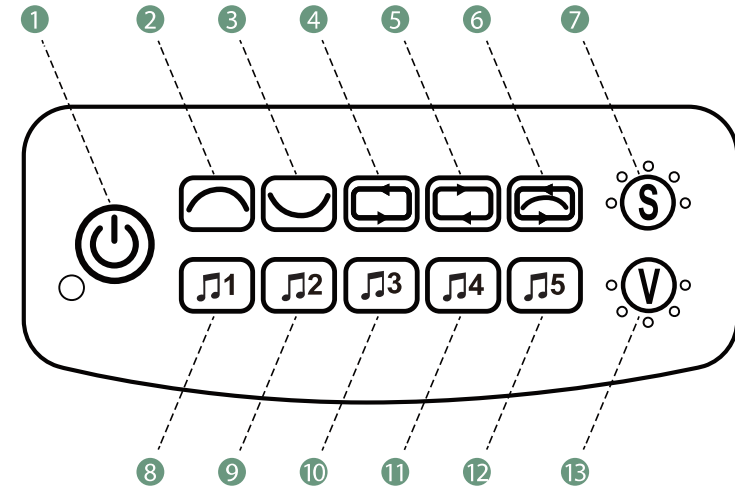

① ON/OFF Switch Button

After the product is powered on, the button will light up red.

After pressing the button, it will turn blue. The product will swing in motion mode 1 and at speed level 1, with the music off.

If the button is pressed during use, it will turn red and the product will be switched off. All functions will stop, and the cradle will return to the center position.

② ~ ⑥ Motion Mode Buttons

After pressing the buttons, they will light up blue, and the cradle will swing in corresponding modes.

If a button is pressed during use, its light will go out and the motion will stop. The motion tracks of the cradle are as follows:

- ② **Motion Mode 1:** Gentle side-to-side rocking, low at ends, high in the middle.
- ③ **Motion Mode 2:** Side-to-side rocking, high at ends, low in the middle.
- ④ **Motion Mode 3:** Circular motion, starts with a descent, then moves right and ascends.
- ⑤ **Motion Mode 4:** Circular motion, starts with an ascent, then moves right and descends.

6 Motion Mode 5: Alternates between Mode 1 and Mode 3, ten times each, then repeats.

7 Speed Adjustment Button

There are 5 adjustable motion speed levels.

Each press of the button increases the speed by one level and lights up the corresponding LED.

If the button is pressed at the highest speed level 5, the speed will jump to the lowest speed level 1.

8 ~12 Music Selection Buttons

There are 5 songs in this product.

Press the Music 1, Music 2, Music 3, Music 4, or Music 5 button for selection. After a music button is pressed, it will light up blue.

 
13 Volume Adjustment Button

There are 5 adjustable volume levels.

Each press of the button increases the volume by one level and lights up the corresponding LED.

If the button is pressed at the highest volume level 5, the speed will jump to the lowest volume level 1.

OPERATION OF THE REMOTE CONTROL

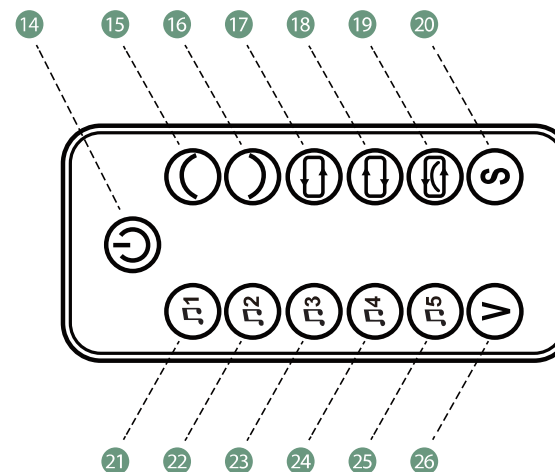

14 ON/OFF Switch Button

15 ~ 19 Motion Mode Buttons

20 Speed Adjustment Button

21 ~ 25 Music Selection Buttons


26 Volume Adjustment Button

BLUETOOTH MUSIC CONNECTION

Turn on Bluetooth on your mobile phone, and search for "Ixdregan". After this product is paired with your phone, it can play the music from the phone.

TIPS: When Bluetooth is connected, all volume keys will light up. At this time, the music keys of the baby swing will not work, Can only be operated on mobile phones.

HOW TO REMOVE AND INSERT THE BATTERIES

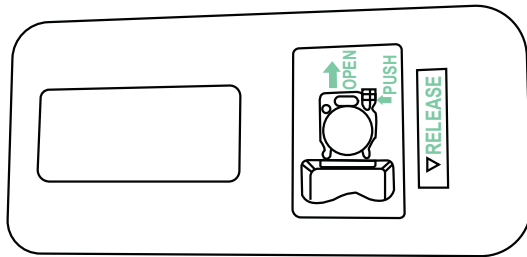

- Non-rechargeable batteries are not to be recharged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the product;
- Do not short-circuit the battery terminals.
- Transformers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used;
- The product shall only be used with the recommended transformer.

WARNING: This product contains a coin/button battery. A coin/button battery can cause serious internal chemical burns if swallowed.

WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

⚠ WARNING

For Infant rocker mode

FALL HAZARD: Children have suffered head injuries falling from rockers.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in rocker.
- **STOP** using product when baby starts trying to sit up or has reached 20 lbs, whichever comes first.
- **ALWAYS** place rocker on floor. Never use on any elevated surface

SUFFOCATION HAZARD
Babies have suffocated:
• when seats tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

⚠ WARNING

For infant swing mode

FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from Swings and have strangled in straps.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **STOP** using product when infant attempts to climb out (approximately 9 months).
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use.
- If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface or bassinet.

⚠ WARNING

This product contains a button or coin cell battery.

A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death.

- Dispose of used batteries immediately.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

⚠ WARNING

To prevent battery leaks, which can burn skin and eyes:

- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.

⚠ CAUTION

- Intended for visual stimulation and not to be grasped by the child.
- Remove when baby begins to push up on hands and knees in a baby swing.
- Mount on wall or ceiling clearly out of a standing baby's reach.
- Always attach all provided fasteners tightly according to the instructions. Check frequently.
- Do not add additional strings or straps to a baby swing

⚠ WARNING

- Never add a pillow, comforter or padding. Use only the seat provided by manufacturer.
- If your baby cannot sit in a reclined or upright position or has special needs, check with your doctor about when to start using this product.
- Never use this product as a car seat.
- Do not use product near water. Do not use the base or power supply if either has been exposed to liquid.
- Do not place product in any location where there are cords, such as window blind cords, drapes, phone cords, etc. Strings can cause strangulation. Do not place items with a string around your child's neck, such as hood strings or pacifier cords while using product.
- Do not suspend strings over the product or attach strings to toys. Do not hang toys from the toy bar other than those provided by manufacturer for use with this product.
- Cords can cause strangulation. Keep power cords away from baby.
Only use the power cord provided.
- Do not use product without the fabric seat cover.
- For indoor use only.

⚠ CAUTION

- In order to avoid a hazard caused by accidental resetting of the thermal cut-out, this product must not be powered by an external switching device, like a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Only use an external power supply with the following specification: <IVP1200-2000GA>
- Note that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; (2) this device must accept any interference received, including interference that may cause undesired operation.

CLEANING

- The fabric seat and fabric toy balls are machine washable. Wash them in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- After washing, place the seat cover on the cradle frame, and fasten the snap buttons.
- The base, metal and plastic seat parts, and toy bar can be wiped clean using a mild cleaning solution and a soft, damp cloth. Do not immerse the base, seat parts, or toy bar.
- Disconnect the from the power supply before cleaning the base.

Manufacturer: TJ (FUJIAN) INDUSTRIAL CO., LTD
Address: NO.518, YINTAI ROAD, CHANGTAI COUNTY
ZHANGZHOU CITY, FUJIAN PROVINCE, 363000, CHINA

If you have any questions about the installation or the product, please feel free to contact us we, will solve your problem right away.

Mail: ixdregan@gmail.com
URL: www.ixdregan.com

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.