


材质：铜版纸
印刷：彩色印刷
注：英文，需对折,对折后尺寸 70x122mm

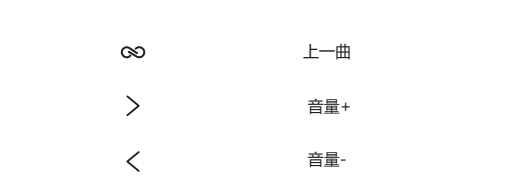

封底

Button Configuration

USB port
AUX port
TF card port
TYPE-C port

How to Use

Short press Next song.
Short press Previous song.

This device and its antenna(s) must not be colocated or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

MUSIBABY

Bluetooth Connection

How to Enter/Exit Stereo Pairing

- 1.Turn on two speakers and make sure they haven't connected with any device.
- 2.Long press "∞" once on either speaker(Host Speaker) to enter stereo pairing mode.
3. Once sucessfully paired, the stereo pairing Indicator will light up.
- 4.Search & click 'SOONNBOX-S3700MINI' to connect. stereo pairing mode, press and hold the "∞" button on either speaker.

Directions for use:

Wireless pairing:
Turn on the device, go to its Bluetooth settings, and select " SOONBOX-S3700MINI " to pair.

Play instructions:

- Bluetooth Search Mode: The power indicator blinks rapidly (about twice per second).
- Bluetooth Pairing Mode: The power indicator stays solidly lit. Playback Mode: The power indicator blinks slowly (about once per second).

Charging indicator light:
The red light turns on while charging and turns off when fully charged.

Specifications:

Model	SOONBOX-S3700MINI
Color	Blue,Black
Bluetooth Version	5.3
Frequency Range	20HZ-20KHZ
Input Power	5V/2A via Type-C Port
Driver	4Ω
Charging Time	≈5 Hours

- A tone sounds when powering the speaker on/off.
- A tone plays when reaching maximum volume; no tone sounds at minimum volume.
- A warning tone sounds when the battery is low.

Mode switching:

- When turned on, it defaults to Bluetooth mode;
- Mode switching sequence: Bluetooth mode - FM mode-TF mode - USB mode - AUX mode, with priority given to rear insertion.

Volume requirements:
The default volume for startup is 50%;

Power saving function:
Automatically shut down after 10 minutes of inactivity.

Troubleshooting:

Automatic shutdown
When the battery power is low, the battery protection will be turned on automatically, please charge for 4 hours after use.

Cannot play music
The storage path of the music file cannot be recognized by the player,please store it in the root directory of the removable device.

There is no sound when connecting to the computer
The computer intertace is connected incorrectly, please select the correct audio output port.

There is no response to the keys or the function is in disorder
Try again after shutting down.

Reset
If the machine can't shut down normally due to a malfunction, press and hold the power button for 10 seconds to force a restart.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MUSIBABY

SOONBOX-S3700MINI

WIRELESS SPEAKER

USER GUIDE

封面