 


Walkie - Talkie

User Manual

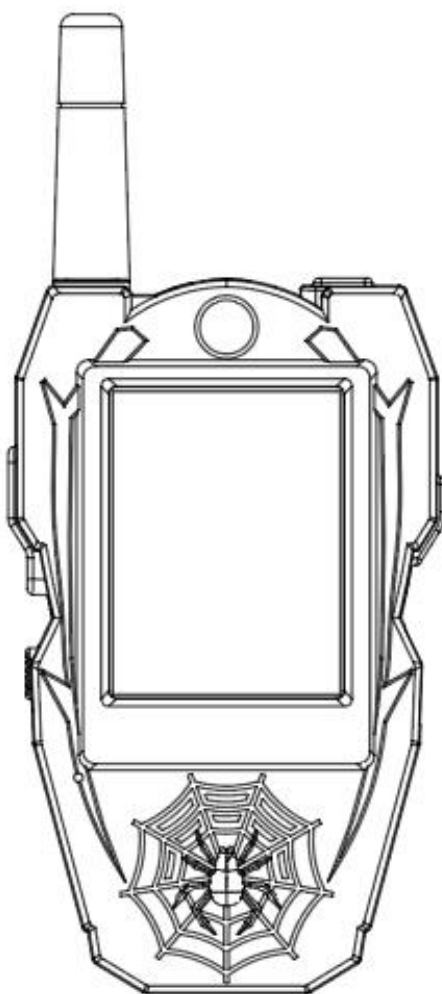


Before using this product, please read the user manual carefully.

The manual is for reference only; actual operation shall be based on the physical product.

I. Product Structure

Product Description

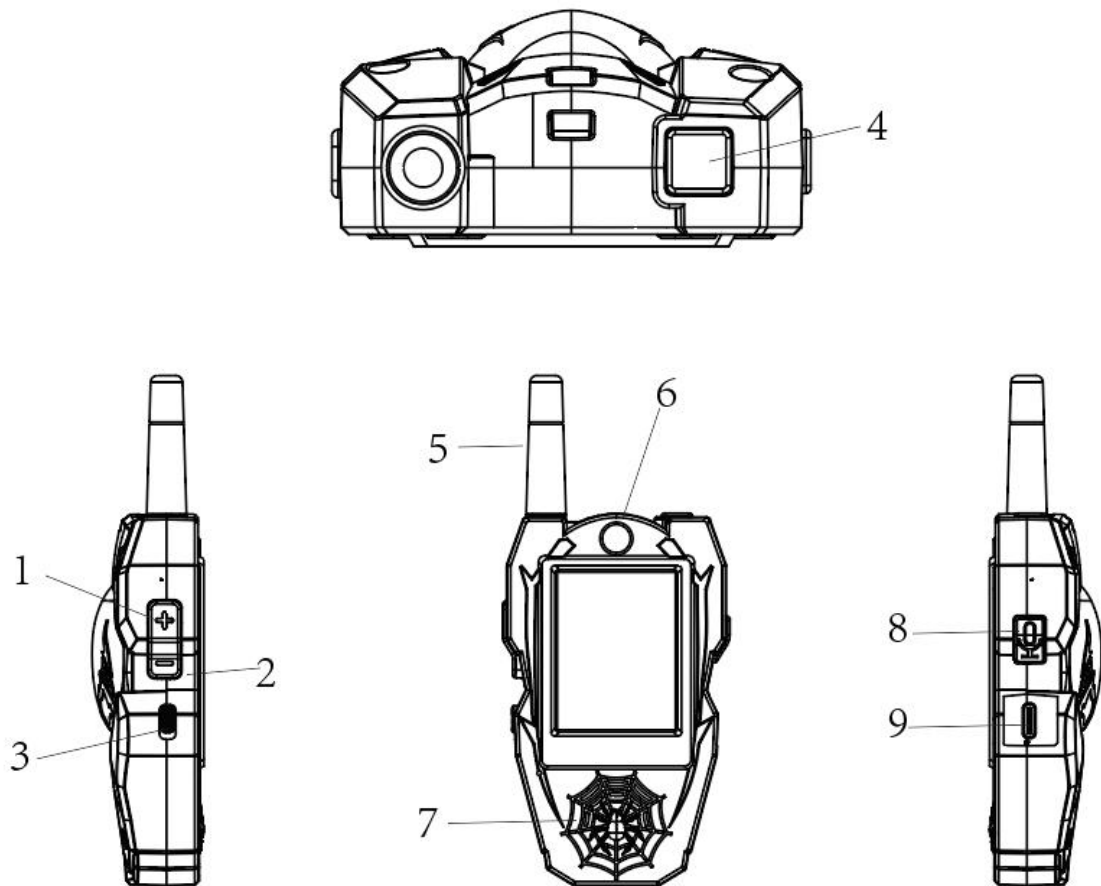

- (1) Volume Up Key (2) Volume Down Key (3) Power Switch
(4) Confirm/Voice Changer Key (5) Antenna (6) Lens
(7) Speaker (8) Intercom Key (9) Charging Port

II. Introduction to Keys and Basic Function Operations

1. Power On/Off

Toggle the 'Power Switch': Toggle up to power on, toggle down to power off.

2. Main Interface



- (1) Micro Chat
(2) Camera
(3) Album
(4) Settings


Main Interface Key Operations:

- (1) Press the 'Volume +/- Keys' to move left or right;
- (2) Long-press the 'Volume - Key' first to switch between AP mode (a green dot icon will appear in the upper left corner) / STA mode (a red dot icon will appear in the upper left corner), then long-press the 'Volume + Key' to pair devices;
- (3) Press the 'Confirm/Voice Changer Key' to enter the function.

3. Micro Chat:



Press the 'Volume +/- Keys' to select and move to , then press the 'Confirm/Voice Changer Key' to enter Micro Chat mode;

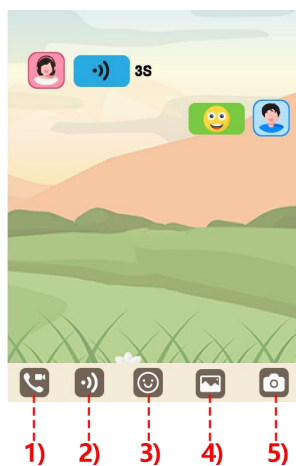

- (1) Video Chat
- (2) Voice
- (3) Emojis
- (4) Pictures
- (5) Photo Taking

Key Operations:

- (1) Press the 'Volume +/- Keys' to move left or right to select the bottom functions, and press the 'Confirm/Voice Changer Key' to enter;
- (2) Long-press the 'Confirm/Voice Changer Key' to exit Micro Chat.

Video Chat Operation:

- (1) Press the 'Confirm/Voice Changer Key' to select Video Chat, then dial and wait for the other party to answer. Press the 'Confirm/Voice Changer Key' to answer.
- (2) Press the 'Confirm/Voice Changer Key' to switch voice changer;
- (3) Press the 'Volume +/- Keys' to increase or decrease the volume. Long-press the 'Volume + Key' to switch the video window display, and long-press the 'Volume - Key' to switch stickers and filters;
- (4) Long-press the 'Intercom Key' for voice intercom;
- (5) Long-press the 'Confirm/Voice Changer Key' to end the video chat.

Voice Intercom Operation:

Long-press to talk, release to end and send.

Emoji Operation:

Press the 'Volume +/- Keys' to move left or right to select an emoji, and press the 'Confirm/Voice Changer Key' to send.

Picture Operation:

- (1) Press the 'Volume +/- Keys' to move left or right to select a picture, and press the 'Intercom Key' to send;
- (2) Long-press the 'Volume - Key' on the picture selection interface to bring up the delete menu;
- (3) Long-press the 'Confirm/Voice Changer Key' to return to the Micro Chat interface.

Photo Taking Operation:

- (1) Press the 'Confirm/Voice Changer Key' to take a photo and send it;
- (2) Press the 'Intercom Key' to switch stickers and filters;
- (3) Long-press the 'Confirm/Voice Changer Key' to return to the Micro Chat interface.

4. Camera



Press the 'Volume +/- Keys' to select and move to , then press the

'Confirm/Voice Changer Key' to enter Camera mode;

- (1) Press the 'Confirm/Voice Changer Key' to take a photo and save it;
- (2) Press the 'Intercom Key' to switch stickers and filters;
- (3) Long-press the 'Confirm/Voice Changer Key' to return to the main interface;

5. Album



Press the 'Volume +/- Keys' to select and move to , then press the

'Confirm/Voice Changer Key' to enter Album mode;

- (1) Press the 'Volume +/- Keys' to move left or right to select a picture, press the 'Confirm/Voice Changer Key' to view it, and press again to return to the preview interface;
- (2) Long-press the 'Volume - Key' on the picture selection interface to bring up the delete menu;
- (3) Long-press the 'Confirm/Voice Changer Key' to return to the main interface.

6. Settings



Press the 'Volume +/- Keys' to select and move to , then press the

'Confirm/Voice Changer Key' to enter Settings mode;

- (1) Press the 'Volume +/- Keys' to move up or down to select a setting, and press the 'Confirm/Voice Changer Key' to confirm, modify and save;
- (2) Long-press the 'Confirm/Voice Changer Key' to return to the main interface.

7. Reminding

- (1) The red light stays on during charging and turns off once the battery is fully charged.
- (2) Use a 5V 1A charger to charge the walkie-talkie. Do not use a charger with a

specification exceeding 5V 2A, otherwise it may damage the device or cause other losses.

(3)This device is not waterproof. Please keep it away from water sources.

III. Product Specifications

1. Product Parameters

Language	English, Simplified Chinese, Français, Deutsch, Español, Português, Nederlands, Italiano, Polski, Ελληνικά, Magyar, Svenska, Norsk, Dansk, Suomi, Română, Русский язык, 日本語, 한국어
Brightness	1/2/3/4/5
Screen Saver Mode	1 /3/5 /10mins/Off
Sound	Low, Medium, High
Factory Reset	Yes, No
Version	DJ-05-2025-11-5 Demo-AP

2. Product Specifications

Main Control Model	LY-001
Image Sensor	20A6
Display	2.0 inches (240*320P)
Operating Temperature	-10° C--65° C
Operating Humidity	85%
Power Supply	USB: 5V, Battery: 3.7V
Standby Current	13.7uA
Low Battery Alert	3.65V
Power Consumption	1.85W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.