

Thank you for choosing this smartphone!

This mobile phone is a smart phone based on Android operating system. The operation interface is simple and easy to use, so that you can fully enjoy the comfortable experience. In order to use this phone safely and effectively, please read the instruction manual carefully before use.

■ Safety Precautions

Do not use your mobile phone when it is forbidden to use your mobile phone or if it may cause interference or danger.

■ Traffic safety first

Do not use your mobile phone while driving, so as not to interfere with safe driving.

■ Shut down in restricted areas.

Please comply with the relevant restrictions or regulations. Shut down on airplanes or near flammable materials, chemicals or medical equipment.

■ Interference

Mobile communications can be subject to radio interference, which can affect performance.

■ Waterproof

This phone is not waterproof, please keep it dry.

■ Specialized service

Do not disassemble the phone and accessories. Only authorized organizations can repair the phone.

■ Install SIM or USIM card

1. On the left side of the phone, find the card slot of the SIM card.
2. There is a corresponding SIM card and memory card card insertion method on the card slot, please insert the card according to the pattern shown.
3. If you do not have a SIM or USIM card inserted, you can only use your phone's non-network services and some of the menus.
4. Do not insert the memory card into the SIM card slot.

■ Charging the battery

- ✧ The mobile phone can be charged directly with their own charging heads and data lines, or connected to a computer for charging.
- ✧ When the battery is low, the phone will sound a warning tone and display a low battery message. If the battery is too low, the phone will automatically shut down.
- ✧ You can use your phone while charging, but this will extend the battery charging time;
- ✧ The phone will heat up when charging, this phenomenon is normal and will not affect the life or performance of the phone.

■ Format TF card storage

In the main menu, select Settings→Storage→Store Information→Format TF Storage.

Before formatting the TF card storage, remember to back up all the important data stored on your phone. The manufacturer warranty service does not include data loss due to user actions.

■ Power On and Off

On: Long press the switch key.

Off: Long press the switch key, and then choose to shut down.

Flight mode: Pull down the main interface, and then select the upper right icon flight mode.

■ Touch screen

Notes for Touch Screen:

- ✧ To avoid scratching the touch screen, do not use sharp tools.
- ✧ Do not allow the touch screen to touch other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.
- ✧ Do not let the touch screen touch the water. The touch screen may malfunction in a humid environment or when exposed to water.
- ✧ In order to achieve the best results, please remove the touch screen protective film before using the phone.
- ✧ For the best performance, tap the touch screen with your fingertips.

The following operations can be performed to control the touch screen:

- ✧ Click: Click once with your finger to select or launch a menu, option, or application.
- ✧ Click and hold: hold down the item for more than 2 seconds to pop up a list of options.
- ✧ Scroll: Click and drag your finger up, down, left or right to move to the items in the list.
- ✧ Drag and drop: Click and hold an item with your finger, then drag your finger to move the item.
- ✧ Double-click: When viewing a photo, tap twice with your finger to zoom in or out.
- ✧ The backlight time can also be adjusted. In standby mode, then select Settings→Display→Sleep→Sleep time.

■ Lock or unlock the touch screen and buttons

The touch screen and buttons can be locked to prevent any accidental phone operation.

To lock, press [Switch button]. To unlock, press [Power On/Off] and follow the on-screen prompts to manually unlock.

■ Select wallpaper source

You can set the wallpaper to customize the standby screen or lock

screen interface (the wallpaper can customize the pictures in the album).

- ❖ Lock screen wallpaper: set lock screen interface image.

- ❖ Desktop wallpaper: set desktop wallpaper.

- ❖ Live Wallpaper: You can set live wallpaper.

- **Move items on the idle screen**

Click and hold the item you want to move. Drag the project to the desired location after the project vibrates.

- **Remove item from standby screen**

Click and hold on the item to be removed, then drag the item to the trash can above the screen after vibration.

- **Use the shortcut panel**

When in standby mode or while using the app, touch the indicator icon area at the top of the screen and drag your finger down, Open the shortcuts panel. You can activate or deactivate other features such as wireless connections and access a list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up.

Swipe the shortcut icon left and right in the shortcuts panel to use the following options:

- ❖ WLAN: Turn WLAN connection on or off. Long click this icon to enter the WLAN settings interface.

- ❖ Data connection: start or close the data connection.

- ❖ Bluetooth: Turns Bluetooth wireless connection on or off.

- ❖ Airplane mode: Activate or deactivate flight mode.

- ❖ Scene mode: standard, mute, switch between conference and outdoor mode.

- ❖ One-click cleanup: Click to end the background application and release some memory.

- ❖ Brightness: Adjust the brightness of the screen.

- ❖ Battery: Shows device power usage.

- ❖ Dormancy: Adjust the delay time for the screen to automatically turn off.

- ❖ One-button lock screen: After clicking, the device is off screen and locked.

- ❖ More: You can set the shortcut function and sequence display in the shortcut panel.

■ **Access application**

Open phone lock, Scroll left or right to other application screens, Select the launcher, Press the middle button to return to the main standby screen.

The phone has a built-in motion sensor that detects the direction of the phone. If you rotate your phone while using certain features, the phone interface will automatically switch to landscape mode. If you want to set the interface does not change

with the rotation of the phone, Open the shortcuts panel at the top of the screen and select Auto Rotate. Alternatively select Setting → Display → Rotate Screen → Auto or Keep Portrait.

■ **Widget**

In the screen interface, click the MENU key, select Add widgets, select any widget long press, drag to standby.

■ **Custom phone**

Customize your phone to your personal preferences: themes and desktop slideshow effects, etc.

➤ **Set current time and date**

In the main menu interface, then select Settings → Date & Time, Set time and date and change other options.

➤ **Turn touch tones on or off**

In the main menu interface, then select Settings → Sounds & Notifications → Standards → click on the right setting → select the touch tone On or Off.

➤ **Adjust the ringer volume**

Press the up or down volume button to adjust the ringer volume.

➤ **Switch to vibration mode**

To shake or de-vibrate your phone, do one of the following:

1. Switch directly in the shortcut panel mood mode.
2. In standby mode, press and hold [Switch button]. Then select the vibration mode.

➤ **Change ringtone**

In the main menu interface, then select Settings → Sound & Notifications → Standards → Point Right Settings → Phone Ringtone/Black Receipt Notification Tone/ Message Ringtone. Select a ringtone from the list and select OK.

➤ **Select the wallpaper of the standby screen**

In standby mode, press menu → wallpaper → select the type of wallpaper to be set.

➤ **Adjust the brightness of the display**

1. In the main menu interface, then select Settings → Display → Brightness.
2. Turn off the button on the auto-adjust brightness.
3. Drag the slider to adjust the level of brightness.

The brightness level of the display affects the speed at which the phone consumes battery power.

➤ **Set the unlock pattern**

✧ Condyle setting steps

1. In the main menu interface, then select Settings - Security → Screen Lock → Pattern.
2. Watch the screen tips and sample patterns and choose Next.
3. Drag your finger to connect at least four points and draw a

- pattern. Choose to continue.
4. Redraw the pattern to confirm. Select confirmation.
- ✧ After setting the unlock pattern, you will be asked to enter the unlock pattern each time you turn it on. If you want your phone to no longer require an unlock pattern, select Settings → Security → Screen lock → Draw the lock set pattern → None.
 - ✧ Note: If you select "None", the screen will not be locked.
 - ✧ If you forget to unlock the pattern, you need to bring your phone to its customer service center to unlock it.
 - ✧ The manufacturer shall not be liable for the loss of password or personal data or other damage caused by the use of illegal software.
- **Lock SIM card or USIM card**
- The phone can be locked by activating the PIN code provided with the SIM card or USIM card.
- ✧ In the main menu interface, then select Settings→Security→Settings SIM card lock mode→Lock SIM card.
 - ✧ Enter your PIN and choose OK. If you activate the PIN lock, you must enter your PIN every time you turn it on.
 - ✧ If the PIN code is entered incorrectly three times, the SIM card or USIM card will be locked. You must enter your PIN unlocking key (PUK) to unlock your SIM card or USIM card.
 - ✧ If the SIM card or USIM card is locked due to incorrect PUK input, bring the card to the service provider to unlock it.

■ Dial

Call and receive calls through available options during a call, or customize and use call-related features.

■ call records

Can view call history filtered by type.

1. In standby mode, click the dial button to enter the dialing interface and call log interface..
2. In the call log interface, you can press the call type of the call.
3. Select the record for which you want to view detailed call details.

■ Dialpad

Click the icon in the lower left corner of the main interface to close or pop up the dial pad to operate the contacts recorded in the call. Each time you dial a contact number, the contact automatically joins the call history page.

■ Function menu

Includes contacts, speed dials, setup options.

■ Information

Create, Send, Receive, View, Manage Text Messages (SMS) or Multimedia Messages (MMS).

■ Music

➤ Listen to your favorite music using the music player.

1. Depending on the phone software, some file formats are not supported.

2. If the file size exceeds the available storage space, an error occurs when opening the file.

➤ Add music transfer music files to your phone:

1. Download from wireless web

2. Copy through data line

3. Transmission via Bluetooth

■ Album

View images on your memory card and play them.

■ Radio

Listen to radio programs on the radio and record your favorite while listening. Before using the FM radio, be sure to connect the supplied headphones (the headphones are used as the radio antenna).

■ Recorder

Help you quickly save your voice recordings, you can set your favorite sound quality and recording mode.

■ Clock

You can set an alarm, view world time, use timers and stopwatch functions.

■ Browser

Mobile wireless Internet access, browsing web pages, downloading files, etc.

■ Document management

Open all your pictures, videos, music, documents and other kinds of files stored in your phone's storage.

1. In addition to MP3, MP4 and picture files, please do not move or delete the system files;

2. It is recommended to install the APK installation package that comes with the phone storage. If you install the APK file package yourself, the phone will crash and restart, and the manufacturer will not be responsible.

■ Calendar

You can view the date, view the lunar calendar, and set calendar events for easy use.

■ E-mail

Send or receive emails from your phone by configuring your personal or corporate email account.

■ Video

Can view, delete video files and sort videos.

■ **Contact**

Create and manage a list of personal or corporate contacts stored on your phone's memory or SIM card or USIM card. Save contact's name, mobile number, home phone number, email address, and more.

■ **Calculator**

Perform mathematical calculations directly on your phone.

■ **Setting**

➤ **WLAN**

Set WLAN status, network notification, add network, etc.

➤ **Bluetooth**

Set Bluetooth status, search for Bluetooth devices, and modify Bluetooth names, etc.

➤ **SIM card**

1.SIM card management: This function can choose to close or open the SIM card; select whether the data connection and international roaming are open;

2.Default SMS app: Set default SMS app.

➤ **More**

1.Airplane mode: All language services can be disabled.

2.Network and sharing and portable hotspots: WLAN hotspots, USB sharing networks, Bluetooth shared networks, network sharing and portable hotspot settings

3.VPN: You can add a VPN profile.

4.Mobile network: set up data connections, 4G services, preferences, etc.

➤ **display**

Set functions related to mobile phone display, such as screen standby time, auto-rotate screen, interactive screen saver, screen lock notification, brightness adjustment, wireless display, etc.

➤ **Sound and notification**

1.Set the phone mode. Default mode: standard, mute, conference, outdoor mode.

2.Set phone ringtones, message ringtones, volume, etc., as well as set custom profiles.

➤ **Storage**

View phone and TF card storage

➤ **battery**

View phone battery usage

➤ **Application**

Manage applications locally and change administrative settings for installed applications.

➤ **Safety**

1.Screen lock mode: set to none, slide, pattern, PIN, password.

- 2.Auto lock: select auto lock time.
 - 3.Encrypted phones: Please see their instructions for specific information.
 - 4.Set the SIM card lock:
 - 1)Lock the SIM card: Click to lock the SIM card, enter the PIN code and turn on the lock SIM card function.
 - 2) Change SIM card PIN: Enter the original PIN code first, then enter the new PIN code twice.
 - 5.Show password: Turns the display password on and off.
 - 6.Device Manager: View or deactivate Device Manager.
 - 7.Unknown source: Whether to allow the installation of a location-sourced app, it can be turned on and off.
 - 8.Data Protection: Protect data from illegal access.
 - 9.Mobile phone theft: remotely lock the phone or remotely destroy the data.
 - 10.Storage Type: Shows the type of storage.
 - 11.Trusted credentials: Use certificates and credentials to ensure secure use of individual applications.
 - 12.Install from phone storage: Install the encryption certificate stored in the phone storage.
 - 13.Clear credentials: delete the contents of the voucher in the phone and reset the password.
- App permissions: Manage app permissions for security and privacy.
- **Account**
Add account: Change the settings of the auto sync feature or Manage accounts to sync.
- **language and keyboard**
Language and input method: you can choose the language, set the keyboard, select the input method.
- **Backup and reset**
Backup and reset: Restoring the factory default settings will erase all data on the phone, please be cautious.
- **Date and time**
1.Automatically determine date and time: use the network to provide time.
2.Automatically determine the time zone: Use the time zone provided by the network.
3.Set date: Set the current date manually.
4.Set time: Set the current time manually.
5.Select time zone: set local time zone.
6.Use 24-hour format: set to display time in 24-hour format.
- **Timer switch**
Set the time when the phone is turned on and off.

➤ **No barrier**

Barrier-free setup operation application.

➤ **Print**

Connect the printer to print the necessary images and other files.

➤ **About mobile phone**

Query information about your phone, such as system upgrades, status information, legal information, phone model, version number, processor, etc.

■ **Common problems and solutions**

Order to save your time and unnecessary expenses, please do the following simple check before contacting professional after-sales service.

➤ **Unable to start phone**

1.Check if you press and hold the [Power On/Off] key for at least 1 second.

2.Check if the battery is exhausted, please charge.

➤ **Start the phone, there is information display**

1.Enter the phone lock password and select the auto lock function. You must enter the phone password before using it.

2.Enter the PIN code and select the function to enter the PIN every time you turn it on. You must enter the PIN code.

3.Enter the PUK code: connect the error PIN code three times and lock the SIM card. Enter the PUK code provided by the operator.

➤ **SIM card error**

1.The metal surface of the SIM card is dirty. Wipe the metal contact point of the SIM card with a clean cloth.

2.If the SIM card is not installed, install the SIM card correctly according to the instruction manual.

3.SIM card is damaged, contact your network service provider.

➤ **Unable to connect to network**

1.The signal is weak. Please move to a strong signal and try again.

2.Exceeding the network coverage area of the network service provider.

3.Invalid SIM card, contact your network provider.

➤ **The number cannot be called out**

1.Please confirm whether the dialing button is pressed after dialing.

2.Please confirm if the call is forbidden due to arrears.

3.Please confirm if the SIM card is valid.

4.Please confirm if the call barring function is set.

5.Please confirm if the fixed dialing function is set.

➤ **Poor call quality**

1. Please check if the volume adjustment is not suitable.
2. Using mobile phones in poorly received areas, such as near high-rise buildings or basements, radio waves cannot be effectively communicated.
3. Use the phone during a call-intensive period, such as after work hours, the line is congested and the call cannot be made.

➤ **Number cannot be called in**

1. Please confirm that the phone is turned on and connected to the network.
2. Please confirm if you are prohibited from calling due to arrears.
3. Please confirm if the SIM card is valid.
4. Please confirm if the call restriction function is set.

➤ **Contacts can't hear you**

1. Please confirm that the microphone is turned on.
2. Please keep the microphone in the lower part of the phone close to your mouth.

➤ **Short standby time**

1. The standby time is related to the system settings of the network and may be in an area where reception is poor. When the signal is not received, the phone will continue to transmit to find the base station, which consumes a large amount of battery power, resulting in a shorter standby time. Please move to a place with strong signal or temporarily turn off the phone.

2. Need to replace the battery, please replace the battery.

➤ **Unable to charge**

1. Poor contact, check if the plug is connected.
2. Dirty, wipe cell phone charger with clean cloth.
3. When charging in an environment below 0°C or above 45°C, please change the charging environment.
4. The battery or charger is damaged and needs to be replaced
5. If the above information does not help you solve the problem, please record your phone model and serial number, authorization or insurance policy information, and a clear description of the problem, then contact your local after-sales service provider.

Attention:

Explosion hazard if you replace it with the wrong type of battery. Always dispose of the used battery as instructed!

It is forbidden to use any tool root this phone, otherwise there may be unrecoverable faults, and the root phone does not enjoy the warranty!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the WCDMA digital mobile phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the WCDMA digital mobile phone while operating can be well below the maximum value. Before a new model WCDMA digital mobile phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each WCDMA digital mobile phone are performed in positions and locations as required by the FCC.

For body worn operation, this model WCDMA digital mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

Head: 0.618 W/kg

Body: 1.190W/kg