


Walkie talkie operation instructions

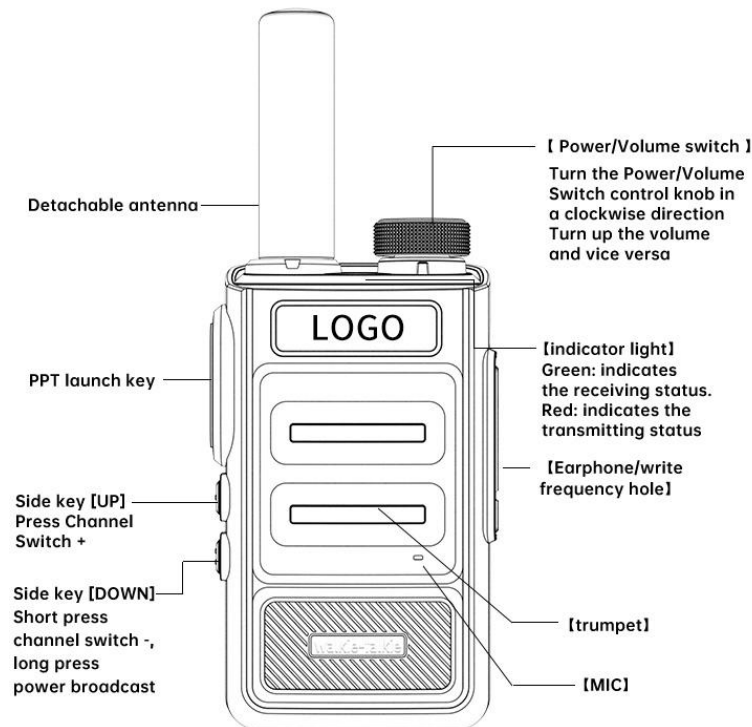

switching power supply:

1. boot: turn the "power/volume switch" control knob clockwise to turn on the walkie-talkie power supply, while hearing "da" A, hear a pleasant tone, and then broadcast the current corresponding channel.

2. shut down: turn the "power/volume switch" control knob counterclockwise until you hear a "da" The intercom is powered off. volume adjustment: Turn the "Power/Volume Switch" control knob clockwise to increase the volume; Turn the Power/Volume Switch control knob counterclockwise to reduce the volume.

Channel selection:

Press the [UP] and [DOWN] keys to switch the channel you want to use. If you turn on the voice signal function of the machine, the machine will broadcast the current corresponding channel with voice. .

The radio can scan channel, it will scan the activate channels to talk. There is Carrier scan or Time scan which can program by PC software.

Carrier Scan: the radio will scan and stop at the activated channel until the signal disappeared

Time Scan: the radio will scan and stop at this channel for 5 seconds then continue to scan next activated channels, This transceiver allows you to scan memory channels, all the bands or part of the bands. When the transceiver detects a communication, the scan will stop automatically.

Side key function description:

Side key [UP] Press Channel Switch +

Side key [DOWN] Short press channel switch -, long press power broadcast

walkie talkie:

Press and hold the [PTT] key to transmit the indicator light, and speak in a normal tone, release the [PTT] key after the call is finished, and the machine will turn to receive.

Please keep your mouth 3 to 8cm away from the intercom when speaking.

Enable and disable the voice alarm function and switch between English and Chinese:
The machine has a voice signal function, which is convenient for you to quickly know the current channel of your walkie-talkie when operating at night or in the dark. This function can be achieved by writing frequency through computer programming software (you can also press and hold the monitor key under channel 16 to start and long press until the beep, ignore the wireless copy when the wireless copy is turned on and long press until the beep releases the key to restart the machine after the language switch is successful).

Low battery warning:

Low Battery Warning A warning appears when the battery needs to be charged or replaced. If you use the intercom when the battery is low, the Chinese voice prompt "Please charge" and the English voice prompt "Please Charger" will sound every 15 seconds. If the voice alarm function is turned off, the prompt "beep, beep, beep" will play three sounds, and the LED indicator will flash red, prompting the user to change the battery pack or charge it.

It cannot be charged with a charger

Note: Public can` not use this Amateur device.

General specifications	
Frequency Range	Scanning:400-480MHz UHF TX:420-450MHz(amateur frequency) UHF RX:400-480MHz
Nominal Voltage	DC 3.7V from battery or DC 5V from adapter
Channel Spacing:	25kHz
Modulation Mode:	FM

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that

contains no metal. To maintain compliance with FCC RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face. The equipment complies with FCC radiation exposure limits set forth for an Occupational / controlled environment. In order to comply with the FCC RF exposure requirement, the antenna installation must comply with following. Users must be fully aware of the hazards of the exposure and able to exercise control over their RF exposure to limits. Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) button is pressed. The device is authorized to operate at a duty factor not to exceed 50%.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.