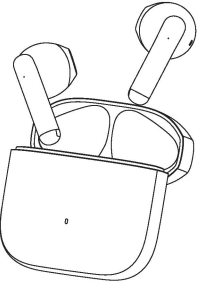 
 


成品尺寸：60*80mm 80g书纸 单色印刷 风琴折

TRUE WIRELESS STEREO sanag T20S  使用指南 User Guide	● 产品概述  ● 按键功能操作 ● 开机：1. 打开充电仓上盖，两个耳机自动开机并相互连接；2. 耳机在充电仓外并处于关机状态时，长按耳机触摸键3秒，耳机开机。 ● 关机：1. 耳机放入充电仓并合上盖自动关机；2. 未连接状态下5分钟后自动关机。 ● 配对：打开充电仓上盖，左右耳机相互连接成功后，耳机进入与设备配对模式，主耳机蓝灯慢闪，副耳机灯常亮。 ● 恢复出厂设置：长按10秒左/右耳机，耳机亮起指示灯后恢复出厂设置。 ● 接听：来电时，任意双击左/右耳机触摸键。 ● 挂断：通话中，任意双击左/右耳机触摸键。 ● 拒接：来电时，任意长按左/右耳机2秒触摸键。 ● 播放/暂停：任意双击左/右耳机触摸键。 ● 上一曲：三击左耳机触摸键。 ● 下一曲：三击右耳机触摸键。 ● 音量+/-：默认设备端控制。 ● 语音助手：长按3秒左/右耳机触摸键自动进入语音助手。 ● 游戏模式/音乐模式：使用sanag APP端打开功能。 ● 低电报警：耳机电量不足时，每隔3分钟提示一次低电提示音。 ● 耳机充电：耳机放入充电仓，关闭充电仓上盖，仓指示灯亮起即可。 ● 充电仓充电：使用提供的USB充电线插入充电仓充电口，充电仓充电中橙灯闪烁，充电仓充满后橙灯常亮。 ● 充电仓低电：充电仓电量低指示灯闪烁时，不再给耳机充电。	● 蓝牙操作 ● 蓝牙连接成功： 1. 耳机进入蓝牙配对模式，手机搜索蓝牙配对名“sanag T20S”，点击连接即可。 2. 耳机默认回连上一次设备。 ● 蓝牙断开： 1. 手动关闭手机蓝牙端，耳机进入蓝牙配对模式。 2. 耳机与手机超距后断开，5分钟内回到有效距离范围，能正常回连手机，超过5分钟会自动关机。  搜索耳机  连接成功	● 规格参数 ● 名称：蓝牙耳机 ● 型号：sanag T20S ● 蓝牙版本：V6.0 ● 输入：5V = 1A ● 耳机电池容量：37mAh ● 充电仓电池容量：400mAh ● 连接范围：10m (中间无障碍物) ● 注意事项 ● 切勿使用具有腐蚀性的清洁剂清理本产品。 ● 切勿让本产品加热或靠近火源，如煮食炉。 ● 切勿让本产品长时间受阳光直接照射。 ● 切勿将本产品弃置于火中，避免发生爆炸。 ● 切勿尝试拆开本产品作出任何修改，因为它并不包含任何维修组件。 ● 切勿在雨中使用本产品。 ● 如果长时期内不打算使用本产品，请您将它储存在干燥的环境中，并每月至少为耳机充电一次以延长寿命，避免极端的温度和灰尘。
● Product Overview  ● Button function operation ● Power on: 1. Open the top cover of the charging case, and the two earphones will automatically turn on and connect to each other; When the earphones are outside the charging compartment and turned off, press and hold the earphone touch button for 3 seconds to turn them on. ● Shutdown: 1. Put the earphones into the charging compartment and close the cover to automatically shut down; 2. Automatically shut down after 5 minutes in an unconnected state. ● Pairing: Open the top cover of the charging case, connect the left and right earphones to each other successfully, and the earphones will enter pairing mode with the device. The main earphone's ice blue light will flash slowly, and the auxiliary earphone light will turn off. ● Factory reset: Press and hold the left/right earphones for 10 seconds, and the earphone indicator light will turn on to restore the factory settings. ● Answering: When a call comes, double-click the left/right headphone touch button at will. ● Hanging up: During a call, double-click the left/right headphone touch button at will. ● Reject: When receiving a call, press and hold the left/right headphone touch button for 2 seconds at will.	● Play/Pause: Double click the left/right headphone touch button at will. ● Previous song: Three clicks on the left headphone touch button. ● Next song: Three click on the right earphone touch button. ● Volume+/-: default device control. ● Voice Assistant: Press and hold the left/right headphone touch keys for 3 seconds to automatically enter the voice assistant. ● Game mode/music mode: Use the Sanag app to open the function. ● Low battery alarm: When the earphone battery is low, a low battery prompt sound will be displayed every 3 minutes. ● Earphone charging: Put the headphones into the charging compartment, close the top cover of the charging compartment, and the compartment indicator light will turn on. ● Charging compartment: Insert the provided USB charging cable into the charging port of the charging compartment, and the orange light will flash during charging. After the charging compartment is fully charged, the orange light will remain on. ● Low battery in charging case: When the low battery indicator light in the charging case flashes, the earphones will no longer be charged.	● Bluetooth operation ● Bluetooth connection successful: 1. The headphones enter the Bluetooth pairing mode. The phone searches for the Bluetooth pairing name "sanag T20S" and simply clicks "Connect" to complete the process. 2. The earphones default to being connected back to the previous device. ● Bluetooth disconnection: 1. Manually turn off the Bluetooth end of the phone, and the headphones enter Bluetooth pairing mode. 2. If the earphones are disconnected from the phone after exceeding the distance, they will return to the effective distance range within 5 minutes and be able to connect to the phone normally. If they exceed 5 minutes, they will automatically shut down.  Search for Headphone  Connected successfully	● Specification parameter ● Name: Bluetooth headset ● Model: sanag T20S ● Bluetooth version: V6.0 ● Input: 5V = 1A ● Headphone battery capacity: 37mAh ● Charging bay battery capacity: 400mAh ● Connection range: 10m (With no obstacles in the middle) ● FCC ID: 2BNT0-T20S ● Matters needing attention ● Do not use abrasive cleaning agents to clean this product. ● Do not allow this product to be heated or near fire sources, such as cooking stoves. ● Do not allow this product to be exposed to direct sunlight for a long time. ● Do not dispose of this product in the fire to avoid explosion. ● Do not attempt to disassemble this product for any modification, as it does not contain any repair components. ● Do not use this product in the rain. ● If you do not intend to use this product for a long time, please store it in a dry environment and arrive every month Charge your headphones less than once to extend life and avoid extreme temperatures and dust.

通用合规说明书

成品尺寸： 89*90mm

材质工艺：108g铜版纸， 单色 正反面印刷， 风琴折

正面

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiveris connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Declaration of Hazardous Substances in Electronic Information Products



Component Name	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	PBBs	PBDEs
PCB	○	○	○	○	○	○
Plastic	○	○	○	○	○	○
Attachment	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T 11364.
O: The content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572.
X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds
The limit requirements specified in GB/T26572.

Reminder: The 8-year icon refers to the "environmentally friendly effective use period", not the product quality assurance limit. Electronic products all contain harmful substances such as lead, mercury, cadmium, etc. Once used beyond the expiration date, the harmful substances may leak or mutate, causing pollution to the environment or serious damage to human body and property. 'Environmental protection usage period' means that all electronic products will be required to be used within this valid period. If safety risks arise after the safe usage period, we will no longer be responsible for product quality.

In Order To Maintain Good Product Performance, It Is Recommended That You Clean And Maintain The Headset Regularly

 
- Clean the earphones by gently wiping them with a soft cloth lightly dampened with clean water. Be careful not to soak the earphones in water and keep them away from dust and moisture.
- Clean the earphone ports. If dust or foreign matter is found in the ports, remove them with tweezers if necessary. Avoid blowing or inhaling forcefully on the ports, as this may damage the earphones.
- Avoid allowing moisture to enter the earphones. If they do get wet, dry them thoroughly beforeusing them.



Precautions

- Avoid exposure to high temperatures, sunlight, or chemical cleaning agents.
- Keep the product dry and away from moisture.
- Store in the original protective case to minimize impact and dust accumulation.
- Regular maintenance maintains sound quality and prevents damage to electronic components.

*If you encounter any problems during cleaning or use, please contact our customer service. We will be happy to assist you.



The power delivered by the charger must be between the minimum 2.5 Watts required by the radio equipment and the maximum 14 Watts to achieve the maximum charging speed.

Warning: Risk of Hearing Damage

To ensure your safety, please read and follow these instructions carefully before using this product.

1. Risk Statement: This product can produce high sound pressure levels at maximum volume. Prolonged or repeated exposure to high volume may cause permanent hearing loss.

2. Safe Use Recommendations:

- Do not listen at high volumes for extended periods.
 - Set the volume to a comfortable level where you can still hear sounds from your surrounding environment.
 - It is recommended to follow the "60/60 rule": do not exceed 60% of the maximum volume for more than 60 minutes at a time, and take regular breaks.
 - Note to Parents: Please monitor the volume level and duration of use when children are using this product to ensure it remains within a safe range.
3. Product Safety Feature: This product incorporates a built-in safety protection design. The volume will automatically reset to a default safe level when the device is powered off and on again, to prevent unintentional exposure to high volume.

Your hearing health is paramount. Please use this product safely.

France-instructions De Tri

