

Brookstone®

1:14 SCALE RC CAR RACER

Thank you for purchasing the Brookstone 1:14 Scale RC Car Racer, item BRC1161.


In order to get the best results, please read this user's manual carefully before using.

Contents

- Race Car
- 3.7V Battery
- Remote Controller
- USB Charging Cable
- Screwdriver
- User's Manual With Warranty Information

INSERTING/REPLACING/RECHARGING BATTERIES

1. Open the battery compartment cover on the underside of your race car and the battery compartment of the Remote Controller. Use a screwdriver (included) as needed.
2. Insert 2 AA batteries (not included) into the battery compartment of the remote controller. Make sure to insert the batteries with the correct polarities (+, -) as indicated in the compartment.
3. Fully charge the included 3.7 Volt battery using the included charging cable. Plug one end of the charging cable to the 3.7V battery, and the other into a suitable charging adapter (not included). Once fully charged, connect the battery's cable to the cable in the battery compartment of the vehicle.
4. Once batteries are inserted, place the cover back onto the compartments, making sure they are securely closed.

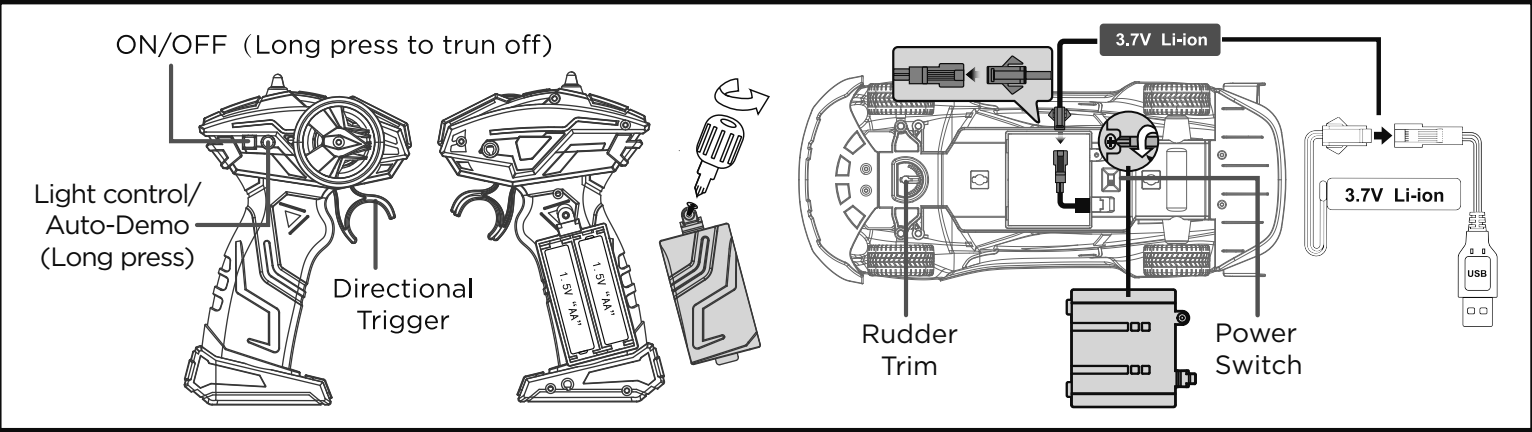

POWERING ON/OFF


Turn on the remote controller (located on the side) and slide the Power Switch on the Race Car (located next to the battery compartment) to the ON position to power it on. Slide the switches to the OFF position to power off.

SYNCHRONIZING THE REMOTE CONTROLLER AND RACE CAR

Once you power on both your Race Car and your remote control, wait for a few moments as they synchronize to the same frequency. Once synchronized, it is time to operate your Race Car!

OPERATING YOUR RACE CAR

- Use the Turn Wheel to turn your Race Car left and right.
- Set the Directional Trigger to move your Race Car forward and backwards.

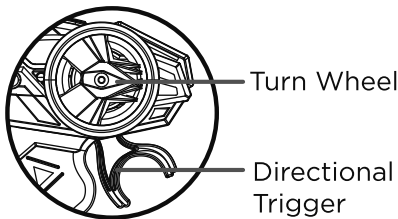

ADJUSTING THE RUDDER TRIM

If your vehicle is pulling to the left or right, it usually means that the alignment is off. This can be fixed by adjusting the rudder trim. On the bottom of your vehicle is a Rudder Trim lever. Slide it left or right so that your vehicle runs in a straight line.

IMPORTANT SAFETY PRECAUTIONS

When using your race car, basic safety precautions should always be followed, including the following:

1. Only children aged six and up should be allowed to operate this product.
2. To avoid choking hazards, keep all small parts and pieces away from children.
3. Ensure the car is safely operated.
4. Keep your car away from crowds, power lines, and water. Try to drive in a wide open and spacious environment.
5. Keep your vehicle away from excessive heat or flames.

MAINTENANCE & CARE

- Use a soft cloth or paper towel to clean your car. Never use any harsh chemicals or detergents for cleaning.
- When your car is not in use, it should be stored in a cool, dry place.
- Please recycle or dispose of your car properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your RC car for further information.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

The Brookstone® trademarks, names and logos are owned by BKST Brand Holdings LLC. © 2026. All rights reserved. Manufactured, marketed and distributed by CSI under license. www.Brookstone.com

2026 CSI
Edison NJ 08817
Tech Support
1 800 592 9541



WARNING: CHOKING HAZARD

This article contains small parts which pose a hazard to children under 3 years.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information



CAUTION

BATTERY WARNING:

- The device is equipped with an lithium ion battery.
- Do not dispose of in fire or expose to excessive heat.

-Do not crush, puncture, incinerate, or short circuit external contacts.

-Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 for 24/7 support.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.