


## FUNCTIONAL OPERATION INSTRUCTIONS

- (1) Power On/Off: Press and hold the button for 3 seconds.
- (2) Bluetooth Connection: When powered on without a Bluetooth connection, the red and blue indicators will flash alternately. Turn on your phone's Bluetooth, search for and connect to "S18". After a successful connection, the device's blue light will flash once every 5 seconds.
- (3) Music Play/Pause: Press the button once.
- (4) Next Track: Double-press the button.
- (5) Call Function: Press once to answer a call. Double-press to hang up or reject a call.
- (6) Clear Pairing & Reset: Press the button four times.
- (7) Low Battery Alert: A low battery warning sounds every 60 seconds, and the red indicator flashes twice every 5 seconds.
- (8) Activate Voice Assistant: Triple-press the button.

## CHARGING OPERATION

- (1) Glasses charging  
Input: DC5V power charging red light always on;
- (2) The glasses are fully charged and the red is off.

## PRODUCT STRUCTURE AND FUNCTIONAL BLOCK DIAGRAM

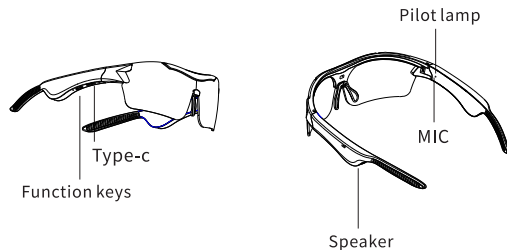

## PARAMETER

Product Model: S18  
Bluetooth Version: V5.4  
Charging Time: 120 minutes  
Battery Capacity: 110 mAh  
Transmission Distance: Over 10 meters  
Input: DC 5V  
Standby Time: 120 hours  
Audio Channel: Dual-channel stereo

## FOREWORD

Thank you for purchasing and using our company's products. In order to enable you to operate this machine easily and smoothly as soon as possible, please read this manual carefully before starting to use it.

This device is a stylish and portable wireless Bluetooth glasses. This device supports Bluetooth protocol and supports devices with Bluetooth audio function such as smartphones, tablets, and laptops, allowing you to completely break free from wired constraints and enjoy music freely.

## PRECAUTIONS

- ◆ Do not severely impact the host.
- ◆ Do not come into contact with chemicals such as benzene and diluents.
- ◆ Please do not use near strong magnetic or electric fields.
- > Please avoid direct sunlight or heating appliances.
- ◆ Do not disassemble, repair, or modify on your own.
- ◆ When riding a bike, driving a car or motorcycle, do not use the player to avoid danger.
- ◆ Do not listen at high volume for a long time to avoid adverse effects on hearing.
- ◆ Do not clean this machine with clean water. Please clean the surface of the machine with a slightly damp cloth.
- ◆ Low voltage use may cause sound distortion, please charge in a timely manner, and disconnect the power when not in use for a long time.
- ◆ Bluetooth function is compatible with common smartphones, tablets, etc., but some functions may not be supported depending on the device or application you are using.
- ◆ Do not place the device in an environment where the temperature is too low or too high (below 0 degrees or above 45 degrees).

# INSTRUCTIONS



**smart glasses**

## **FCC Requirement**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.