

Product Overview

■ Integrated Memory Card Instructions

● Card Installation:

1. Power off the dash cam before inserting the microSD card.
2. Align the card with its label facing upward (contacts toward the base of the slot) and insert it firmly until it clicks into place .

● Card Removal:

Ensure the dash cam is powered off and not recording. To eject, briefly press the exposed edge of the microSD card until it springs out slightly, then carefully remove it.

● Formatting Procedure

For initial setup and monthly maintenance:

- Access **Menu > Settings > Format**
- Confirm action when prompted (Warning: This permanently erases all data)
- Always back up critical files before formatting



Technical Requirements

- Use only authentic UHS Speed Class 3 (U3) microSD cards (8GB-512GB).
- Cards ≥ 64GB require FAT32 formatting (available via your computer or the dash cam's built-in formatting tool).
- Device malfunctions (e.g., freezing, recording interruptions) usually indicate microSD card compatibility issues .

■ LED Indicators

LED Status	Mode	Additional Information
Steady Green	Normal Recording	Loop recording active
Blinking Green	Emergency Event Saved	Triggers by G-sensor/collision
Steady Red	Parking Surveillance	Requires hardwired power connection
Blinking Red	System Alert	Check storage or firmware version

Product Overview

■ Buttons Description

Standby Mode (Not Recording)		
Mode	Short Press	Long Press (2+ seconds)
Power	Start continuous recording	Power off the device
Menu	Open system settings	Access playback mode
Up	Toggle microphone on/off	—
Down	—	Activate/deactivate Wi-Fi

Recording Mode		
Mode	Short Press	Long Press ((2+ seconds)
Power	Stop recording	Power off the device
Menu	Open system settings	Access playback mode
Up	Lock emergency clip	Switch view modes
Down	Capture video snapshot	Activate/deactivate Wi-Fi


System Menu Navigation		
Mode	Short Press	Long Press (2+ seconds)
Power	Back/Exit	Power off the device
Menu	Select/Confirm	—
Up	Scroll upward	—
Down	Scroll downward	—

Playback Interface		
Mode	Short Press	Long Press (2+ seconds)
Power	Pause/Resume playback	Power off the device
Menu	Open clip options	Switch view modes
Up	Slow down playback	Lock file from deletion
Down	Speed up playback	Unlock protected files

Installation

■ Front Camera Installation

1) Mount Preparation: Insert the mounting clips into the camera bracket, then slide the assembly horizontally into the top slot of the bracket until it clicks .

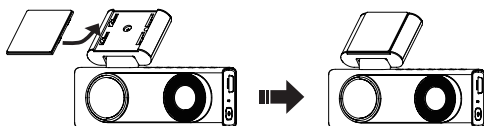

2) Optimal placement: Install behind the rearview mirror with a clear forward view, avoiding wiper blade coverage zones.

3) Surface Treatment: Clean the installation area thoroughly with a dry cloth, ensuring no oil or grease remains on the windshield surface.

4) Device Activation: Remove the protective film from the adhesive pad and camera lens. Use the LCD screen's live view to align the camera angle, then press firmly to secure it .

5) Power Connection: Connect the USB power adapter to your vehicle's 12V/24V DC outlet. Insert the USB connector (3.5-meter cable) into the camera mount.


■ Rear Camera Installation(For K80 Model)

1) Location Selection: Choose a central position on the rear windshield, avoiding defrosting grid lines and ensuring full rear coverage.

2) Surface Preparation: Clean the installation area with a dry cloth, following the same protocol as the front camera.

3) Secure Mounting: Remove the protective film from the adhesive pad and lens. Press the rear camera firmly onto the prepared surface.

4) System Integration: Power off the front camera (main unit). Connect the rear camera cable to the main unit, route the cables along the vehicle's interior using the provided Trim Removal Tool, and avoid sharp edges or moving parts.

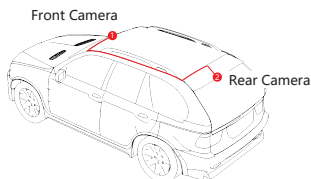

Installation

Tips

- 1.Ensure the camera is positioned in a way that does not obstruct the driver's view or compromise safety.
2. Place the camera near the rearview mirror to ensure balanced coverage of both sides within its field of view (FOV).
3. Position the lens within the area covered by windshield wiper sweeps for clear visibility in rain .
- 4.Avoid mounting near sun control film (window tint) or other electronic devices to optimize performance .
5. Do not place the camera or cables near airbag panels or within their deployment range. The manufacturer accepts no liability for injuries from airbag interference. Exercise extreme caution if your vehicle has side curtain airbags .
- 6.Use only the included ORSKEY USB Car Charger to avoid issues like frequent reboots or LCD flickering (insufficient power). At home, use a standard iPhone/Android USB charger. Do not use chargers exceeding 3 amps (risk of device damage) .

Display Overview

Icon	Name
	Recording Mode
	Loop Recording
	G-Sensor
	Microphone
	Wi-Fi
	GPS
	Advanced Parking Mode
	Emergency Lock
	Fatigue Driving Reminder
4K+1080P	Video Resolution
	Recording Status
00:00:00	Recording Time
	NO SD Card