

Package Content

- MADA ×1
- USB-C Charger Cable
- User Manual

Troubleshooting

- Won't power on: Charge for 30 minutes and try a long-press to power on.
- Low/No audio: Check the dial level and your phone volume (if on Bluetooth).
 - Alarm didn't ring: Ensure master alarm = ON; confirm the alarm wasn't deleted/overwritten.
 - Bluetooth issues: "Forget" the device on your phone, then search/pair again; try within 1 m.
 - Taps not detected: Make sure the unit isn't in a blocking state (e.g., in a setting flow or playing back); tap a bit more firmly and near the center of the hat/head.

Frequently Asked Question

- Q1. How do I mute completely?


A: The dial's minimum is 25%. For quiet nights, set the master alarm OFF with the black toggle, or lower both device and phone volumes (for Bluetooth). Avoid covering the speaker long-term for thermal/acoustic reasons.
- Q2. Why doesn't the wake word work late at night?

A: 00:00–05:00 is a speech quiet window. Use head taps for light/dance during those hours.
- Q3. How do I stop the alarm quickly?

A: Tap head once during ringing to stop immediately and suppress further repeats.
- Q4. Wake word unresponsive during Bluetooth?

A: Wake-up may be paused to prioritize music playback. Taps still work for light/dance.
- Q5. Will the time be lost after reboot?

A: Clock and volume are retained.

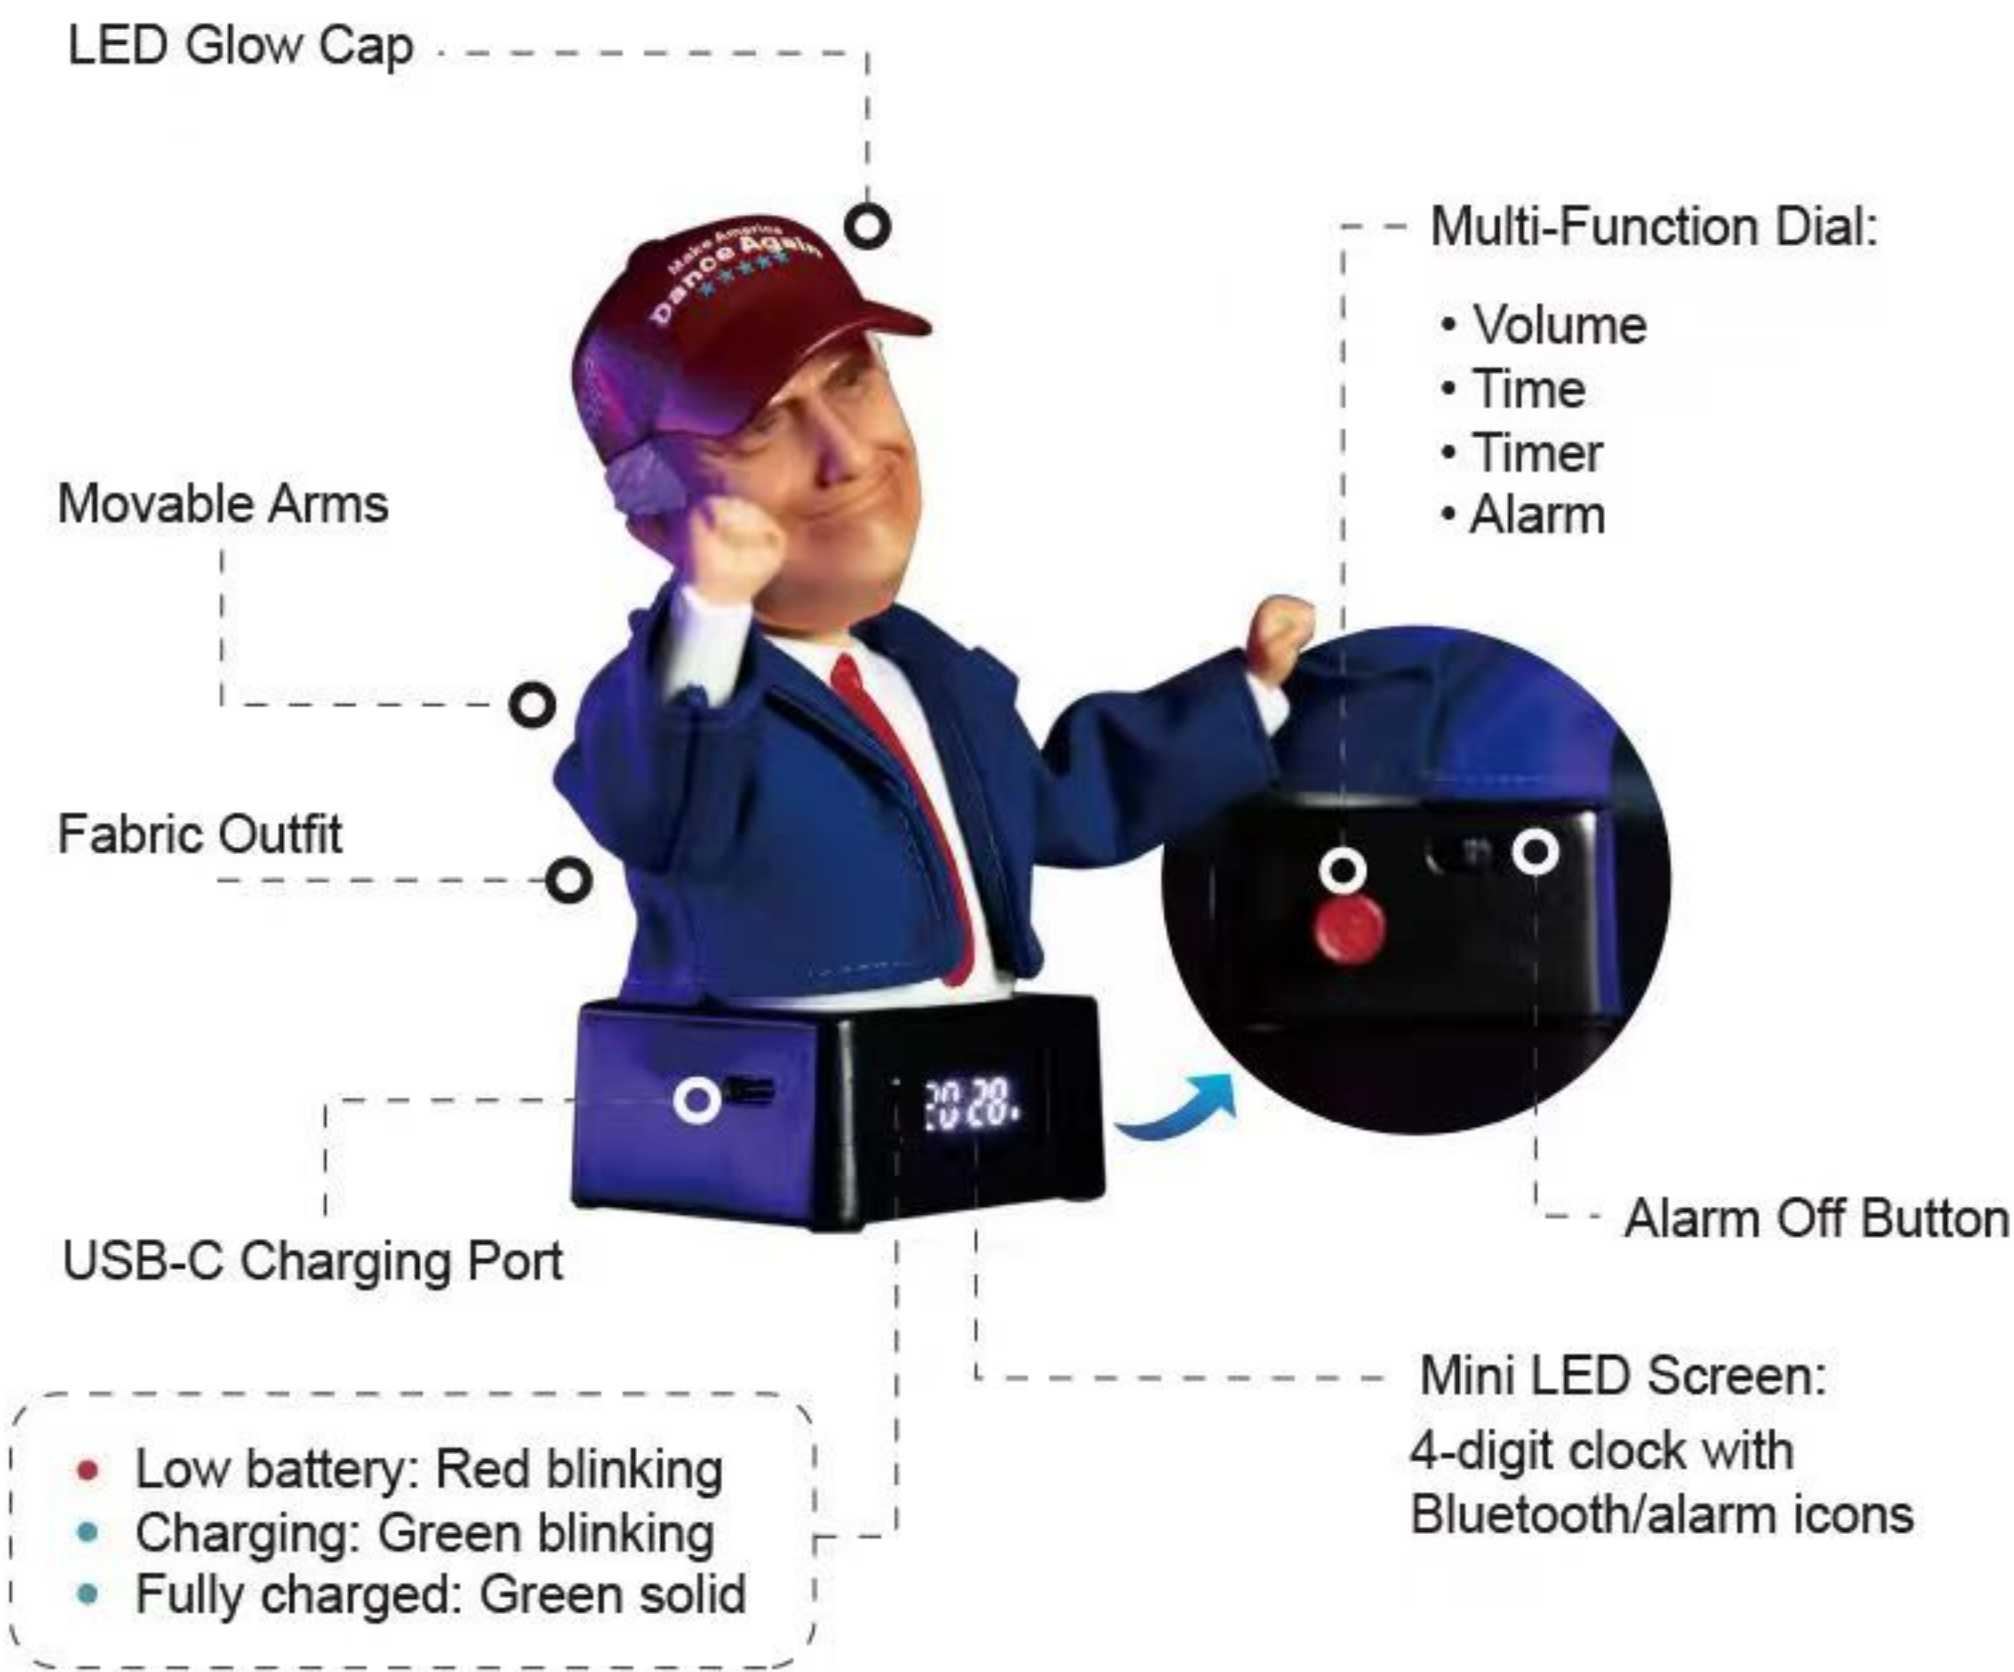

Specifications

Material	ABS,PC
Interface	Battery: 14500 3.7V 800mAh
	Display: 4-digit + status icons
	Input V: 5V1A
	Charging Port:USB-C
Dimensions	Modes: Night Light / Dance / Timer / Alarm / Bluetooth
	2.42" × 2.15" × 5.32"
Weight	XXXX lbs



USER MANUAL

Voice-Interactive Dancing Bobblehead

Interaction terms


- Press = short press of the red dial once
- Double-press = two quick presses of the red dial
- Long-press = hold for >2 s
- Tap head once / twice = light tap on the “hat/head” area once or twice

Quick Start

1. Power ON: Long-press the **red** dial (startup voice plays).

2. Set Time (first use):

- Initial screen shows time (e.g., “20:28”).
- Double-press → hour blinks → rotate to set hour.
- Double-press or wait ~3 s → minute blinks → rotate to set minute.
- Double-press or wait ~3 s to save and return to clock.

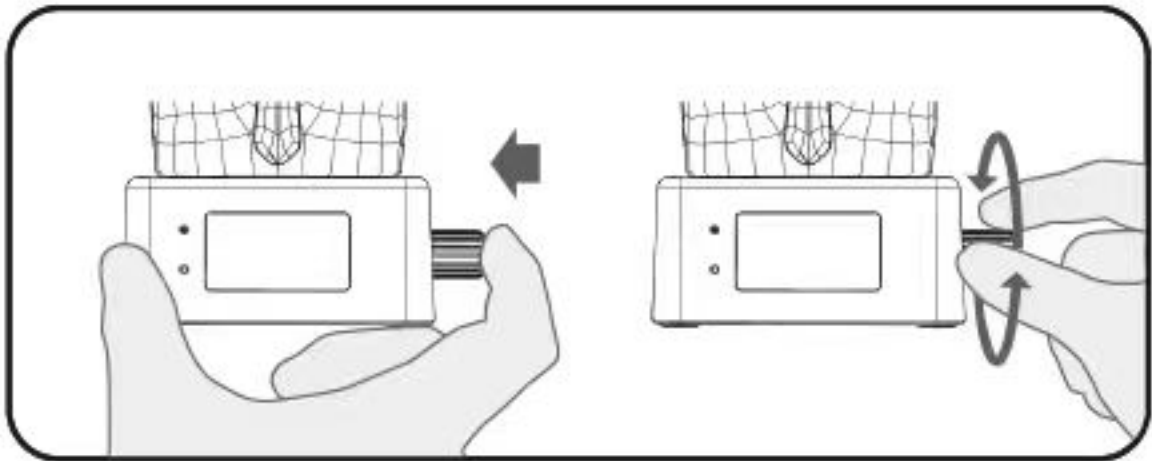

3. Enable Alarms: Flip the black toggle to ON to allow alarms to ring. The alarm icon on the screen will light up when the alarm is enabled.

4. Volume (idle state):


- Rotate the red dial to cycle 25% / 50% / 75% / 100% (half-turn per step).
- A voice prompt announces the current level.
- Minimum is 25%.

Tap (Head) Interactions

- Tap once → Night Light
- Tap once again to turn OFF
- Auto-OFF after 10 minutes if left on

- Tap twice → Dance Mode
- Step 1: Light ON + random humorous voice line
- Step 2: Plays background music and starts dancing; stops automatically when music ends

Quiet Hours: **00:00–05:00 speech wake-up is disabled**. Tap once/twice still works (for Night Light or Dance).

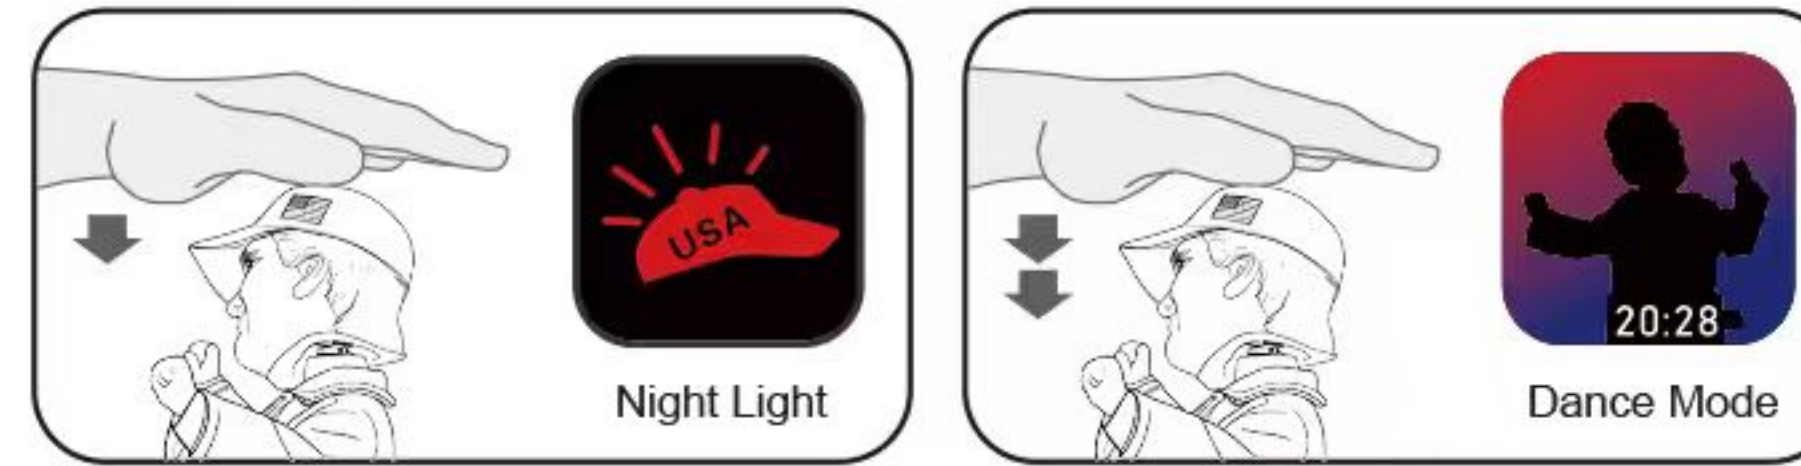

Voice Control (English)

- Wake word: “**Good morning USA**”
- A random wake reply plays, then the device listens for a command.
- If no command is detected, it exits after ~5 s with a voice prompt.



Available commands

1. “**dance**” → Light ON + humorous line → dance + background music
2. “**turn on the light**” → Light ON
3. “**turn off the light**” → Light OFF
4. “**set timer**” → Countdown Timer
 - Display blinks: rotate to set minutes → double-press/wait 3 s → blinks seconds → rotate to set seconds → double-press/wait 3 s to start timer
 - When time’s up: light ON + prompt + dance + background music (auto-stop; light then turns off)
5. “**set alarm**” → Alarm (one alarm only; new alarm overwrites the old one; repeats daily)
 - Set hour (rotate) → double-press/wait 3 s → set minute (rotate) → double-press/wait 3 s to save
 - At alarm time: prompt → light ON + dance + background music

- Repeats every 5 minutes, up to 3 times
 - Tap head once during ringing to stop now and cancel further repeats
6. Cancel commands (any of these):
- “**cancel timer**” / “delete timer” / “remove timer” → cancels the current timer (voice prompt confirms)
 - “**delete alarm**” / “cancel alarm” / “remove alarm” → deletes the alarm (voice prompt confirms)

Bluetooth Audio

- Plays a voice prompt when connected/disconnected.
 - While Bluetooth is playing:
 - To protect the listening experience, speech wake-up may be paused.
 - Taps still control light/dance, but no extra voice lines are inserted over your music.
- Tip: For first pairing, search and connect to the device name from your phone’s Bluetooth menu. The unit will auto-reconnect when possible (firmware dependent).

Alarm & Timer Essentials

- Master Alarm switch (black toggle) must be ON or alarms won’t ring.
- The device supports one alarm; setting a new one through voice commands overwrites the previous.
- Timer end routine = Light ON + prompt + dance + background music.
- You can cancel timer/alarm anytime using the cancel voice commands.

Safety & Warnings

- Indoor use only. Keep away from heat, humidity, and strong magnets.
- Power/charge with a 5V USB-C adapter. Avoid non-standard chargers.
- Contains a lithium battery. Do not disassemble, crush, puncture, or incinerate.
- Not suitable for children.

Care & Maintenance

- Wipe with a soft dry cloth; avoid harsh solvents.
- If unused for long periods, recharge every 3 months.
- Avoid drops, shocks, and excessive vibration.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.