

Soran Verser Series Electric Guitar
VP2200-VAF

User Manual
使用说明书



Note: This manual is applicable to the current firmware version. We will also continuously upgrade and launch personalized user voice libraries. Please pay attention to other contact information such as the official website or public account. For detailed operation methods, you can also watch the device introduction videos.

注：此说明书适用于当前固件，我们也将不断升级并推出个性用户音色库，请留意官网或公众号等其他联系方式。详细操作方式还可观看设备介绍视频。

Contents

1. Introduction to Guitar Components 01

2. Introduction to Guitar Control 03

 Analog Section (Electric Guitar Functions) 03

 Digital Functions (Effects Circuit) 03

 Side Control Panel Functions 04

 Device Connection 04

3. Guitar Adjustment and Maintenance 05

 Pickup Combination Method 05

 Volume and Tone 05

 Guitar Pitch Adjustment 05

 Adjustment of the Truss Rod..... 06

 Guitar Action Adjustment 06

 Intonation Adjustment 06

4. Software User Instructions 07

 a) Main Interface 07

 b) Software Basic Settings 07

 c) USB Audio Settings 07

 d) BT Wireless Parameter Settings 07

 e) Tuner Settings 08

 f) IR Import/Export 08

 g) Basic Information of Presets 08

 h) Import, Export, Save, Reset, and Volume 08

 i) User Banks and the Corresponding Presets Within the Banks 09

 j) Effect Chain Module, Associated with Guitars and Effect Module Parameters 09

 k) Save Presets 10

 l) Reset 10

 
 m) Drum Machine 10

 n) Jam Track 11


5. Specifications 12

6. Effect List 13

Front

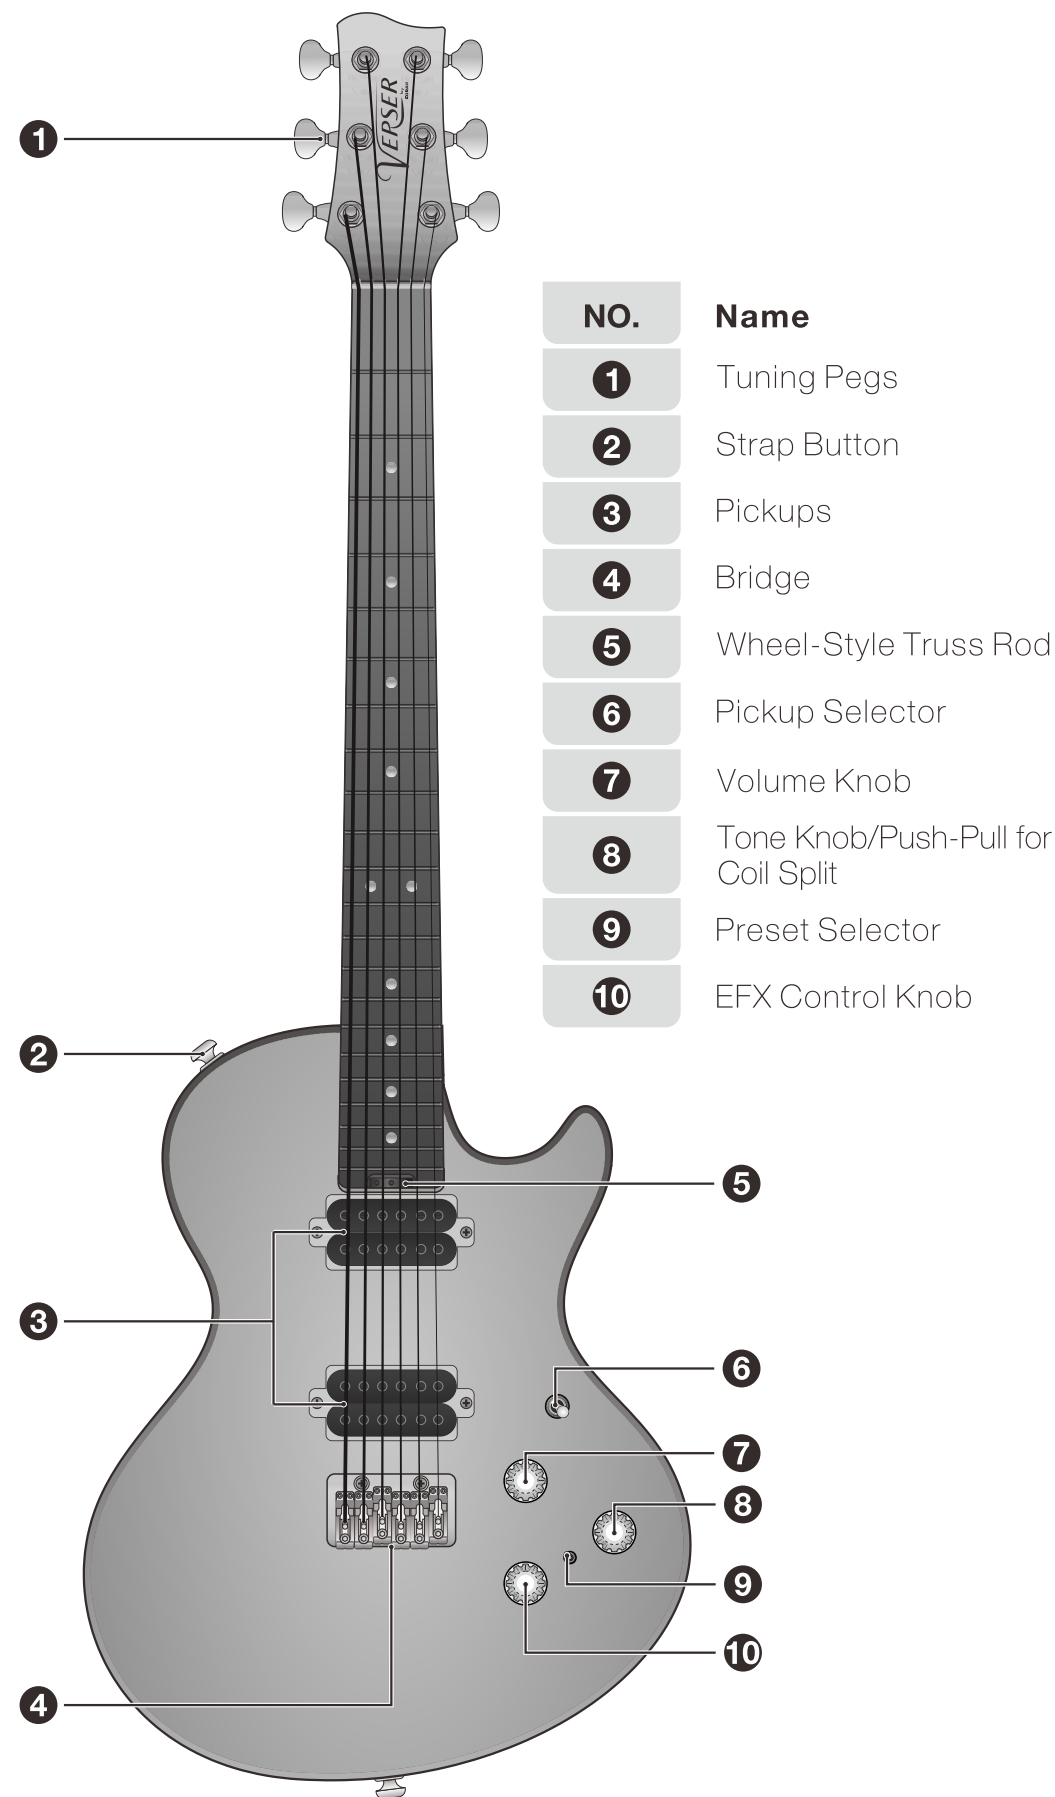


Back/Side Control Panel

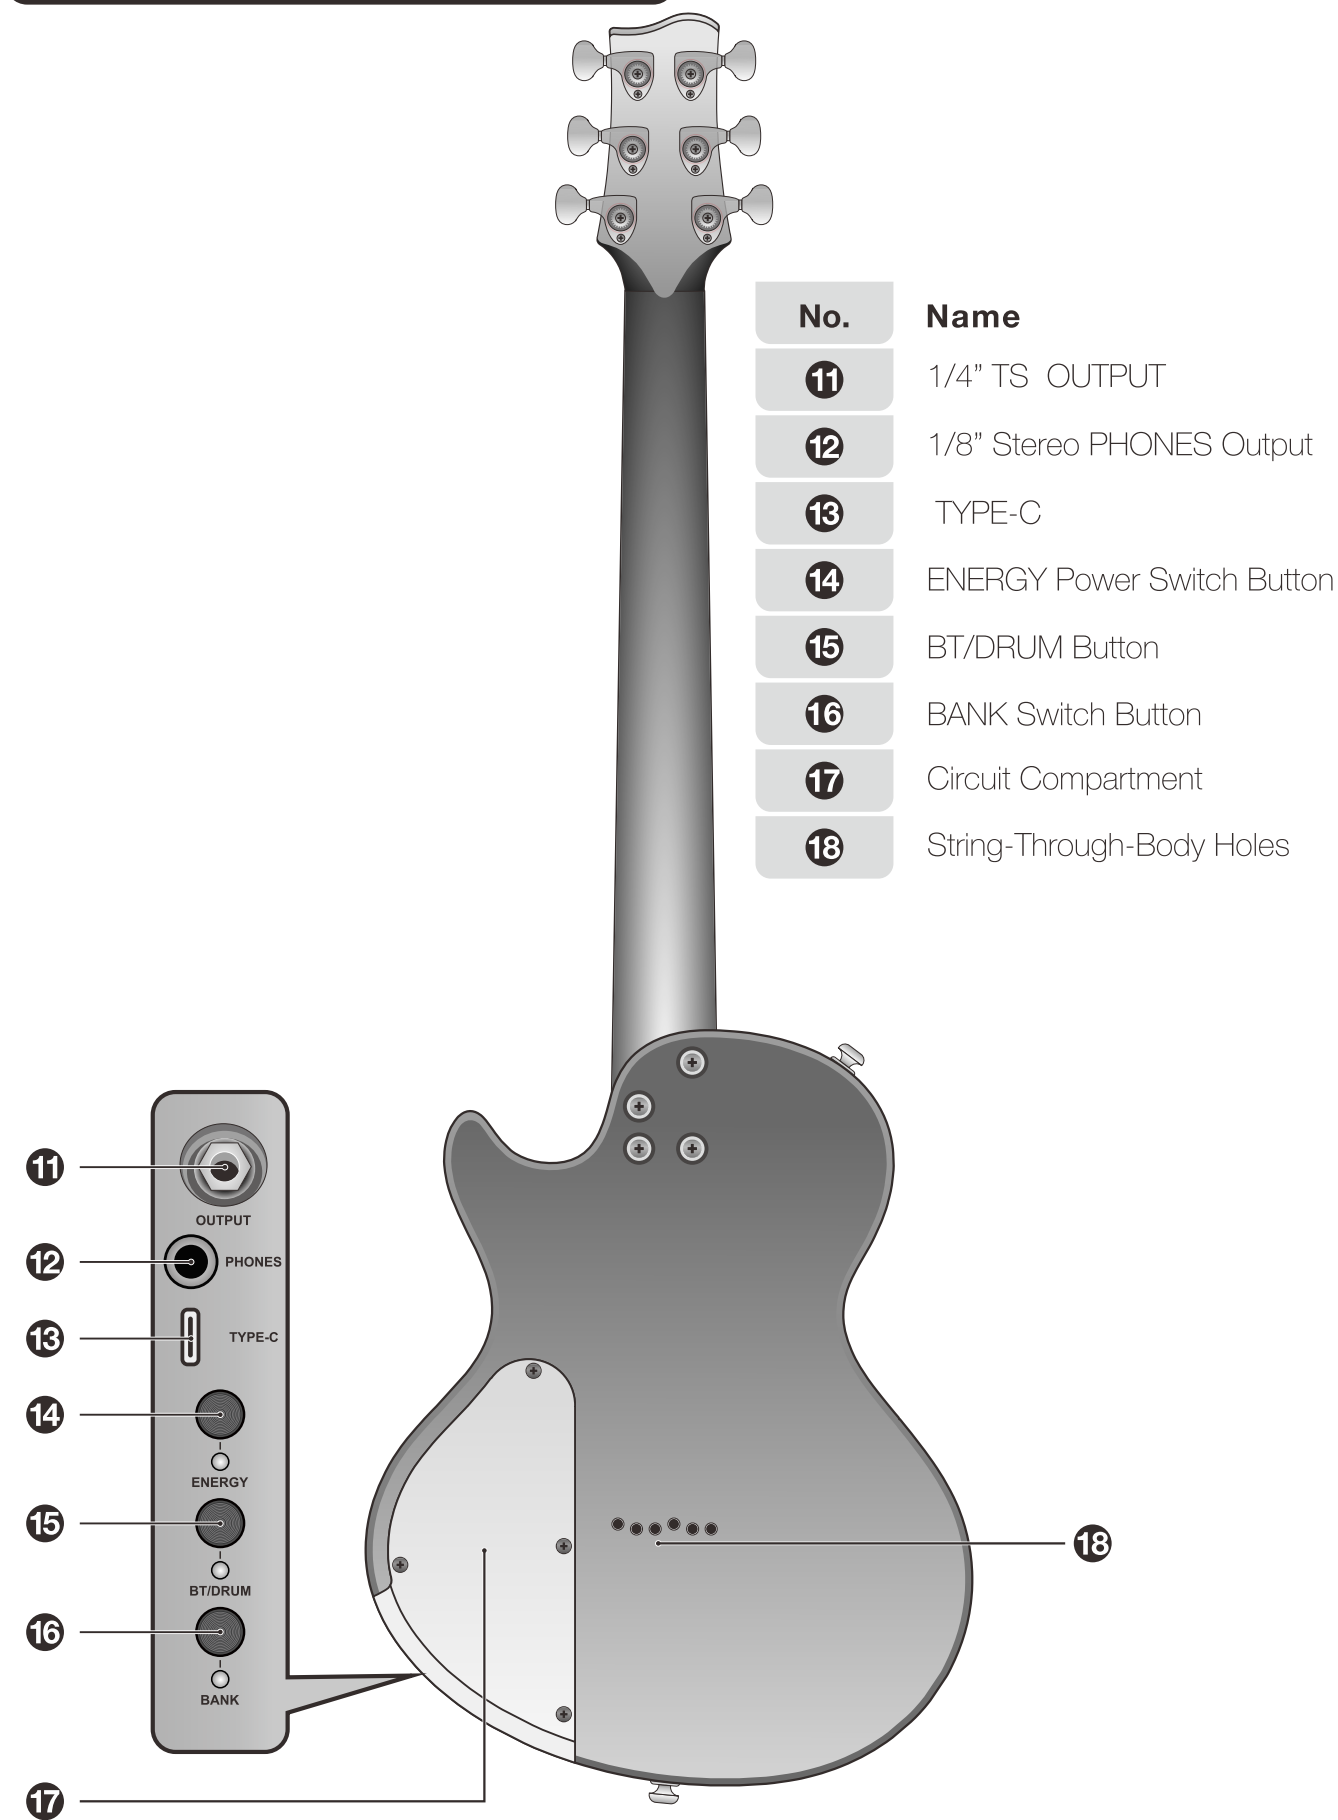 

2. Introduction to Guitar Control

Analog Section (Electric Guitar Functions)

 - 1 Tuning Pegs**
Adjusts the tightness of the strings to change the pitch of the guitar.
- 2 Strap Button**
Secures the strap in place.
- 3 Pickups**
A device for picking up signals.
- 4 Bridge**
A string-adjusting bridge assembly that allows for fine-tuning both string height (action) and effective string length (intonation), improving playability and pitch accuracy.
- 5 Wheel-Style Truss Rod**
Adjust the curvature of the neck.
- 6 Pickup Selector**
Three-position pickup selector switch for neck, bridge, or combined pickup settings.
- 7 Volume Knob**
Adjust the output volume of the guitar.
- 8 Tone Knob/Pull for Coil Split**
Adjusts the tone of the guitar/push-pull for coil split.

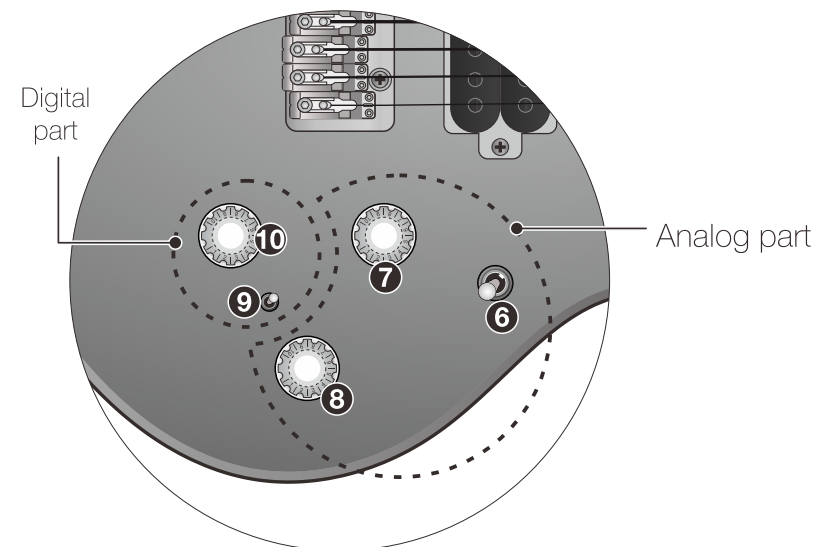

Digital Functions (Effect Circuit)

- 9 Preset Selector**
The 3-way switch (switch A\B\C preset). Example: Ticking Bank 1 corresponds to three presets of A\B\C under Bank 1.
- 10 EFX Control Knob**
Press and hold the ENERGY button for 2 seconds to activate the effect module.
Select and send effect chain modules and drum machine to the EFX encoder through the App (EQ excluded).
Press and hold the EFX control knob for 2 seconds to switch between modules assigned to the EFX encoder.
Rotate the EFX control knob to adjust current module parameters (Gain for Amp module, rhythm types for Drum Machine).
EFX module indicator lights match corresponding App colors for identification.
Press and hold EFX control knob for 3 seconds to save current preset(white flash = saved).

Side Control Panel

- 11 1/4" TS Output**
1/4" TS output for connecting to an amp, PA system, or external effects.
- 12 1/8" Stereo PHONES Output**
1/8" stereo output for connecting headphones or other audio equipments.
- 13 TYPE-C**
USB Type-C port enables USB audio streaming, firmware updates, and mobile OTG connectivity.
- 14 ENERGY Power Switch Button**
Long press function: Long press for 2 seconds to activate the effect module;
Short press function: After the effect module is activated, briefly press the ENERGY button to activate the Bypass mode.
Reboot function: When the equipment is in an abnormal operating state, it can be restarted by long-pressing the ENERGY and BANK buttons.
- 15 BT/DRUM Button**
Short press function: Turn on/off the drum machine;
Long press function: Turn On/Off BT wireless for 1.5 seconds (BT Wireless is turned off by default upon startup).
- 16 BANK Switch Button**
Short press function: Display the corresponding color indicator light of the current Bank.
Long press function: Long press for two seconds to change groups, and the color will change to the corresponding Bank indicator light.
Select 1 to 7 preset groups in the software and assign them to the bank for easy step-through switching.

Device Connection

