

Model: M1

omyTag

Quick Start Guide



Getting Started

01

1. Power On/ Off:

- Press your omyTag function button once to turn on – it should beep once indicating it is powered on
- To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your omyTag is powered off

2. Check For Updates:

To use the Apple Find My app or the Find items app on Apple Watch to locate your omyTag, the latest version of iOS, iPadOS watchOS or macOS is recommended



Add Your omyTag

1. Start the App

- Open Find My app on your supported iPhone or iPad;
- Allow notifications from the app;

2. Connect your omyTag

- Power on your omyTag;
- Tap "+" then select "Add Other Item";
- Once your omyTag is located, tap "Connect";
- Choose a recognizable name and emoji for your Item, Locator and tap "Continue";
- Find My will ask for confirmation to add your omyTag to your Apple ID - tap "Continue";
- Tap "Finish" and your omyTag will be set up and ready to connected to whatever item you wish to locate, e.g., your keys;

Locate Your Item

1. Find omyTag when it is Nearby

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch;
- Tap on your omyTag from the list;
- Tap "Play Sound" to make your omyTag beep;
- Tap "Stop Sound" to stop the beeps once you find your item

2. Find omyTag's Last Known Location

- Open Find My app and select the "items" tab or open the Find Items app on your Apple Watch;
- Tap on your omyTag from the list;
- our omyTag's last known location will appear on the map;
- To navigate to that last known location, tap "Directions" to open the Maps app

Find Item When Out of Range

1. Enabling "Notify When Left Behind"

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch;
- Tap on your omyTag from the list;
- Under "Notifications", enable the "Notify When Left Behind" toggle;
- You will receive a notification when you leave your omyTag behind and it's no longer in range of your device;

2. Enabling "Notify When Found"

- Under "Notifications", enable the "Notify When Found" toggle;
- When your omyTag is seen by another Find My enabled device, you will receive a notification of its updated location;
- Note: "Notify When Found" can only be activated when your omyTag is out of range;

When Your Item is Lost

1. Enabling lost Mode

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch;
- Tap on your omyTag from the list;
- Under "Lost Mode", tap "Enable";
- A screen detailing Lost Mode will pop up, tap "Continue";
- Enter your phone number or email address and tap "Next";
- You may enter a message that will be shared with the person that finds your item;
- Tap "Activate" to enable "Lost Mode";
- Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled;
- Note: When "Lost Mode" is enabled, your omyTag is locked and cannot be paired to a new device;

Resetting Your Discover Locator

1. Remove the omyTag from Find My app

- Open Find My app and select the "Items" tab;
- Tap on your omyTag from the list;
- Please ensure "Lost Mode" is disabled;
- Scroll to the bottom of the screen and tap "Remove Item" ;
- A summary will open, tap "Remove" to confirm;

2. Factory Reset Your omyTag:

- After successfully removing the omyTag from the Find My app, press and hold the function button. The yellow indicator light will stay on (followed by a beep), and then release the button after the third chime;
- The omyTag is now reset and ready to be paired with a new device;

But Wait... There's More

1. Replace the Battery:

- Use your fingernails at the small gap on the side of your myTag to carefully open the case
- Replace the battery with a new CR2032 battery placing it positive side up(text facing up)
- Carefully align the top hole on both sides to close.

2. Unwanted Tracking Detection:

- If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1)If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. (2)If you don't have an iOS devices or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. These features were created specifically to discourage people from trying to track you without your knowledge.

The most important:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BSY9-BK3633-M1