

# Telephone Operation Guide

## 一、introduce

1. Charging: USB charging
2. Battery charging current: 500mA
3. Hands-free amplifier: 3W
4. Buttons: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, \*, #, hands-free, call back, power on/off
5. Working mode: music mode (idle mode), hands-free phone mode (press the hands-free button to enter), handle phone mode (pick up the phone handle to enter)
6. Key prompt tone:
  - (1) Chinese voice
  - (2) English voice
  - (3) DTMF key tones
7. Replay prompt tone: fixed DTMF key tone prompt tone
8. Bluetooth volume switch: In idle mode, single press \* key (star key) for volume +, single press # key (pound key) for volume -
9. Switch between Chinese and English: Long press \* key to switch
10. Switch between key tone and voice: Double-click the # key to switch
11. Incoming call ringtone selection: long press the " # " key to select the ringtone in the on-hook state

## 二、operate:

- 1 . Bluetooth connection: After the device is turned on, it enters the automatic reconnection state. If the reconnection attempt fails after 3 times, it enters the waiting state. If no device connects within 2 minutes, it will enter the low-power mode. You can wake up the device by pressing any key or picking up the phone.
- 2 . Playing audio on the phone: When the device is idle, you can use the hands-free speaker to play audio. When a call comes in, the hands-free mode is activated, or the handset is lifted, audio playback is paused and can be resumed manually using the software on the host device. Volume can be adjusted using the host device or the \* or # keys.
- 3 . Hands-free call: Press the hands-free button to enter the hands-free phone mode, enter the dialing state, press the corresponding button to dial, the call is connected, and you can make a hands-free call. During the call, press the hands-free button again to end the current call; if you lift the phone handle during the call, you can enter the handle phone mode. If you put down the handle at this time, the handle hangs up and the call ends.

\*During a hands-free call, press the end call button on the host to end the call. The phone will beep twice to exit the hands-free call mode and return to idle mode.
- 4 . Handle call: Lift the phone handle to enter the handle phone mode, dial the number correctly, and when the call is connected, you can enter the call state. During the call, hang up the handle to end the call. If you press the hands-free button during the call to enter the hands-free call mode, you can still continue the call by putting the handle back to the phone base. Press the hands-free button again to end the call.
- 5 . Call Back: After pressing the hands-free button or picking up the phone handle to enter the call mode, press the Call Back button to enter the last record in the call history.
- 6 . Electrical performance of the whole machine  
LCS Phone 3.7V lithium battery power supply

Hands-free 280mA (playing dial tone at maximum volume)

Not connected standby 5-8mA

Connected standby 5-7mA

15mA maximum volume

Deep standby 3.7mA

Play music 150-200mA maximum volume

100mA maximum volume during hands-free call

12-15mA for on-hook calls

## **FCC Statement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **FCC RF Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.