 


CHILDREN'S VIDEO WALKIE-TALKIE INSTRUCTION MANUAL

I. Appearance & Functional Description

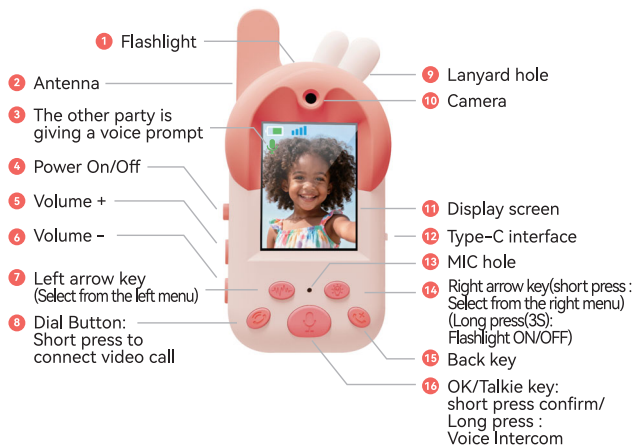


II. Power On/Off Function

1. When shipped from the factory, the power slide switch is in the "OFF" position.
2. Slide the power switch up to "ON" to turn the product on. A main menu with six icons (from top to bottom):

Video Call,
Camera
Change Wallpaper


Chat
Gallery
Rock Paper Scissors.

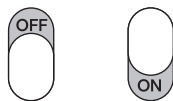

Powered OFF



Powered ON

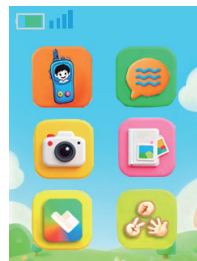


III. Charging Instructions

1. Use the provided charging cable to connect the device to a charger. The power indicator will light up red. The indicator will turn off automatically when charging is complete.
2. Charger Adapter Specification: 5V/1A.

IV. Installation/Instructions for Use

Basic Key Operations

1. Short press the Left / Right key to navigate and select the desired function menu on the main interface.
2. Short press the OK/Talkie button to enter the selected function.
3. Press the Back button to exit the current function.
4. Long press the "Volume +/-" button to increase volume; long press the "Volume -" button to decrease volume.
5. Hold down the OK/Talkie button for voice intercom. Voice transmission is one-way (simplex). The other party can only hold their talk key to speak after the current speaker releases the key.
6. The device has six screen display modes. In Video Call mode, short press the Right arrow key to cycle through them.

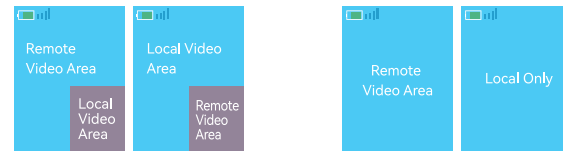

Detailed Explanation of Main Menu Functions

A. Video Call:

1. Short press the Dial Key to make a call. The recipient can answer by short pressing the Dial key .

2. Long press the OK / Talkie button to start the intercom.

3. Long press the Volume +/- keys to adjust the volume.

4. Short press the Right arrow key to change the video window layout.

5. Short press the Left arrow key to cycle through voice effects (Original, Child, Robot, Adult).

6. Short press the back button to go back to the main menu.

B. WeChat:

Upon entering the Chat screen, five function icons are available at the bottom (from left to right): Emoji, Voice, Music, Photo, Picture.



Key Operations:

1. Short press the Left arrow key / Right arrow key to navigate functions, short press the OK/Talkie key to select. Then use the Left arrow key / Right arrow key to choose the content to send, and short press the OK/Talkie to send.
2. Press the back key to go back to the main menu.

Emoji Operation:

Short press Left arrow key / Right arrow key to select an emoji, short press OK/Talkie key to send.

Product Name: Children's Video Walkie-Talkie

Ages: 3+ years

Battery Type: Polymer Lithium Battery

Package Includes: Main Unit x2, Charging Cable x1, User Manual x1, Lanyard x2, Blister Tray x1

Maintenance Instructions: This product contains electronic components and is not waterproof.

Avoid using or storing it in high-temperature, humid, or fire-prone areas. When cleaning,

wipe gently with a dry cloth

Product Model: D100

Material: ABS

Product Weight: 66g/pc

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction..



Warning

1) CHOKING HAZARD-Small parts,Not for children under 3yrs

2) The packaging and user manual include critical information and should be preserved.



RoHS

Made in China

Voice Operation:

Press and Hold the OK/Talkie key  to speak , release it to send your message . If both parties are in the chat interface, the message can be heard directly. Otherwise, enter the chat interface, use the Volume +/- keys to select the voice message, and short press the OK/Talkie key  to listen.

Music Operation:

Short press the left arrow key /Right arrow key  to select the Music, short press the OK/Talkie Ke  to send. If both parties are in the chat interface, the message can be heard directly. Otherwise, enter the chat interface, use the Volume +/- keys to select the voice message, and short press the OK/Talkie key  to listen.

Photo Operation:

Enter camera mode and press OK/Talkie key  to take a photo, release it to send immediately.

Picture Operation:

Enter the Picture interface, short press the Left arrow key /Right arrow key  to select a picture from the gallery, short press the OK/Talkie key  to send.

C. Camera: Enter the Camera interface, press the OK/Talkie key  to take a photo.

D.Gallery: Enter the Gallery interface, short press Left arrow key /Right arrow key  to select the pictures/Photos . Short press the OK/Talkie key  to view zoomed photo/pictures. To delete a photos/pictures,Long press on the OK/Talkie key  until a menu appears,then select the delete option

E.Change Wallpaper: Enter the menu, short press Left arrow key /Right arrow key  to select a wallpaper, short press the OK/Talkie key  to apply it.

F.Rock Paper Scissors:

Enter the menu, short press Left arrow  key /Right arrow key  to select your gesture(  ),then Short press OK/Talkie key to perform your gesture ,and the system will give score feedback.To play again,short press OK/Talkie key to start (Note: All functions require entering their respective menu to operate).

V. Product Power On/Off & Auto-Shutdown

The product enters a working state immediately after being powered on and remains on until the battery is low, triggering an automatic shutdown. Please slide the power switch to the "OFF" position when not in use. If the device auto-shuts down, slide the power switch to "OFF" first, then back to "ON" to restart normally.

VI. Product Pairing & Connection Method:

This product uses a 2.4G WiFi connection mode. Each package contains two intercom units which are pre-paired. These two units cannot connect with units from other packages. If multiple packages are purchased, units can only connect in pairs (one-to-one within the same package) and cannot connect simultaneously with multiple other units.

VII. Safety Information Statement

- 1.This product contains electronic components. Do not disassemble it, as this may cause irreparable damage.
- 2.Do not subject the product to impact, crushing, throwing, or place heavy objects on it.
- 3.Keep the product away from heat sources. Do not store the product in environments exceeding 60°C.
- 4.This product is not waterproof. Do not immerse it in water or use it in humid environments.
- 5.When not in use, switch the product to the "OFF" position to prevent potential issues from prolonged storage
- 6.The batteries should be charged under adult supervision.The supply terminals are not to be short-circuited. This toy contains batteries that are non-replaceable.
- 7.When not in use, please store toys in a dry, well-ventilated area, away from direct sunlight and damp conditions. You can use storage boxes or bags to keep them properly stored, preventing dust and damage

Product Specifications

Display	2.0 Inch IPS
CMOS Pixel	30W
USB port	Type-C
Power	5V/1A
Operate TEMP	-20°C~60°C
Storage TEMP	-30°C~70°C
Product Size	112mm*53mm*30mm

Maintenance & Care

Before cleaning, always turn off the toy and unplug it from the power source to ensure safety.Use a soft, dry cloth to gently wipe the surface of the Product.Take care not to allow water or cleaning agents to enter the electronic components or battery compartment of the product, to avoid damage.