 
 


CHARGING MODE

THE DINOSAUR IS EQUIPPED WITH A 3.7V 500MAH RECHARGEABLE LITHIUM BATTERY, ELIMINATING THE NEED FOR FREQUENT BATTERY REPLACEMENTS, MAKING IT MORE COST-EFFECTIVE AND CONVENIENT. THE BATTERY IS CHARGED THROUGH THE BOTTOM CHARGING PORT, WHICH IS A UNIVERSAL TYPE-C PORT, OFFERING FASTER CHARGING SPEEDS AND ENHANCED COMPATIBILITY.

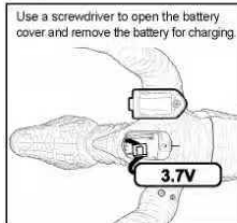

 
SWITCH: Turn off the power and start charging
Red light: Charging

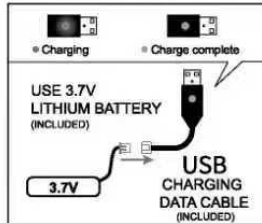

Lamp off: fully charged

REMOTE CONTROL

THE DINOSAUR REMOTE CONTROL ADOPTS A 2.4GHZ WIRELESS MODE, WITH MULTIPLE MODES THAT CAN BE SWITCHED FREELY. THE LEFT AND RIGHT HANDS ARE DIVIDED TO CONTROL THE DIRECTION, AND WHEN COMBINED WITH EACH OTHER, IT CAN CONTROL THE MOVEMENT OF DINOSAURS FREELY. COMBINED WITH BIONIC FUNCTION KEYS SUCH AS DANCING, WAGGING THE TAIL, AND ATTACKING, IT ACHIEVES DYNAMIC SIMULATION.

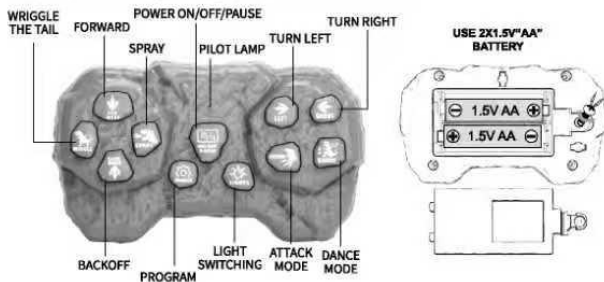

CAUTION

Dinosaurs use a set of 3.7V rechargeable batteries. Remote control usage 2x "AA" batteries. Remove the battery cover by using a phillips/crosshead screwdriver as shown.

Install correct battery as shown in the diagram making sure to match polarity direction.

IMPORTANT BATTERY INFORMATION:

Do not dispose of batteries in fire, batteries may explode or leak.

Do not mix old and new batteries.

Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel-cadmium) batteries.

Only batteries of the same or equivalent type as recommended are to be used.

 
Batteries should be replaced by adults because of small parts.

Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short circuited.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended.

FUNCTION

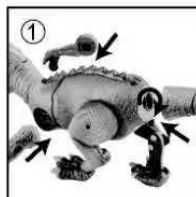


The disassembly and assembly method of dinosaurs is simple. The legs and arms can be tightly connected through buckles, and the tail is precisely combined through a rotating slot, scientifically combining to maintain a firm and safe gameplay.



There are multiple color led lights inside the transparent piece on the back, which change in cycles as the function is activated, making it very dynamic.



 Open the water injection hole on the top of the dinosaur, fill the hole with the attached water bottle, and then use the spray function.

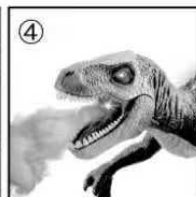

Dinosaur's mouth is equipped with spray and LED light, which can simulate the effect of flame spraying. The water mist particles are fine, smooth and even.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.