

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

GWI-MIC25009

Microphone User Manual

Thank you for choosing our microphone product!
To ensure safe and efficient use and fully utilize its performance,
please read this instruction manual carefully before use
and keep it properly for future reference.

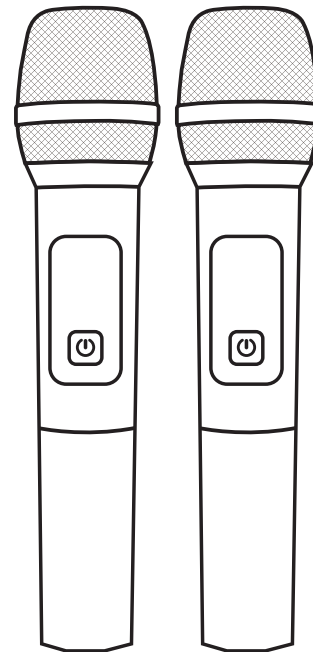

1. Usage Methods

1. Wireless Connection

- Turn on the power switch of the microphone and enter the pairing mode.
 - Turn on the Bluetooth function of the speaker to be connected, and it will connect automatically.
2. **Turn On and Off:** Press the power switch of the microphone. When the indicator light is on, it means the microphone is turned on; press the power switch again, and when the indicator light is off, the microphone is turned off.
 3. When holding the microphone by hand, keep a distance of about 10 - 15 centimeters between the microphone and your mouth. Avoid being too close to the mouth to prevent plosives (producing popping sounds), or being too far away, which may make the sound smaller and blurrier.
 4. If using a stand to fix the microphone, adjust the height and angle of the stand to make the microphone in an appropriate position. Also, maintain an ideal distance from the mouth and ensure that the sound - picking direction of the microphone is aligned with the sound source (such as the mouth).

2. Maintenance and Care

1. **Cleaning:** Regularly wipe the surface of the microphone with a clean, soft dry cloth to remove dust and stains. If there are stubborn stains on the surface of the microphone, you can gently wipe it with a slightly damp soft cloth, but avoid moisture from entering the inside of the microphone.

Do not use cleaning agents containing alcohol or corrosive chemicals to prevent damage to the microphone shell.

2. **Storage:** When not in use for a long time, turn off the power of the microphone and remove the batteries (if battery - powered) to avoid battery leakage from damaging the device. Put the microphone in a special storage box or protective bag and store it in a dry, cool and ventilated environment, avoiding direct sunlight, high temperature, humidity and dusty places.
3. **Battery Maintenance:** If using rechargeable batteries, please charge them according to the requirements in the instruction manual before the first use. Use the original charger or a charger that meets the specifications for charging to avoid overcharging or over - discharging. If the batteries are not used for a long time, perform a charge - discharge cycle every once in a while to maintain battery activity.

3. Safety Precautions

1. Do not disassemble the microphone privately to avoid damaging internal components or causing electric shock hazards. If maintenance is required, please contact professional personnel.
2. Avoid using the microphone in high - temperature, humid, flammable and explosive dangerous environments to prevent device damage or safety accidents.
3. When children use the microphone, adult supervision is required to prevent children from accidentally swallowing small parts of the microphone or causing other injuries.
4. If the microphone shows abnormal situations such as smoking, abnormal odor, or abnormal noise , stop using it immediately, turn off the power, and unplug the connection cable.