 


Intelligent visual doorbell

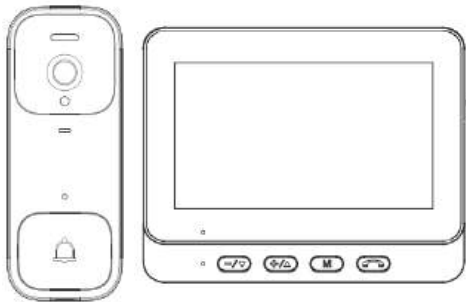

User manual- - -(P1-P3)

使用说明书---(P4-P6)

Bedienungsanleitung---(P7-P9)

Manual de usuario----(P10-P12)

Manuel d'utilisation----(P13-P15)

ユーザーマニュアル----(P16-P18)

사용자 설명서----(P19-P21)

Brugermanal----(P22-24)

Användarmanual---(P25-P27)

Instrukcja obsługi- --(P28-P30)

Gebruiksaanwijzing---(P31-P33)

Felhasználói kézikönyv----(P34-P36)

Uživatelská příručka---(P37-P39)

Manual do utilizador---(P40-P42)

Εγχειρίδιο χρήστη----(P43-45)

----- (P46-P48) دخت بسم الله الرحمن الرحيم

Istruzioni per l'uso----(P49-P51)



Please scan the QR code to watch the tutorial video

Information to User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 
--Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Instructions


doorbell

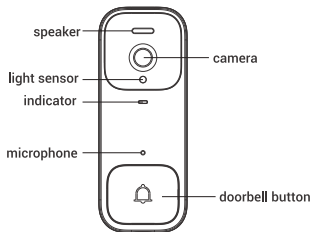

monitor

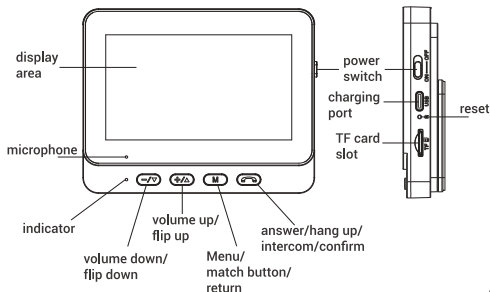 

Pairing Doorbell&Monitor

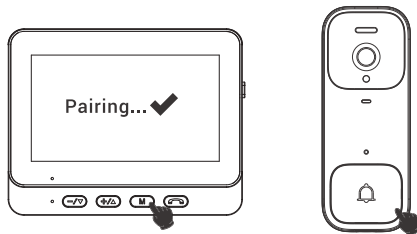 

1. power on the monitor, hold and press the "M" button, the LCD display shows "pairing... 30,29,28.." counting down, suggesting enters the pairing mode.
2. meanwhile, hold and press the doorbell button for 5 seconds.
3. the monitor display shows "pairing ...✓" suggesting paired successfully.

Icons Instructions

	menu/pairing/return		signal strength
	answer/hang up/intercom/confirm		intercom volume
	volume down/next		doorbell battery
	volume up/previous		monitor battery
	photo files		intercom icon
	video files		
	ringtones		
	settings		

Notes

- M** in Menu interface, M button is return to previous page
- ☎** in Menu interface, **☎** button is confirm function
when someone press doorbell, short press **☎** to answer/hang up.
hold and press **☎** to start intercom and talk to visitor.
the doorbell and monitor will both enter sleeping mode after hung up.

 
Photos: when someone press the doorbell, the camera will automatically capture the photo and save it in monitor device.(maximum 50 images)
after 50 images, it will automatically delete the first image and save the latest one.

Video recording: This function requires inserting the SD card, when someone press the doorbell, the monitor will automatically open the video recording.
cycle coverage, and save the latest video.




Tip: It is necessary to connect an external power supply to the monitor for long-term use. The built-in battery is only for temporary use,
Cannot be used for a long time without external power supply.

Monitor Instruction

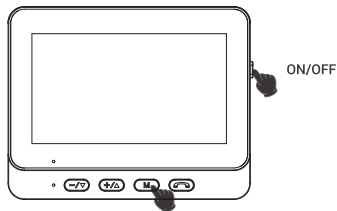

 1. Power on the monitor by switch button.
2. Screen shows "Disconnect".
3. Press **M** button to enter monitor menu(as below).



4. Press **- / ▾** or **+ / ▴** button to select.
5. Press **☎** button to confirm and enter the selected icon.
6. Press **M** button to return.
7. The monitor screen will auto sleep after 30 seconds without any operation.
8. Hold and press **☎** button for 3 seconds to wake up the monitor

System Setting

Select and Enter



1. Language: multiple languages for your selection
2. Brightness: adjust the monitor screen brightness
3. Ring Volume: adjust the monitor ring tone volume
4. Version: software versions
5. Time Setting: set up monitor's displaying time

Time Setting



YYYY	MM	DD	hh	mm
2024	02	22	11	40

Press  or  button to decrease/increase the number

press  to confirm.

After the adjustment is completed, press the M key to return

  Working Distance



Wide Open Spaces without Interference

Maximal Range about 80 meters(100%)



Wooden Door or Brick Wall

Maximal Range about 50 meters(70%)



Metal Door or Metal Surface Material

Maximal Range about 20 meters(30%)

Note: Due to interference from different users and surrounding environmental factors, please choose a suitable location for installation. Do not install the doorbell directly on thick walls such as large iron doors or large stone piers with a thickness exceeding 30cm