 


TIANNOYA

Space Heater

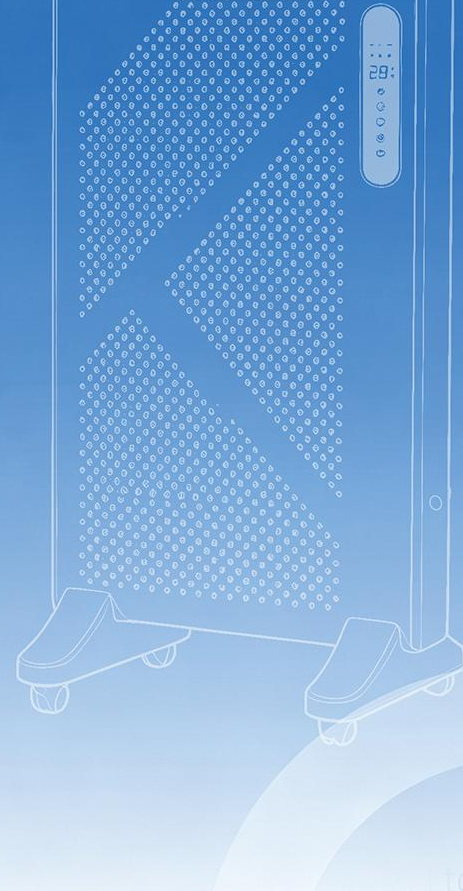

III. Before Use

1. Transportation and Storage

Handle the product with care during loading and transit. Do not throw, drop, roll, or drag it. Protect it from direct sunlight and rain.

 
The storage area must be well-ventilated, free of corrosive gases, and maintain a relative humidity of no more than 85%.

Do not place heavy objects on top of the packaging, store it outdoors, or stack more than six cartons high.

IV. Installation Options

This heater is designed for freestanding installation only.


★ FREESTANDING

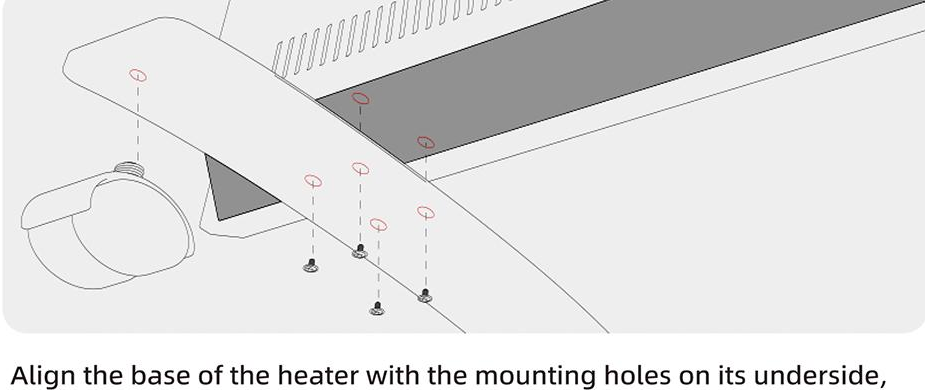


Align the base of the heater with the mounting holes on its underside, then secure it with screws.

Insert the caster wheels into the holes on the base and tighten the screws firmly.

 SAFETY INSTRUCTIONS

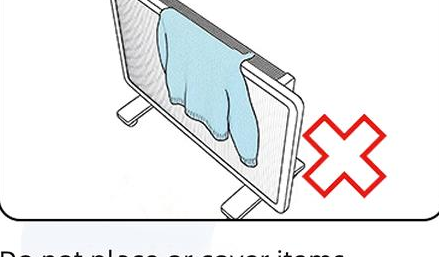

 
Do not place or cover items (e.g., clothing) on top of the heater.

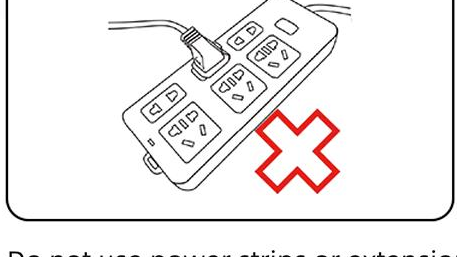


Do not use power strips or extension cords, as they may overheat or damage the plug due to excessive power draw.



 
Keep children and pets away from the unit to prevent injury or tipping.

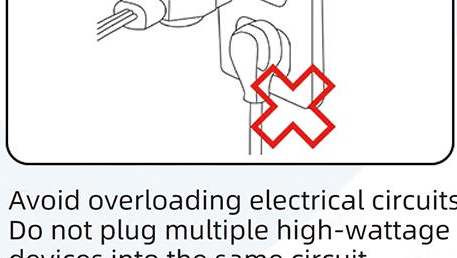

 Avoid overloading electrical circuits. Do not plug multiple high-wattage devices into the same circuit.

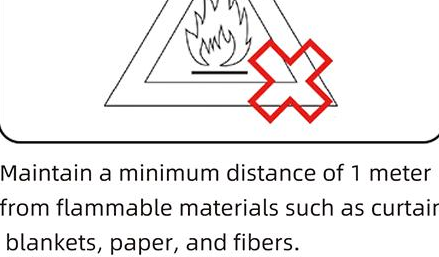


 Maintain a minimum distance of 1 meter from flammable materials such as curtains, blankets, paper, and fibers.

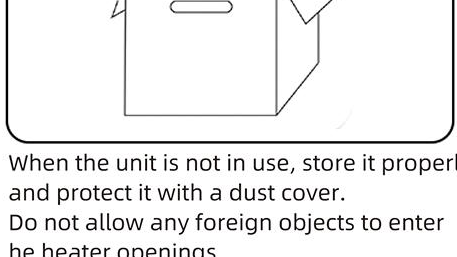

When the unit is not in use, store it properly and protect it with a dust cover. Do not allow any foreign objects to enter the heater openings.

 APP FUNCTION

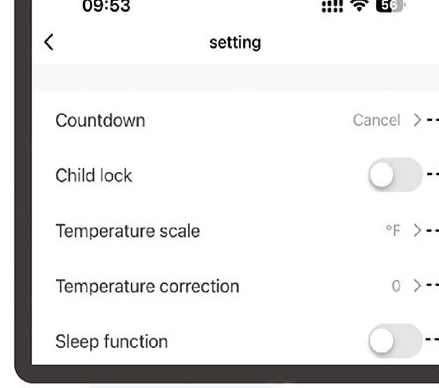


Turn on/off countdown

Turn on/off the Child lock

Toggle temperature unit

Adjust temperature calibration

 Turn on/off sleep mode

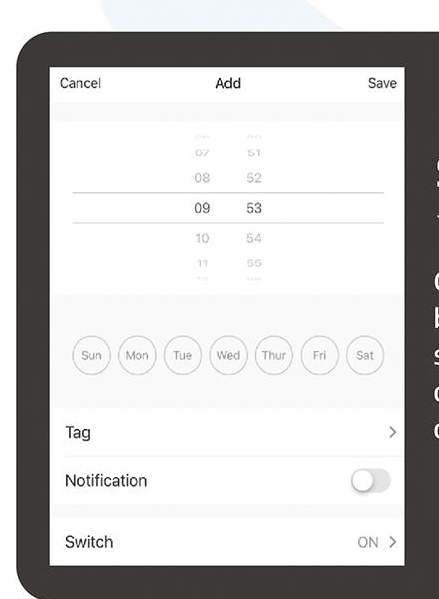


Schedule Function

Create a custom heating schedule based on your needs. You can set specific on/off times for each hour of the day and choose which days of the week the schedule repeats.

REMOTE CONTROL BUTTONS

Power Button, Mode Button, Timer Button, "+" Button, "-" Button, Sleep Button, Child Lock Button.

 The functions of the remote control buttons are the same as those on the control panel.

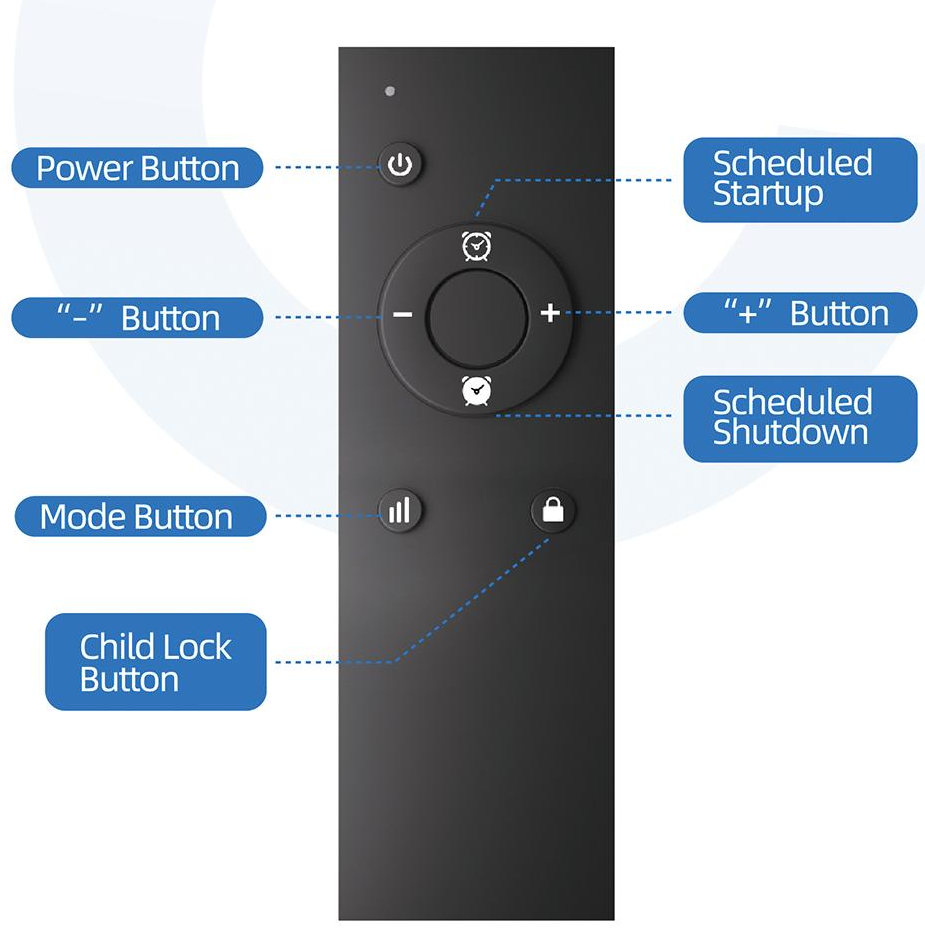

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described in this manual.

8. For indoor use only.

7. Operate this appliance only at the voltage specified on its rating label.

6. Always unplug the heater when not in use.

5. This heater becomes hot during use. To avoid burns, do not allow bare skin to touch hot surfaces. Always use the handle when moving the unit.

4. Plug this appliance directly into a wall socket. Power strips and extension cords are not designed to handle the high wattage of this heater.

3. To reduce the risk of fire, keep textiles, curtains, and any other flammable materials at a minimum distance of 1 meter from the air outlet.

2. Extreme caution is required when this heater is used by or near children or individuals requiring supervision, especially when left operating unattended.

1. DO NOT cover this heater. Covering the appliance may cause overheating or create a fire hazard.

12. Regularly inspect the power cord to ensure it is not damaged.

11. Place the appliance on a flat, stable, and heat-resistant surface.

10. Ensure hands are dry before touching the plug or the appliance.

9. Use this appliance only as described