

说明书



智能通话眼镜

前言

感谢您购买并使用本公司的产品,为了让您尽快轻松自如地操作本机,在您开始使用之前请仔细阅读本手册。

本机是一款设计时尚的便携式无线蓝牙眼镜。本机支持蓝牙协议,支持智能手机、平板电脑、笔记本等带蓝牙音频功能的设备,可让您彻底摆脱有线束缚,无拘无束享受音乐乐趣。

注意事项

切勿严重撞击主机。

◆切勿接触苯、稀释剂等化学药品。

◆请不要靠近强磁场、电场下使用。

>请避开直射光线或发热器具。

◆切勿自行拆卸、修理、改造。

◆骑车、驾驶汽车及摩托车时,请勿使用播放器,以免造成危险。

◆切勿以较大音量长时间收听,以免对听力造成不良影响。


◆切勿用清水清洁本机,请用稍稍湿润的布清洁本机表面即可。

◆低电压使用时可能引起声音失真并及时充电,长时间不使用时请断开电源。

◆蓝牙功能与常见的智能手机、平板电脑等兼容,但根据您所使用的设备或应用程序的不同,可能不支持某些功能。

◆请勿将设备置于温度过低或过高(0度以下或45度以上)的环境下。

产品结构及功能框图

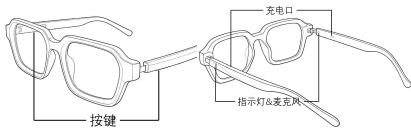

开机: 长按镜腿按键 3 秒开机

关机: 长按镜腿按键 5 秒关机

播放 / 暂停: 单击左 / 右按键

参数

产品型号: W12

蓝牙版本: v5.4

充电时间: 120 分钟

电池容量: 55mAh

传输距离: 大于 10 米

充电电压: 直流 5V

待机时间: 120 小时

声道: 双声道立体声


功能操作说明

- (1) 开关机: 关机时长按左右镜腿按键 3 秒开机, 开机时长按左右镜腿按键 5 秒关机。
- (2) 蓝牙连接: 左右镜腿开机后绿白灯交替闪烁, 打开手机蓝牙搜索并连接 W12。
- (3) 播放 / 暂停: 单击左 / 右按键。
- (4) 上一曲: 双击左按键。
- (5) 下一曲: 双击右按键。
- (6) 唤醒手机语音助手: 三击按键。
- (7) 接听 / 挂断电话: 单击左 / 右按键。
- (8) 拒接电话: 长按左 / 右按键 3 秒。
- (9) 恢复出厂设置: 未连接手机时四击按键。

充电操作

- (1) 眼镜充电: 磁吸线连接眼镜左右镜腿, 另一端接入 DC5V (如 PC 的 USB 接口, 5V 适配器)
- (2) 充电指示灯: 充电时绿灯常亮, 充满电时绿灯熄灭。

INSTRUCTIONS

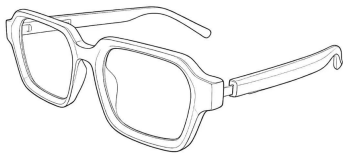

CX Smart Glasses

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FOREWORD

Thank you for purchasing and using our product. Please read this manual carefully before use to ensure proper operation. This product is a stylish and portable Bluetooth smart glasses device. It supports Bluetooth audio and is compatible with smartphones, tablets, laptops, and other Bluetooth-enabled devices, allowing you to enjoy a convenient wireless experience.

PRECAUTIONS

- Avoid strong impacts to the device.
- Keep the device away from chemicals such as benzene and thinners.
- Avoid direct sunlight and heat sources.
- Do not disassemble, repair, or modify the device yourself.
- Do not use the device while riding or driving to avoid danger.
- Avoid listening at high volume for long periods.
- Do not clean the device directly with water. Use a soft, slightly damp cloth for cleaning.
- Low battery power may cause sound distortion. Please recharge the device in time.
- Some Bluetooth functions may vary depending on the connected device or application.
- Do not use or store the device below 0°C or above 45°C.

PRODUCT STRUCTURE AND FUNCTIONAL BLOCK DIAGRAM

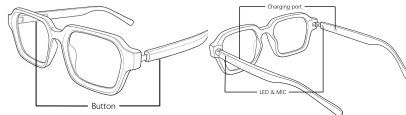

Power On: Long press button for 3s

Power Off: Long press button for 5s

Play/Pause: Single press L/R button

PARAMETER

Product Model: W12

Bluetooth Version: v5.4

Charging Time: 120 minutes

Battery Capacity: 55mAh

Transmission Distance: More than 10 meters

Charging Voltage: DC 5V

Standby Time: 120 hours

Audio Channels: Dual-channel Stereo

FUNCTIONAL OPERATION INSTRUCTIONS

- (1) Power On/Off: Press and hold the left or right temple button for 3s to power on. Press and hold the left or right temple button for 5s to power off.
- (2) Bluetooth: After powering on, the green and white LEDs flash alternately. Enable Bluetooth on your phone, search for W12, and connect.
- (3) Play/Pause: Single press the left or right button.
- (4) Previous Track: Double press the left button.
- (5) Next Track: Double press the right button.
- (6) Voice Assistant: Triple press the button.
- (7) Answer/End Call: Single press the left or right button.
- (8) Reject Call: Press and hold the left or right button for 3s.
- (9) Factory Reset: When not connected to a phone, press the button four times to clear pairing and restore factory settings.

CHARGING OPERATION

- (1) Charging: Connect the magnetic charging cable to the left and right temples, and connect the other end to a DC 5V power source (such as a PC USB port or 5V adapter).
- (2) Charging Indicator: The green LED stays on during charging and turns off when fully charged.