 


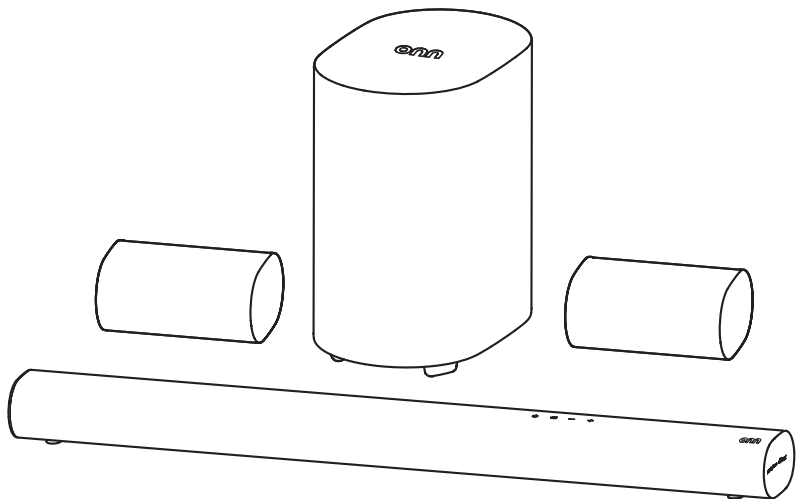

USER GUIDE

5.1.2 Channel Surround Soundbar System



100135495

Contents & Information

CONTENTS & INFORMATION

OVERVIEW	1
WHAT'S IN THE BOX?	5
WALL MOUNTING SETUP (OPTIONAL)	6
ASSEMBLY	7
FIRST TIME SETUP	10
OPERATION	13
CLEANING & CARE	19
SPECIFICATIONS	19
TROUBLESHOOTING	20

Features

- 5.1.2 Channels
- Dolby Atmos®
- DTS:X® + DTS® Virtual:X™
- Roku TV Ready®
- Bluetooth®
- 6 Internal speakers + 2 true wireless satellite speakers + 1 wireless subwoofer

Connections

- 1 x HDMI® IN
- 1 x HDMI® OUT (eARC)
- 1 x Optical
- 1 x AUX
- 1 x USB

Overview

SOUNDBAR

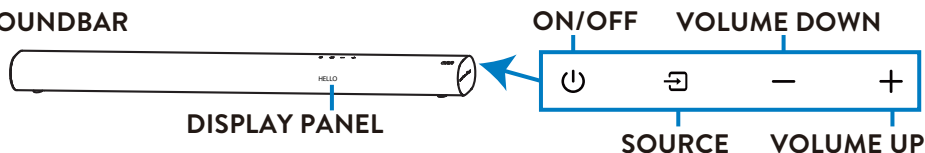 


Figure 1

SUBWOOFER

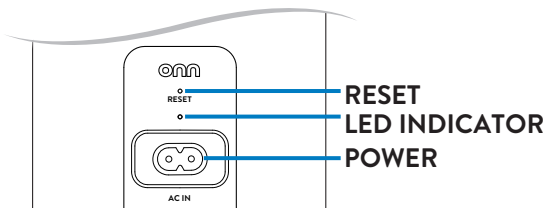 


Figure 2

SATELLITE SPEAKERS

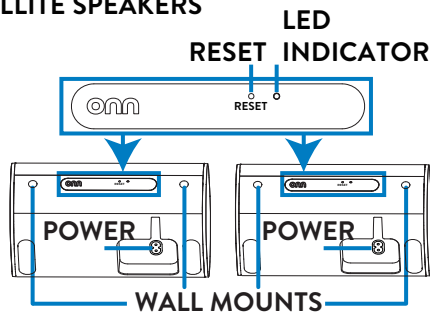 


Figure 3

OPTICAL AUDIO IN AUX AUDIO IN (STEREO 3.5MM)

POWER

HDMI OUT (eARC)

HDMI IN

USB (5V $\overline{\text{---}}$ 1A)

SOUNDBAR BACK



Figure 4

Function	Display	Action & Result
Power on / off	HELLO / BYE	Press  x 1 to power on / off the soundbar
Auto standby	AUTO STANDBY ON / AUTO STANDBY OFF	• Press and hold  for 3 seconds to go to auto standby setting after powered on • Press  /  to switch auto standby on / off • Press  / OK to confirm your selection
Input source scanning	SCAN	• Soundbar will search for the latest input source after powered on. If there's no input in 3 seconds, it will start to scan other wired input sources • Press  to quit input source scanning
HDMI (eARC/ARC)	eARC / ARC	• Press  to switch to HDMI(eARC/ARC) • Connect the soundbar to TV's HDMI(eARC) /ARC, and set the TV's source to HDMI(eARC/ARC)
HDMI IN	HDMI	Press  repeatedly to switch to HDMI IN
Optical	OPT	Press  repeatedly to switch to Optical
Aux in	AUX	Press  repeatedly to switch to AUX
USB	USB	Press  repeatedly to switch to USB
Bluetooth pairing /disconnect	BT PAIRING	Press  x 1 to trigger Bluetooth pairing
Bluetooth device connected	BT	Successfully connected your Bluetooth device to the Soundbar
Maximum/minimum volume	V MAX / V MIN	Press and hold  or  to set the sound level to maximum or minimum
Mute	MUTE	Press  x 1 to mute or unmute

Table 1

Function	Display	Action & Result
Sound mode	TALK / MUSIC / MOVIE	Press SOUND MODE repeatedly to switch between Talk/Music/Movie
Bass / Treble + / -	BA5+5 ~ BA5-5 / TRE+5 ~ TRE-5	Press + or - to increase/decrease the bass/treble level
DTS Virtual:X ON	VTR X ON / VTR X OFF	Press VRT:X to switch DTS Virtual:X on / off
Setting	CEN+5 ~ -5 > SRR+5 ~ -5 > SRL+5 ~ -5 > HGT+5 ~ -5	- Press  repeatedly or press  x1 then press ◀◀ / ▶▶ to select different channels - Press ▶▶/OK to quit the setting
Center + / -	CEN+5 ~ -5	- Press  x 1 to enter the center level setting - Press +/- to increase/decrease loudness of center speaker
Surround right level	SRR+5 ~ -5	- Press  x 2 or Press  x 1 then press ▶▶ x1 to enter the surround level setting - Press +/- to increase/decrease loudness of right surround
Surround left level	SRL+5 ~ -5	- Press  x 3 or Press  x 1 then press ▶▶ x2 to enter the surround level setting - Press +/- to increase/decrease loudness of left surround
Height Level	HGT+5 ~ -5	- Press  x 4 or Press  x 1 then press ▶▶ x3 to enter the height level setting - Press +/- to increase/decrease loudness of upfiring speakers

Table 2

REMOTE CONTROL

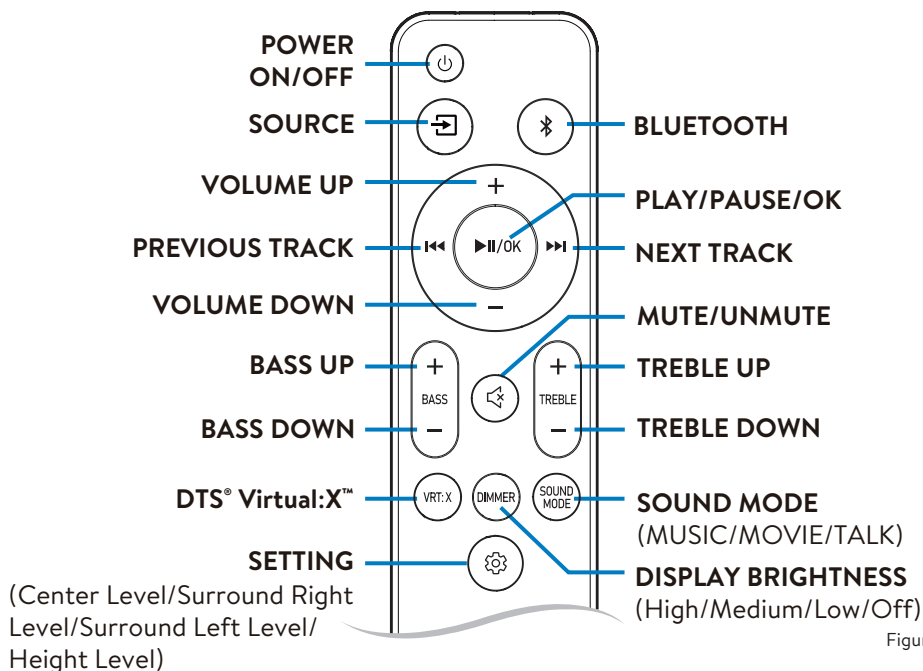 


Figure 5

*Press "VRT:X" to enable/disable Virtual:X. When enabled (On), all inputs will produce a virtual sound technology that simulates the effect of having overhead sound. When disabled (Off), all sources will playback without virtualization.

What's in the Box?

PARTS

Part	Description	Qty
1	Soundbar	1
2	Wireless subwoofer	1
3	Satellite speaker	2
4	Remote control (2 AAA batteries)	1
5	Power cable (4.92 ft) (for Soundbar and Subwoofer)	2
6	Power cable (6.56 ft) (for Satellite Speaker)	2

Part	Description	Qty
7	HDMI cable	1
8	Optical cable	1
9	3.5 mm AUX cable	1
10	Wall mounting template (for Soundbar)	1
11	Wall mounting template (for Satellite Speaker)	2
12	Wall mounting kit	1

Table 3

PARTS DIAGRAM

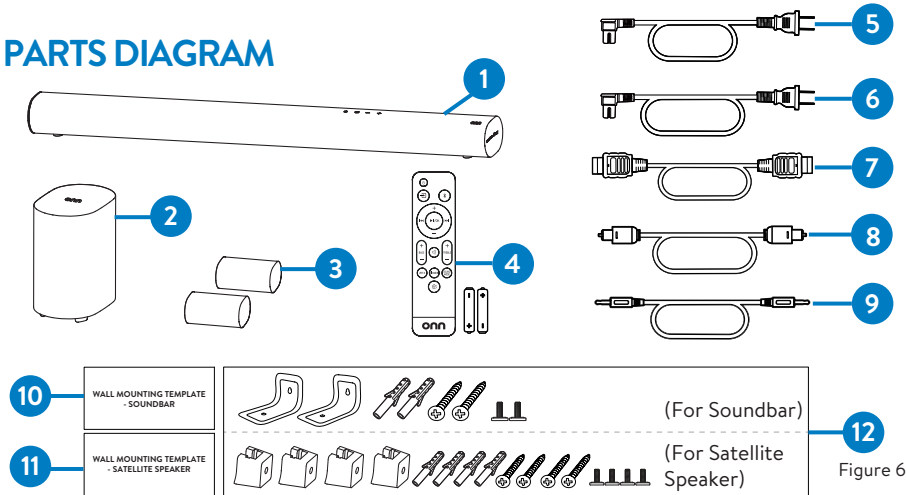 


Figure 6

Wall Mounting Setup (Optional)

SETUP

TOOLS NEEDED (NOT SUPPLIED)



Drill bit



Drill



#1 Phillips Screwdriver



Ruler



Level



Hammer

Table 4

ACCESSORIES NEEDED (SUPPLIED)

SOUNDBAR

Part	Description	Picture	Qty
A	Anchors		2
B	Short Screws		2
C	Long Screws		2
D	Brackets		2

Table 5


SATELLITE SPEAKERS

Part	Description	Picture	Qty
A	Anchors		4
B	Short Screws		4
C	Long Screws		4
D	Brackets		4

Table 6



 Wall mounting template (For Satellite Speakers)

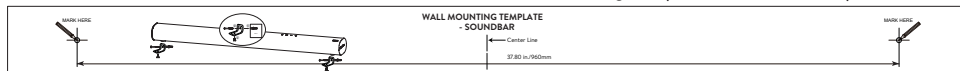

Wall mounting template (For Soundbar)

Figure 7

(Wall mounting, optional)

Assembly

ON A SURFACE



1A. CENTER

1. Center the soundbar below the TV, close to ear level.
2. Go to First Time Setup for further instructions.


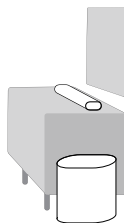 


Figure 8

 ON A WALL(SOUNDBAR)

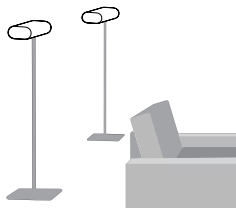

1B. PLACE

1. Place wall mounting template on wall under TV.
2. Mark Bracket holes (Ensure enough space between Soundbar and TV) See 3B. HANG.

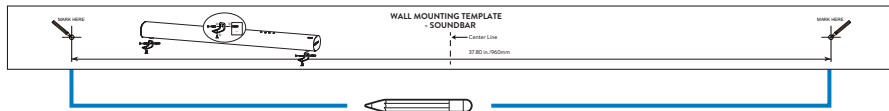 
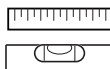 


Figure 9

- Be sure screws will be attached to wood studs or use anchors for drywall, or anchors for concrete or brick walls.

2B. INSTALL

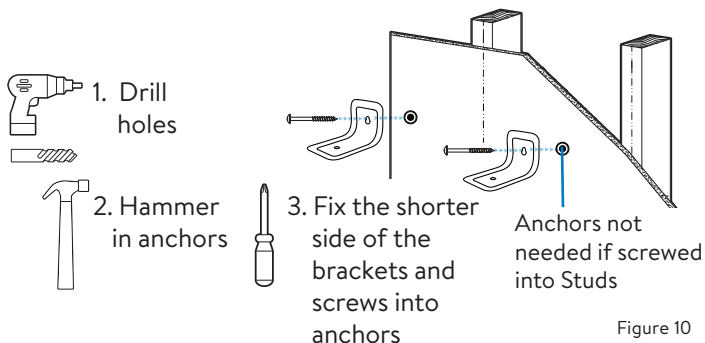 



Figure 10

REQUIRED

(A) Anchors x2



 (C) Long Screws x2



(D) Brackets x2



Table 7

3B. HANG

1. Go to First Time Setup to connect the cables.
2. Place soundbar onto the L-shaped bracket holder and use the included short screws to attach.

REQUIRED

(B) Short Screws x2



Table 8

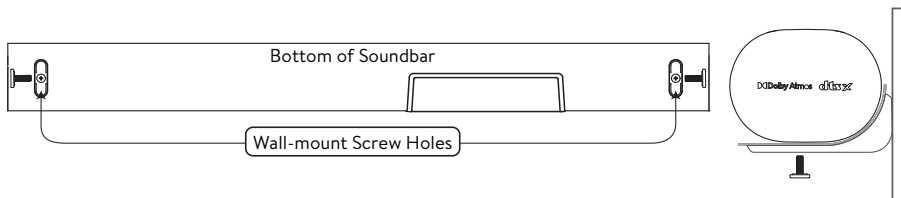 


Figure 11

ON A WALL(SATELLITE SPEAKER)

1B. INSTALL

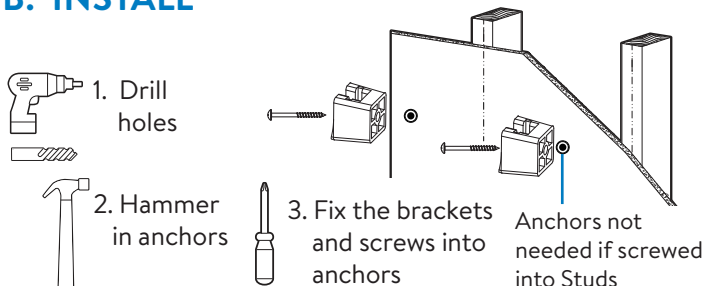 



Figure 12

REQUIRED

(A) Anchors x4



 (C) Long Screws x4



(D) Brackets x4



Table 9

2B. HANG

1. Go to First Time Setup to connect the cable.
2. Attach the wall mount screw to the back of the satellite speakers.
3. Slide the speakers on to the wall brackets. Ensure the wall mount screw is secured within the bracket grooves.

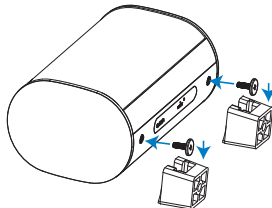 


Figure 13



Note: Make sure wall mount orientation matches example

REQUIRED

(B) Short Screws x4




Table 10

⚠ CAUTION: If you are unfamiliar with power tools or layout of electrical wiring in the walls of your home, consult a professional installer.

First Time Setup

1. CHOOSE A CABLE

 Connect one cable to Soundbar and TV

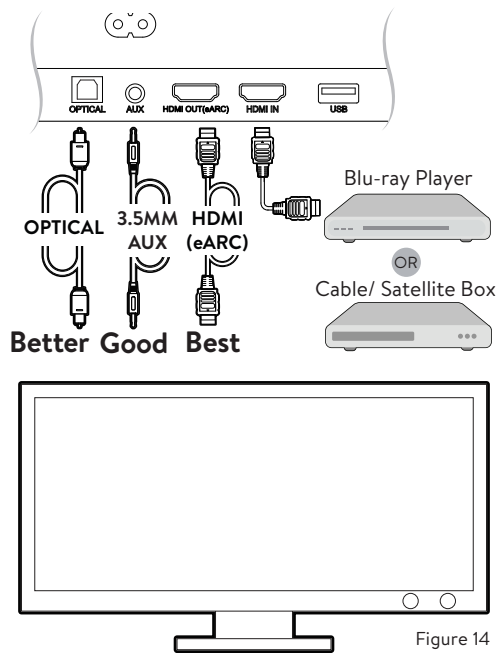

- To Enjoy **Dolby** Atmos or DTS:X® content, your TV must support HDMI-CEC and enhanced Audio Return Channel (eARC) function.
- Enable CEC and ARC/eARC on TV
- Settings for CEC and ARC/eARC may differ by TV manufacturer. See TV's user guide for more.
- To control soundbar volume on TV remote, enable System Audio Control in CEC menu.
- CEC Function naming may differ by TV Manufacturer. See TV's user guide for more.
- Only HDMI 2.0 cables (and higher) support eARC.
- * If no Audio using Digital Inputs see troubleshooting.

Tips: If you have a Roku TV®, setup will be easy. Just use the included HDMI cable to connect your soundbar to the HDMI (ARC/eARC) port on your TV and follow the on-screen instructions.

2. CONNECT SATELLITE SPEAKERS

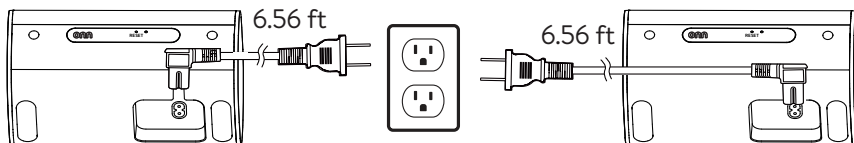 


Figure 15

3. CONNECT SOUNDBAR & SUBWOOFER


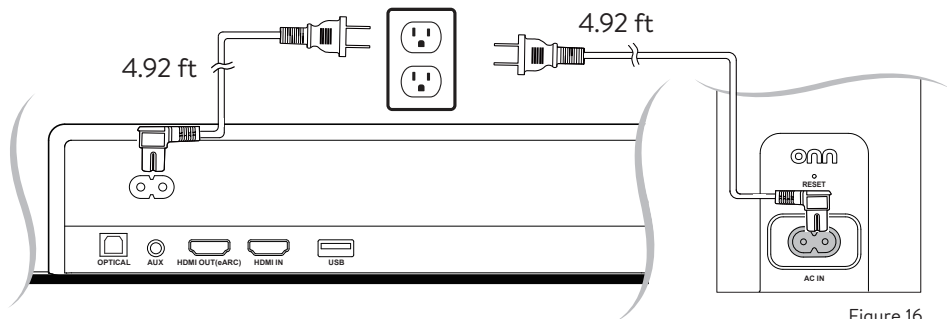 



Figure 16

4. INSTALL BATTERIES

 
In remote control

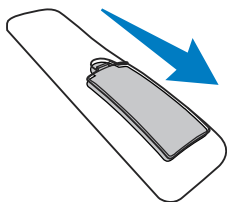

Remove battery door

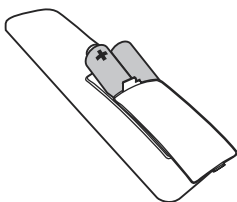 

Insert batteries

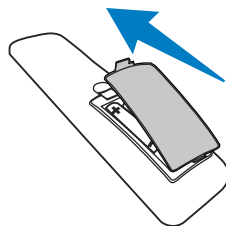 

Close battery door

Figure 17



WARNING

Do not mix old and new batteries.



WARNING

 
Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Operation

CONNECT SUBWOOFER & SATELLITES



1A. AUTOMATIC PAIRING

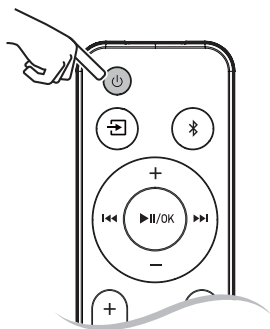

-OR-


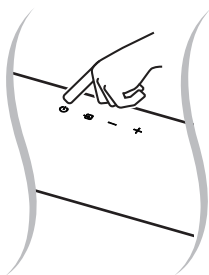 


Figure 18

 Power on the Soundbar, then it will pair with Subwoofer and Satellites automatically within 3-5 seconds.

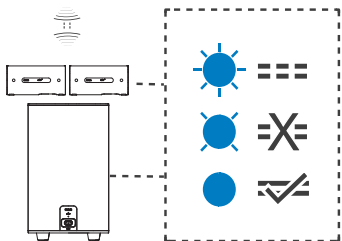

LED State	Status
Flashing blue	In pairing mode
Breathing blue	Connection/Pairing Failed
Solid blue	Connected/Pairing successful

Table 11

 
*Remark: If the pairing is not successful, please unplug and plug them again into the power supply.

CONNECT SUBWOOFER & SATELLITES

1B. MANUAL PAIRING (IF AUTOMATIC PAIRING FAILED)


1. Plug into the power supply.
2. Press and hold the reset hole of the subwoofer and satellite speakers for 1 second with a pin.
3. Press "⏻" and "-" simultaneously for 3 seconds on the soundbar or remote control.
4. When wireless connection is successful, the indicator will be solid blue.

The indicators will flash rapidly when pairing

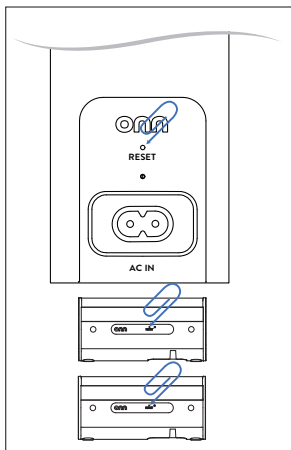

WARNING

 Place the subwoofer and satellite speakers within 8m range of the soundbar.

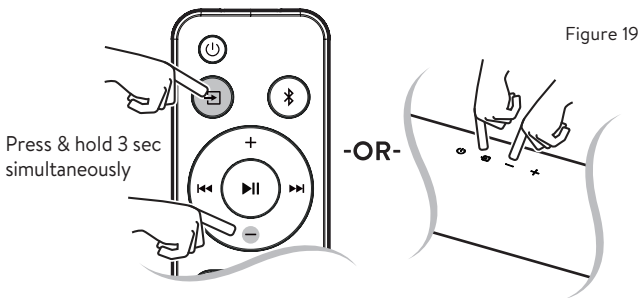


BLUETOOTH® OPERATION



1. POWER ON/OFF

 Soundbar
(Remote Control or Soundbar)

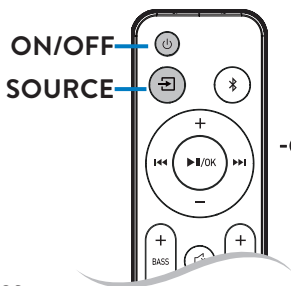

-OR-


 
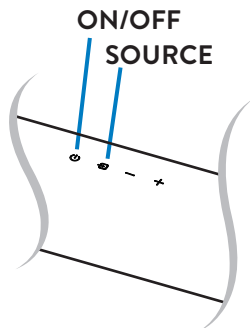 


Figure 20

2. SELECT SOURCE

To switch between audio sources
(Remote Control or Soundbar)
Or press  x1 on the remote
control to go to the Bluetooth
source directly

 Press and hold

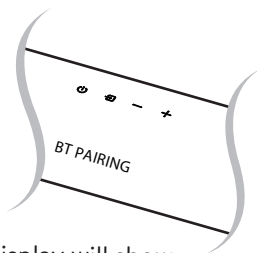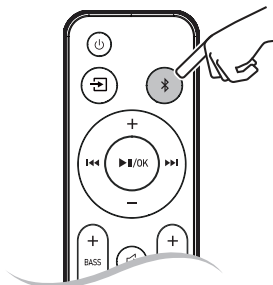

Display will show
BT PAIRING



Figure 21

3. PAIR DEVICE

Press and hold the  button
on remote control

4. SEARCH ON DEVICE

  Select "onn 5.1.2 Soundbar" on device

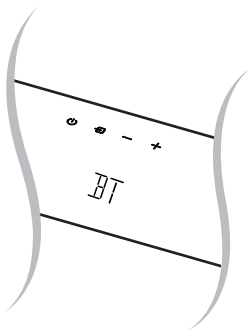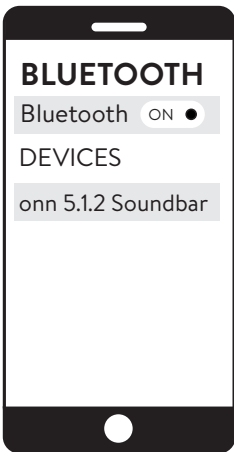

Device is connected
when display shows BT



IMPORTANT

Soundbar does not include microphone and cannot operate as hands-free device.

Figure 22

5. PLAY AUDIO

From device

6. VOLUME

Controlled by Device, Remote Control or Soundbar



WARNING

High volume levels can damage your hearing. Reduce the volume levels before pressing Play.

Bluetooth use

Your Soundbar supports music streaming from smartphones, tablets, and computers with Bluetooth capability.

Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the Soundbar, as long as you stay within range of the Soundbar, your device should remain paired.

If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

USB OPERATION



1. INSERT THE USB DEVICE

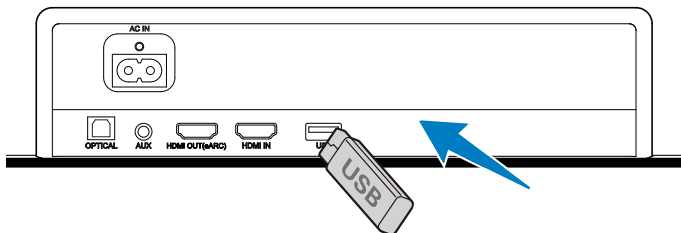 


Figure 23

2. SELECT SOURCE

Select USB Mode(Remote Control or Soundbar  button)

3. PLAY AUDIO

Tips: Support USB music of MP3 format.

Button	Action
▶ /OK	Play, pause or resume play.
◀◀/▶▶	Skip to the previous or next track.
+/-	Increase/decrease the volume.

Table 12

Cleaning & Care

CLEANING

- Wipe down surfaces with a light cloth.
- Never use abrasive pads to clean device.
- Avoid using liquids to clean device.



CAUTION

Ensure the unit is fully unplugged from the power supply before cleaning.

Specifications

Assembled LxWxH

Soundbar: 42 x 4.3 x 3.2 Inches

Subwoofer: 8.2 x 11.8 x 13.9 Inches

Satellite Speaker: 6.5 x 4.3 x 3.2 Inches

Troubleshooting

Problem	Cause	Solution
No power	Power off	Press "⏻" button on remote control or Soundbar
	Loose power cord	Ensure the power cord is securely connected
	Faulty outlet	Plug a different device into the electrical outlet to verify that the outlet is working correctly
No audio	Low Volume / Mute	Press "🔊" " Increase volume
	Some TVs do not Pass through Digital Audio*	Change TV output to PCM
	Input source	Select different Input source
	Not All TVs have Audio outputs listed	Connect directly to another device (Blu-Ray, Game System, etc.)
	TV set to variable audio output	Set audio output to fixed or standard, NOT variable
	Bluetooth source device	Increase volume / unmute source device
	Audio source is mono**	Switch to a stereo or multi-channel audio source

Table 13

*Consult your TV's user manual for more detailed information.

**When the audio source is mono, it cannot get through to upfiring speakers.

Problem	Cause	Solution
Bluetooth breakup or disconnect	Subwoofer is too distant from Soundbar	The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 8m range of the soundbar
	Source too far	Move the source device closer to soundbar
	Solid obstruction	Move source device into line-of-site of soundbar
	Other wireless devices	Turn off / move devices away (wireless security cameras,wireless video baby monitors, cordless phones, and microwave ovens

Table 14

onn

For product assistance &

WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

SAVE THIS USER GUIDE

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at **Walmart.com**

Manufactured in China for Walmart Inc.