 
 


onn

USER GUIDE

Wireless Keyboard and Mouse

With Dual-Connectivity USB Receiver

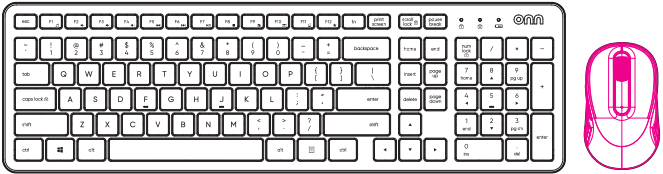

HOGRY36017808\_EN\_October 18, 2025\_V1

Contents & Information

CONTENTS & INFORMATION 2-3

OVERVIEW 4-5

SAFETY PRECAUTIONS 6-7

OPERATION 8

Setting Up Keyboard and Mouse 8-11

WARRANTY 12

SPECIFICATIONS 12

TROUBLESHOOTING 13



SCAN HERE FOR MORE PRODUCT INFORMATION AND LEAVE US A REVIEW!

2

FEATURES

- 2.4GHz wireless connection with USB nano receiver (stores in battery compartment when not in use)
- Windows, MacOS, and ChromeOS compatible
- USB plug-and-play

Keyboard:

- Full keyboard layout with 104 keys
- LED indicator for Number Lock, Caps Lock and Battery status
- 5 Silent clickable buttons, scroll wheel, and on/off switch

 
Mouse:

- 5 Clickable buttons, scroll wheel and on/off switch
- 1600 DPI sensitivity

Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.


3

Overview

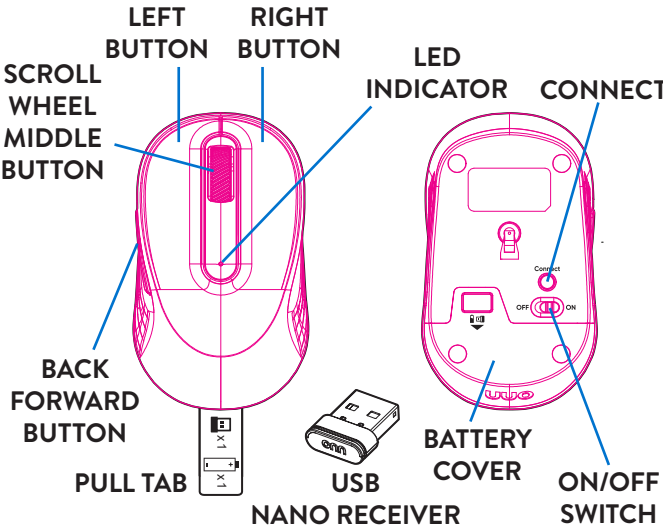

LEFT BUTTON, RIGHT BUTTON, SCROLL WHEEL MIDDLE BUTTON, BACK FORWARD BUTTON, PULL TAB, USB NANO RECEIVER, LED INDICATOR, BATTERY COVER, ON/OFF SWITCH, CONNECT

 4

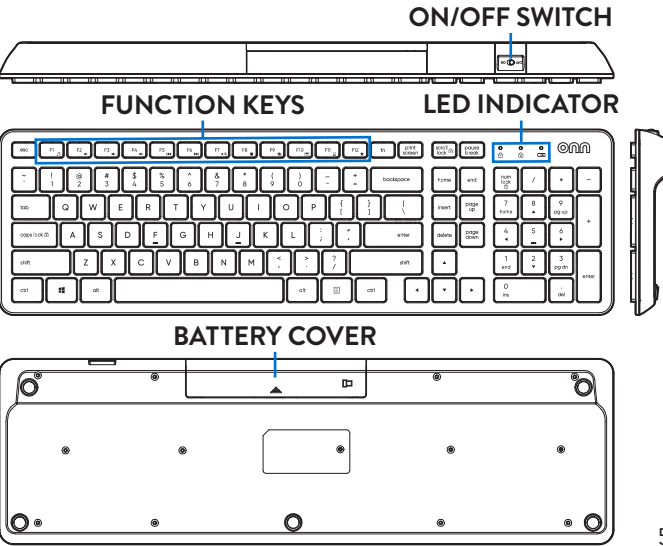

ON/OFF SWITCH, FUNCTION KEYS, LED INDICATOR, BATTERY COVER

5

Safety Precautions

 WARNING

FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

6

 WARNING

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Radiation Exposure Statement:**  
The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

7

onn

For product assistance & missing or replacement parts: WE CAN HELP

1-888-516-2630

7 DAYS/WEEK  
7:00am - 9:00pm CST

Find more at Walmart.com

 
THIS GUIDE CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Operation, Setting Up Keyboard and Mouse

1. ACTIVATING BATTERY


Note: Replace batteries when low battery LED indicator blinks.

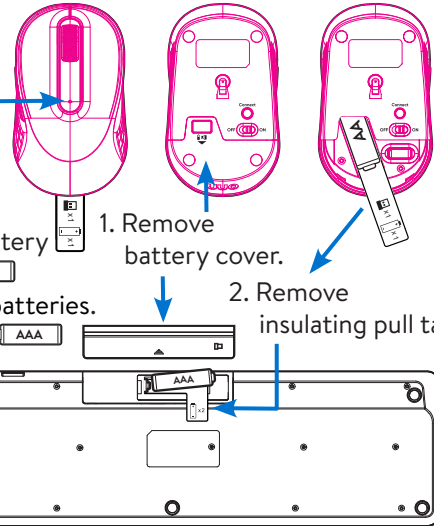

1. Remove battery cover. 2. Remove insulating pull tab. 3. Mouse: Insert 1 x AA battery Keyboard: Insert 2 x AAA batteries.

8

 
2. INSTALLING RECEIVER

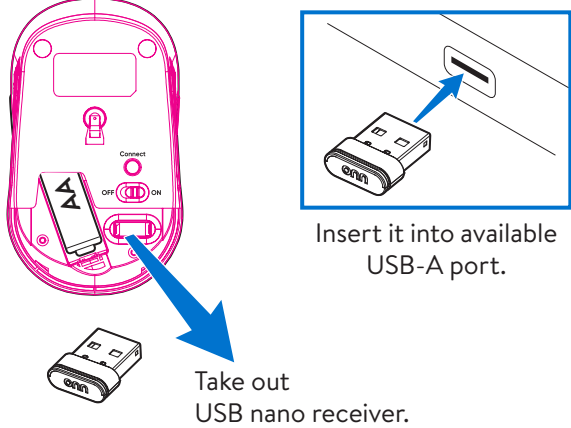

Insert it into available USB-A port. Take out USB nano receiver.

9

 3. POWER ON

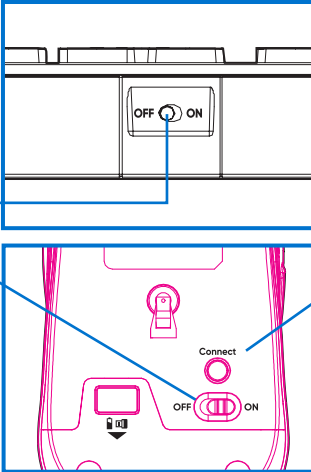

Turn on power. Press Connect if device has lost connection.

10

4. FUNCTION KEYS

Function Keys

- 🎵 Fn+F1 - Media select
- ⏮ Fn+F2 - Volume down
- ⏭ Fn+F3 - Volume up
- 🔇 Fn+F4 - Mute
- ⏮ Fn+F5 - Previous track
- ⏭ Fn+F6 - Next track
- ⏸ Fn+F7 - Play/Pause
- Fn+F8 - Stop (Media)
- 🏠 Fn+F9 - Homepage
- ✉ Fn+F10 - Default mail program
- 💻 Fn+F11 - My computer
- ★ Fn+F12 - Favorites

LED Indicator

- 🔒 Number lock
- 🔒 Caps lock
- 🔋 Low Battery Indicator (Replace batteries when it blinks)

11

Warranty

 YEAR LIMITED WARRANTY COVERING DEFECTIVE PARTS

Contact Manufacturer for Additional Information

- This warranty is non-transferable and does not cover failures due to misuse of proper installation or maintenance.
- All warranty coverage applies only if barricade is used in the United States.

12

Specifications

Mouse

5 Buttons

Dimensions - Mouse

4.16 x 2.45 x 1.52 inch  
10.5 x 6.2 x 3.8 cm

Operating System

Windows® 7/8/10/11 or later, MacOS 10.5 or later, Chrome OS

Keyboard

104 keys

Dimensions - Keyboard

16.7 x 5.03 x 1.09 inch  
42.4 x 12.7 x 2.7 cm

13

Troubleshooting

| Problem              | Cause                                           | Solution/Prevention                                                                                                                            |
|----------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Combo is not working | The USB port on computer may have an issue      | Try a different USB port. If the device is connected through a USB hub or extender, try plugging directly into the USB port of your Laptop/PC. |
|                      | The USB nano receiver is not plugged in tightly | Ensure USB nano receiver is pushed in all the way.                                                                                             |
|                      | Batteries placed in the wrong direction         | Match + and - signs on battery to signs in battery compartment.                                                                                |

|                                                                                                                                    |                                                                               |                         |
|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|-------------------------|
| Project Name: HOGRY36017808 (KGC G7K_2.4G Wireless Keyboard and Mouse) Walmart USA-onn USER GUIDE (Vietnam)_V1_Outline_20251121.ai |                                                                               |                         |
| REV. 1                                                                                                                             | 印刷順序：印1色+1特色，*雙面印刷，左右彈簧折6折                                                    | PROCESS COLORS          |
| DATE: 2025.11.21                                                                                                                   | 紙 質：70g双胶紙                                                                    | <div>Pantone 285C</div> |
| 比例 1:1                                                                                                                             | 尺 寸：<br>未折合前-寬26.25 x 長3.75 inch<br>折合後-寬3.75 x 長3.75 inch (9.525 x 9.525 cm) | <div>K:100</div>        |
| 裁切線<br>折線                                                                                                                          |                                                                               | 製作者：Megan               |
| 簽 核：                                                                                                                               |                                                                               |                         |