

This document is watermarked because certain important information in the document has not yet been verified.
This document has been sent to you as a draft and for informational purposes only.
The document should only be used for internal purposes and may not be distributed outside of the company.
Distributing the document outside of the company could result in legal exposure to the company if the preliminary,
unverified information in the draft turns out to be inaccurate.

Samsung GALAXY J1™

SMARTPHONE

User Manual



Please read this manual before operating your device
and keep it for future reference.

DRAFT
FOR INTERNAL USE ONLY

Legal Notices

Warning: This product contains chemicals known to the State of California to cause cancer and reproductive toxicity. For more information, please call 1-800-SAMSUNG (726-7864).

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to

create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: <http://opensource.samsung.com>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND

SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

Samsung KNOX™

Samsung Knox™ is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to:

www.samsung.com/us/knox. [030115]

DRAFT
FOR INTERNAL USE ONLY

Samsung Electronics America (SEA), Inc

Address:

85 Challenger Road
Ridgefield Park,
New Jersey 07660

Phone:
1-800-SAMSUNG (726-7864)

Internet Address:

www.samsung.com

©2015 Samsung Electronics America, Inc.
Samsung, Galaxy, Galaxy Note, S Pen, Multi window,
and S Health are registered trademarks of
Samsung Electronics Co., Ltd.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: www.samsung.com/us/support

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

DRAFT
FOR INTERNAL USE ONLY

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Mail, Google Maps, Google Music, Google Hangouts, Picasa, Play Newsstand, YouTube, and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc.

Online Legal Information

The online version of the Health/Safety and Warranty guide for your device can be found at:

English

www.samsung.com/us/Legal/Phone-HSGuide

Spanish

www.samsung.com/us/Legal/Phone-HSGuide-SP

The online version of the **End User Licensing Agreement** for your device can be found online at:
www.samsung.com/us/Legal/SamsungLegal-EULA3.

DRAFT
FOR INTERNAL USE ONLY

Table of Contents

Getting Started.....	1	Google Applications	40
Front View	2	Verizon Applications	43
Back View	4	Calculator.....	45
Assemble Your Device	6	Calendar.....	46
Set Up Your Device.....	10	Camera and Video	47
Secure Your Device	11	Chrome.....	51
Set Up Accounts on Your Device	12	Clock.....	52
Know Your Device	13	Contacts.....	54
Home Screen	14	Email	61
Status Bar	20	Emergency Alerts.....	63
Touchscreen Navigation	22	Gallery	64
Notification Panel	24	Help.....	67
Enter Text.....	26	Memo	68
Calling.....	29	Message+.....	69
Make and Answer Calls	30	Messages.....	72
Applications.....	36	Music Player.....	75
Apps Screen.....	37	My Files	77
		Video Player	80
		Voice Recorder.....	82

Settings.....	83
How to Use Settings.....	84
Airplane Mode.....	85
Wi-Fi and Wi-Fi Direct.....	86
Bluetooth.....	90
Data Usage.....	93
More Settings.....	94
Sound and Notification	100
Display Settings.....	104
Wallpaper Settings.....	107
Lock Screen.....	108
Storage.....	110
Battery.....	113
Ultra Power Saving Mode.....	114
Applications.....	115
Easy Mode.....	120
Location Services	121
Security Settings.....	123
Accounts.....	126
Language and Input Settings.....	128
Backup and Reset.....	131
Date and Time Settings.....	133

Accessibility	134
Printing	136
Help.....	137
About Your Device	138
System Updates	139

DRAFT
FOR INTERNAL USE ONLY

Getting Started

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

DRAFT
FOR INTERNAL USE ONLY

Front View




DRAFT
FOR INTERNAL USE ONLY

Here are some key features on the front and sides of your device.

- **Back:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Earpiece:** Listen to a call.
- **Front camera:** Take pictures and record videos of yourself.
- **Home:** Press to return to the Home screen. Activate the Fingerprint security feature.
- **Power/Lock key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane mode and Emergency mode.
- **Proximity and light sensors:** Detects the presence of objects near the device.
- **Recent apps:** Tap to display recent apps, or touch and hold for home screen options.
- **Status light:** Displays red when charging or the battery is low, blue when a notification has arrived or you are voice recording, and green when fully charged.
- **Volume keys:** Press to adjust the volume of your device's sounds and audio.

DRAFT
FOR INTERNAL USE ONLY

Back View

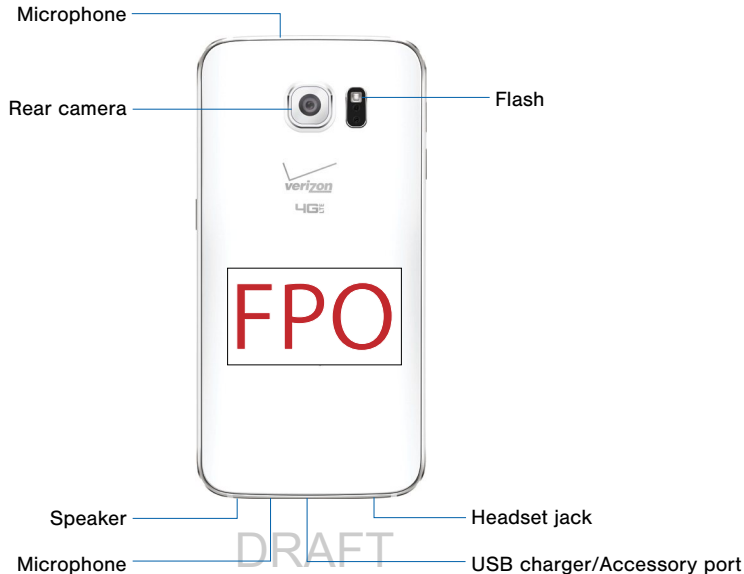

Here are some key features found on the back and sides of your device.


- **Flash:** Illuminate subjects in low-light environments when taking a photo or recording video.
- **Headset jack:** Connect an optional headset.
- **Heart Rate Sensor:** When using the S Health app, this sensor measures your heart rate via your fingertip.
- **Microphone:** Records audio and detects voice commands.
- **Rear camera:** Take pictures and record videos.
- **Speaker:** Plays music and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

DRAFT
FOR INTERNAL USE ONLY

Assemble Your Device

This section helps you to assemble your device.

Remove the Back Cover

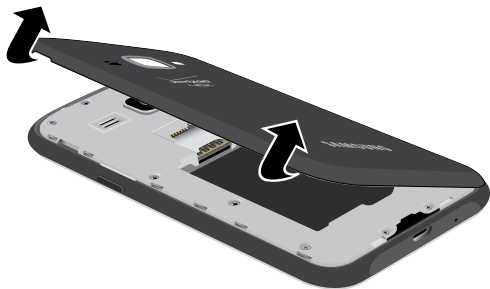

1. Remove the back cover using the slot on the side of your phone.
2. Lift the cover up and to the right of the phone.


Warning: Do not bend or twist the back cover excessively. Doing so may damage the cover.

Install the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card will be loaded with your subscription details, such as your PIN, available optional services, and other features.

Warning: The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

DRAFT
FOR INTERNAL USE ONLY

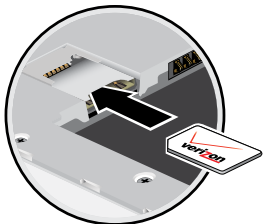

- Carefully slide the SIM card into the SIM card slot.

Make sure that the card's gold contacts face into the device and that the upper-left angled corner of the card is positioned as shown.

Caution: If the card is not inserted correctly, the device will not detect the SIM card. Re-orient the card and place it back into the slot if the SIM is not detected.


Install a Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [“Install a Memory Card” on page 110](#).


Install the Battery

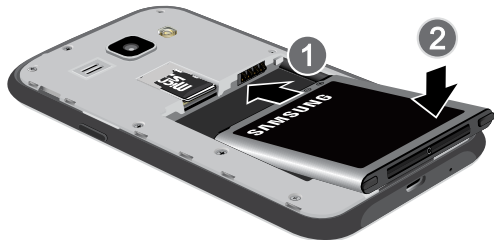

1. Insert the battery into the opening on the back of the phone, making sure the connectors align.
2. Gently press down to secure the battery.

DRAFT
FOR INTERNAL USE ONLY

Replace the Back Cover

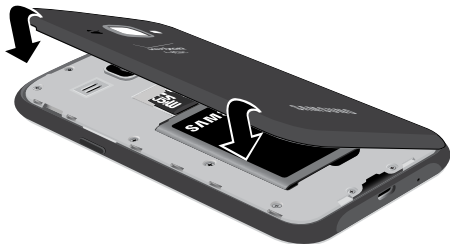


1. Place the back cover onto the back of the phone and press down.
2. Press along the edge of the back cover until you have a secure seal.

Charge the Battery

Note: For fastest charging times, use the Adaptive Fast Charging charger that came with your phone. This charger provides faster charging only when connected to devices that support Adaptive Fast Charging.

Caution: Use only Samsung-approved charging devices. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

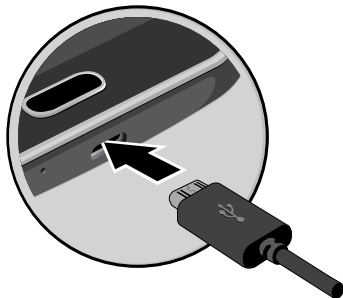

DRAFT
FOR INTERNAL USE ONLY

1. Insert the USB cable into the port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. When charging is complete, unplug the charging head from the outlet and remove the USB cable from the device.

When to Charge the Battery

When the battery is weak and only a few minutes of operation remain, the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, view the battery charge indicator located in the upper-right corner of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see [“Battery” on page 113](#).

DRAFT
FOR INTERNAL USE ONLY

Set Up Your Device

Turn Your Device On and Off

Turn the Device On

- Press and hold the **Power/Lock** key until the device starts up.

Turn the Device Off

1. Press and hold the **Power/Lock** key until the Device options menu displays.
2. Tap **Power off**.

Welcome Screen

The first time you turn your device on, the Welcome Screen displays. It will guide you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi network, set up accounts, choose location services, learn about your device's features, and more.

DRAFT
FOR INTERNAL USE ONLY

Secure Your Device

Use your device's screen lock features to secure your device.

Lock the Device

By default, the device locks automatically when the screen times out.

- To lock the device, press the **Power/Lock** key.

Unlock the Device

The default Screen lock on your device is Swipe.

- To unlock your device, press the **Power/Lock** key or **Home** key, and then touch and drag your finger across the screen.

Set Up a Secure Screen Lock

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see ["Set a Screen Lock" on page 108.](#)

DRAFT
FOR INTERNAL USE ONLY

Set Up Accounts on Your Device

Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play Store.

When you turn on your device for the first time, set up your existing Google Account, or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [“Accounts” on page 126](#).

► From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Google**.

Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account, or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [“Accounts” on page 126](#).

► From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Samsung account**.

DRAFT
FOR INTERNAL USE ONLY


Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

DRAFT
FOR INTERNAL USE ONLY

Home Screen

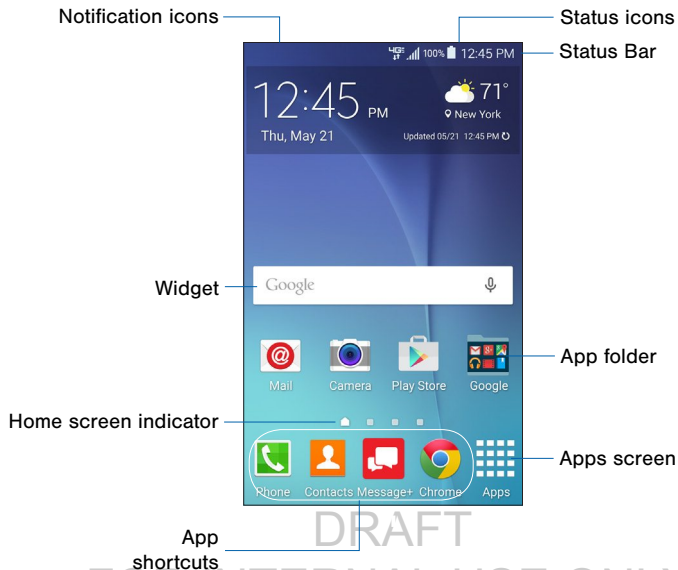

DRAFT
FOR INTERNAL USE ONLY

Here are some features of the Home screen.

- **App folder:** For your convenience, there are several applications that are grouped into folders on the main Home screen.
- **App shortcuts:** Shortcuts to your favorite applications.
- **Apps screen:** Allows quick access to all of your applications.
- **Home screen indicator:** Indicates which Home screen is presently displayed.
- **Notification icons:** Display new messages and emails, notifications, available software updates, and so on.
- **Status Bar:** Displays device status icons (right) and notification icons (left).
- **Status icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widget:** Self-contained application that runs on the Home screen (not shortcuts).

DRAFT
FOR INTERNAL USE ONLY

The Home screen is the starting point for using your device.

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens

Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.

– or –

Touch and hold an empty space on the screen.

2. Use these options to manage screens:

- **Add a screen:** Scroll to the end of the screens, and then tap  **Add**.
- **Remove a screen:** Touch and hold on a screen, and then drag it to  **Remove**.
- **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home key.
- **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.

DRAFT
FOR INTERNAL USE ONLY

Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.

– or –

Touch and hold an empty space on the screen.

2. Tap **Wallpapers**.

For details on viewing and changing wallpapers, see [“Wallpaper Settings” on page 107](#).

To access Wallpaper settings:

- From a Home screen, tap  **Apps** >  **Settings** > **Wallpaper**.

Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Add a Widget to a Home Screen

1. Touch and hold an empty space on the screen, and then tap **Widgets**.
2. Touch and hold a widget, drag it to a Home screen, and then release it.

Remove a Widget

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to  **Remove** and release it.

Note: Removing a widget does not delete the widget, it just removes the widget from the Home screen.

DRAFT
FOR INTERNAL USE ONLY

App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and then release it.

Remove a Shortcut

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to  **Remove** and release it.

Note: Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

Folders

Place folders on a Home screen to organize items.

Add a Folder to a Home Screen

1. From a Home screen, touch and hold an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
3. Enter a folder name.
4. Tap  **Add** to place additional apps in the folder.
5. Tap **Done**. A folder is created with the shortcut(s) inside.

DRAFT
FOR INTERNAL USE ONLY

Using Folders

- Tap a folder to open it and access the shortcuts inside.
- To add shortcuts to a folder, touch and hold the shortcut, and then drag it onto the folder and release.
- To delete a folder, touch and hold a folder until it detaches, and then drag it to  **Remove** and release.

DRAFT
FOR INTERNAL USE ONLY

Status Bar

The Status Bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left side.

Status Icons



Battery is fully charged.



Battery is low.



Battery is charging.



Vibrate mode is enabled.

Status Icons



Mute mode is enabled.



The device is connected to a 4G LTE wireless network.



Signal strength.



Wi-Fi is active.



No wireless network is available.



NFC (Near-Field Communication) is enabled.

DRAFT

FOR INTERNAL USE ONLY

Notification Icons



Missed call.



Call in progress.



Call is on hold.



Call is using speakerphone.



New email has arrived.



New Gmail has arrived.



New voicemail message has been received.



New text or multimedia message has arrived.



Download of a file or app is in progress.

Notification Icons



File is being uploaded or sent.



App updates are available from the Google Play Store.



App updates are complete.



Keyboard is in use.

DRAFT

FOR INTERNAL USE ONLY

Touchscreen Navigation

Tap

Lightly tap items to select or launch them.

- Tap the onscreen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture.

- Touch and hold a widget on the Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe or Slide

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

Drag

To drag, touch and hold on an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to place it in a new location on a Home screen.

DRAFT
FOR INTERNAL USE ONLY


Pinch and Spread

Pinch the screen using your thumb and forefinger, or spread by moving your fingers apart.

- Pinch or spread the screen to zoom in or out while viewing a picture or a web page.
- Pinch or spread the screen to zoom in or out while taking a picture.

DRAFT
FOR INTERNAL USE ONLY

Notification Panel

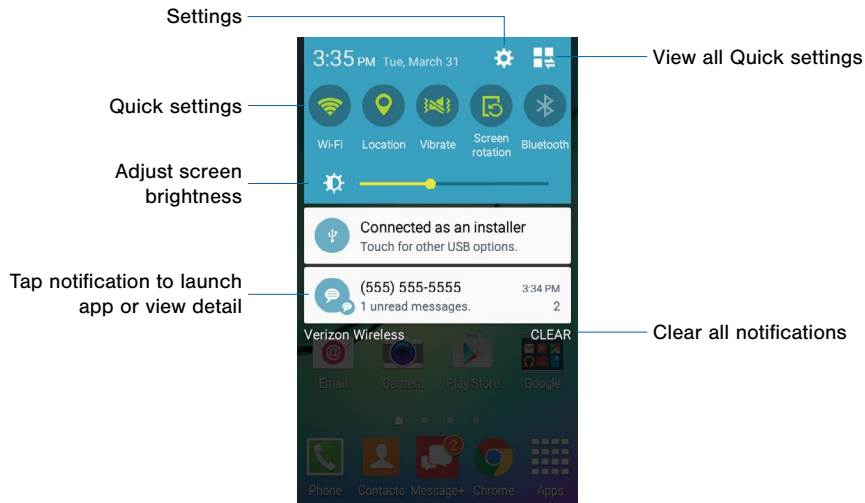

FOR INTERNAL USE ONLY

Notification icons on the Status Bar display calendar events, device status, and more. For details, open the Notification Panel.

View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
 - Tap an item to open it.
 - To clear a single notification, drag the notification left or right. Tap **CLEAR** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or tap  **Back**.

Quick Settings

In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:

- ▶ On the Notification Panel, swipe left or right across the visible icons.

– or –

Tap  **View all**.

To customize the Quick settings that appear:

- ▶ On the Notification Panel, tap  **View all** >  **Edit**.

DRAFT
FOR INTERNAL USE ONLY

Enter Text

Use the Samsung Keyboard

Type your text input using a QWERTY keyboard.



Voice Typing / Options key

Special Keys

123 Sym Tap to insert numbers and symbols.

Touch and hold the **Options** key to:



Use Google Voice Typing.



Access keyboard settings.



Insert emoticons.

DRAFT
FOR INTERNAL USE ONLY

Predictive Text

Predictive text suggests words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.

Configure the Samsung Keyboard

To customize the Samsung keyboard:


1. From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
2. Tap **Samsung keyboard** for options.

For more information, see

[“Samsung Keyboard Settings” on page 128.](#)

Use Google Voice Typing

Instead of typing, speak your text input.

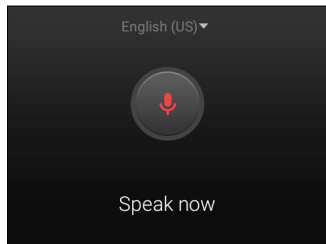

1. On the Samsung Keyboard, tap  **Google voice typing**. You may need to touch and hold the **Options** key (left of the **Space** key) to find it.
2. Speak your text.

DRAFT
FOR INTERNAL USE ONLY

Configure Google Voice Typing

To customize Google Voice Typing:

1. From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
2. Tap **Google voice typing** for options.

For more information, see

[“Google Voice Typing Settings” on page 129.](#)

DRAFT
FOR INTERNAL USE ONLY

Calling

Make telephone calls using a variety of calling features and services.

DRAFT
FOR INTERNAL USE ONLY

Make and Answer Calls

*Learn how to make or answer a call.
Explore features and functionality
associated with making or answering
a call.*

Make a Call

1. From a Home screen, tap  **Phone**.
2. Enter a number and tap  **Dial**.

Quickly Dial a Number from Your Contact List

1. From a Home screen, tap  **Apps** >  **Contacts**
2. While viewing your contact list, swipe your finger across a contact to the right call the contact.

Dial a Recent Number

All incoming, outgoing and missed calls are recorded in the Call log. If the number or caller is listed in your contacts list, the associated name is also displayed.

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab. A list of recent calls is displayed.
3. Tap a contact, and then tap  **Call**.

Answer a Call

When a call is received the phone rings and displays the caller's phone number, or name if stored in the contacts list.

DRAFT
FOR INTERNAL USE ONLY

Answer From the Main Screen

At the incoming call screen:

- Touch and drag  **Answer** in any direction to answer the call.
- Touch and drag  **Reject** in any direction to reject the call and send it to your voicemail.

Answer While Active

If you are currently in an application when you receive a call, it will appear as a pop-up window.

- Tap  **Answer** to accept the call and exit the application.
- Tap  **Reject** to ignore the call and return to the application.
- Tap  **Expand** to view the main call screen.

End a Call

- ▶ When you are ready to end your call, tap  **End**.

Options During a Call

Your phone provides a number of functions that you can use during a call.

Adjust the Call Volume

- ▶ Press the **Volume** keys to increase or decrease the volume.

– or –

Quickly add more volume to the incoming audio by tapping  **More options** > **Extra volume**.

DRAFT
FOR INTERNAL USE ONLY

Listen with the Speaker or Bluetooth Headset

Listen to the call using the speaker or through a Bluetooth headset (not included).

- ▶ Tap  **Speaker** to hear the caller using the speaker.

– or –

Tap **Bluetooth** to use a Bluetooth headset (not included).

Place a New Call While on a Call

If your service plan supports this feature, you can make another call while a call is in progress.

1. From the active call, tap  **Add call** to dial the second call.
2. Dial the new number and tap  **Dial**.
 - Tap  **Merge** to hear both callers at once (multi conferencing).

Multitask While on a Call

If you exit the call screen and return to a Home screen by pressing the **Home** key or using a preset app option, your active call is indicated by an icon on the Status Bar.

This lets you continue with your current call and do something else, such as access the contacts list, view a recent email, locate a picture, and so on.

To return to the call screen:

- ▶ Swipe the Status Bar downward to reveal the Notification Panel, and then tap the Call notification.

To end a call from any application:

- ▶ Swipe the Status Bar downward to reveal the Notification Panel, and then tap  **End call**.

Call Waiting

If your service plan supports this feature, you can answer an incoming call while you have a call in progress. You are notified of an incoming call by a call waiting tone.

DRAFT
FOR INTERNAL USE ONLY

To answer a new call while you have a call in progress:

1. Slide  **Answer** in any direction to answer the new call.
2. Tap the previous **On hold number entry** to switch between the two calls. This places the new caller on hold and activates the previous call.

Call Log

The numbers of the calls you have dialed, received, or missed are stored in the Call log.

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab. A list of recent calls is displayed. If the caller is in your contacts list, their name is displayed.

Save a Recent Call to Your Contacts List

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab.
3. Tap the call you want to add to your contacts list.
4. Tap **Create contact**.
– or –

If you want to replace the number for an existing contact, tap **Update existing**.

Delete a Call from the Call Log

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab.
3. Touch and hold the call you want to delete from the Call log.
4. Tap **Delete**.

DRAFT
FOR INTERNAL USE ONLY

Add a Call to the Reject List

By adding a caller to your Reject list, future calls from this number will be sent directly to your voicemail.

1. From a Home screen, tap  **Phone**.
2. Tap the **Recent** tab.
3. Touch and hold the caller you want to add to the Reject list.
4. Tap  **More options** > **Add to Auto reject list**.

Make a Call Using Speed Dial

You can assign a shortcut number to a contact for speed dialing their default number.

- To make a call using Speed Dial, tap  **Phone** and enter the speed dial number, hold down on the last digit.

Assign a Speed Dial Number

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Speed dial**. The Speed dial screen displays showing the numbers 1 through 100 (Number 1 is reserved for voicemail).
 - Tap an unused number to assign it to a contact's default phone number.
 - To remove a speed dial number assignment, tap  **Delete**.

Make an Emergency Call

The Emergency calling mode makes redialing an emergency number a one-tap process.

Note: This mode can drain your battery power more rapidly than normal calling mode.

DRAFT
FOR INTERNAL USE ONLY

Make an Emergency Call without a SIM Card

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.

1. From a secure Lock screen, swipe the phone icon up.
2. Tap **Emergency call**.
3. Enter **911** and tap  **Dial**.
4. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.

Make an Emergency Call with a SIM Card

1. From a Home screen, tap  **Phone**.
2. Enter the emergency number (for example: 911), and then tap  **Dial**.

Call Settings

To access the Call settings menu:

- From a Home screen, tap  **Phone** > **More options** > **Settings** > **Call**.

– or –

From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Call**

DRAFT

FOR INTERNAL USE ONLY

Applications

The Apps screen displays all applications installed on your device, both preloaded apps and apps you download and install yourself.

Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.

DRAFT
FOR INTERNAL USE ONLY

Apps Screen

The Apps screen shows all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.

Shortcuts to apps can be placed on any of the Home screens. For more information, see [“Add a Shortcut to a Home Screen” on page 18.](#)

Access Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.

Download and Install New Apps

Find new apps to download and install on your device:

-  **Play Store:** Download new apps from the Google Play Store. Visit play.google.com/store/apps to learn more.

Uninstall or Disable Apps

You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
 - Apps that are disabled are turned off and hidden from view.
1. From a Home screen, tap  **Apps**.
 2. Tap  **More options** > **Uninstall/disable apps**. Apps that can be uninstalled or disabled show  **Delete** on their icon.
 3. Tap  **Delete** and follow the prompts to either uninstall or disable the app.

DRAFT
FOR INTERNAL USE ONLY

To enable apps after disabling them:

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Swipe to the TURNED OFF screen, and tap the app you want to enable.
3. Tap **TURN ON**. The app will appear again in the Apps screen.

For more information, see

[“Disabled Services” on page 118.](#)

Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.

Change the Order Apps Are Listed

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **View as**.
3. Tap an option:
 - **Custom**: Allows you to touch and hold on apps to move them from screen to screen.
 - **Alphabetical order**: Apps are arranged in a grid, in A-Z order.

Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app, and then drag it to  **Create folder**.
3. Enter a folder name.
4. Tap  **Add**, select apps to include in the folder, and then tap **DONE**. The folder is placed on a Home screen.
5. Touch a folder to view its apps.
6. Touch an app to launch it.

DRAFT
FOR INTERNAL USE ONLY

Apps Screen Options

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** for these options:
 - **Edit:** Touch and hold an app icon then drag it to:
 -  **Create page** to create a new page for the apps list.
 -  **App info** to view information about this app.
 -  **Disable/Uninstall** to remove the app
 - **View as:** Configure the Apps screen.
 - **Uninstall/disable apps:** Uninstall an app that you downloaded to your device, or disable a preloaded app (preloaded apps cannot be uninstalled). Touch  **Delete** to remove or disable the selected app.
 - **Show disabled apps:** Display disabled apps.
 - **Help:** View information about your device.

DRAFT
FOR INTERNAL USE ONLY

Google Applications

Enjoy these applications from Google.

Note: Certain applications require a Google account. Visit google.com to learn more.



Chrome

Use Google Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.



Drive

Open, view, rename, and share your Google Docs and files.



Gmail

Send and receive email with Gmail, Google's web-based email service.



Google

Search not only the Internet, but also the apps and contents of your device.

Google Now

Google Now works in the background to collect information you regularly look up and organize it into convenient cards that appear when you need them. Press and hold the **Home** key.

Note: When Google Now is enabled, you can also access it by touching  **Google**.

DRAFT
FOR INTERNAL USE ONLY



Google Settings

Quickly and easily change Google app settings to suit your preferences.

Note: You must be signed in to the application you want to configure. For example, sign in to Google+ to configure Google+ settings.



Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.



Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Note: You must enable location services to use Maps. Please see [“Location Services” on page 121](#).



Play Books

With Google Play Books, you can find millions of free e-books and hundreds of thousands more to buy in the eBookstore.



Play Games

Discover hundreds of games for download and purchase through the Google Play Store.

DRAFT
FOR INTERNAL USE ONLY



Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.



Play Music

With Google Play Music, you can play music and audio files on your device.



Play Newsstand

Subscribe to your favorite magazines to read on your device at your leisure.



Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play Store.



Voice Search

Use voice commands to search the web with Google.



YouTube

View and upload YouTube videos right from your device.

DRAFT
FOR INTERNAL USE ONLY

Verizon Applications

Enjoy these applications from Verizon Wireless.

- From a Home screen, tap  **Apps** > **Verizon** folder to find these apps.

Note: Certain applications require a data plan or paid subscription. Visit verizonwireless.com to learn more, or contact your service provider for additional information.



Backup Assistant Plus - Contacts

Backup Assistant Plus is a free service which syncs your contacts to Verizon's cloud storage so that they are protected if you lose or upgrade your phone.



Emergency Alerts

Manage your Emergency Alert settings. For more information, see [“Emergency Alerts” on page 63](#).



Message+

Use Verizon Message+ to send text messages at a whole new level. Draw on pictures, share locations in real time, send audio messages, and much more.



Mobile Hotspot

This is a shortcut to your Mobile Hotspot. See [“Mobile Hotspot” on page 95](#) for more information.

DRAFT
FOR INTERNAL USE ONLY



My Verizon Mobile

View details and manage your Verizon Wireless account.

Note: No airtime or minute charges apply when accessing My Verizon Mobile.



NFL Mobile

Play the popular game on your phone.



Setup Wizard

Use Setup Wizard to quickly configure your phone.



VZ Navigator

Use VZ Navigator to find, share and navigate to millions of locations, avoid traffic and drive, or walk with ease.

DRAFT
FOR INTERNAL USE ONLY

Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the  **Equals** key.

Additional Functions

To clear the results:

- Tap  **Clear**.

To copy all or part of the calculation to the clipboard:

- Touch and hold an entry in the display field.

Scientific Calculator

Turn the device landscape to use advanced arithmetic functions, such as *sin*, *cos*, and *tan*.

DRAFT
FOR INTERNAL USE ONLY

Calendar

Manage your events and tasks.

Create an Event

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** and enter the details for the event.
3. When finished tap **SAVE**.

Delete an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task.
3. Tap  **Delete**.

- or -

To delete multiple events or tasks, tap
 **More options** > **Delete**, select events or
tasks, and then tap **DONE**.

Share an Event

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event.
3. Tap  **Share via**, and tap a sharing format.
4. Select a sharing method, and follow the prompts.

Calendar Settings


These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT

FOR INTERNAL USE ONLY

Camera and Video

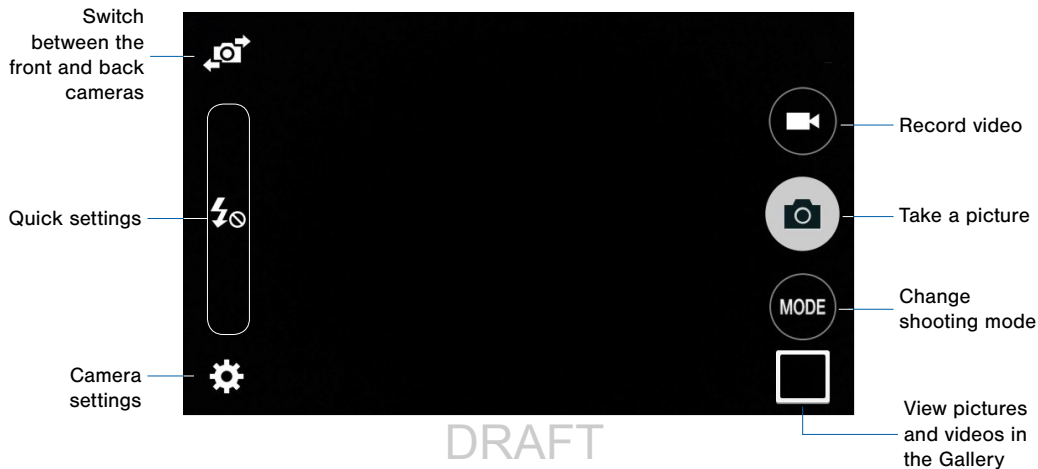

DRAFT
FOR INTERNAL USE ONLY

Take Pictures

Take pictures with your phone's front and back cameras.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the onscreen options or these gestures:
 - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
 - Tap the screen to focus on the area you touched.
3. Tap  to take the picture.

Note: You can also press the **Volume** key up or down to take a picture. This is the default action of the Volume key. You can also set the Volume key to act as the video record key or as a zoom key.

Shooting Mode

Several shooting modes are available for specific subjects or situations. Modes are only available for the rear camera.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap **MODE** to view the following options:
 - **Auto:** Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
 - **Beauty face:** Take a picture with lightened faces for gentler images.
 - **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.
 - **Continuous shot:** Take picture continuously by pressing and holding the capture button.
 - **Sports:** Take fast action photos.

DRAFT
FOR INTERNAL USE ONLY

Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Quick settings are listed across one side of the camera view finder. Available options vary depending on the camera or recording mode used, and settings can be added by dragging them to the Quick settings tray. Default settings include:
 - **Flash:** Activate or deactivate the flash (rear camera only).
 - **Beauty:** Take a picture with lightened faces for gentler images (front camera only).
 - **Palm selfie:** Show your palm to the camera to automatically take a picture after two seconds (front camera only).
3. Tap  **Settings** to configure settings for Camera. Available options vary depending on the camera (front or rear) and mode used.

Both cameras

- **Timer:** Take time-delayed pictures or videos.
- **Effect:** Add special graphical effects.

- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Exposure value:** Change the exposure value. This determines how much light the camera's sensor receives. For low light situations, use a higher exposure.
- **Tap to take pics:** Tap the image on the preview screen to take pictures.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Recording mode:** Select Normal, Limit for email, or Fast motion mode.
- **Location tags:** Attach a GPS location tag to the picture.
- **Storage location:** Select the memory location for storage.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Shutter sound:** Enable or disable a shutter sound when pictures are taken.

DRAFT
FOR INTERNAL USE ONLY

- **The Volume key:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Reset settings:** Reset the camera settings.

Rear camera

- **Flash:** Activate or deactivate the flash.
- **ISO:** Select an ISO value. This controls camera light sensitivity. It is measured in film-camera equivalents. Low values are for stationary or brightly-lit objects. Higher values are for fast-moving or poorly-lit objects.
- **White balance:** Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Metering modes:** Select a metering method. This determines how light values are calculated. Center-weighted measures background light in the center of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.

Front camera

- **Beauty:** Take a picture with lightened faces for gentler images.
- **Palm selfie:** Detect palm and automatically take a picture two seconds later.
- **Save as flipped:** Save the self-portrait or self-recording as a reversed (or 'mirrored') image.

DRAFT
FOR INTERNAL USE ONLY

Chrome

The Google Chrome app allows you to use the Google Chrome web browser on your device.

1. From a Home screen, tap  **Chrome**.
2. Read the Google Chrome Terms of Service and tap **ACCEPT & CONTINUE**.
3. If you have an existing Chrome account, tap **ADD AN ACCOUNT** to bring your open tabs, bookmarks, and omnibox data from your computer to your phone. Otherwise tap **NO THANKS**.
4. Follow the onscreen instructions to use Google Chrome.

DRAFT
FOR INTERNAL USE ONLY

Clock

The Clock app offers features for keeping track of time and setting alarms.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
 - **Alarm:** This feature allows you to set an alarm to ring at a specific time.
 - **World clock:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
 - **Stopwatch:** You can use this option to measure intervals of time.
 - **Timer:** You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap  **Create** to configure an alarm:
 - **Time:** Set a time for the alarm.
 - **Repeat:** Choose when to repeat the alarm, if so desired.
 - **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
 - **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
 - **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.

DRAFT
FOR INTERNAL USE ONLY

- **Snooze:** Allow snoozing, and set interval and repeat values for the alarm while snoozing.
- **Smart alarm:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Choose a time interval and a tone to use with smart alarm. Available when you have chosen an alarm type that includes sound.
- **Name:** Enter a name for the alarm.

3. Tap **SAVE** to save the alarm.

Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Touch and hold an alarm, and then tap  **Delete**.

DRAFT
FOR INTERNAL USE ONLY

Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.

For more information on connecting with and managing your accounts through your device, see [“Accounts” on page 126](#).

Manage Contacts

Access your list of contacts by using the Contacts app, which is a shortcut to the Contacts tab. To access your Contacts list:

- From a Home screen, tap  **Apps** >  **Contacts**.

Find a Contact

You can search for a contact, or scroll the list to find one by name.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.

Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device, or sync it with an account.
 - Tap  **Contact photo** to assign a picture to the new contact.

DRAFT

FOR INTERNAL USE ONLY

- Enter a name, phone number, email address, assign the contact to a group, and assign a ringtone. Tap **ADD ANOTHER FIELD** to add additional contact information.
 - Tap  **Add** to enter additional entries.
 - Tap  **Delete** to remove an entry.
 - Tap  **Expand** for additional fields.
 - Tap the label to the right of an entry to choose a label for the field (for example, **Home** or **Work**).
3. Tap **SAVE**.

Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **SAVE**.

DRAFT
FOR INTERNAL USE ONLY

Share a Name Card

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **More options** > **Share name card**.
3. Choose a sharing method and follow the prompts.

Link Contacts

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap **LINK ANOTHER CONTACT**, and then select contact(s) to link to the original contact.
4. Tap **DONE**.

Unlink Contacts

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap  **Remove** beside contacts to unlink them from the main contact.

Delete Contacts

You can delete a single contact, or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold on a contact to select it. You can also tap the check box at the top of the screen to select all contacts.
3. Tap  **More options** > **Delete**.

DRAFT
FOR INTERNAL USE ONLY

Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

Mark Contacts as Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star turns gold ).

Remove Contacts from Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star loses the gold color ).

Create a Shortcut to a Favorite

You can create a shortcut to a favorite on the home screen, to access their information directly from the home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold a contact to select it.
3. Tap  **More options** > **Add shortcut to Home screen**. The new shortcut displays in an empty area of the home screen.

Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.

DRAFT
FOR INTERNAL USE ONLY

Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap  **Create group**.
3. Tap fields to enter information about the group:
 - Tap **Create group in [location]** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts.
 - Tap **Group name** to enter a name for the new group.
 - Tap **Group ringtone** to assign a ringtone to the group.
 - Tap **Add member** and select contact(s) to add to the new group, and then tap **DONE**.
4. Tap **SAVE**.

Rename a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap  **More options** > **Edit group** and enter a new name.
4. Tap **SAVE**.

Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap **Add member**, and then tap the contacts you want to add.
4. Tap **DONE** to add the contacts.
5. Tap **SAVE** to save the changes.

DRAFT
FOR INTERNAL USE ONLY

Send a Message or Email to a Group

You can send a text message or an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap  **More options** > **Send message or email**.
4. Tap either **Message** or **Email**.
5. Tap contacts to select them, or tap the checkbox at the top of the screen to select all, and then tap **DONE**. You will only see group members that have the appropriate contact information (a phone number or an email address) in their records.
 - For email, choose an email account to use and follow the prompts.
6. Type your message and tap the send button (differs by message and email app).

Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**.
3. Tap  **Delete**.
4. Tap the groups to select them or tap the checkbox at the top of the screen to select all (default groups cannot be deleted).
5. Tap **DONE**.
6. Tap **Group only** to only delete the group or tap **Groups and members** to delete the groups and the contacts in the groups.

DRAFT
FOR INTERNAL USE ONLY

Contact Settings

These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

DRAFT
FOR INTERNAL USE ONLY

Email

Use the Email app to view and manage all your email accounts in one application.

To access Email:

► From a Home screen, tap  **Apps** >  **Email**.

Configure Email Accounts

You can configure Email for most accounts in just a few steps.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the onscreen instructions to set up your email account.

– or –

For additional accounts, tap  **More options** > **Settings** > **Manage accounts** >  **Add account**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

Note: To configure email account settings at any time, tap  **More options** > **Settings**. Tap the account to display Account settings.

Refresh Your Email Account

Refresh your account to update your email accounts.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Refresh**.

DRAFT
FOR INTERNAL USE ONLY

Manage Your Email Accounts

You can view email you receive for all accounts on the **Combined view** screen or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap the drop down menu at the top left of the screen to view the current account mailbox.
3. Tap  **Menu** at the top left of the screen to select:
 - **Combined inbox**: If there are multiple email accounts, view all email messages in a combined inbox.
 - **[Account Name]**: View email for only one email account.

Delete Email Accounts

To delete a Email accounts:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings** > **Manage accounts**.
3. Tap  **Delete**.
4. Tap the accounts to select them.
5. Tap **DONE**.
6. Confirm by tapping **REMOVE**.

Email Settings

These settings allow you to modify settings associated with using the Email app.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

DRAFT
FOR INTERNAL USE ONLY

Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). For more information, please contact your wireless provider.

Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

Users may choose not to receive Imminent Threats (Extreme and Severe) and AMBER Alerts. Alerts issued by the President cannot be disabled.

To disable Imminent Threats and AMBER Alerts, follow the instructions below:

1. From a Home screen, tap  **Apps** >  **Emergency Alerts**.
2. Tap  **More options** > **Settings** > **Alert types**.
3. All alerts are enabled by default. Tap an alert option to disable it. You cannot disable Presidential alerts.

DRAFT

FOR INTERNAL USE ONLY

Gallery

View, edit, and manage pictures and videos.

View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, a Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu** in the upper left corner, and then tap **Time** or **Albums** to choose another way for items to display.
 - In Album view, you can create albums to organize your images. On the drop down menu, tap **Album**, and then tap **MORE** > **Create album**.

3. Depending on the view mode selected, either tap an image or video to view it, or first tap an album or folder and then tap an image or video.
4. When viewing an image or video, you can scroll left or right to view the next or previous image or video.

Zoom In and Out

Use one of the following methods to zoom in or out on an image:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.

DRAFT
FOR INTERNAL USE ONLY

Play Videos

► From a Home screen, tap  **Apps** >  **Gallery**.

- Tap a folder to open it.
- Tap a video to view it.

Trim Segments of a Video

1. Select a video, and then tap the screen once to see the video options.
2. Tap  **Editor**, and then tap  **Trim**.
3. Use the sliders at the bottom of the screen to trim the video. Move the start bracket to the desired starting point, move the end bracket to the desired ending point.
4. Tap **EXPORT** to save the video. Modify the File name or Resolution, and then tap **EXPORT** to confirm the changes.

Edit Images

1. From a Home screen, tap  **Apps** >  **Gallery**.

2. Tap an image to open it.
3. Tap the screen once to see the image options.
4. Tap  **More options**:
 - **Edit**: Open the image Photo Editor. You may be prompted to download the Photo Editor app.
 - **Rotate left**: Turn the image to the left.
 - **Rotate right**: Turn the image to the right.
 - **Crop**: Resize the frame to crop the image.
 - **Rename**: Rename the file.
 - **Slideshow**: Start a slideshow with the images and videos in the current folder.
 - **Set as**: Set the image as wallpaper or as a contact's photo.
 - **Details**: View details about the image.
 - **Print**: Print the image via a USB or Wi-Fi connection. Some printers may not be compatible with the device.

DRAFT
FOR INTERNAL USE ONLY

Delete Images

Use the following procedure to delete an image:

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap an image to open it.
3. Tap the screen once to see the image options.
4. Tap  **Delete**.
5. Confirm by tapping **DELETE**.

Share Images

Use the following procedure to share an image:

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap an image to open it.
3. Tap the screen once to see the image options.
4. Tap  **Share via**.
5. Tap a sharing service and follow the prompts to send the image.

DRAFT
FOR INTERNAL USE ONLY

Help

View information on using your device's basic features and settings.

To access Help:

1. From a Home screen, tap  **Apps** >  **Help**.
2. Tap a help topic to view more information.
3. To search for a help topic, tap  **Search**. As you type, matching results appear on the page.

DRAFT
FOR INTERNAL USE ONLY

Memo

Use the Memo app to write and save notes on your device.

Compose a Memo

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Create memo**, and type a memo.
 - To change the category, tap  **Category**.
 - To insert an image into the memo, tap  **Image**.
 - To use your voice to insert text into the memo, tap  **Voice**.
3. When finished creating your memo, tap **SAVE**.

Manage Memos

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap a memo thumbnail to open it.
3. To edit the memo, tap the content of the memo.
4. To delete the memo, tap  **More options** > **Delete**.
5. To send the memo to others, tap  **More options** > **Share via**.
6. To send the memo to a Google or Samsung printer, tap  **More options** > **Print**.

Browse Memos

1. Tap  **Apps** >  **Memo**.
2. Browse memo thumbnails by scrolling up or down.
3. To search for a memo, tap  **Search**.

DRAFT
FOR INTERNAL USE ONLY

This section describes how to create and send a message using the Verizon Messages app.

Create and Send Messages

Use the Verizon Messages app to send and receive messages with your friends and family.

1. From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**.
2. Tap  **New message**.
3. Tap the **To:** field and then enter a contact name, a mobile phone number, or an email address using the onscreen keyboard. As you enter letters, possible matches from your accounts and contacts display on the screen. Touch a match to add it to the message.
4. Tap **Type a message** and enter your message.
 - Tap  **Attach** to attach an item, such as a postcard, picture, video, audio recording, Glympse location, location, contact card, or song.
 - Tap  **Emoticon** to insert emoticons into your message.
 - Tap  **Voice** to record and insert an audio recording into your message.
5. Review your message and tap  **Send**.

DRAFT
FOR INTERNAL USE ONLY

Read Messages

When you receive a message, your phone notifies you by displaying the  **New message** icon in the Status Bar.

To access a new message:

- Drag your finger down from the Status Bar to display the Notification Panel, and then tap the message notification to open the message.

– or –

From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**, and then tap the message to open it.

Reply to Messages

Messages you exchange with another person are displayed as conversations in the Messages app, so you can see all the messages in one place.

1. From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**.
2. Tap a conversation to display it.
3. Tap the **Type a message** field and then type your reply message.
4. When the message is complete, tap  **Send**.

DRAFT
FOR INTERNAL USE ONLY

Protect a Message from Deletion

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**.
2. Tap a conversation to display it.
3. Touch and hold the message that you want to lock, and then tap **Lock message** on the pop-up menu. A lock icon displays on the message.

Delete Messages

1. From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**.
2. Tap a conversation to display it.
3. Touch and hold the message you want to delete, and then tap **Delete messages** on the pop-up menu. Follow the prompts to confirm the deletion.

Delete Conversations

You can delete all the messages you've exchanged with another person.

1. From the Home screen, tap  **Apps** > **Verizon** folder >  **Message+**.
2. Touch and hold a conversation you want to delete and tap **Delete Conversation** > **Delete**.

Note: Locked messages will not be deleted unless you select **Delete locked messages** before confirming the deletion.

DRAFT
FOR INTERNAL USE ONLY

Messages

Learn how to send and receive different messages using the default messaging app on your phone.

Types of Messages

Your default Messaging app provides the following message types:

- Text Messages (SMS)
- Multimedia Messages (MMS)

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type.

DRAFT
FOR INTERNAL USE ONLY

Create and Send Messages

This section describes how to create and send a message using the Messaging app.

1. From a Home screen, tap  **Apps** >  **Messages** >  **Compose**.
2. Tap the **Enter recipients field** to manually enter a recipient or tap  **Add Recipient** to select a recipient from your Contacts or Groups.
 - If manually entering recipients, enter additional recipients by separating each entry with a semicolon (;). More recipients can be added at any time before the message is sent.
 - If adding a recipient from your Contacts, tap the contact to place a check mark then tap **DONE**. The contact will be placed in the recipients field.
 - For the Group option, if the number of recipients is less than 10, all members in the group can be added by placing a check mark by the contacts and then tap **DONE**.
3. Tap the **Enter message** field and use the onscreen keypad to enter a message.
4. Review your message and tap  **Send**.

Note: If you exit a message before you send it, the message is automatically saved as a draft.

View New Messages

When you receive a new message, a new message icon appears on the Status Bar.

To view the message:

1. Open the Notification Panel and select the message. For more information, please see [“Notification Panel” on page 24](#).

– or –

From a Home screen, tap  **Apps** >  **Messages**, and then tap the new message to view it.

2. To play a multimedia message (audio or video), tap  **Play**.
3. To scroll through the list of messages, tap the screen and scroll up or down the page.

DRAFT
FOR INTERNAL USE ONLY

Delete Messages

To delete messages, follow these steps:

1. From a Home screen, tap  **Apps** >  **Messages**.
2. Tap  **More options** > **Delete**.
3. Tap each message you want to delete, or tap the checkbox at the top to select all messages.
4. Tap **DONE**.
5. At the **Delete conversations** prompt, tap **DELETE** to confirm.

Message Search

You can search through your messages by using the Message Search feature.

1. From a Home screen, tap  **Apps** >  **Messages**.
2. Tap  **Search**.
3. Enter a word or phrase to search for, and then tap  **Search** on the keyboard.


Messages Settings

Configure the settings for text messages, multimedia messages, push messages, and so on.

- From a Home screen, tap  **Apps** >  **Messages** >  **More options** > **Settings**.

DRAFT
FOR INTERNAL USE ONLY

Music Player

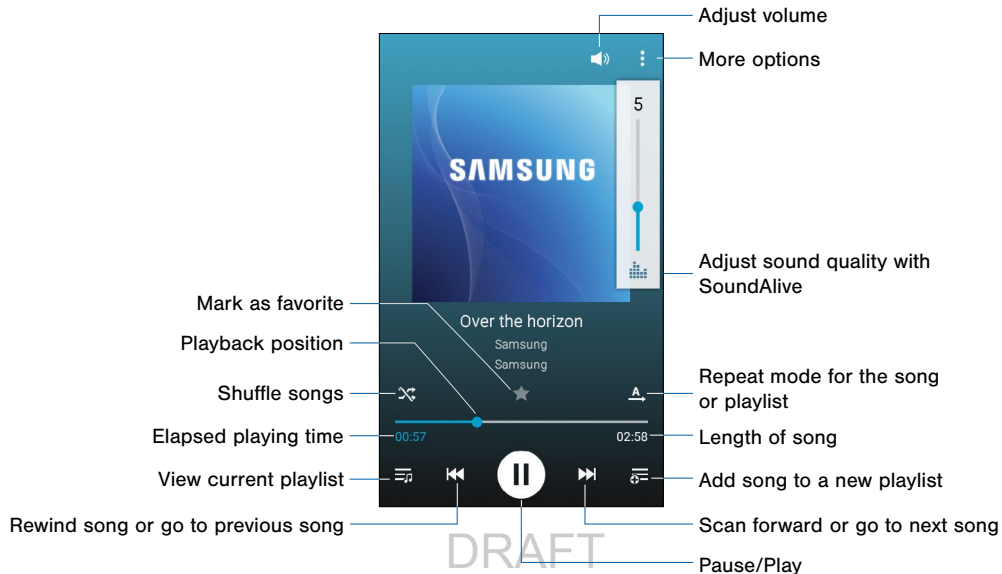

DRAFT
FOR INTERNAL USE ONLY

Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized play lists.

Listen to Music

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap a song to begin playback.

DRAFT
FOR INTERNAL USE ONLY

My Files

Access files stored on your device, including images, videos, songs, and sound clips.

To view files in My Files:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Tap a category to view the relevant files or folders.
3. Tap a file or folder to open it.

View Files

Files stored in the device are organized into the following groups:

- **Recent files:** View recently accessed files.
- **Images:** View image files.
- **Videos:** View video files.
- **Audio:** View audio files.
- **Documents:** View document files.

- **Downloaded apps:** View downloaded apps.
- **Download history:** View all apps and files that have been downloaded to the device.
- **Local storage:** View folders and files in their storage locations.
 - **Device storage:** View folders and files located on the device.
- **Cloud storage:** Contains shortcuts to FTP servers or other cloud storage locations that you have added.

DRAFT
FOR INTERNAL USE ONLY

My Files Options

On the main My Files screen, the following options are available:

-  **Search:** Search for a file or folder.
-  **Storage usage:** View memory information for your device and memory card (if installed).
- Tap  **More options** for these options:
 - **Select:** Choose files or folders to edit or delete.
 - **Add shortcut:** Add a shortcut on the My Files main screen to any folder.
 - **Settings:** Change the settings for viewing files.

Category Options

After tapping on a category, the following options are available:

-  **Home:** Return to the main My Files screen.
-  **Search:** Search for a file in the selected category.
- Tap  **More options** to find the following options:
 - **Select:** Select files or folders.
 - **Create folder:** Add a folder (Local storage only).
 - **Sort by:** Change the sort order of the files.
 - **Add shortcut:** Add a shortcut to the current location on either a Home screen or the My Files main screen. This option only appears in Local Storage categories.
 - **Settings:** Change the settings for viewing files.


DRAFT
FOR INTERNAL USE ONLY

Options for Selected Files and Folders

- Tap  **More options** > **Select**, select a file or folder, and then use one of these functions:
 -  **Share via**: Send files to others or share them.
 -  **Delete**: Delete files or folders.
- Tap  **More options** for additional options:
 - **Move**: Move files or folders to another folder.
 - **Copy**: Copy files or folders to another folder
 - **Rename**: Rename a file or folder. This option only appears when just one file or folder is selected.
 - **Details**: View details of the selected file(s) or folder(s).

DRAFT
FOR INTERNAL USE ONLY

Video Player

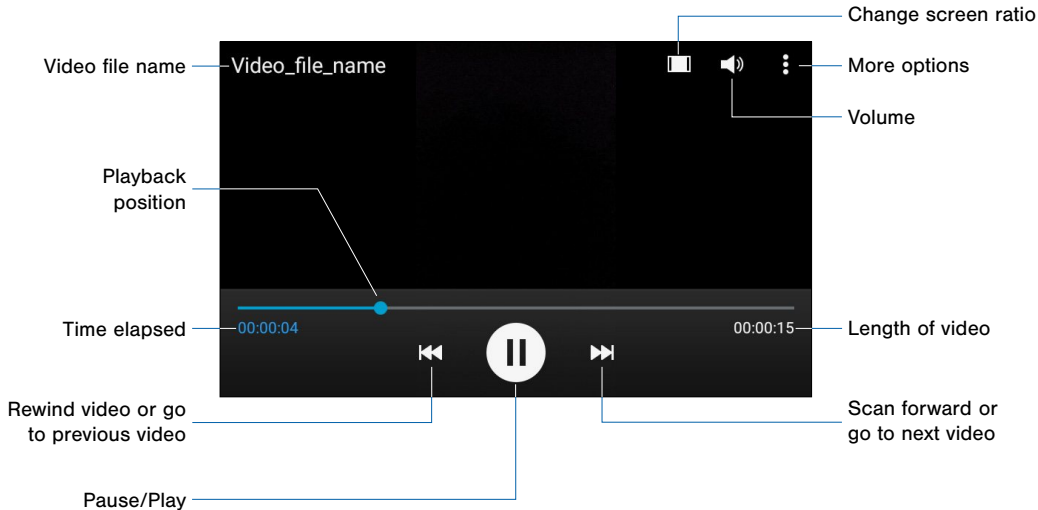

DRAFT
FOR INTERNAL USE ONLY

Play and manage videos stored on your device.

To access Video:

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device.
3. Tap a video to view it.

DRAFT
FOR INTERNAL USE ONLY

Voice Recorder

Record voice memos and notes.

Create a Voice Recording

► From a Home screen, tap  **Apps** >  **Voice Recorder**.

- Tap  **Record** to record an audio file.
- Tap  **Stop** to stop recording. The file is automatically saved.
- Tap  **Pause** to pause the recording of an audio file.
- Tap  **Cancel** to cancel the recording of an audio file.

View Recordings

1. From a Home screen, tap  **Apps** > **Tools** folder >  **Voice Recorder**.
2. Tap  **Recordings**.
3. Tap a recording to play it back.
4. Tap  **More options**:
 - **Select**: Choose desired recordings.
 - **Delete**: Delete recordings.
 - **Settings**: Configure Voice Recorder.

DRAFT
FOR INTERNAL USE ONLY

Settings

Configure your device's connections and settings, add accounts, and customize the home screen, apps, and features.

- Some options have an **ON/OFF** button to turn the option on () or off ().
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  checkbox. When enabled, a check mark displays. Tap the check mark to remove it and disable the option.

DRAFT
FOR INTERNAL USE ONLY

How to Use Settings

Access Settings

► From a Home screen, tap  **Apps** >  **Settings**.

– or –

From a Home screen, drag down from the Status Bar to display the Notification Panel, and then tap  **Settings**.

Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Setting search feature.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap  **Search**.

- Enter a word or words in the Search box. As you type, settings that match will appear on the screen.
- Tap an entry to go to that setting.

DRAFT
FOR INTERNAL USE ONLY

Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features, such as phone calls and Wi-Fi.

While in airplane mode, you can use other features, such as playing music, watching videos, and other online applications.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Airplane mode**, and then tap **ON/OFF** to enable or disable the option.

Note: You can also control Airplane mode from the Device options menu. Press and hold the **Power/Lock** key, and then tap **Airplane mode**.

DRAFT
FOR INTERNAL USE ONLY

Wi-Fi and Wi-Fi Direct

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a Wireless Access Point (WAP).

Wi-Fi Direct creates a direct connection between two or more devices using Wi-Fi.

Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on or off.

Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. When Wi-Fi is turned on, your device will automatically scan for available networks and display them.
4. Tap the network you want to connect to.
 - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.
 - To manually scan for networks, tap  **More options** > **Scan**.

DRAFT
FOR INTERNAL USE ONLY

Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Scroll to the bottom of the list of wireless networks and tap **Add Wi-Fi network**.
4. Enter information about the Wi-Fi network:
 - Tap **Network SSID** to enter the name of the Wi-Fi network.
 - Tap the **Security** field and select a security option and enter your password.
 - Tap **Show advanced options** if you need to add advanced options such as Proxy settings, IP settings, or Key management.
5. Tap **CONNECT** to store the new information and connect to your target WAP.

Wi-Fi Status Indicators

These Status Bar icons show your current Wi-Fi connection status:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



A Wi-Fi access point is available, but your device is not connected to it. It may also display if there is a communication issue with the target Wireless Access Point (WAP).

DRAFT
FOR INTERNAL USE ONLY

Wi-Fi Settings

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap  **More options** for options:
 - **Scan**: Start another scan for nearby Wi-Fi networks.
 - **Wi-Fi Direct**: Configure a Wi-Fi Direct connection with a nearby device.
 - **WPS push button**: Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
 - **WPS PIN entry**: View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).

- **Advanced:**

- **Show Wi-Fi pop-up**: Receive a pop-up when opening apps and Wi-Fi is available.
- **Wi-Fi notifications**: Receive a notification when Wi-Fi is available or connected.
- **Keep Wi-Fi on during sleep**: Specify when to disconnect from Wi-Fi.
- **Always allow scanning**: Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Smart network switch**: Connect to a mobile network automatically when the Wi-Fi connection is unstable.
- **Install certificates**: Install authentication certificates.
- **MAC address**: View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address**: View your device's IP address (not configurable).

DRAFT

FOR INTERNAL USE ONLY

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap  **More options** > **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices, or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.
 - To rename your device (as seen by other devices), tap  **More options** > **Rename phone**.

Wi-Fi Direct Status Indicator



Displays when connected to another device using Wi-Fi Direct.

DRAFT

FOR INTERNAL USE ONLY

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.

Note: The Bluetooth communication range is approximately 30 feet.

Turn Bluetooth On and Off

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.

Bluetooth Status Indicator

-  Displays when Bluetooth is turned on, or connected to another device using Bluetooth.

Make Your Device Visible to Other Bluetooth Devices

When you make your device visible, other Bluetooth can find it in a scan and initiate pairing. You can choose the length of time your device remains visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **Bluetooth** >  **More options** > **Visibility timeout**.
4. Select a time period for your device to remain visible after you turn on visibility.
5. On the Bluetooth device list, tap the checkbox next to your phone to make it visible to other Bluetooth devices.

DRAFT
FOR INTERNAL USE ONLY

Scan for Bluetooth Devices

When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
 - Tap **SCAN** to manually scan for more devices.

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.

Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **SCAN**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your device then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

DRAFT
FOR INTERNAL USE ONLY

Delete a Paired Device (Unpairing)

When you unpair from a Bluetooth device, the two devices will no longer recognize each other. To connect again, you'd need to pair the devices.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  **Settings** next to the previously paired device, and then tap **Unpair** to delete the paired device.

Review Files Received via Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** >  **More options** > **Received files**.

DRAFT
FOR INTERNAL USE ONLY

Data Usage

Monitor your mobile data usage.

Note: Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings** > **Data usage** for options:

- **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
- **Limit mobile data usage:** Disable your mobile data connection when the specified limit is reached. Drag the red limit line to set the data usage limit.
- **Alert me about data usage:** Your device will alert you when your mobile data usage reaches the warning amount you set.
- **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.

2. Tap  **More options:**

- **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
- **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.
- **Mobile hotspots:** Select Wi-Fi networks that are Mobile Hotspots. You can restrict background apps from using these networks to avoid using too much data on the hotspot.
- **Show units:** Display data using MB, GB, or both.
- **Help:** Learn more about data usage.

DRAFT
FOR INTERNAL USE ONLY

More Settings

Configure other types of connections for your phone.

Verizon Account

You can view details about your Verizon account.

1. From a Home screen, tap  **Apps** >  **Settings** > **More**.
2. Tap **View Verizon account** to see the current status of your mobile account.

Default Messaging App

If you have multiple messaging apps installed, you can select which app should be your default messaging app.

1. From a Home screen, tap  **Apps** >  **Settings** > **More**.
2. Tap **Default messaging app** to select a default.

Mobile Networks

Configure mobile data, roaming, and other features that affect your phone's access to mobile networks and data services.

► From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile networks** for options:

- **Mobile data:** Enable or disable your device's connection to the mobile data network. You can also control this setting at Notifications with the Mobile data setting.
- **Data Roaming:** Enable or disable connection to data services when your device is roaming on another network.
- **Access Point Names:** Configure wireless network access.

DRAFT
FOR INTERNAL USE ONLY

Mobile Hotspot

Use Mobile Hotspot to share your device's Internet connection with other devices using your device as a portable Wi-Fi hotspot.

Note: You must have a tethering plan on your service account in order to use the Mobile Hotspot.

Warning: Mobile Hotspot consumes battery power and uses data service.

Turn Mobile Hotspot On or Off

Activate your device's Mobile Hotspot application to allow other devices to use your device's Internet connection.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on or off.

Warning: By default, your device's Mobile Hotspot has no security applied, and any device can connect. To set a password for your Mobile Hotspot, see [“Scan and Connect to a Wi-Fi Network” on page 86](#).

Connect a Device to Your Mobile Hotspot

Use the other device's Wi-Fi control to connect to your device's Mobile Hotspot.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn on Mobile Hotspot.
3. Activate Wi-Fi on the target device.
4. Scan for Wi-Fi hotspots, and select the target device from the list.
5. On the target device, enter your device's Mobile Hotspot password.

DRAFT

FOR INTERNAL USE ONLY

Allowed Device List

Control whether devices connect to your Mobile Hotspot with the Allowed device list. After you add devices to the list, they can scan for your device and connect using your device's Mobile Hotspot name and password.

Note: Using your device as a Mobile Hotspot consumes battery power and uses data service. While Mobile Hotspot is active, your device's applications will use the Mobile Hotspot data service. Roaming while using your device as a Mobile Hotspot will incur extra data charges.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn on Mobile Hotspot.
3. Tap  **More options** > **Allowed devices**, and then tap **ADD** to enter the other device's Device name and MAC address.
4. Tap **OK** to add the device.

Change the Mobile Hotspot Password

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn on Mobile Hotspot.
3. Tap  **More options** > **Configure hotspot**.
4. Tap the **Security** field and select **WPA2 PSK**.
5. Scroll down and enter a new password in the **Password** field.

DRAFT
FOR INTERNAL USE ONLY

Configure Mobile Hotspot Settings

Manage your Mobile Hotspot security and connecting settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap  **More options** > **Configure hotspot**, and chose an option:
 - **Network SSID:** View and change the name of your Mobile Hotspot.
 - **Hide my device:** Make your Mobile Hotspot invisible to other Wi-Fi devices during a scan. Other devices can still connect to your Mobile Hotspot, but will have to set up the connection manually with your Network SSID and Password.
 - **Security:** Choose the security level for your Portable Wi-Fi hotspot.
 - **Password:** If you choose a security level that uses a password, enter the password.
 - **Show password:** Display your password instead of masking it.

- **Show advanced options:** Access advanced options, including Broadcast channel, and to specify the channel your device uses for Mobile Hotspot.

Turn Off Mobile Hotspot Automatically

Set your device to automatically turn off Mobile Hotspot if there are no connected device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn on Mobile Hotspot.
3. Tap  **More options** > **Timeout settings** and select an amount of time.

DRAFT
FOR INTERNAL USE ONLY

Tethering

Share your device's Internet connection with a computer that connects to your device using a USB cable or via Bluetooth.

Connect Your Device to a Computer Using Tethering

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Tethering**.
2. Tap **ON/OFF** to enable a tethering method:
 - **USB tethering:** Connect the computer to the device using the USB cable, and then tap USB tethering to turn tethering on.
 - **Bluetooth tethering:** Pair your device with the computer using Bluetooth. Tap Bluetooth tethering to turn tethering on. For more information, see Bluetooth.

Virtual Private Networks (VPN)

Set up and manage your Virtual Private Networks (VPNs).

Note: You must set a screen lock PIN or password before setting up a VPN. For more information, see [“Lock Screen” on page 108](#).

Add a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap **Basic VPN** or **Advanced IPsec VPN** and follow the prompts to set up your VPN.

Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap **Basic VPN** or **Advanced IPsec VPN**.
3. Tap the VPN you want to connect to, enter your log in information, and tap **Connect**.

DRAFT

FOR INTERNAL USE ONLY

Edit or Delete a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap **Basic VPN** or **Advanced IPsec VPN**.
3. Touch and hold the VPN that you want to edit or delete.

Screen Mirroring

Share Your Device's Screen with Another Device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Screen Mirroring**. Available devices are listed.
2. Tap **SCAN** to find available devices.
3. Tap a device and follow the prompts to connect.

DRAFT
FOR INTERNAL USE ONLY

Sound and Notification

Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.

Adjust the Volume

Set the system volume level, and set default volume for call ringtones, notifications, and other audio.

Tip: You can also set ringtone and notifications volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound and notification**.
2. Drag the sliders to set the default volume for:
 - Ringtone
 - Media
 - Notifications
 - System

Change the Sound Mode

You can switch between sound modes, while preserving the individual sound settings you have made.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound and notification**.
2. Tap **Sound mode**, and choose a mode:
 - **Sound:** Use the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
 - **Vibrate:** Vibrate for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
 - **Mute:** Play no sounds or vibrations. Onscreen reminders will still occur.

DRAFT
FOR INTERNAL USE ONLY

Vibrate When Ringing

Your device can vibrate in addition to ringing when you receive a call.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Vibrate when ringing** to turn the feature on.

Select a Default Ringtone

Choose from preset ringtones or add your own.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Phone ringtone**.
3. Tap a ringtone to set it as your default ringtone.
– or –
Tap **ADD** to use a use an audio file as a ringtone.

Change the Notification Sound

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Notification**.
3. Tap a sound to set it as your default notification sound.

DRAFT
FOR INTERNAL USE ONLY

Other Sounds

Select what notifications the device should make sounds for.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Other sounds**, and tap to enable each option:
 - **Dialing keypad tone:** Play tone when the dialing keypad is tapped.
 - **Screen lock sounds:** Play a sound when you unlock the screen.
 - **Touch sounds:** Play tones when you touch or tap the screen to make selections.
 - **Emergency tone:** Set an alert tone or vibration when receiving an emergency message.

Do Not Disturb

This setting allows you to block all notifications and alerts. The options below determine what notifications can make sounds, and during what time periods you want to enter this mode.

To activate Do Not Disturb mode:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Do not disturb**.
3. Tap **ON/OFF** to enable this option.

Allow Exceptions

This option lets you customize what notifications are allowed while your phone is in Do not disturb mode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Do not disturb**.
3. Tap **Allow exceptions**, and tap **ON/OFF** to enable the exceptions you want to allow.

DRAFT
FOR INTERNAL USE ONLY

Set Schedule

This option allows you to turn Do not disturb mode on and off automatically at scheduled times.

Note: Scheduling is not available if Do not disturb mode has been turned on manually.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Do not disturb**.
3. Tap **Set Schedule**, and set the Days, Start time, and End time.

Notifications on Lock Screen

Choose what notifications can display while the device is locked.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification**.
3. Tap **Notifications on lock screen**, and choose an option.

Application Notifications

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification**.
3. Tap **Application notifications**, and choose an app to enable or disable notifications.

DRAFT

FOR INTERNAL USE ONLY

Display Settings

Change options for your phone's display.

Notification Panel Settings

Customize which Quick setting buttons appear on the Notification Panel.

You can also customize which apps appear on the Recommended applications menu on the Notification panel when you perform certain actions, such as plugging in earphones.

- ▶ From a Home screen, tap  **Apps** >  **Settings** > **Display** > **Notification panel**.
 - Touch and drag buttons to reorder them.
 - Tap **Reset** to reset the order of the buttons.

Adjust the Screen Brightness

Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Brightness**.
3. Drag the **Brightness level** slider to the desired setting.

Note: You can also control Brightness from the Notification Panel. Drag down the Status Bar at the top of the screen to find the Brightness slider.

Automatically Rotate the Screen

Rotate the screen based on the orientation of your phone.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Auto rotate screen**.

DRAFT
FOR INTERNAL USE ONLY

Set the Screen Timeout Delay

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen timeout**, and then choose a time period.

Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included), or while charging. You can choose to display colors, or display photos stored on your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Daydream**. Tap **ON/OFF** to turn Daydream on. Configure options:
 - **Colors:** Tap the selector to display a changing screen of colors.
 - **Google Photos:** Display pictures from your Google Photos account. Tap  **Settings** for options.

- **Photo Frame:** Display pictures in a photo frame. Tap  **Settings** for options.
 - **Photo Table:** Display pictures in a photo table. Tap  **Settings** for options.
3. Tap  **More options** > **Preview** to see a demonstration of Daydream.

Change the Font Style and Size

You can set the font style and size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Font style** to choose a font.
 - Tap **DOWNLOAD** to find new fonts from the Google Play Store.
3. Tap **Font size** to adjust the size of the font.

DRAFT
FOR INTERNAL USE ONLY

Set the Touch Key Light Duration

Set the length of time  **Recent apps** and  **Back** remain lit after you tap them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Touch key light duration** to choose a timeout period.

DRAFT
FOR INTERNAL USE ONLY

Wallpaper Settings

Change the look of the home and lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wallpaper**.
3. Tap **Home screen**, **Lock screen**, or **Home and lock screen**.
4. Tap a image to preview it, or tap **From Gallery** to choose your own image.
5. Once you have chosen an image, tap **SET AS WALLPAPER**.

DRAFT
FOR INTERNAL USE ONLY

Lock Screen

Choose a method for unlocking your screen. Screen Locks have different levels of security and options.

Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen**
3. Tap **Screen lock** to select a screen lock and level of security:
 - **None:** Never use a Lock screen.
 - **Swipe:** Swipe the screen to unlock it. This option provides no security.
 - **Pattern:** A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
 - **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.

- **Password:** Create a password for unlocking the screen. This option provides high security.

Screen Lock Options

Swipe Only

- **Phone shortcut:** Display a phone shortcut on your Lock screen.
- **Camera shortcut:** Display a camera shortcut on your Lock screen.
- **Unlock effect:** Set the visual effect used when unlocking the screen.
- **Help text:** Show help information on unlocking the screen on the Lock screen.

Pattern Only

- **Make pattern visible:** Display the pattern as you draw it.

DRAFT
FOR INTERNAL USE ONLY

Pattern, PIN, and Password Only

- **Lock automatically:** Screen will be locked in 5 seconds after screen automatically turns off.
- **Lock instantly with power key:** Screen will lock instantly when you press the Power key.

All Screen Locks

- **Dual clock:** Display a dual clock on your Lock screen when roaming.
- **Show date:** Display the date on the Lock screen.
- **Owner information:** Show owner information on the Lock screen.

DRAFT
FOR INTERNAL USE ONLY

Storage

View the device memory and usage, or mount, unmount, or format an optional memory card (not included).

Device Memory

View and manage the memory used by the device.

- From a Home screen, tap  **Apps** >  **Settings** > **Storage**.
- Device memory displays Total space and Available space.
 - The amounts of memory used by Applications, Pictures and videos, Audio, Downloads, Cached data, and Miscellaneous files are also displayed.

To increase available memory:

1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **Select all**), and then tap  **Delete**.


Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory displays as Total space and Available space.

Install a Memory Card

You can use an optional microSD or microSDHC card (not included) to add additional memory space to your device.

DRAFT
FOR INTERNAL USE ONLY

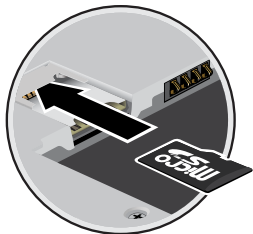

Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. Remove the back cover. For more information, see [“Remove the Back Cover” on page 6](#).
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Replace the back cover. For more information, see [“Replace the Back Cover” on page 8](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Storage**.
2. Tap **Mount SD card**.

DRAFT
FOR INTERNAL USE ONLY

Remove a Memory Card

Warning: To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Storage**.
2. Tap **Unmount SD card**.
3. Remove the back cover. For more information, see [“Remove the Back Cover” on page 6](#).
4. Gently press inward on the memory card so that it pops out from the slot and carefully pull the card out.
5. Replace the back cover. For more information, see [“Replace the Back Cover” on page 8](#).

Format a Memory Card

Warning: When formatting an SD card, you should backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap  **Apps** >  **Settings** > **Storage**.
2. Tap **Format SD card** and follow the prompts.

DRAFT
FOR INTERNAL USE ONLY

Battery

Conserve and view how battery power is used for device activities.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Battery** for options:
 - **Show battery percentage:** Display the battery charge percentage next to the battery icon on the Status Bar.
 - **Battery Chart:** The battery level displays as a percentage. The amount of time the battery has been used also displays. Tap the **chart** to view History details.
 - Tap **REFRESH** to update the listing.

Note: Other applications may be running that affect battery use.

DRAFT
FOR INTERNAL USE ONLY

Ultra Power Saving Mode

Ultra power saving mode saves even more battery power by using a grayscale theme to your home screen and limiting the number of usable apps.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Ultra power saving mode**.
3. Tap **ON/OFF** to enable.
4. Read the terms and conditions, tap the agreement checkbox, and then tap **AGREE** to continue.

To turn off Ultra power saving mode:

- From a Home screen, tap  **More options** > **Turn off Ultra power saving mode**.

DRAFT
FOR INTERNAL USE ONLY

Applications

Use the Application manager to manage the system requirements of your applications. You can also configure your Default application settings.

Application Manager

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Swipe across the screen to display DOWNLOADED, SD CARD, RUNNING, ALL, or TURNED OFF to display memory usage for that category of applications.

DRAFT
FOR INTERNAL USE ONLY

Downloaded

Displays apps you have downloaded onto your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
 - To switch the order of the DOWNLOADED list, tap  **More options** > **Sort by size** or **Sort by date**.
 - To reset all of your application preferences, tap  **More options** > **Reset app preferences**.
 - To install two or more apps at one time, tap  **More options** > **Uninstall multiple**.
3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions. The following options are displayed:
 - **FORCE STOP**: Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.

- **UNINSTALL/UNINSTALL UPDATES**: Delete the application or its updates from the device.
- **TURN OFF**: Disable the application.
- **Show notifications**: Tap the checkbox to enable or disable notifications from the app. Notifications appear in the Status Bar.
- **MOVE TO SD CARD**: Move the app to an optional SD card, if installed.
- **CLEAR DATA**: Clear application data from memory.
- **CLEAR CACHE**: Clear an application's temporary memory storage.
- **CLEAR DEFAULTS**: Clear an application's customization.
- **Permissions**: View information about the application's access to your device and data.

DRAFT
FOR INTERNAL USE ONLY

SD Card

Displays apps you have downloaded onto your memory card (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. Tap **SD CARD** to view a list of all the downloaded applications on your device.
 - To switch the order of the SD CARD list, tap  **More options** > **Sort by size** or **Sort by date**.
 - To reset your application preferences, tap  **More options** > **Reset app preferences**. (When you Reset app preferences, you will not lose any app data.)
 - To uninstall multiple apps, tap  **More options** > **Uninstall multiple**.
4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Tap **RUNNING** to view a list of running services. All the applications that are currently running on the device display.
3. Tap **SHOW CACHED PROCESSES** to display all the cached processes that are running. Tap **SHOW SERVICES IN USE** to switch back.
4. Tap one of the applications to view application information.
 - **STOP**: Stops the application from running on the device. This is usually done prior to uninstalling the application. (Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.)
 - **REPORT**: Report failure and other application information.

DRAFT

FOR INTERNAL USE ONLY

Warning: Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

Note: Options vary by application.

Disabled Services

View and configure disabled apps on your device.

Note: This screen only appears if you have disabled an app on the Apps screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Tap **TURNED OFF** to view a list of applications you have disabled.
 - To switch the order of the TURNED OFF list, tap  **More options** > **Sort by size** or **Sort by date**.
 - To reset all of your application preferences, tap  **More options** > **Reset app preferences**.
 - To uninstall several apps at once, tap  **More options** > **Uninstall multiple**.

3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions. The following options are displayed:
 - **FORCE STOP:** Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
 - **TURN ON:** This will move the application back to the Apps screen.
 - **MOVE TO SD CARD:** Move the app to an optional SD card, if installed.
 - **CLEAR DATA:** Clear application data from memory.
 - **CLEAR CACHE:** Clear an application's temporary memory storage.
 - **CLEAR DEFAULTS:** Clear an application's customization.
 - **Permissions:** View information about the application's access to your device and data.

Note: Options vary by application.

DRAFT
FOR INTERNAL USE ONLY

Default Applications

If you have multiple applications of the same type, such as email apps, you can select one app to be the default.

You can also use a simpler Home screen which provides an easier user experience for first-time smartphone users.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Default Applications**.
2. Tap **Home** and select a Home screen mode:
 - **TouchWiz easy home:** Provides an easier user experience for the first-time smartphone users.
 - **TouchWiz home:** The Home screen that originally displays on your phone.
3. Tap **Messages** and select a default messaging app.
4. To clear defaults you have set up, tap **CLEAR**.

Application Settings

Shortcuts to the settings for various apps are available in one convenient location.

To quickly access the settings for applications:

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications**.
2. Tap an app to display the settings options:
 - **Call**
 - **Calendar**
 - **Contacts**
 - **Email**
 - **Messages**

Note: Settings for each of these applications can also be accessed through the apps.

DRAFT
FOR INTERNAL USE ONLY

Easy Mode

Switch between the default screen layout and a simpler layout. The Easy Mode layout has larger text and icons, making for a more straightforward visual experience.

To enable Easy Mode:

1. From a Home screen, tap  **Apps** >  **Settings** > **Easy mode**.
2. Tap the **ON/OFF** switch to enable this feature.

DRAFT
FOR INTERNAL USE ONLY

Location Services

Some apps, such as Google maps, may require one or more location services be turned on for full functionality.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.

E911

This is a view only field. You cannot turn off E911 Location on any cell phone. E911 Location service is standard on all mobile phones to allow sharing of your GPS location with emergency personnel when you make a call to emergency services (such as 911). This setting is not configurable.

Locating Mode

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Mode** to select how your location is determined:
 - **High accuracy:** Use GPS, Wi-Fi, and mobile networks.
 - **Power saving:** Use Wi-Fi and mobile networks (no GPS).
 - **GPS only:** Use GPS only.

DRAFT
FOR INTERNAL USE ONLY

Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap an entry to view the app's settings.

Location Reporting

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Google Location Reporting** for options:
 - **Location Reporting:** Allow Google apps to use your device's most recent location data.
 - **Location History:** Allow Google to store a history of your location data. Tap **DELETE LOCATION HISTORY** to permanently delete your location history.

DRAFT
FOR INTERNAL USE ONLY

Security Settings

Secure your device and protect your data with Lock Screen and Security settings.

Device Administration

Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
 - **Phone administrators:** Add or remove administrators for your phone.
 - **Unknown sources:** Enable installation of non-Google Play applications.

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

Encrypt Your Data

Require a numeric PIN or password to decrypt your device each time you power it on or encrypt the data on a memory card (not included) each time it is connected.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
 - **Encrypt phone:** Follow the prompts to encrypt all data on your device.
 - **Smart Lock:** Keep your phone unlocked when you have a trusted Bluetooth device connected to it or you are in a familiar location.
 - **Encrypt external SD card:** Require a password each time a microSD card is connected.

Note: Make sure your battery is charged more than 80 percent. Encryption takes an hour or more.

Note: To configure Smart Lock, set up a secured screen lock (like pin, password, or pattern). For more information, see [“Lock Screen” on page 108](#).

DRAFT
FOR INTERNAL USE ONLY

Set Up SIM Card Lock

To prevent another person from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card, you can protect the information by using a PIN code.

When enabled, your device asks for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Set up SIM card lock**.
3. Touch **Lock SIM card**, enter your SIM PIN code, then touch **OK**.

Note: You must activate **Lock SIM card** before you can change your SIM PIN code.

View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Make passwords visible** to turn the feature on.

Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
 - **Security policy updates:** Automatically or manually check for security policy updates.
 - **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.

DRAFT
FOR INTERNAL USE ONLY

Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings** > **Lock screen & security**.
2. Tap **Other security settings** for options:
 - **Storage type:** Select a storage location for credential contents.
 - **Trusted credentials:** Display certificates in your device's ROM and other certificates you have installed.
 - **Install from device storage:** Install a new certificate from storage.
 - **Clear credentials:** Erase the credential contents from the device and reset the password.

Advanced Security

Protect your device with these advanced security options.

1. From a Home screen, tap  **Apps** >  **Settings** > **Lock screen & security**.
2. Tap **Other security settings** for options:
 - **Trust agents:** View or disable trusted agents. (This option is available only with secure locks, like PIN and password.)
 - **Pin windows:** Pin a specific app on your device screen. Follow the onscreen instructions.
 - **Access application usage data:** View the applications that can access your device's usage history.

Note: To view Trust agents, set up a secured screen lock (like pin, password, or pattern). For more information, see [“Lock Screen” on page 108](#).

DRAFT
FOR INTERNAL USE ONLY

Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

Add an Account

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
3. Tap an account to view the sync settings for that account.
 - Check individual data items to sync.
 - Tap  **Sync** to synchronize the account.

DRAFT
FOR INTERNAL USE ONLY

Account Settings

Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Note: Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
 - Tap an account to configure that account's settings.
 - Tap **Settings** or other available options to configure common settings for all accounts of this type.

Delete an Account

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
3. Tap the account, and then tap  **More options** > **Remove account**.

DRAFT
FOR INTERNAL USE ONLY

Language and Input Settings

Configure your device's language and input settings.

Set Your Default Language

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.

Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Default**.
3. Select a keyboard.

Note: Additional keyboards can be downloaded from the Google Play Store. Tap **ADD KEYBOARDS** to find more.

Samsung Keyboard Settings

Configure options for using the Samsung keyboard.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Samsung keyboard** for options:
 - **English(US):** Set the keyboard type: Qwerty keyboard or 3x4 keyboard.
 - **Select input languages:** Choose which languages are available on the keyboard. To switch between languages, slide the space bar sideways.
 - **Predictive text:** Allow Predictive text to suggest words matching your text entries, and, optionally, complete common words automatically. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites—improving its accuracy of predicting your text entries.
 - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.

DRAFT
FOR INTERNAL USE ONLY

Google Voice Typing Settings

Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
2. Tap **Google voice typing** for options:
 - **Choose input languages:** Select languages for Google voice typing.
 - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
 - **Offline speech recognition:** Manage downloaded languages.

Voice Input

Use Google voice recognition to perform Google searches using spoken commands.

To perform a voice search, tap  in the Google search bar or widget. Or say “Ok Google” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Voice input** for options.
 - Tap **Enhanced Google services** for full voice interaction.
 - Tap **Basic Google recognition** for simple voice recognition.
3. Tap  **Settings** beside the recognition service to customize.

DRAFT
FOR INTERNAL USE ONLY

Text-To-Speech Options

Configure your Text-To-Speech (TTS) options. TTS is used for various accessibility features, such as TalkBack. For more information, see [“Accessibility” on page 134](#).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Text-to-speech options** for options:
 - Tap  **Settings** next to Samsung text-to-speech engine for options.
 - **Speech rate**: Set the speed at which the text is spoken.
 - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
 - **Default language status**: Display the default language in use.

Mouse/Trackpad Settings

Configure settings for using an optional mouse (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Pointer speed** to set the speed of the pointer.

DRAFT
FOR INTERNAL USE ONLY

Backup and Reset

Back up your data to Google servers. You can also reset your device to its factory defaults.

Backup and Restore

Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** for options:
 - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
 - **Backup account:** Select a Google account to be used as your backup account.
 - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Factory Data Reset

Return your device to its factory defaults.

Warning: This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Factory data reset**.
3. Tap **RESET PHONE** and follow the prompts to perform the reset.

DRAFT
FOR INTERNAL USE ONLY

Reset Your System Settings

Reset your system settings back to their defaults.

Warning: This action returns your device to its factory default settings. This will not affect your downloaded apps, personal data, your security settings, language settings, account settings, or your default application settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Reset settings**.
3. Tap **RESET SETTINGS** and follow the prompts to perform the reset.

DRAFT
FOR INTERNAL USE ONLY

Date and Time Settings

By default, your device receives date and time information from the wireless network.

When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Date and time**.

- **Automatic date and time:** Tap the check box to use the time on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the date and time.
- **Set date:** Tap to manually set the date. This option is locked if **Automatic date and time** is enabled.

- **Set time:** Tap to manually set the time. This option is locked if **Automatic date and time** is enabled.
- **Automatic time zone:** Tap the check box to use the time zone detected on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the time zone.
- **Select time zone:** Tap to manually set the time zone. This option is locked if **Automatic time zone** is enabled.
- **Use 24-hour format:** Tap to use 24-hour format (as opposed to 12-hour with AM and PM).
- **Select date format:** Tap to choose your preferred date format.

DRAFT
FOR INTERNAL USE ONLY

Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

Note: You can download additional accessibility applications from the Google Play Store.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accessibility** for options:
 - **Direct access:** Press the **Home** key three times to open the accessibility options screen.
 - **Answering and ending calls:** Select the methods you can use to answer and end a call.
 - **Single tap mode:** Tap to stop or snooze alarms, calendar events, and timer alerts, and accept or reject incoming calls.

Services

- **TalkBack:** Speak feedback aloud to help blind and low-vision users.
 - TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.
- **Switch Access:** Enable this feature to control your device using configurable key combinations.

Vision

- **Speak passwords:** Read the characters aloud as you enter your passwords.
- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Color inversion:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.

DRAFT
FOR INTERNAL USE ONLY

- **Color correction:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color.
- **Notification reminder:** Play a beep when a notification has been missed.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Tap **ON/OFF** to turn the feature on.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [“Text-To-Speech Options” on page 130](#).

Hearing

- **Flash notification:** Set your camera light to blink whenever you receive a notification.
- **Turn off all sounds:** For privacy, turn off all notifications and audio.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available Tap Samsung subtitles (CC) for options.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap Google subtitles (CC) for options.

- **Mono audio:** Switch audio from stereo to mono for use with one earphone.
- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.

Dexterity

- **Touch and hold delay:** Select a time interval for this tap gesture.

Interaction

- **Interaction control:** Enable motions and screen timeout. You can also block areas of the screen from tap interaction.

DRAFT
FOR INTERNAL USE ONLY

Printing

Print images and documents to Samsung printers and other compatible printers (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **Printing**.
2. Tap a print service and follow the prompts.

Note: Tap **Download plug-in** to install additional print service drivers.

DRAFT
FOR INTERNAL USE ONLY

Help

View tips and guidelines for using your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Help** for information about new features, applications, settings, and so on.

DRAFT
FOR INTERNAL USE ONLY

About Your Device

View information about your device, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **About phone**, and then tap items for more details:
 - **Icon glossary**: View details about the icons seen on the Status bar.
 - **Status**: View the status of the battery, network, and other information about your device.
 - **Legal information**: View your device's open source licenses and Google legal information.
 - **Phone name**: View and change your device's name.
 - Additional device information includes the Model number, Android version, Build number, and more.

DRAFT
FOR INTERNAL USE ONLY

System Updates

Use System updates to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **System updates**.
3. Follow the prompts to check for available software updates to download and install.

DRAFT
FOR INTERNAL USE ONLY