


Keychron
K4 Bluetooth Mechanical Keyboard

IN THE BOX:
Keychron K4 Bluetooth Mechanical Keyboard x 1
Type-C Cable * 1
Manual * 1
Quick Start Guide * 1
Extra Keycaps Set * 1

K4 Bluetooth Mechanical Keyboard Specifications


Mac / Windows

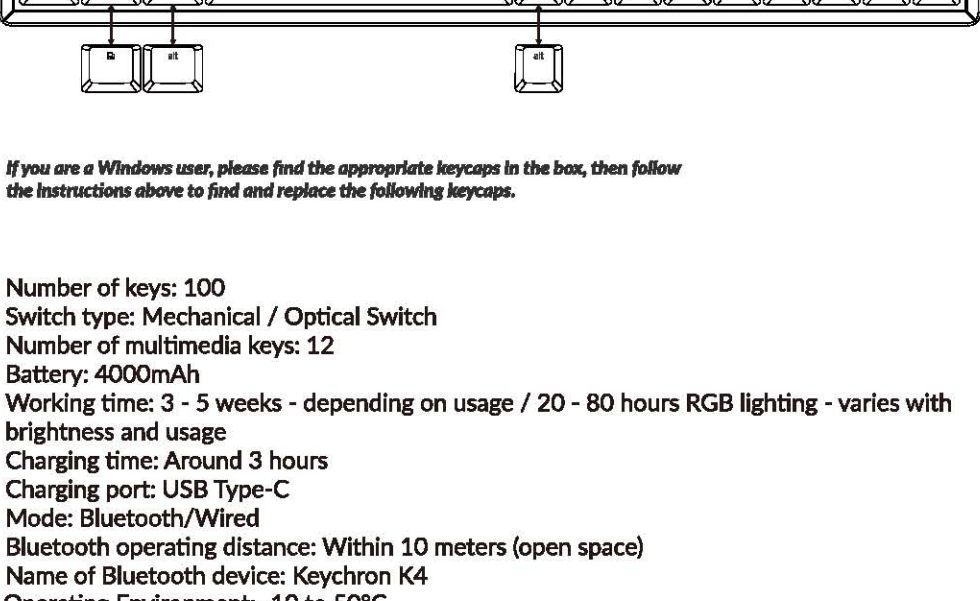

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions above to find and replace the following keycaps.

Number of keys: 100
Switch type: Mechanical / Optical Switch
Number of multimedia keys: 12
Battery: 4000mAh
Working time: 3 - 5 weeks - depending on usage / 20 - 80 hours RGB lighting - varies with brightness and usage
Charging time: Around 3 hours
Charging port: USB Type-C
Mode: Bluetooth/Wired
Bluetooth operating distance: Within 10 meters (open space)
Name of Bluetooth device: Keychron K4
Operating Environment: -10 to 50°C
Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.

K4 Bluetooth Mechanical Keyboard Overview

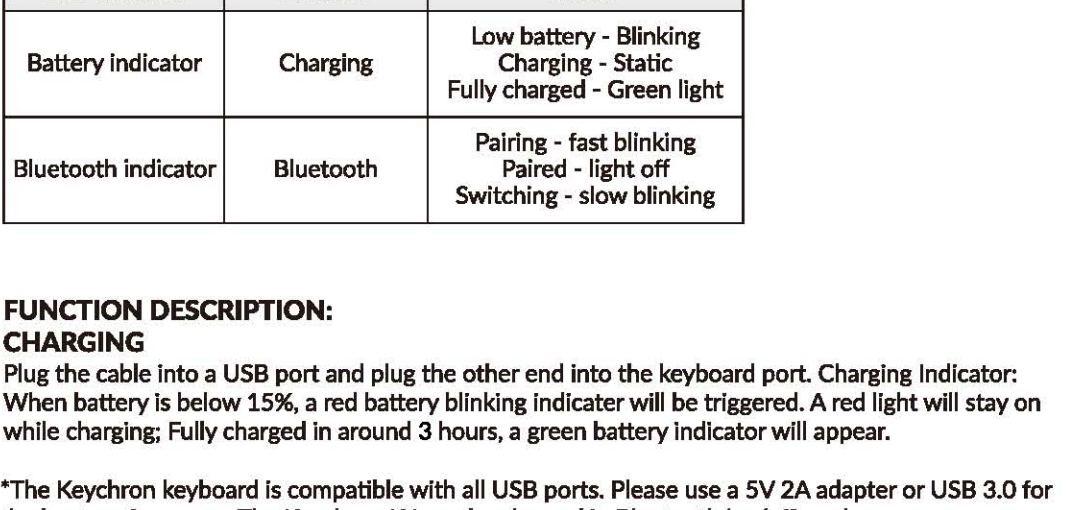

LED STATUS OVERVIEW

LED Location	Function	Status
Battery Indicator	Charging	Low battery - Blinking Charging - Static Fully charged - Green light
Bluetooth Indicator	Bluetooth	Pairing - fast blinking Paired - light off Switching - slow blinking

FUNCTION DESCRIPTION:
CHARGING
Plug the cable into a USB port and plug the other end into the keyboard port. Charging Indicator: When battery is below 15%, a red battery blinking indicator will be triggered. A red light will stay on while charging; Fully charged in around 3 hours, a green battery indicator will appear.

*The Keychron keyboard is compatible with all USB ports. Please use a 5V 2A adapter or USB 3.0 for the best performance. The Keychron K4 can be charged in Bluetooth/on/off mode.
** This product supports up to 5V charging voltage and 2A charging current. We are not responsible for any problems caused by improper charging.

BLUETOOTH/WIRED MODE (TOGGLE SWITCH)
WIRED MODE
1. Switch the toggle switch to Cable option (It only works when a USB cable is plugged in).
2. Connect our cable with your PC and keyboard.
3. Backlit will be turned on.
*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

BLUETOOTH MODE
1. Switch the keyboard to the Bluetooth option.
2. Backlit will be turned on.
3. Hold "Fn+1" key for 3 seconds to activate Bluetooth pairing (the Bluetooth Indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron K4" on your device and connect it (the Bluetooth indicator goes off after successful pairing).
Note: This keyboard supports pairing up to 3 devices simultaneously via combination key "fn" + "1" / "fn" + "2" / "fn" + "3". Simply short press combination keys "fn" + "2" / "fn" + "3" to switch. Follow the above procedures to connect with other devices.
The Bluetooth indicator will continue to flash for 3 minutes.
**Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

SWITCH BLUETOOTH DEVICES
Short press combination key "fn" + "1" / "fn" + "2" / "fn" + "3" to switch to other device.

Reconnect:
1. Switch the keyboard to the Bluetooth option to activate the keyboard (the keyboard will connect to the last connected device by default).
2. The Bluetooth Indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth Indicator is off, press any button to enter the connection again.
* The keyboard must have been paired with the device to perform this function.

Turn off the Keyboard Switch to "Off"

BATTERY SAVER
Under Bluetooth mode, the keyboard backlight turns off when it is inactive for 10 minutes. Tap any button to wake the keyboard. If want to disable this auto battery save mode, press Fn+S+O for 4 seconds. Then if want to enter this power save mode again, press Fn+S+O for 4 seconds.

BACKLIT SETTING
● Short press [] to switch between different types of lighting effects.
● When backlit is on, press [] button to switch among them. Short press fn and "left arrow" or fn and "right arrow" to adjust light colors. (For RGB version only)

OS SWITCH
1- MAC/iOS
Turn the switch to Mac/iOS when you are connected to a Mac or iOS operating system.
To use multimedia keys, simply press F1 to F12.

	macOS	iOS	Windows	Android
Screen brightness +	Screen brightness +	Screen brightness +	Screen brightness +	Screen brightness +
Screen brightness -	Screen brightness -	Screen brightness -	Screen brightness -	Screen brightness -
Motion control	-	-	-	-
Launchpad	-	-	-	-
Backlight decrease	Backlight decrease	Backlight decrease	Backlight decrease	Backlight decrease
Backlight increase	Backlight increase	Backlight increase	Backlight increase	Backlight increase

	macOS	iOS	Windows	Android
Previous track	Previous track	Play/Pause	Next track	Mute
Next track	Next track	Play/Pause	Next track	Mute
Mute	Mute	Next track	Next track	Mute
Volume down	Volume down	Volume down	Volume down	Volume down
Volume up	Volume up	Volume up	Volume up	Volume up

	macOS	iOS	Windows	Android
Capture screen	Capture screen	Delete	Home	End
Delete	Delete	Delete	Home	End
Home	Home	Home	Home	End
End	End	End	End	End
Scroll up	Scroll up	Scroll up	Scroll up	Scroll up
Scroll down	Scroll down	Scroll down	Scroll down	Scroll down

[1] In macOS, multimedia keys have been set as default, simply press fn+function key to use the function of F1-F12. In Windows OS, the function of F1-F12 have been set as default, simply press F1-F12 key to use the function of F1-F12, press fn+function key for the multimedia keys function.
Press fn+X+L simultaneously for 4 seconds to switch the function between the F1-F12 function and the multimedia keys, then, you need to press the fn key to use F1-F12 function. (Notes: fn+X+L function only works in Windows OS, this doesn't apply to MacOS and other operating systems.)

TROUBLESHOOTING
If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:
Allow Bluetooth devices to find this computer
Allow Bluetooth devices to connect to this computer
Alert me when a Bluetooth device wants to connect

My keyboard isn't working.
For the keyboard: Turn the keyboard off and back on.
Turn Bluetooth off and restart the computer. (Windows)
For the device:
Go to Bluetooth settings and turn off Bluetooth and "forget" the keyboard.
Restart the device and turn on Bluetooth to reconnect.

Bluetooth connection is interrupted even within 10 meter.
Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third party Input tools are not compatible with the keyboard.
Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third party Input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain fn keys or multimedia keys does not work under Windows/Android mode.
Functions of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

Safety Precaution:
Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.
Always keep the product dry to avoid corrosion.
Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to not preserve the lifespan of the keyboard and battery.

COMPLIANCE AND SAFETY
FCC DECLARATION OF CONFORMANCE
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the distance between the equipment and receiver.
-Plug the equipment into an outlet on a circuit different from that to which the receiver is currently using.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Cafangan Import and Export Trading Co., Ltd
Find us at:
https://www.keychron.com
hello@keychron.com
@keychron
Keychron
Made in China

Keychron
K4蓝牙机械键盘

注意事项:
请仔细阅读本产品的配件和保修单放在儿童接触不到的地方,以防发生意外触电危险。
请保持产品干燥,以免腐蚀。
请保持产品温度在低于-10°C (5°F) 或高于50°C (131°F) 的温度范围内,以保持键盘或电池的使用寿命。

含铅焊料的安全
国际环保标准符合声明
本装置符合欧盟环保指令委员会规定的第15部分。操作符合以下两个条件: (1) 此装置不会产生有害干扰; (2) 此装置必须接受任何接收到的干扰,包括所有可能导致有害操作的干扰。
本装置符合以下所有指令的任何变更或修改不能使使用户无授权使用装置。
注意: 根据欧洲环保指令委员会规定的第15部分, 本装置已经过测试, 符合第二类数字装置的限制。这些限制旨在提供合理的保护, 防止住宅安装中的有害干扰。本装置会产生使用并会产生无线电频率, 如果不对装置进行安装和使用, 可能会对无线电通信造成有害干扰。

信息: 无法保证在特定安装中不会造成干扰。如果此装置确实对无线电通信接收产生有害干扰 (可通过关闭和打开装置来验证), 建议用户尝试通过以下一种或多种措施纠正干扰:

-重新调整或更改接收天线。
-增加装置和接收器之间的距离。
-将装置远离与接收器连接的电源不同的电源插座上。
-咨询经销商或有经验的无线电/电视技术人员寻求建议。

装置已经过评估, 符合一般无线电频率输出要求。该装置可以在便携式设备下使用, 不受限制。

内容清单

Keychron K4 蓝牙机械键盘
USB线 x 1
说明书 x 1
快速上手指南 x 1

K4键盘规格

按键: 100键
输入: 机械轴 / 光轴
多媒体按键: 12
电池: 4000mAh
工作电压: 3.7V - 4.2V (根据使用情况 / 20 - 80小时RGB照明, 随亮度和使用状况而变化)
充电时间: 3小时
充电接口: USB Type-C
兼容: 蓝牙 / 有线
蓝牙: 2.4GHz, 最长10M (开放空间)
蓝牙设备名称: Keychron K4

K4键盘概述



功能说明

LED灯显示如下:

功能	LED位置	状态
充电	电源指示灯	低电量 - 红灯闪烁 充电 - 红灯常亮 满电 - 绿灯
蓝牙	蓝牙指示灯	配对 - 红灯 配对成功 - 绿灯 配对失败 - 红灯
键盘背光	-	15种灯效 17种灯效

充电

将充电线插入USB端口, 将另一端口插入设备的充电口
充电指示灯: 当电量低于15%, 红色充电指示灯快速闪烁; 充电时, 红色充电指示灯常亮; 在约3小时内完全充电。
指示灯颜色: 红色 - 低电量; 绿色 - 充电; 蓝色 - 满电。
* Keychron K4键盘与所有USB-C接口兼容。要获得最佳信号和最快充电时间, 建议采用USB3.0接口或5V-2A电源适配器。
* Keychron K4可在蓝牙 / 有线模式下充电。
* 有线模式下, 充电指示灯不会熄灭。
* 本产品最高支持9V充电电压, 和2A充电电流。因不同充电器而产生的问题, 我们概不负责。

背光灯

-短按 [] 可调整17/15种背光。
-短按 [] 可调整17/15种灯效。短按 [] 可调整背光颜色。
首次充电后默认灯效: 长按 [] 2秒恢复默认灯效。

蓝牙/有线模式

有线模式:
1. 将模式切换开关拨到 Cable 位置 (连接USB线的时候键盘无任何反应)
2. 将USB线插入设备并打开。
3. 设备开机后即可使用。
* 在有线模式下, 键盘不会自动进入省电模式。

蓝牙模式

1. 将模式切换开关拨到 Bluetooth 位置 (键盘开机默认以上次连接的设备)。
2. 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
3. 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
4. 在设备列表中搜索 "Keychron K4" 并点击它 (配对成功后蓝牙指示灯熄灭)。
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

切换蓝牙设备

短按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 切换至其他设备。
* 每次切换设备时, 键盘会自动进入配对模式, 等待设备连接。此时请耐心等待设备连接成功。

连接

1. 将模式切换开关拨到 Bluetooth 位置 (键盘开机默认以上次连接的设备)。
2. 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
3. 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
4. 在设备列表中搜索 "Keychron K4" 并点击它 (配对成功后蓝牙指示灯熄灭)。
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

关闭键盘

将模式切换开关拨到 OFF, 此时本产品关闭所有模式, 但可以继续进行正常充电。

省电模式

当处于省电模式时, 键盘会自动进入省电模式并关闭背光。十分钟后进入休眠状态, 点任意键即可唤醒。当电量低于20%, 电源指示灯闪烁红色, 请及时充电。

系统切换

1- Mac/iOS
将模式切换开关拨到 Mac/iOS 位置 (连接USB线的时候键盘无任何反应)
2- Windows/Android
将模式切换开关拨到 Windows/Android 位置 (连接USB线的时候键盘无任何反应)

输入切换

对于iOS:
输入切换键: Ctrl + Space
对于Windows:
输入切换键: Caps Lock
对于Android:
输入切换键: Shift + Space

注: 由于Windows/iOS/Android系统的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不被支持。我们建议不要频繁切换操作系统, 因为它可能会影响键盘的使用寿命。

多媒体功能

	Mac OS	iOS	Windows	Android
屏幕亮度 +	屏幕亮度 +	屏幕亮度 +	屏幕亮度 +	屏幕亮度 +
屏幕亮度 -	屏幕亮度 -	屏幕亮度 -	屏幕亮度 -	屏幕亮度 -
静音控制	-	-	-	-
Launchpad	-	-	-	-
降低屏幕亮度	降低屏幕亮度	降低屏幕亮度	降低屏幕亮度	降低屏幕亮度
提高屏幕亮度	提高屏幕亮度	提高屏幕亮度	提高屏幕亮度	提高屏幕亮度

	Mac OS	iOS	Windows	Android
上一首	上一首	播放/暂停	下一首	静音
下一首	下一首	播放/暂停	下一首	静音
静音	静音	下一首	下一首	静音
音量减小	音量减小	音量减小	音量减小	音量减小
音量增大	音量增大	音量增大	音量增大	音量增大

	Mac OS	iOS	Windows	Android
截屏	截屏	删除	Home	End
删除	删除	删除	Home	End
Home	Home	Home	Home	End
End	End	End	End	End
向上滚动	向上滚动	向上滚动	向上滚动	向上滚动
向下滚动	向下滚动	向下滚动	向下滚动	向下滚动

特殊功能
蓝牙/有线模式与省电模式的切换:
当处于蓝牙/有线模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
当处于省电模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

特别蓝牙/有线模式:
将模式切换开关拨到 Cable 位置 (连接USB线的时候键盘无任何反应)
2. 将USB线插入设备并打开。
3. 设备开机后即可使用。
* 在有线模式下, 键盘不会自动进入省电模式。

省电模式:
当处于省电模式时, 键盘会自动进入省电模式并关闭背光。十分钟后进入休眠状态, 点任意键即可唤醒。当电量低于20%, 电源指示灯闪烁红色, 请及时充电。

系统切换:
1- Mac/iOS
将模式切换开关拨到 Mac/iOS 位置 (连接USB线的时候键盘无任何反应)
2- Windows/Android
将模式切换开关拨到 Windows/Android 位置 (连接USB线的时候键盘无任何反应)

输入切换:
对于iOS:
输入切换键: Ctrl + Space
对于Windows:
输入切换键: Caps Lock
对于Android:
输入切换键: Shift + Space

注: 由于Windows/iOS/Android系统的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不被支持。我们建议不要频繁切换操作系统, 因为它可能会影响键盘的使用寿命。

多媒体功能:
Mac OS: 屏幕亮度 +, 屏幕亮度 -, 静音控制, Launchpad, 降低屏幕亮度, 提高屏幕亮度
iOS: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Windows: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Android: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大

特殊功能:
Mac OS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
iOS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Windows: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Android: 截屏, 删除, Home, End, 向上滚动, 向下滚动

蓝牙/有线模式与省电模式的切换:
当处于蓝牙/有线模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
当处于省电模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

特别蓝牙/有线模式:
将模式切换开关拨到 Cable 位置 (连接USB线的时候键盘无任何反应)
2. 将USB线插入设备并打开。
3. 设备开机后即可使用。
* 在有线模式下, 键盘不会自动进入省电模式。

省电模式:
当处于省电模式时, 键盘会自动进入省电模式并关闭背光。十分钟后进入休眠状态, 点任意键即可唤醒。当电量低于20%, 电源指示灯闪烁红色, 请及时充电。

系统切换:
1- Mac/iOS
将模式切换开关拨到 Mac/iOS 位置 (连接USB线的时候键盘无任何反应)
2- Windows/Android
将模式切换开关拨到 Windows/Android 位置 (连接USB线的时候键盘无任何反应)

输入切换:
对于iOS:
输入切换键: Ctrl + Space
对于Windows:
输入切换键: Caps Lock
对于Android:
输入切换键: Shift + Space

注: 由于Windows/iOS/Android系统的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不被支持。我们建议不要频繁切换操作系统, 因为它可能会影响键盘的使用寿命。

多媒体功能:
Mac OS: 屏幕亮度 +, 屏幕亮度 -, 静音控制, Launchpad, 降低屏幕亮度, 提高屏幕亮度
iOS: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Windows: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Android: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大

特殊功能:
Mac OS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
iOS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Windows: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Android: 截屏, 删除, Home, End, 向上滚动, 向下滚动

蓝牙/有线模式与省电模式的切换:
当处于蓝牙/有线模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
当处于省电模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

特别蓝牙/有线模式:
将模式切换开关拨到 Cable 位置 (连接USB线的时候键盘无任何反应)
2. 将USB线插入设备并打开。
3. 设备开机后即可使用。
* 在有线模式下, 键盘不会自动进入省电模式。

省电模式:
当处于省电模式时, 键盘会自动进入省电模式并关闭背光。十分钟后进入休眠状态, 点任意键即可唤醒。当电量低于20%, 电源指示灯闪烁红色, 请及时充电。

系统切换:
1- Mac/iOS
将模式切换开关拨到 Mac/iOS 位置 (连接USB线的时候键盘无任何反应)
2- Windows/Android
将模式切换开关拨到 Windows/Android 位置 (连接USB线的时候键盘无任何反应)

输入切换:
对于iOS:
输入切换键: Ctrl + Space
对于Windows:
输入切换键: Caps Lock
对于Android:
输入切换键: Shift + Space

注: 由于Windows/iOS/Android系统的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不被支持。我们建议不要频繁切换操作系统, 因为它可能会影响键盘的使用寿命。

多媒体功能:
Mac OS: 屏幕亮度 +, 屏幕亮度 -, 静音控制, Launchpad, 降低屏幕亮度, 提高屏幕亮度
iOS: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Windows: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Android: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大

特殊功能:
Mac OS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
iOS: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Windows: 截屏, 删除, Home, End, 向上滚动, 向下滚动
Android: 截屏, 删除, Home, End, 向上滚动, 向下滚动

蓝牙/有线模式与省电模式的切换:
当处于蓝牙/有线模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
当处于省电模式时, 长按 "Fn + 1" (或长按蓝牙指示灯) (蓝牙指示灯闪烁3秒)
注意: 此键盘支持同时连接 "Fn + 1" / "Fn + 2" / "Fn + 3" 依次配对最多3台设备, 只需长按组合键 "Fn + 1" / "Fn + 2" / "Fn + 3" 进行开关, 或长按上一步的蓝牙指示灯。
* 蓝牙连接设备较多时, 初次连接可能出现连接缓慢或连接失败等问题, 请耐心检查设备设置是否正确。

特别蓝牙/有线模式:
将模式切换开关拨到 Cable 位置 (连接USB线的时候键盘无任何反应)
2. 将USB线插入设备并打开。
3. 设备开机后即可使用。
* 在有线模式下, 键盘不会自动进入省电模式。

省电模式:
当处于省电模式时, 键盘会自动进入省电模式并关闭背光。十分钟后进入休眠状态, 点任意键即可唤醒。当电量低于20%, 电源指示灯闪烁红色, 请及时充电。

系统切换:
1- Mac/iOS
将模式切换开关拨到 Mac/iOS 位置 (连接USB线的时候键盘无任何反应)
2- Windows/Android
将模式切换开关拨到 Windows/Android 位置 (连接USB线的时候键盘无任何反应)

输入切换:
对于iOS:
输入切换键: Ctrl + Space
对于Windows:
输入切换键: Caps Lock
对于Android:
输入切换键: Shift + Space

注: 由于Windows/iOS/Android系统的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不被支持。我们建议不要频繁切换操作系统, 因为它可能会影响键盘的使用寿命。

多媒体功能:
Mac OS: 屏幕亮度 +, 屏幕亮度 -, 静音控制, Launchpad, 降低屏幕亮度, 提高屏幕亮度
iOS: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Windows: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大
Android: 上一首, 下一首, 播放/暂停, 静音, 音量减小, 音量增大