Available System Settings

Photography Settings:

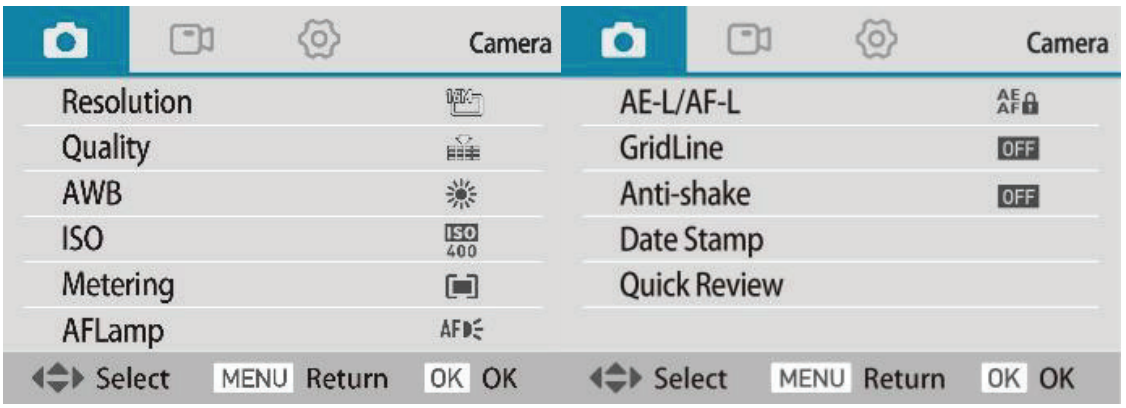

Sub-Menu	Menu Content
Resolution	64M (9200*6900), 32M (6480*4860), 16M (4608*3456), 8M (3264*2448)
Quality	Super Fine, Fine, Normal
AWB	Auto, Daylight, Cloudy, Tungsten, Fluorescent
ISO	Auto, ISO100, ISO200, ISO400, ISO800, ISO1600, ISO3200
Metering	Multi, Center, Spot Model
AF Lamp	Auto, Turn Off
AE-L&AF-L	AE-L (Auto Exposure Lock), AF-L (Auto Focus Lock), and AE-L&AF-L (Auto Exposure and Auto Focus Lock)
GridLine	Turn On/Turn Off
Anti-shake	Turn On/Turn Off
Date Stamp	Turn On/Turn Off
Quick Review	Off, 2 seconds, 5 seconds
Color	Only available in Filter mode. Provides 11 color options
Scene Selection	Only available in Scene mode. Provides 11 scene modes

Available System Settings (Cont.)

Video Settings:

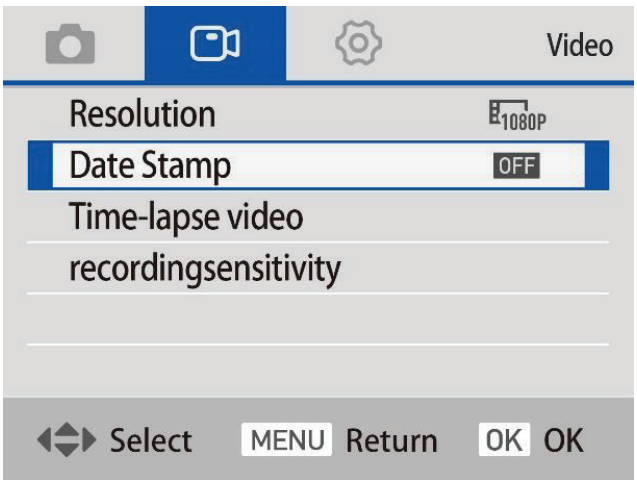

Sub-Menu	Menu Content
Resolution	4K (2880*2160), 2K (2560*1440), 1080P (1920*1080/60fps), 1080P (1920*1080/30fps), 720P (1280*720/60fps)
Date Stamp	Turn On/Turn Off
Time-lapse video	Off, 1 second, 3 seconds, 5 seconds
recordingsensitivity	Soft, Normal, Strong

Available System Settings (cont.)

System Settings:

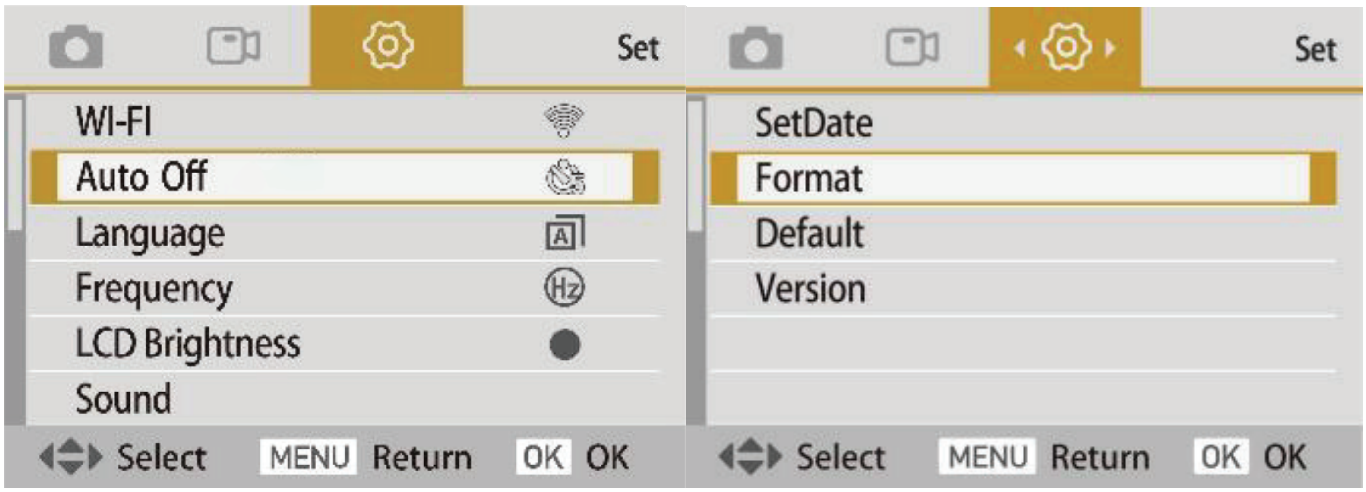

Sub-Menu	Menu Content
Wi-Fi	Turn On/Turn Off (Wifi name is VIVITAR-xxxxxx, default password is 12345678)
Auto Screen Off	Off, 3 minutes, 5 minutes, 10 minutes
Language	Provides 13 language options to choose from
Frequency	50 Hz, 60 Hz
Sound	Turn On/Off, Power-on sound, Shutter sound, Operating volume
Set Date	Year, Month, Date, Hour, Minute, Second
Format	Cancel or Ok
Default	Cancel or Ok
Version	Software Version Number

Using the Camera

Taking a Photo

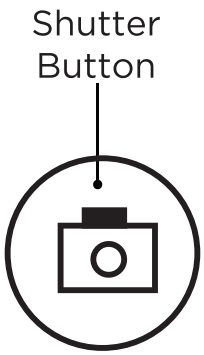

Lightly press the Shutter button to take a quick shot. Full press to take a photograph.

When taking a photo you can use the mode dial to change the current mode. Rotate the mode dial to select the desired mode.

Icon	Mode	Description
M	Manual Exposure	Change camera to manual mode.
	Video Recording	Set to Video Mode.
Tv	Shutter Priority	Manually set the shutter speed. The camera will automatically select a fitting shutter speed.
P	Program Auto Exposure	The camera will automatically set both the shutter speed and aperture.
SCN	Scene Mode	Load a preset scene from the camera.
	Continuous Shooting Mode	The camera will continue shooting photos automatically while holding down the camera's shutter button.
	Intelligent Scene Mode	The camera selects the optimum settings automatically for the current scene.
	Filter Mode	Add or change current filters.

Using the Camera (Cont.)

Taking a Video

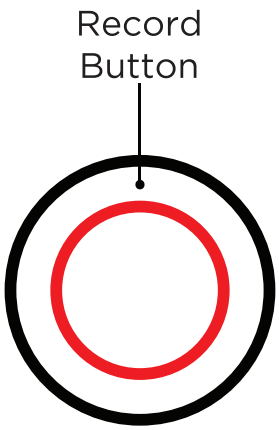

Press the Record button to start and stop recording.

Playback Mode

Press the Playback button to enter playback mode. Press again to leave playback mode.

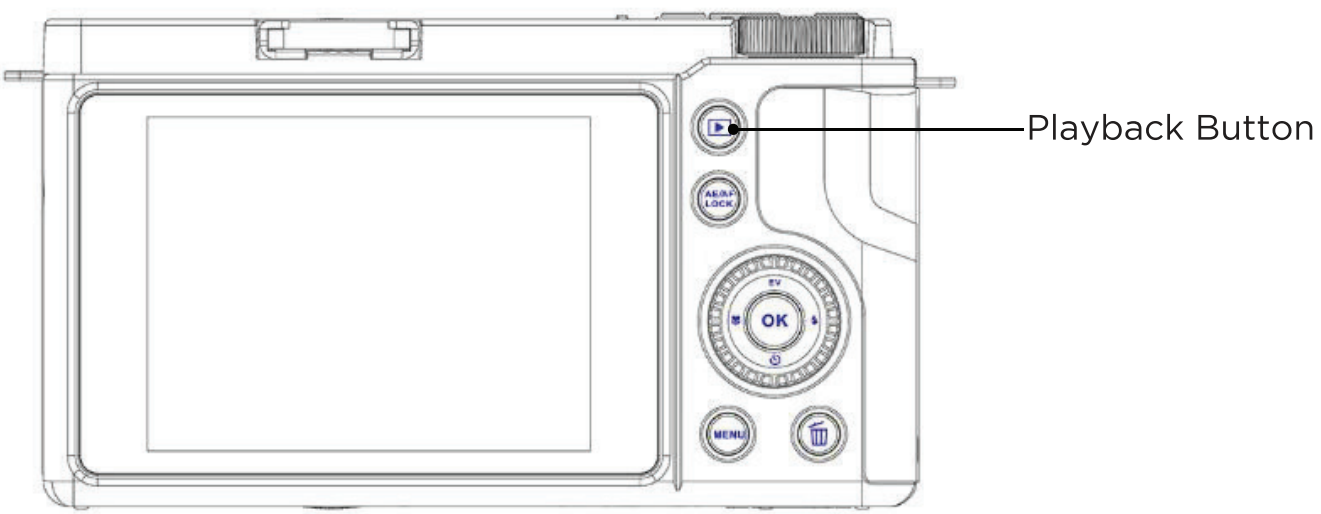

In playback mode use the Left and Right buttons to view photos and videos.

Using the Camera (Cont.)

Pressing the Playback buttonto display the playback menu options.

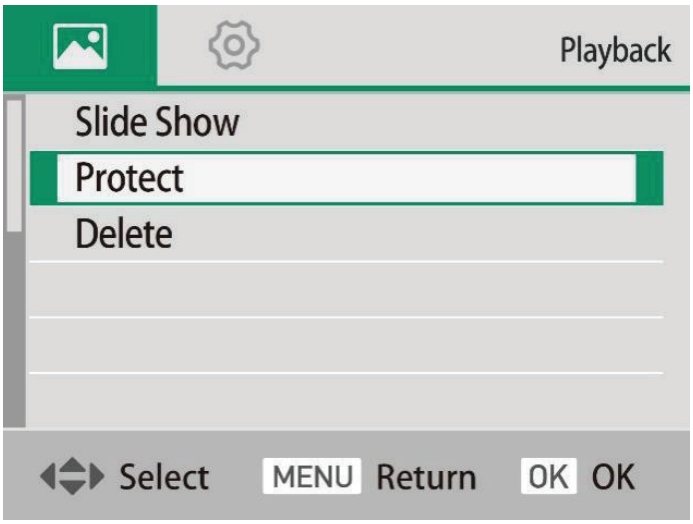

Sub-Menu	Menu Content
Slide Show	Select to create a slideshow from the photos saved on the camera. Set interval duration between slides and enable or disable looping.
Protect	Use to lock photos. Locked photos cannot be deleted on the camera until they are unlocked. There are four options: Lock Current, Unlock Current, Lock All, and Unlock All.
Delete	Use to delete photos and videos. There are two options: Delete Current Photo and Delete All Files.

Playback in HDTV

The high-definition interface of this camera can only be connected to a high definition TV, not to a computer.

Insert the public port of an HD cable (not included) into the HD interface of the camera, and connect the other end of the port to the HD Input Interface of the HD TV.

NOTE: Stop recording/playing videos before connecting/unplugging the HD cable. (The TV signal source needs to be adjusted to high-definition mode)

After connecting the HDTV, the camera display content will automatically switch to the HDTV, and the camera screen will be automatically blacked out.

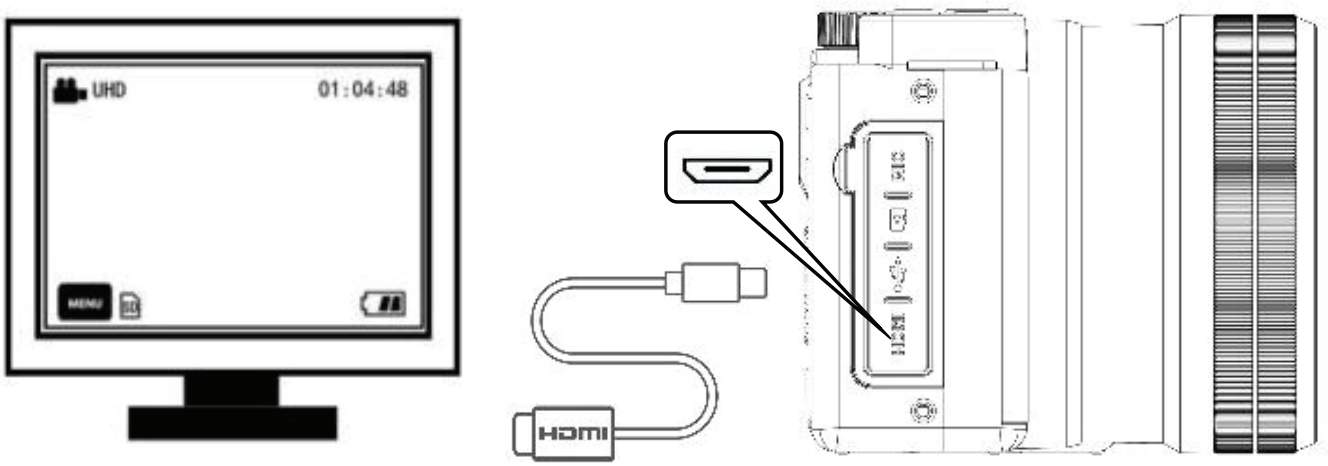

Connect to a Computer

1. Connect one end of the included USB-C cable into the USB port on your camera.

2. Connect the other end of the included USB-C cable into an available USB port on your computer.

3. The camera will automatically power On when connected. The screen will display two options. Press the Up/Down button to select the desired option, then press OK to confirm the selection.

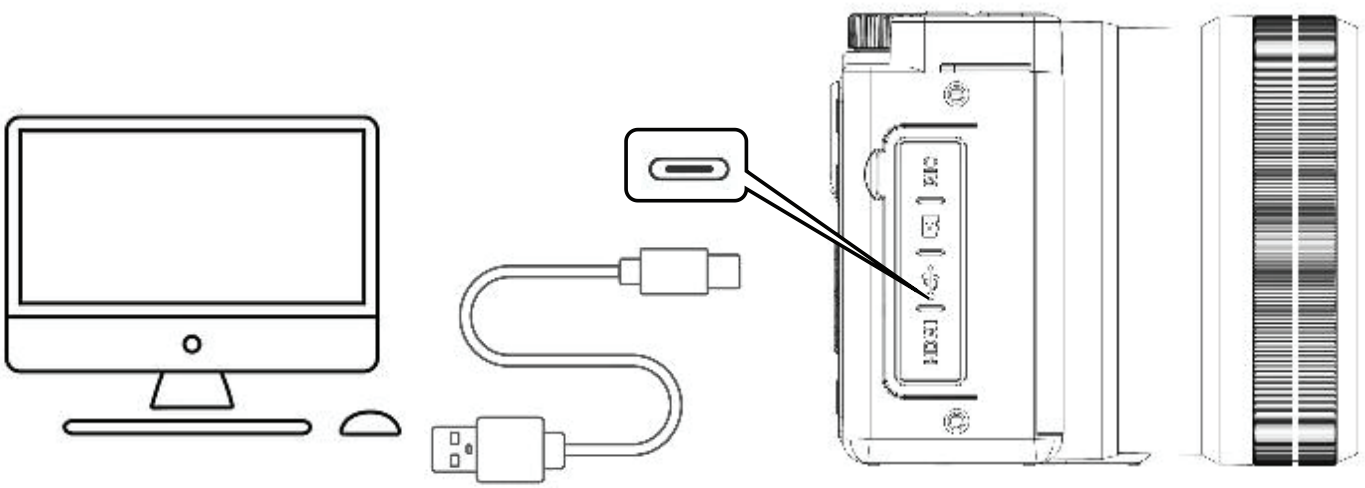

Connecting to the App

1. Download the VD Cam App. Scan the below QR code or search for "VD Cam(Video Dimension Camera)" on the App Store or on Google Play.

Connecting Wi-Fi

1. Power on the camera.
2. Press the Menu button. Select Wi-Fi Options. Enable Wi-Fi Hotspot.
3. Enter the Wi-Fi menu on your smartphone device. Search for the Wi-Fi named Vivitar-xxxxx. Select Wi-Fi, then enter the password 12345678.
4. Open the app from the previous section. Once connected, you can adjust settings via your phone and access various features.

NOTES:
-While hotspot is enabled, certain functions may be disabled.
-If you are connected to a VPN, before connecting to the camera, disable the VPN.
-Do not change the Wi-Fi name or password on the camera. Changing the name or password can disable or hamper the camera's functionality.

Troubleshooting

If you encounter problems with the camera, please refer to this section.

1. The camera cannot be turned on after installing the battery:

(1) The battery power is insufficient, please replace the battery with a new one or charge the battery.
(2) The battery is installed in reverse, please confirm that the battery is installed in the correct way.
(3) The battery insulating paper is not removed.

2. The battery is not charging:

(1) If the red light of the charging indicator flashes, the battery is not in place or the contact is poor. Please re-install the battery until the indicator light is on (the indicator light goes out when the battery is fully charged)
(2) The charging indicator light is off and the charger is not plugged in properly. Please check whether the charger is connected normally.
(3) The ambient temperature is lower than 10°C, which may lead to slow charging or failure to charge.

3. Camera crashes:

Quickly pressing each button of the camera may cause the camera to freeze. After it crashes, unplug the battery and reboot.
Tip: When the camera is recording or taking pictures, do not quickly press the camera button. Under normal circumstances, the camera will display a waiting icon.

4. The memory card cannot be recognized:

(1) Please check whether the memory card complies with microSD card (class10), the maximum is not more than 256G.
(2) Please check whether the memory card is inserted backwards.
(3) When the memory card is used on the camera for the first time, it is recommended to format it first.

Additional Notes

(1)Do not insert any object into the slot memory card slot except the memory card.
(2)After the power is turned on, the camera may show an unstable image for a few seconds, but this is not a fault.
(3)Due to the optical properties of the lens, there may be color dispersion (magnification of chromatic aberration) at the edges of the image. This is not a camera fault.
(4)It is normal for the memory card to get hot after a long period of use.
(5)It is normal for the camera's screen to heat up after a long period of use.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

One Year Warranty (Cont.)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

VIVITAR®

POWERING UP LIFE.

© 2026 Sakar International

195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com