70.00 mm

80.00 mm

中文

使用说明书

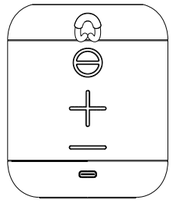

使用前请阅读说明

连接

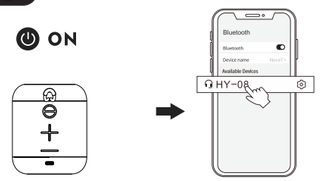

1.按O键（开机）

2.打开手机蓝牙后
单击<HY-08>进行配对

重置

如果存在连接或功能问题，请重置音箱：

1.删除设备上的蓝牙配对信息，并关闭设备蓝牙功能。
2.按关机键等音箱关机。
3. 重新按音箱开机。
4.打开设备的蓝牙功能，等待5秒后，找到 HY-08 型号 重新与设备配对连接。
(如果上述操作不起作用，请重试)

使用说明

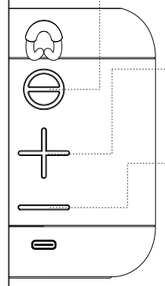

1.开关按键
开机状态下 长按3秒关机
播放 / 暂停 开机状态下短按一次
关机状态下 长按3秒开机

2.音量"+"键及下一曲按键
BT模式下，短按“+”按键增加音量；
长按“+”按键切换下一曲

3.音量"-"键及上一曲按键
BT模式下，短按“-”按键减低音量；
长按“-”按键切换上一曲

TWS互联按键
在蓝牙状态下时，同时长按“+ -”按键，
提示音响起，进行TWS功能配对

问题处理

1.可以连接但是没有声音：
长按“+”音量按键
（如果是苹果IOS以外的操作系统请打开蓝牙链接里面的音量同步按钮）

2.若音响无法连接：
请重置（见第2页）

激活产品（第一次正常连接蓝牙设备使用）后如音响无法充电，联系我们寄送新产品

请经常清洁音响的充电接口，以免导致充电失败。

安全说明

1.使产品远离酷热和寒冷，避免损坏电池和电路。
2.避免液体浸入产品中。
3.请勿拆卸产品。
4.不要使用浓缩化学产品或洗涤剂清洁产品。
5.仅使用5V/1A电源。连接电源电压过高可能会导致严重损坏。
6.不要随意丢弃或将产品放置在火灾或高温附近，以避免爆炸危险。

English

INSTRUCTION MANUAL

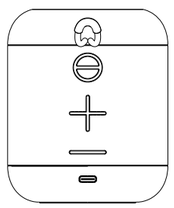

Please read the instructions before use

CONNECT

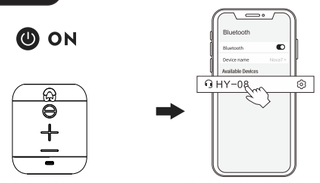

1. Press the O button .
(to turn on the power)

2. After turning on the Bluetooth
on your phone, click <HY-08> to pair

RESET

If there are connection or function issues, please reset the speaker:

1. Delete the Bluetooth pairing information on the device and turn off the device Bluetooth function.
2. Press the power button and wait for the speaker to turn off.
3. Press the speaker again to turn on.
4. Turn on the Bluetooth function of the device, wait for 5 seconds, find the HY-08 model and re-pair and connect with the device.

(If the above operation does not work, please try again)

OPERATION

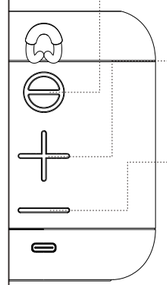

1. On/Off button
In the powered-on state, press and hold for 3 seconds to turn off.
Play/Pause: In the powered-on state, press once briefly.
In the powered-off state, press and hold for 3 seconds to turn on.

2. Volume "+" button and next song button
In BT mode, long press the "+" button to increase the volume;
Short press the "+" button to switch to the next song

3. Volume "-" button and previous song button
In BT mode, long press the "-" button to reduce the volume;
Short press the "-" button to switch to the previous song

TWS interconnection button
When in Bluetooth mode, press and hold the "-" button; a prompt tone will sound, indicating TWS pairing mode.

PROBLEM HANDLING

1. Can connect but no sound:
Long press the "+" volume button
(If it is an operating system other than Apple IOS, please turn on the volume sync button in the Bluetooth link)

2. If the speaker cannot connect:
Please reset (see page 2)

Activate the product (use it normally when connected to a Bluetooth device for the first time) If the speaker cannot be charged after that, please contact us to send a new product

Please clean the charging port of the speaker frequently to avoid charging failure.

FCC Statement
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

SAFETY INSTRUCTIONS

1. Keep the product away from extreme heat and cold to avoid damage to the battery and circuit.
2. Avoid liquid immersion in the product.
3. Do not disassemble the product.
4. Do not use concentrated chemical products or detergents to clean the product.
5. Use only 5V/1A power supply.
Connecting a power supply voltage that is too high may cause serious damage.
6. Do not discard or place the product near fire or high temperature to avoid explosion hazards.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.