STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

RC Savage Car

360 DEGREE SPINS AND OTHER STUNTS

AGES 6+

BOX CONTAINS THE FOLLOWING FREQUENCY:
☐ 27 MHz
☐ 49 MHz

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

⚠ WARNING! CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

BLUE HAT TOY COMPANY

TWO FREQUENCIES FOR COMPETITIVE RACING

WIRELESS RC ACTION!

360 DEGREE SPINS AND OTHER STUNTS

STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

STREET SAVAGE®

RADIO CONTROLLED STUNT VEHICLE

BATTERY INFORMATION

The operation requires 6 "AA" 1.5V (not included) alkaline batteries for car and one 9V battery for remote control (not included).

- Carefully remove items from package.
- Locate the battery compartment on the back of each item.
- Unscrew screw on bottom of car to release battery pack and replace batteries observing the correct polarities (Fig.1).
- Replace the battery compartment door.
- Slide open the battery compartment door of the controller.
- Insert the 9V battery following the correct polarities (Fig.2).
- Replace the battery compartment door.

Insert 6 "AA" batteries (not included) in the polarity direction shown.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not operate your car near water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in crowded or congested area, and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Always keep your hands and dangling hair away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

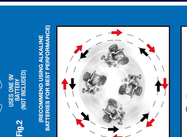

(RECOMMENDED USING ALKALINE BATTERIES FOR BEST PERFORMANCE)

Fig.4

PERFORMING STUNTS

- Switch both car and the controller to the "ON" position.
- Use the left joy stick to make the left wheel move forward and reverse.
- Use the right joy stick to make the right wheel move forward and reverse (Fig.3).

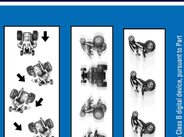

Fig.5

1. SPECTACULAR SPINS.
To spin the Street Savage 360° run the car and push up the RIGHT joystick and simultaneously push down the LEFT joystick. Release the RIGHT joystick and continue to push down the LEFT joystick depending on the chosen spin direction (Fig.4).

2. AWESOME CORNERING
To take extremely sharp turns or maneuver a 180° or 360° turn, run the car and push the RIGHT and the LEFT joystick then release the RIGHT or the LEFT joystick to steer left or right (Fig.5).

3. WILD WHEELIE
To do a wheelie, run the car and push BOTH joysticks forward. The car will stand up on two wheels. Release slowly the RIGHT or the LEFT joystick to steer (Fig.6).

4. TWO WHEEL SPINS
To make a two wheel spin, run the car at full speed to make a wheelie and then suddenly release the RIGHT or the LEFT joystick to spin on two wheels (Fig.7).

Fig.6

Fig.7

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY WARNING:
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Install batteries properly, observing polarity diagrams inside battery compartment.
- Remove batteries when not in use. Remove all batteries when equipment will not be used for a long time.
- Only use batteries specified (alkaline, standard) and only use the same or equivalent type and number of batteries specified.
- Only use manufacturer-specified battery(ies), charger(s) and/or adapter if applicable, specified for this product.
- Always use, replace, and charge if applicable batteries under adult supervision.

KEEP THIS PACKAGE FOR FUTURE REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FC The trademark and design of the Bluetooth word mark are owned by the Bluetooth SIG, Inc. and any use of such marks by MerchSource, LLC, Blue Hat Toy Company, Ignite and Street Savage is under license. Other trademarks and trade names are those of their respective owners.

©2014 MerchSource, LLC, Blue Hat Toy Company, Blue Hat Toy Company, Ignite and Street Savage are trademarks of MerchSource, LLC, used under license. All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618.
Made in China. Assembled in the USA. FT2014A
For technical support, please visit www.merchsourcestore.com or call 1-800-374-2744.

FT2014A

6 94262-31554 6

Made in China

11.18"W x 7.75"D x 8.25"H