CONTENTS

① Statement ····· 1
② Safety Precaution ····· 2
③ Product List ····· 3
④ Product Structure ····· 4
⑤ Installation Struction ····· 5
⑥ Cleaning Mode ····· 7
⑦ Indicator Light Instruction ····· 7
⑧ Key Press Instruction ····· 8
⑨ Distribution Network Operation ····· 10
⑩ Emptying the litter box instruction ··· 12
⑪ Cleaning and Setting the Box Pad ····· 12
⑫ Cleaning Instruction ····· 13
⑬ Q&A ····· 14
⑭ Regional Restriction Policy ····· 15
⑮ Product Specification ····· 16
⑯ Warranty Service ····· 17
⑰ Warranty Service Form ····· 18

01 Statement

- Thank you for using our smart product. We will continue to prioritize pet safety, pet health and service experience as always.
- Please read this product manual carefully before use. Once you use this product, it indicates that you have read and accepted the following safety precautions carefully.
- Any accidents or losses resulting from improper operation are not the responsibility of our company, and our company will not bear any legal liability. The right to interpret and modify this statement belongs to our company.

02 Safety Precaution

Failure to comply with the following terms may result in the product being unable to function properly or other unexpected losses.

① Please install and use the equipment strictly in accordance with the instructions.

② Equipment placement requirements: It should be placed on a dry, level and hard ground surface. Do no lean against objects or touch the walls to avoid affecting the weighing.

③ Equipment handling requirements: This device is equipped with a precision weighing sensor at the base When moving it, lift and place it gently. Do not drag it.

④ Do not open the side covers and the waste compartment cover during the normal operation of the equipment to avoid potential safety hazards.

⑤ Please use the original power adapter, otherwise, it may damage the device or cause safety hazards.

⑥ The base of the main unit is not allowed to be washed with water or sprayed with liquid. it can be wipedwith a damp cloth. The litter box, left and right baffles, and the waste compartment can be washed withwater.

⑦ For kittens under 6 months old or weighing less than 1.5 kg, please select the "kitten mode". The use ot sensor or timer modes is strictly prohibited.

⑧ Please use it in an indoor environment and avoid using it in high-temperature and high-humidity conditions.

⑨ The base of this product's main unit should not be immersed in water. If it gets wet accidentally duringcleaning, please dry it immediately to prevent damage to the equipment.

⑩ Please carry out the maintenance under the guidance of professionals to avoid various accidenta iniuries.

⑪ To provide a better experience, we will regularly upgrade and optimize the device. The actual device or related functions may difer from this manual. If you have any questions, please contact customer service.

03 Product List

Main Unit x 1

Waste Compartment x 1

Supporting Leg x 4 · Power Adapter x 1 · Garbage Bag x 1 · Deodorizing Tablet x 1 · Brush x 1 · Struction x 1 · Quick Start Guide x 1

04 Product Structure

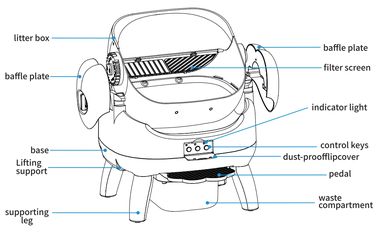

05 Installation Struction

Remove the fixed tapes on the front and back sides of the machine and the internal pearl cotton.Take out the support legs, cat litter bag, aroma box,instruction manual, adapter and brush from the accessory box.



Rotate the side lock stop knob switch of the hanging ears from OFF to ON. After unlocking, pull out the left and right hanging ears horizontally, lift the drum upwards, and remove the protective cotton at thebottom.



Align the four support legs with the convex point limiters and press them vertically into the four in stallation holes at the bottom. After insertion, aslight click indicates that thesupport legs are in place. The machine needs to be placed flat,otherwise, it will affect usage.



Install the drum downward and ensure that the bearings on both sides of the drum are correctly installed in the slots. Insert the side hooks horizontally until they are in place. Rotate the side lock switch on the hooks from "ON" to "OFF" to lock the hooks until they cannot be pulled out horizontally.

Deodorizing tablet

Take out a garbage bag and put it over the toilet tank press ring. The press ring has two flaps. You can press the drawstring under the flaps. Hang the deodorizing tablet on the breach part of the garbage bag drawstring on the waste compartment press ring, so that it can come into contact with the odor anddecompose it.

There are two slide rails at the bottom of the machine.When installing, push the waste compartment along the bottom slide rail from below the entrance at the front of the machine.If thewaste compartmentis not installed properly,all three machine indicator lights will flash rapidly at the same time.

06 Cleaning Mode

Mode	Explanation	Note	Status and Prompt Tones
Automatic	Litter box automatically cleans up after use.	After the cat leaves the litter box, the timer starts. By default, litter box will be automatically clean ed once every 3 minutes. This default time can be set in the APP.	
Kitten	Litter box does not automatically clean up after use.	It is recommended to use for kittens under 6 months old or weighing less than 1.5KG.	
Timed	Set a specific time point for cleaning.	Only in the networked state, can the cleaning be activated at the set time point by choosing the timed mode through the APP.	

07 Indicator Light instruction

NO.1	No.1 red light flashes/ Motor is malfunctioning and cannot operate/ Need to be cleaned before re-powering.
	No.1 red light remains on constantly/ Infrared sensor at the compartment obstructed/ Compartment is full or a cat is trapped.
	No.1 green light is on/ Radar is activated.
	No.1 white light is on/ Radar is not activated.
	No.1 blue lights on/ Child lock function is enabled,but function is invalid.
	No.1 blue lights on/ Child lock function is enabled,but function is invalid.
	When in standby mode, enter the weighing calibration and the red and green lights of No. 1 are on.
NO.2	No.2 red light is flashing/ Hall switch abnormal, other lights off.
	No.2 white light is constantly on/ Empty litter box / Motor operates.
	No.2 white light is flashing/Empty litter box/ Motor suspends.
NO.3	No.3 red light is flashing / Abnormal weighing/ All motor lights are off.
	No.3 white light is constantly on/Remove waste from litter/ Motor operates.
	No.3 white light is constantly on/Remove waste from litter/ Motor suspends.
Mixed alternating indicator light	Trash fails to recognize white lights flashing/The device cleaning function is suspended.
	During self-check reset, No. 2 and No.3 are constantly on, No. 1 mans the radar/child lock.
	Standby trigger radar/ Weight > 500g/ No. 2 and No. 3 white light alternate flashing.

08 Key Press Instruction

			Indicator light status	Beep sound
No.1 wifi	Click and hold for five consecutive clicks.	The microwave radar is off by default. Click and hold the WiFi key for 5 seconds to turn the radar on or off. Once the radar is on, if it senses a cataproaching, the motor will stop.When the cat moves away and the radar signal disappears, themotor will resume operation after 5 seconds.	When the radar is turned on,the No.1 indicator light will turn green.If the radar is not turned on, it will turn white.	Beep
	Press and holdfor 3 seconds	The power-on time for the distribution network is 6 minutes. If it exceeds 6 minutes, you can press and hold the WiFi key for 3 seconds again to startthe configuration.	In the distribution network, light No. 1, 2 and 3 indicate in the form of a white running light.	A long drip sound.
No.2 Litter box empty	Press and holdfor 3 seconds	Press and hold for 3 seconds to perform the emptying of the litter box operation. During the emptying process, press briefly once to pause the emptying. If no key is operated for 15 seconds, the emptying will resume automatically. During the startup process, press and hold the emptying key for 3 seconds again to cancel the emptying.	When emptying the litter box, the motor runs and the white light No.2 stays on constantly. When the motor pauses, the white light No. 2 flashes.	Beep
No.3 Waste removal from litter	Press once briefly	Press briefly to start removing the waste from the litter. During the cleaning process, press briefly once to pause. If no key is operated for 15 seconds, it will automatically resume removing the waste from the litter.	When removing the waste from the litter, the motor runs and the white light No. 3 remains on constantly. When the motor pauses,the white light No. 3 flashes.	Beep
Combination keys	Press and hold the last two keys simultaneously for 3 seconds.	Press and hold the "Empty the litter box" and "Remove the waste from the litter" keys simultaneously for 3 seconds to activate the child lock. Repeat the action to deactivate it.	When the child lock is unlocked, the blue light of No. 1 will be on, when relocked, the indicator light will not be on, and switch to the radar status indicator light.	Beep

08 Key Press Instruction

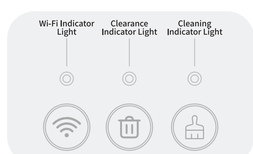

09 Distribution Network Guide

1. Scan the QR code or search for "Tuya Smart" in the app store to download the APP.
2. Install and register the APP, then click "Add Device" on the main page.
3. Press and hold the WiFi key on the device for 3 seconds until you hear a "beep" and the WiFi indicator light flashes rapidly. The APP will recognize the device. Click "Add" to proceed.
4. Complete the binding according to the prompts in the APP.

When connection failed

1. Please check if the WiFi name and password match. If they don't, please restart your phone and router and rebind them.
2. This device only supports 2.4G WiFi. If your router doesn't have a 2.4G network set up, you can solve this by configuring your router.
3. Place the device closer to the router, tum it off and then on again, change your phone, and then reconnect.



1.Click "Add Device"

2.Click "Add"

3.Enter the WiFi name and password.

4.The next step

5.Click "Complete"



6.Main page

10 Emptying the litter box instruction

Emptying the litter box refers to clearing out all the cat litter and waste from the litter box.

① To prevent the waste compartment from overflowing during emptying,please remove any foreign objects from the waste compartment and replace the garbage bag before emptying.
*Do not empty when the waste compartment is full.

② Press and hold the emptying button for 3 seconds to start emptying.Press the button lightly during operation to pause, and press and hold the key again tocancel emptying and reset the machine.

③ After emptying is completed, open the waste compartment and replace the garbage bag.
* If the white abnormal indicator light flashes continuously after emptying, it indicates that sand needs to be added and spread evenly.



11 Cleaning and Setting the Box Pad

To disassemble: Grasp the handle of the litter boxpad and pull it off with force.
*It is recommended that you purchase an additional litter box pad for easier rotation of use.

To assembly: Align the triangle on the MAX litter box pad with the triangle on the litter box slot, the n hold the litter box pad on both sides and insert the top and bottom into the grooves one by one.

Gently press and release the litter box pad, and both sides will automatically spring open and snap into the grooves. You can press the steel ring by hand to make it tightly adhere to the inner wall of the litter box.



*The litter box pad is a consumable part. When there are feces sticking to the bottom or water seeping through, please purchase and replace it in a timely manner.

12 Cleaning Instruction

The base is not to be washed with water or sprayed with liquid. it can be wiped with a damp tissue. The litter box, the left and right side panels, and the waste compartment can be directly washed with water,After washing, they must be thoroughly dried and air-dried before being reinstalled on the base, it is recommendedto remove the litter box pad for cleaning and air-drying.

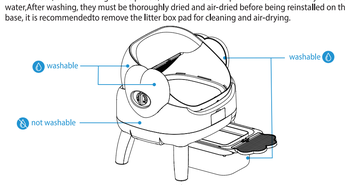

13 Q&A

Troubleshooting Scenarios	Solutions	Operation steps
he stoppage of operation was caused by a full waste compartment.	Manual release	① Replace the garbage bag when the waste compartment is full. ② Check if the garbage bag is spread out flat. ③ Wipe it clean with a towel or tissue.
The weighing data is inaccurate. (The inaccuracy caused by the usage environment has been excluded.)	Weight calibration	① Prepare a reference object, such as a 2.5kg bag of cat litter. ② Power off and restart, and wait for the self-check to complete. ③ To unlock the child lock, after hearing a beep, press No. 2 key, No. 3 key, No. 2 key, No. 3 key and No. 3 key in sequence briefly. ④ About 5 seconds later, the buzzer will beep three times to remind you to add weight. At this point, you need to add 2.5kg to calibrate. ⑤ When the calibration is successful, the No. 1 light will flash in red and blue. Remove the calibration weight of 2.5kg. If the calibration is not completed, the buzzer will beep every 5 seconds. After removing the calibration weight, the machine will automatically enter the reset state.

13 Q&A

Troubleshooting Scenarios	Solutions	Operation steps
Abnormal infrared sensor protection causing the system to stop running.	Manual release	Power off, gently wipe the four infrared transmitting tubes at the entrance of the main waste compartment with a cotton swab, and then restart.
Abnormal weighing sensor protection causing the system to stop running.	Manual release	Check if the equipment is leaning against other objectsor the wall. Check if all four legs are in contact with the arounc.
Abnormal pinch protection and motor blockage causing the stoppage of operation.	Manual release	Remove the litter globe to check if there are any objects blocking the gears or the operation of the litter box.
Abnormal side cover anti-pinch protection causes the machine to stop running.	Manual release	Check whether the left and right side covers are properly installed. Reinstall the left and right side covers.

14 Regional Restriction Policy

This device is only supported for use on the local power grid in the country or region where it was purch ased. If you need to use it across regions or countries, it is recommended to purchase the local version.For questions such as how to purchase,you can consult customer service.

15 Product Specification

Main materials	ABS+ PP+ POM + Silicone
Product size	530*450*510mm
Rated input	DC12V/1A
Rated power	≤ 8W
Operating environment	Temperature:0-50°C,Humidity:10%-90%RH
Overall weight	6.5KG
Waste compartment capacity	9L

*There may be differences in product parameters among different models or batches.
No separate notice will be given.

16 Warranty Service

Dear valued user, thank you for using our product. Please read the following warraty terms carefully before using the product.

① The warranty period of this product is one year from the date indicated on the valid purchase voucher.

② During the one-year warranty period, if any malfunction is caused by the quality of this product under normal user conditions, we will provide free warranty service.

③ The following situations are not covered by the warranty service :

(1) Incorrect installation, incorrect use, malicious damage

(2) Unauthorized disassembly and repair

(3) Malfunction caused by the use of third-party accessories

(4) Harsh usage environment

(5) Exceeding the promised warranty period

(6) Failure to provide a valid purchase voucher

(7) Malfunction caused by force majeure events

④ Communicate with the after-sales specialist in a timely manner to confirm whether you are eligible for free warranty service.

⑤ When returning the product, please fill out the form on the next page completely and send it along with the product.

17 Warranty Service Form

In accordance with relevant national regulations, we will provide customers with aone-year free warranty service.

Warranty Service Form	
User name	
User phone number	
User address	
Product name	
Purchase date	
Purchase channel	
Problem description	

Cat Litter Box

Cat Litter Box

Smart Cat Litter Box Instruction Manual

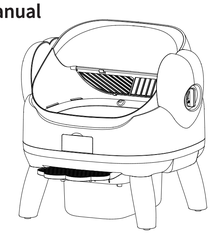

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.