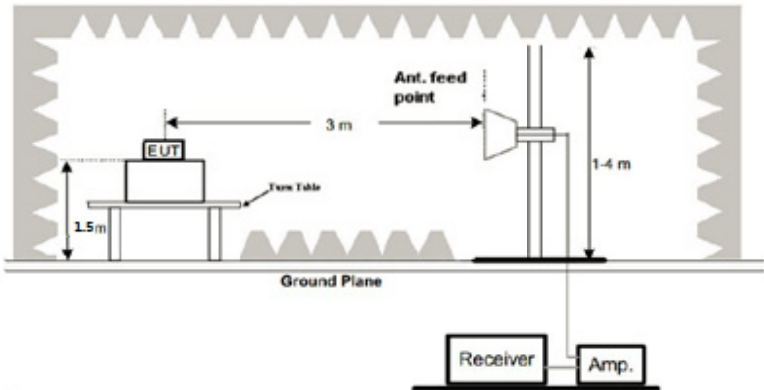


4.5 Band Edge

4.5.1 Test Specification

Test Requirement:	FCC CFR47 Part 15E Section 15.407
Test Method:	ANSI C63.10: 2020
Limit:	For band I&II&III: $E[dB\mu V/m] = EIRP[dBm] + 95.2 = 68.2 dB\mu V/m$, for $EIRP(dBm) = -27dBm$ For transmitters operating in the 5.725-5.85 GHz band: All emissions shall be limited to a level of $-27 dBm/MHz$ at 75 MHz or more above or below the band edge increasing linearly to 10 dBm/MHz at 25 MHz above or below the band edge, and from 25 MHz above or below the band edge increasing linearly to a level of 15.6 dBm/MHz at 5 MHz above or below the band edge, and from 5 MHz above or below the band edge increasing linearly to a level of 27 dBm/MHz at the band edge. For band IV(5715-5725MHz&5850-5860MHz): $E[dB\mu V/m] = EIRP[dBm] + 95.2 = 78.2 dB\mu V/m$, for $EIRP(dBm) = -27dBm$; For band IV(other un-restricted band): $E[dB\mu V/m] = EIRP[dBm] + 95.2 = 68.2 dB\mu V/m$, for $EIRP(dBm) = -27dBm$
Test Setup:	
Test Mode:	Transmitting mode with modulation

Test Procedure:	1. The EUT was placed on the top of a rotating table 1.5 meters above the ground at a 3 meter camber. The table was rotated 360 degrees to determine the position of the highest radiation. 2. The EUT was set 3 meters away from the interference-receiving antenna, which was mounted on the top of a variable-height antenna tower. 3. The antenna height is varied from one meter to four meters above the ground to determine the maximum value of the field strength. Both horizontal and vertical polarizations of the antenna are set to make the measurement. 4. For each suspected emission, the EUT was arranged to its worst case and then the antenna was tuned to heights from 1 meter to 4 meters and the rota table was turned from 0 degrees to 360 degrees to find the maximum reading. 5. The test-receiver system was set to Peak Detect Function and Specified Bandwidth with Maximum Hold Mode. 6. If the emission level of the EUT in peak mode was 10dB lower than the limit specified, then testing could be stopped and the peak values of the EUT would be reported. Otherwise the emissions that did not have 10dB margin would be re-tested one by one using peak, quasi peak or average method as specified and then reported in a data sheet.
Test Result:	PASS

4.5.2 Test Instruments

Radiated Emission Test Site (966)					
Name of Equipment	Manufacturer	Model	Serial Number	Calibration Date	Calibration Due
Spectrum analyzer	Agilent	N9020A	HKE-025	Feb. 19, 2025	Feb. 18, 2026
Spectrum analyzer	Agilent	N9020A	HKE-117	Feb. 19, 2025	Feb. 18, 2026
Spectrum analyzer	R&S	FSV3044	HKE-126	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	EMCI	EMC051845S	HKE-006	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	Schwarzbeck	BBV 9743	HKE-016	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	A.H. Systems	SAS-574	HKE-182	Feb. 19, 2025	Feb. 18, 2026
6dB Attenuator	Pasternack	6db	HKE-184	Feb. 19, 2025	Feb. 18, 2026
EMI Test Receiver	Rohde & Schwarz	ESR-7	HKE-010	Feb. 19, 2025	Feb. 18, 2026
Broadband Antenna	Schwarzbeck	VULB9168	HKE-167	Feb. 21, 2024	Feb. 20, 2026
Loop Antenna	COM-POWER	AL-130R	HKE-014	Feb. 21, 2024	Feb. 20, 2026
Horn Antenna	Schwarzbeck	9120D	HKE-013	Feb. 21, 2024	Feb. 20, 2026
EMI Test Software	Tonscend	JS32-RE 5.0.0	HKE-082	/	/
RSE Test Software	Tonscend	JS36-RSE 5.0.0	HKE-184	/	/

4.5.3 Test Data

ANT. 1

Operation Mode: 802.11a Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.39	-2.49	51.9	74	22.1	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	52.58	-2.49	50.09	74	23.91	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11a Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.24	-2.11	51.13	74	22.87	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.59	-2.11	50.48	74	23.52	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.37	-2.49	51.88	74	22.12	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.64	-2.49	51.15	74	22.85	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.69	-2.11	50.58	74	23.42	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.47	-2.11	51.36	74	22.64	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 n40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.52	-2.49	52.03	74	21.97	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.87	-2.49	51.38	74	22.62	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 n40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.73	-2.11	51.62	74	22.38	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.28	-2.11	51.17	74	22.83	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	52.56	-2.49	50.07	74	23.93	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.83	-2.49	51.34	74	22.66	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.59	-2.11	50.48	74	23.52	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	50.63	-2.11	48.52	74	25.48	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.65	-2.49	51.16	74	22.84	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	52.27	-2.49	49.78	74	24.22	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.92	-2.11	51.81	74	22.19	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.47	-2.11	53.36	74	20.64	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	51.37	-2.49	48.88	74	25.12	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.61	-2.49	53.12	74	20.88	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.17	-2.11	53.06	74	20.94	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	54.62	-2.11	52.51	74	21.49	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

ANT. 2

Operation Mode: 802.11a Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.49	-2.49	52	74	22	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.28	-2.49	50.79	74	23.21	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11a Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.74	-2.11	51.63	74	22.37	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.65	-2.11	51.54	74	22.46	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.68	-2.49	52.19	74	21.81	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.83	-2.49	52.34	74	21.66	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.69	-2.11	51.58	74	22.42	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.46	-2.11	50.35	74	23.65	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 n40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.63	-2.49	53.14	74	20.86	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.84	-2.49	51.35	74	22.65	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 n40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.96	-2.11	51.85	74	22.15	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.47	-2.11	53.36	74	20.64	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.36	-2.49	52.87	74	21.13	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	51.94	-2.49	49.45	74	24.55	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.37	-2.11	50.26	74	23.74	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.46	-2.11	53.35	74	20.65	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.29	-2.49	50.8	74	23.2	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.47	-2.49	51.98	74	22.02	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	51.63	-2.11	49.52	74	24.48	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.24	-2.11	51.13	74	22.87	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.58	-2.49	52.09	74	21.91	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.15	-2.49	52.66	74	21.34	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.36	-2.11	50.25	74	23.75	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.59	-2.11	51.48	74	22.52	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

MIMO

Operation Mode: 802.11n20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	51.48	-2.49	48.99	74	25.01	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.24	-2.49	50.75	74	23.25	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.69	-2.11	53.58	74	20.42	peak
5350	/	-2.11	/	54	/	AVG

Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.63	-2.11	53.52	74	20.48	peak
5350	/	-2.11	/	54	/	AVG

Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.

Operation Mode: 802.11 n40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.36	-2.49	52.87	74	21.13	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.17	-2.49	51.68	74	22.32	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 n40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	52.18	-2.11	50.07	74	23.93	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.23	-2.11	51.12	74	22.88	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	51.63	-2.49	49.14	74	24.86	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	53.49	-2.49	51	74	23	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.24	-2.11	51.13	74	22.87	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.48	-2.11	51.37	74	22.63	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	52.39	-2.49	49.9	74	24.1	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.27	-2.49	51.78	74	22.22	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.63	-2.11	51.52	74	22.48	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	55.24	-2.11	53.13	74	20.87	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	55.36	-2.49	52.87	74	21.13	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5150	54.91	-2.49	52.42	74	21.58	peak
5150	/	-2.49	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11 ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	53.48	-2.11	51.37	74	22.63	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
5350	54.13	-2.11	52.02	74	21.98	peak
5350	/	-2.11	/	54	/	AVG
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Remark:

1. If the PK measured levels comply with average limit, then the average level were deemed to comply with average limit.
2. In restricted bands of operation, the spurious emissions below the permissible value more than 20dB.
3. The amplitude of spurious emissions which are attenuated by more than 20dB below the permissible value has no need to be reported.


4.6 Spurious Emission

4.6.1 Test Specification


Test Requirement:	FCC CFR47 Part 15 Section 15.407				
Test Method:	KDB 789033 D02 v02r01				
Frequency Range:	9kHz to 40GHz				
Measurement Distance:	3 m				
Antenna Polarization:	Horizontal & Vertical				
Operation Mode:	Transmitting mode with modulation				
Receiver Setup:	Frequency	Detector	RBW	VBW	Remark
	9kHz- 150kHz	Quasi-peak	200Hz	1kHz	Quasi-peak Value
	150kHz- 30MHz	Quasi-peak	9kHz	30kHz	Quasi-peak Value
	30MHz-1GHz	Quasi-peak	120KHz	300KHz	Quasi-peak Value
	Above 1GHz	Peak	1MHz	3MHz	Peak Value
Limit:		Peak	1MHz	10Hz	Average Value
	(1) For transmitters operating in the 5.15-5.25 GHz band: All emissions outside of the 5.15-5.35 GHz band shall not exceed an e.i.r.p. of -27 dBm/MHz. (i) All emissions shall be limited to a level of -27 dBm/MHz at 75 MHz or more above or below the band edge increasing linearly to 10 dBm/MHz at 25 MHz above or below the band edge, and from 25 MHz above or below the band edge increasing linearly to a level of 15.6 dBm/MHz at 5 MHz above or below the band edge, and from 5 MHz above or below the band edge increasing linearly to a level of 27 dBm/MHz at the band edge. The limit of frequency below 1GHz and which fall in rest ricted bands should complies 15.209.				

Test Setup:


For radiated emissions below 30MHz

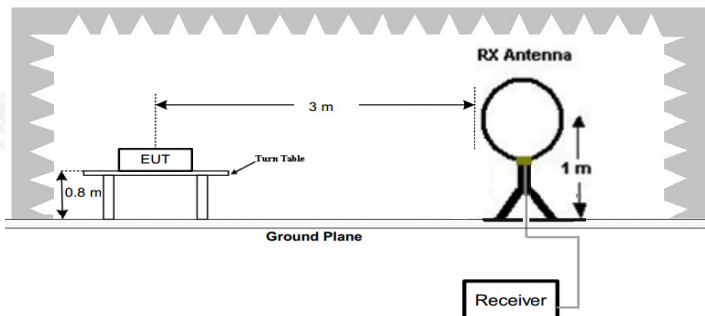

30MHz to 1GHz

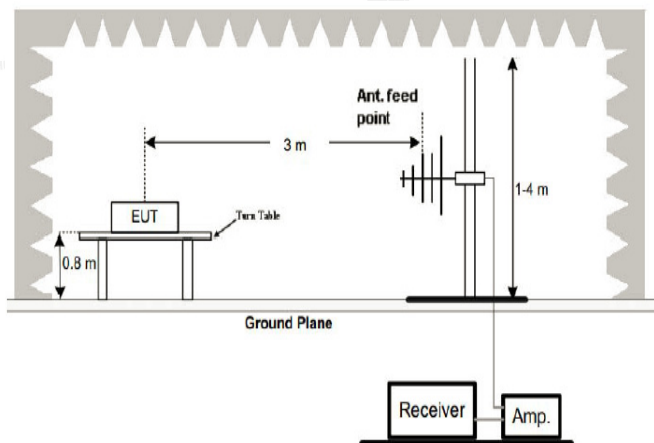

Above 1GHz

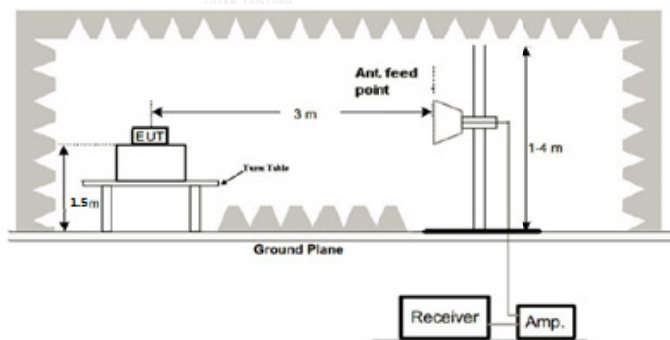

Test Procedure:	1. The EUT was placed on the top of a rotating table 0.8 meters above the ground at a 3 meter camber. The table was rotated 360 degrees to determine the position of the highest radiation. 2. The EUT was set 3 meters away from the interference-receiving antenna, which was mounted on the top of a variable-height antenna tower. 3. The antenna height is varied from one meter to four meters above the ground to determine the maximum value of the field strength. Both horizontal and vertical polarizations of the antenna are set to make the measurement. 4. For each suspected emission, the EUT was arranged to its worst case and then the antenna was tuned to heights from 1 meter to 4 meters and the rotatable was turned from 0 degrees to 360 degrees to find the maximum reading. 5. The test-receiver system was set to Peak Detect Function and Specified Bandwidth with Maximum Hold Mode. 6. If the emission level of the EUT in peak mode was 10dB lower than the limit specified, then testing could be stopped and the peak values of the EUT would be reported. Otherwise the emissions that did not have 10dB margin would be re-tested one by one using peak, quasi-peak or average method as specified and then reported in a data sheet.
Test Results:	PASS

4.6.2 Test Instruments

Radiated Emission Test Site (966)


Name of Equipment	Manufacturer	Model	Serial Number	Calibration Date	Calibration Due
Spectrum analyzer	Agilent	N9020A	HKE-025	Feb. 19, 2025	Feb. 18, 2026
Spectrum analyzer	Agilent	N9020A	HKE-117	Feb. 19, 2025	Feb. 18, 2026
Spectrum analyzer	R&S	FSV3044	HKE-126	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	EMCI	EMC051845S	HKE-006	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	Schwarzbeck	BBV 9743	HKE-016	Feb. 19, 2025	Feb. 18, 2026
Preamplifier	A.H. Systems	SAS-574	HKE-182	Feb. 19, 2025	Feb. 18, 2026
6dB Attenuator	Pasternack	6db	HKE-184	Feb. 19, 2025	Feb. 18, 2026
EMI Test Receiver	Rohde & Schwarz	ESR-7	HKE-010	Feb. 19, 2025	Feb. 18, 2026
Broadband Antenna	Schwarzbeck	VULB9168	HKE-167	Feb. 21, 2024	Feb. 20, 2026
Loop Antenna	COM-POWER	AL-130R	HKE-014	Feb. 21, 2024	Feb. 20, 2026
Horn Antenna	Schwarzbeck	9120D	HKE-013	Feb. 21, 2024	Feb. 20, 2026
EMI Test Software	Tonscend	JS32-RE 5.0.0	HKE-082	N/A	N/A
RSE Test Software	Tonscend	JS36-RSE 5.0.0	HKE-184	N/A	N/A

4.6.3 Test Data

All the test modes completed for test. Only the worst result was reported as below:

Below 1GHz Test Results


Antenna polarity: Horizontal

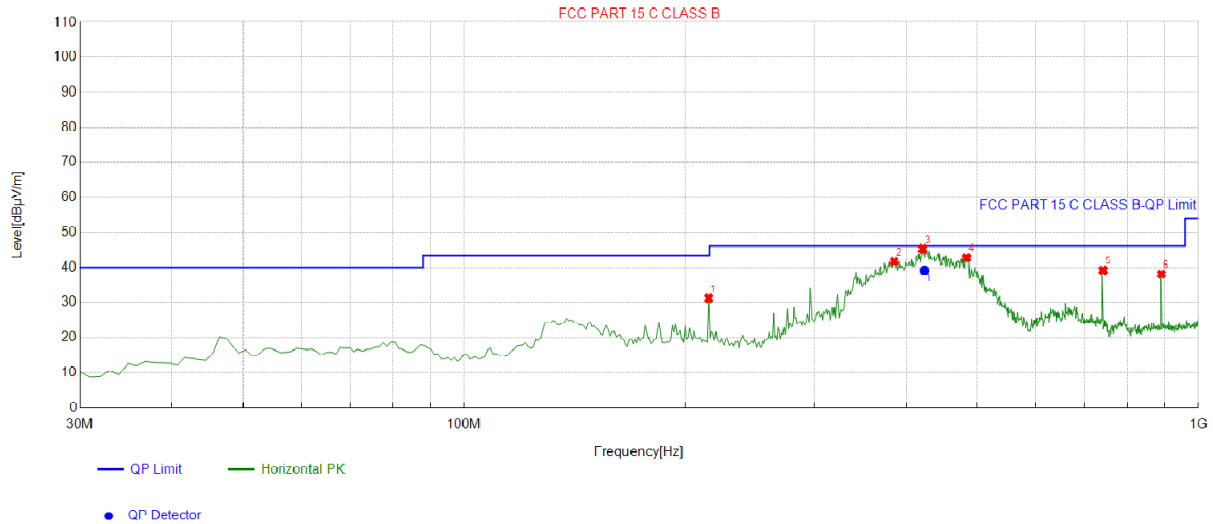

Suspected List									
NO.	Freq. [MHz]	Factor [dB]	Reading [dBμV/m]	Level [dBμV/m]	Limit [dBμV/m]	Margin [dB]	Height [cm]	Angle [°]	Polarity
1	215.4555	-14.72	45.91	31.19	43.50	12.31	100	265	Horizontal
2	385.3754	-9.07	50.82	41.75	46.00	4.25	100	360	Horizontal
3	421.3013	-9.09	54.35	45.26	46.00	0.74	100	16	Horizontal
4	483.4434	-8.04	50.81	42.77	46.00	3.23	100	324	Horizontal
5	741.7217	-3.40	42.60	39.20	46.00	6.80	100	24	Horizontal
6	890.2803	-1.59	39.66	38.07	46.00	7.93	100	90	Horizontal
Final Data List									
NO.	Freq. [MHz]	Factor [dB]	QP Reading [dBμV/m]	QP Value [dBμV/m]	QP Limit [dBμV/m]	QP Margin [dB]	Height [cm]	Angle [°]	Polarity
1	423.512	-9.09	48.23	39.14	46.00	6.86	100	16	Horizontal

Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit – Level

Antenna polarity: Vertical

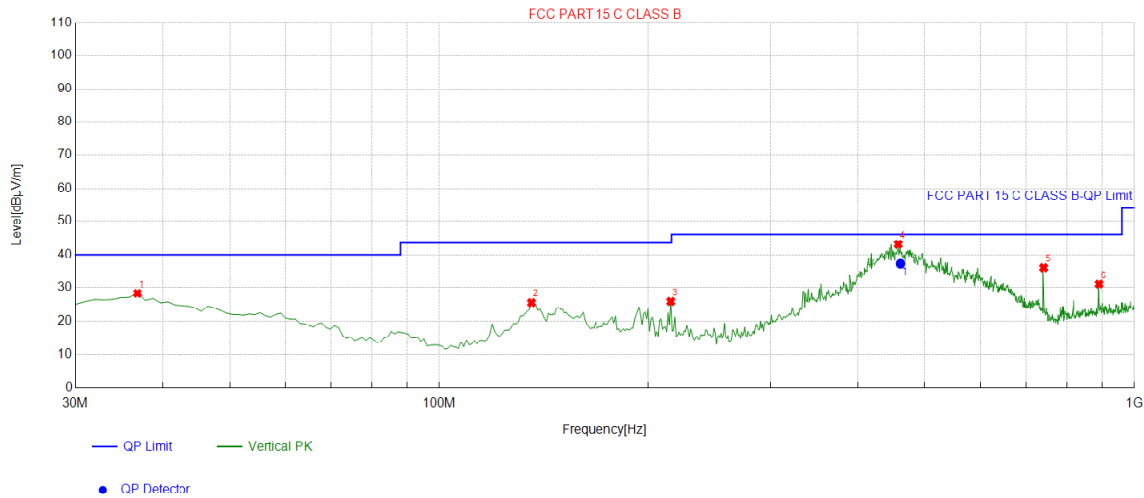

Suspected List									
NO.	Freq. [MHz]	Factor [dB]	Reading [dBμV/m]	Level [dBμV/m]	Limit [dBμV/m]	Margin [dB]	Height [cm]	Angle [°]	Polarity
1	36.7968	-14.57	42.86	28.29	40.00	11.71	100	113	Vertical
2	135.8358	-17.57	43.08	25.51	43.50	17.99	100	249	Vertical
3	215.4555	-14.72	40.59	25.87	43.50	17.63	100	216	Vertical
4	458.1982	-8.91	52.00	43.09	46.00	2.91	100	293	Vertical
5	741.7217	-3.40	39.54	36.14	46.00	9.86	100	106	Vertical
6	890.2803	-1.59	32.74	31.15	46.00	14.85	100	154	Vertical

Final Data List									
NO.	Freq. [MHz]	Factor [dB]	QP Reading [dBμV/m]	QP Value [dBμV/m]	QP Limit [dBμV/m]	QP Margin [dB]	Height [cm]	Angle [°]	Polarity
1	461.625	-8.91	46.21	37.30	46.00	8.70	100	293	Vertical

Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit – Level

Harmonics and Spurious Emissions Frequency Range (9kHz-30MHz)

Frequency (MHz)	Level@3m (dBμV/m)	Limit@3m (dBμV/m)
--	--	--
--	--	--
--	--	--
--	--	--

Note: 1. Emission Level=Reading+ Cable loss-Antenna factor-Amp factor.

2. The emission levels are 20 dB below the limit value, which are not reported. It is deemed to comply with the requirement.

All modes of operation were investigated and the worst-case of Ant.1 are reported.

Operation Mode: 802.11a Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.34	-4.59	51.75	74	22.25	peak
3647	44.56	-4.59	39.97	54	14.03	AVG
10360	43.27	3.74	47.01	68.2	21.19	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.37	-4.59	51.78	74	22.22	peak
3647	42.63	-4.59	38.04	54	15.96	AVG
10360	43.12	3.74	46.86	68.2	21.34	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11a Mode with 5.2G TX CH Mid

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.36	-4.59	52.77	74	21.23	peak
3647	42.83	-4.59	38.24	54	15.76	AVG
10400	43.47	3.74	47.21	68.2	20.99	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.38	-4.59	51.79	74	22.21	peak
3647	46.15	-4.59	41.56	54	12.44	AVG
10400	44.17	3.74	47.91	68.2	20.29	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11a Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.62	-4.59	53.03	74	20.97	peak
3647	46.56	-4.59	41.97	54	12.03	AVG
10480	43.29	3.75	47.04	68.2	21.16	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.15	-4.59	53.56	74	20.44	peak
3647	44.58	-4.59	39.99	54	14.01	AVG
10480	44.37	3.75	48.12	68.2	20.08	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

All modes of operation were investigated and the worst-case of MIMO are reported.

Operation Mode: 802.11n20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.25	-4.59	53.66	74	20.34	peak
3647	45.69	-4.59	41.1	54	12.9	AVG
10360	44.26	3.74	48	68.2	20.2	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.93	-4.59	52.34	74	21.66	peak
3647	45.26	-4.59	40.67	54	13.33	AVG
10360	44.37	3.74	48.11	68.2	20.09	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH Mid

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.26	-4.59	52.67	74	21.33	peak
3647	48.29	-4.59	43.7	54	10.3	AVG
10400	43.59	3.74	47.33	68.2	20.87	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.43	-4.59	52.84	74	21.16	peak
3647	46.24	-4.59	41.65	54	12.35	AVG
10400	43.59	3.74	47.33	68.2	20.87	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.24	-4.59	53.65	74	20.35	peak
3647	42.37	-4.59	37.78	54	16.22	AVG
10480	43.26	3.75	47.01	68.2	21.19	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.27	-4.59	53.68	74	20.32	peak
3647	43.59	-4.59	39	54	15	AVG
10480	43.58	3.75	47.33	68.2	20.87	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.36	-4.59	52.77	74	21.23	peak
3647	46.23	-4.59	41.64	54	12.36	AVG
10360	44.15	3.74	47.89	68.2	20.31	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.26	-4.59	53.67	74	20.33	peak
3647	44.37	-4.59	39.78	54	14.22	AVG
10360	42.58	3.74	46.32	68.2	21.88	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11n40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.37	-4.59	51.78	74	22.22	peak
3647	43.59	-4.59	39	54	15	AVG
10480	42.63	3.75	46.38	68.2	21.82	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.46	-4.59	52.87	74	21.13	peak
3647	45.15	-4.59	40.56	54	13.44	AVG
10480	44.36	3.75	48.11	68.2	20.09	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac20 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.37	-4.59	53.78	74	20.22	peak
3647	44.26	-4.59	39.67	54	14.33	AVG
10360	43.59	3.74	47.33	68.2	20.87	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.71	-4.59	53.12	74	20.88	peak
3647	43.29	-4.59	38.7	54	15.3	AVG
10360	42.26	3.74	46	68.2	22.2	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac20 Mode with 5.2G TX CH Mid

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	57.29	-4.59	52.7	74	21.3	peak
3647	44.56	-4.59	39.97	54	14.03	AVG
10400	44.28	3.74	48.02	68.2	20.18	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.56	-4.59	53.97	74	20.03	peak
3647	44.58	-4.59	39.99	54	14.01	AVG
10400	43.26	3.74	47	68.2	21.2	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac20 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	55.37	-4.59	50.78	74	23.22	peak
3647	43.69	-4.59	39.1	54	14.9	AVG
10480	43.25	3.75	47	68.2	21.2	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.34	-4.59	51.75	74	22.25	peak
3647	44.58	-4.59	39.99	54	14.01	AVG
10480	41.25	3.75	45	68.2	23.2	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac40 Mode with 5.2G TX CH Low

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.36	-4.59	53.77	74	20.23	peak
3647	46.24	-4.59	41.65	54	12.35	AVG
10360	44.37	3.74	48.11	68.2	20.09	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.37	-4.59	53.78	74	20.22	peak
3647	44.26	-4.59	39.67	54	14.33	AVG
10360	43.58	3.74	47.32	68.2	20.88	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac40 Mode with 5.2G TX CH High

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	56.49	-4.59	51.9	74	22.1	peak
3647	43.27	-4.59	38.68	54	15.32	AVG
10480	42.34	3.75	46.09	68.2	22.11	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.26	-4.59	53.67	74	20.33	peak
3647	44.58	-4.59	39.99	54	14.01	AVG
10480	44.15	3.75	47.9	68.2	20.3	peak
Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.						

Operation Mode: 802.11ac80 Mode with 5.2G TX

Horizontal:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.24	-4.59	53.65	74	20.35	peak
3647	43.29	-4.59	38.7	54	15.3	AVG
10360	44.37	3.74	48.11	68.2	20.09	peak

Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.

Vertical:

Frequency	Meter Reading	Factor	Emission Level	Limits	Margin	Detector Type
(MHz)	(dBμV)	(dB)	(dBμV/m)	(dBμV/m)	(dB)	
3647	58.17	-4.59	53.58	74	20.42	peak
3647	44.81	-4.59	40.22	54	13.78	AVG
10360	43.68	3.74	47.42	68.2	20.78	peak


Remark: Factor = Cable loss + Antenna factor + Attenuator – Preamplifier; Level = Reading + Factor; Margin = Limit - Level.

Remark:

- (1) Measuring frequencies from 1 GHz to the 40 GHz.
- (2) "F" denotes fundamental frequency; "H" denotes spurious frequency. "E" denotes band edge frequency.
- (3) * denotes emission frequency which appearing within the Restricted Bands specified in provision of 15.205, then the general radiated emission limits in 15.209 apply.
- (4) The emissions are attenuated more than 20dB below the permissible limits are not record in the report.
- (5) The IF bandwidth of EMI Test Receiver between 30MHz to 1GHz was 120KHz, 1 MHz for measuring above 1 GHz, below 30MHz was 10KHz.
- (6) When the test results of Peak Detected below the limits of Average Detected, the Average Detected is not need completed. For example: Top Channel at Fundamental 73.16dBuV/m(PK Value) <93.98(AV Limit), at harmonic 53.20 dBuV/m(PK Value) <54 dBuV/m(AV Limit), the Average Detected not need to completed.

4.7 Frequency Stability Measurement

4.7.1 Test Specification

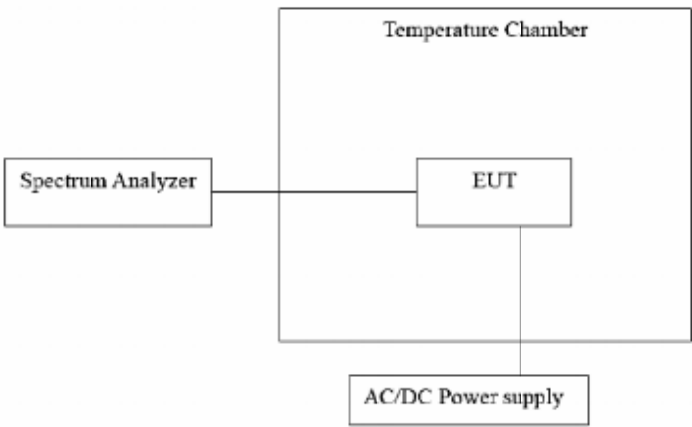Test Requirement:	FCC Part15 Section 15.407(g)
Test Method:	ANSI C63.10: 2020
Limit:	The frequency tolerance shall be maintained within the band of operation frequency over a temperature variation of 0 degrees to 35 degrees C at normal supply voltage, and for a variation in the primary supply voltage from 85% to 115% of the rated supply voltage at a temperature of 20 degrees C.
Test Setup:	 <pre> graph LR SA[Spectrum Analyzer] --- EUT[EUT] subgraph TC [Temperature Chamber] EUT end EUT --- P[AC/DC Power supply] </pre>
Test Procedure:	- The EUT was placed inside the environmental test chamber and powered by nominal AC/DC voltage. - Turn the EUT on and couple its output to a spectrum analyzer. - Turn the EUT off and set the chamber to the highest temperature specified. - Allow sufficient time (approximately 30 min) for the temperature of the chamber to stabilize. - Repeat step 2 and 3 with the temperature chamber set to the lowest temperature. - The test chamber was allowed to stabilize at +20 degree C for a minimum of 30 minutes. The supply voltage was then adjusted on the EUT from 85% to 115% and the frequency record.
Test Result:	PASS
Remark:	N/A

4.7.2 Test Instruments

RF Test Room					
Equipment	Manufacturer	Model	Serial Number	Calibration Date	Calibration Due
Spectrum analyzer	Agilent	N9020A	HKE-025	Feb. 19, 2025	Feb. 18, 2026
Spectrum analyzer	Agilent	N9020A	HKE-117	Feb. 19, 2025	Feb. 18, 2026
Power meter	Agilent	E4419B	HKE-085	Feb. 19, 2025	Feb. 18, 2026
Power Sensor	Agilent	E9300A	HKE-086	Feb. 19, 2025	Feb. 18, 2026
RF cable	Times	1-40G	HKE-034	Feb. 19, 2025	Feb. 18, 2026
RF automatic control unit	Tonscend	JS0806-2	HKE-060	Feb. 19, 2025	Feb. 18, 2026
RF Test Software	Tonscend	JS1120-3 Version 3.5.39	HKE-083	N/A	N/A

Note: The calibration interval of the above test instruments is 12 months and the calibrations are traceable to international system unit (SI).

4.7.3 Test Result

Mode	Voltage (V)	FHL (5180MHz)	Deviation (KHz)	FHH (5240MHz)	Deviation (KHz)
5.2G Band	4.25V	5179.979	-21	5240.013	13
	5.0V	5179.984	-16	5239.975	-25
	5.75V	5179.992	-8	5239.981	-19

Mode	Temperature (°C)	FHL (5180MHz)	Deviation (KHz)	FHH (5240MHz)	Deviation (KHz)
5.2G Band	-30	5180.018	18	5240.008	8
	-20	5179.992	-8	5240.016	16
	-10	5179.983	-17	5240.024	24
	0	5179.969	-31	5240.008	8
	10	5180.008	8	5240.013	13
	20	5180.017	17	5239.996	-4
	30	5180.023	23	5240.028	28
	40	5179.976	-24	5239.975	-25
	50	5180.015	15	5240.021	21

4.8 Antenna Requirement

Standard Applicable

For intentional device, according to FCC 47 CFR Section 15.203, an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.


Refer to statement below for compliance.

The manufacturer may design the unit so that the user can replace a broken antenna, but the use of a standard antenna jack or electrical connector is prohibited. Further, this requirement does not apply to intentional radiators that must be professionally installed.

Antenna Connected Construction


The antenna used in this product is a PCB Antenna, need professional installation, not easy to remove. It conforms to the standard requirements. and the best case gain of the antenna is Antenna port 1: 1.76dBi and Antenna port 2: 1.76dBi.

WIFI ANTENNA

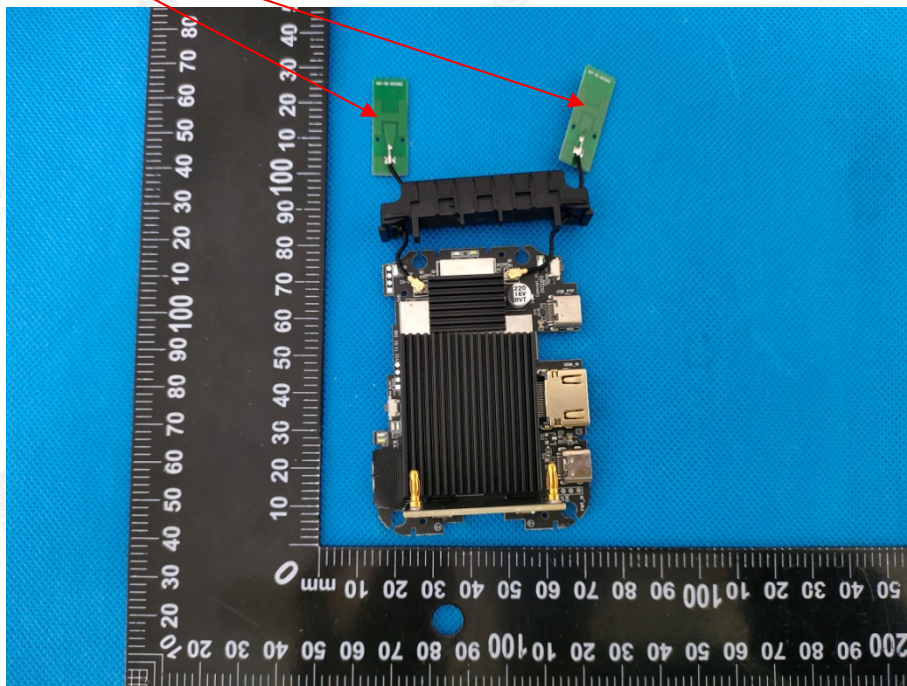


5. Test Setup Photos of the EUT

Radiated Emission

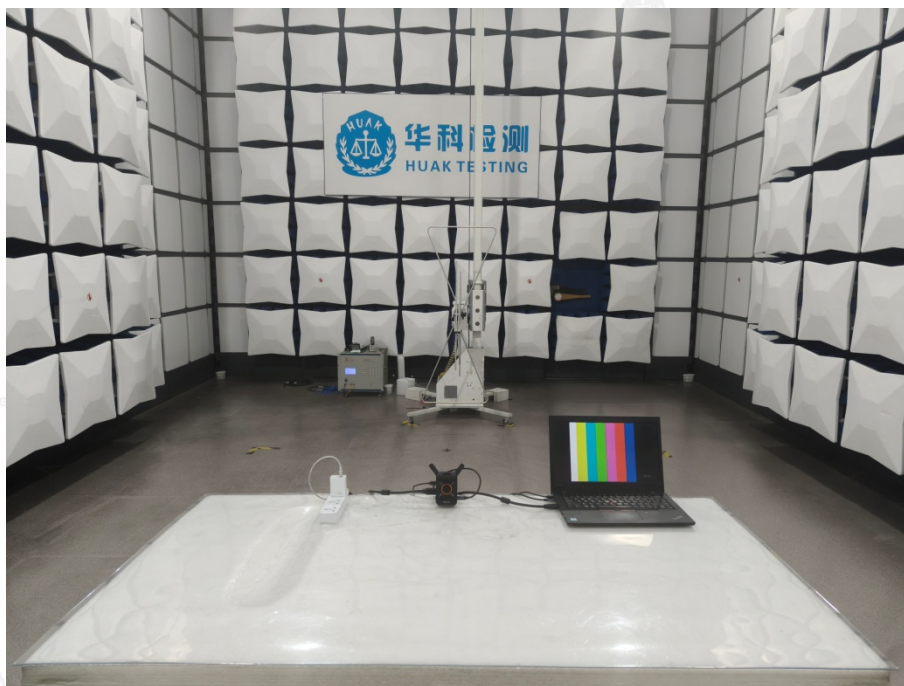

AC Conducted Emission

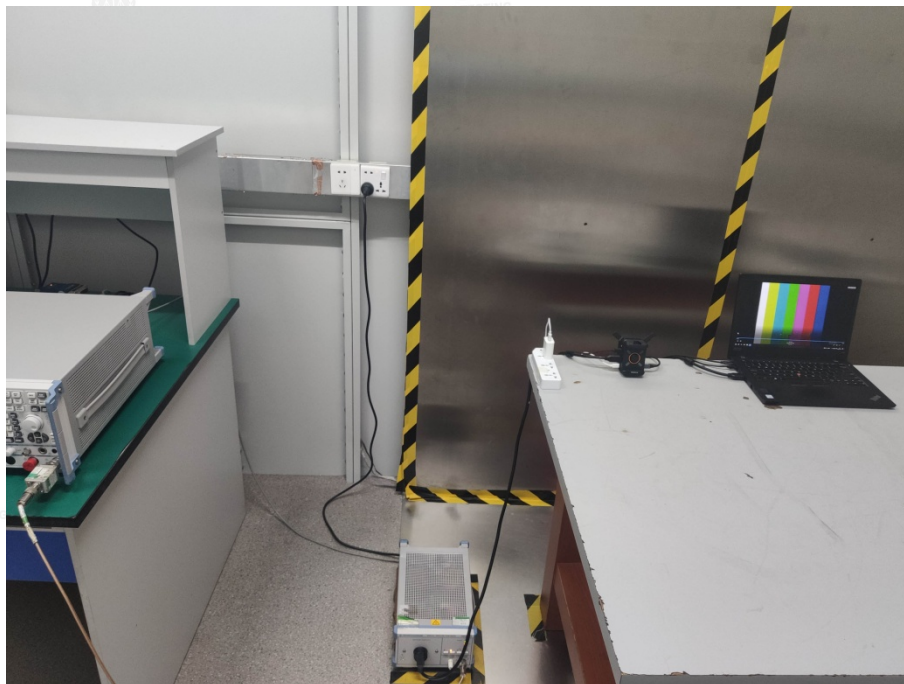

RF Conducted Emission



6. Photos of the EUT

Reference to the report: ANNEX A of external photos and ANNEX B of internal photos

-----End of test report-----

