




**SMART TOILET
ALL-IN-ONE MACHINE
USER'S GUIDE**

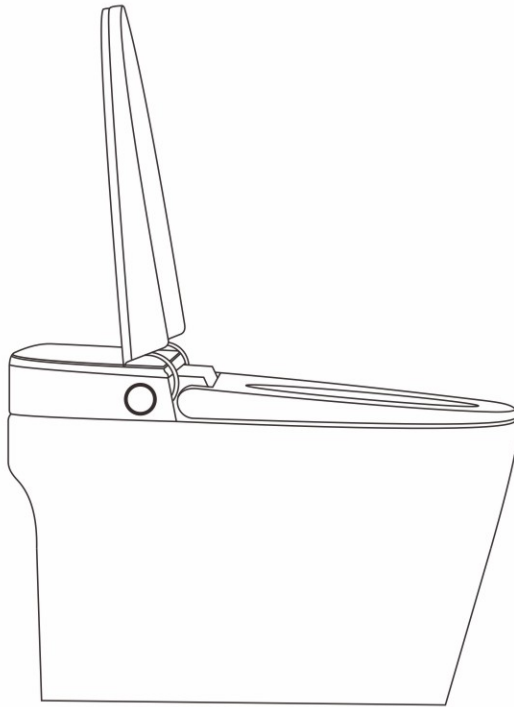

NATIONWIDE WARRANTY

1、INSTALLATION METHOD	01~02
2、COMMISSIONING AFTER INSTALLATION	03
3、DESCRIPTION OF SIDE BUTTON PARAMETER SETTING	04
4、FUNCTION INTRODUCTION	05
5、REMOTE CONTROL PARAMETER SETTING INSTRUCTIONS	06
6、VOICE WAKE-UP WORDS AND CONTROL COMMANDS	07
7、PRECAUTIONS	10
8、COMMON PHENOMENON HANDLING	11~12
9、DAILY MAINTENANCE	13


Product Specifications

Product name: Smart toilet	Rated voltage: AC220V~
Product category: Porcelain	Rated frequency: 50HZ
Color: White	Rated power: 1300W
Grade/QC: Qualified product	Electric shock protection category: Class I
Inspection number: QC06	Water efficiency level: Level 2
Implementation standard:	Pit water distance: 300/400mm
GB/T6952-2015	Others_____
GB 38448-2019	Nominal water consumption: 5.0L
GB 4706.1-2005	Net weight: 40 (±5) kg
GB 4706.53-2008	Gross weight: 44 (±5) kg
GB 6566-2010	Quantity: 1 piece

Note: Due to different configurations, the parameter values may vary slightly, please refer to the actual product!

1. INSTALLATION METHOD

REFERENCE DIAGRAM FOR INLET AND OUTLET POSITIONS

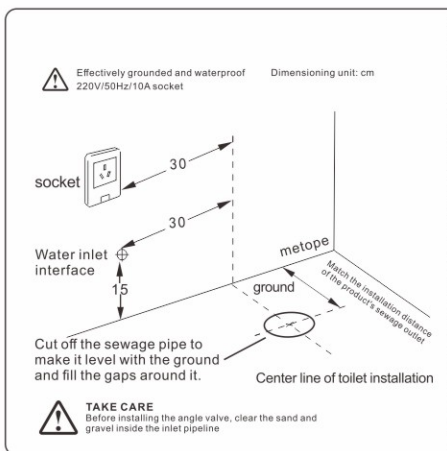

SEALING RING INSTALLATION

Align the oil sludge with the drain outlet and press it firmly in place



TAKE CARE

After fixing the sludge, please do not move it again

FIXED CERAMICS

1. First, clean the ground thoroughly to keep it dry, and conduct a comprehensive inspection of the sewage pipeline to see if there are any mud, waste paper, or other debris blocking the pipeline. At the same time, check whether the installation position of the toilet is level on the front, back, left, and right sides of the ground. If uneven ground is found, the ground should be leveled when installing the toilet.
2. Determine the center of the sewage outlet and draw a cross centerline.
3. Flip the toilet slightly, determine the center on the drain outlet of the toilet, and draw a cross centerline, which should extend to the outer side of the bottom of the toilet.
4. Install the smart toilet vertically and ensure that the cross line on the toilet aligns with the cross line on the ground drain outlet. Use force to press the sludge tightly, and then apply a circle of glass glue around the bottom of the toilet. After installing the toilet, keep it horizontal in front, back, left, and right.




WARN

It is strictly prohibited to fix ceramics with cement, otherwise it may cause ceramic fragmentation. Keep still for 24 hours before use.

1、INSTALLATION METHOD


INSTALLATION OF INLET PIPE

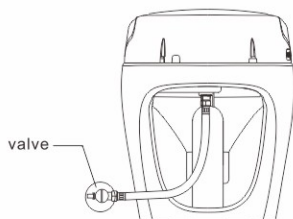

Before installing the angle valve, drain the pipeline and remove impurities. After installation, drain for one minute before installing the hose. Please use new hoses, old hose components cannot be reused.

TURN ON ELECTRICITY


Insert the power plug of the product into the socket.

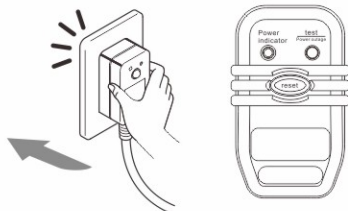

REMOTE CONTROL INSTALLATION

1. INSTALL THE REMOTE CONTROL BRACKET

First, clean the location where the remote control bracket is to be installed, then peel off the back adhesive of the bracket, firmly press it against the wall, and hold it for a period of time before placing the remote control.

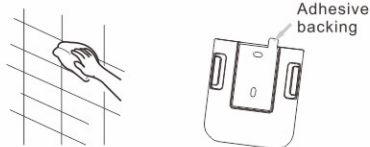

2. BATTERY

Open the battery cover at the bottom of the remote control and correctly place the battery cover on the back cover of the No. 7 battery.



NOTICE

1. The installation location of the remote control must be confirmed with the user and an appropriate holding distance must be selected.
2. In order to prevent battery rupture, leakage, etc., please be sure to comply with the following terms:
 - When replacing the battery, please use a new battery of the same specification.
 - Please remove the battery when not using it for a long time.
 - When replacing the battery, be careful not to reverse the polarity.



WARN

- Do not spill water on the remote control, otherwise the product may not work properly.
- Please place the remote control on the remote control holder when not in use.
(Please be careful not to drop the remote control when using it)
- Dropping the remote control may cause malfunction or damage.

2. COMMISSIONING AFTER INSTALLATION

OPEN THE ANGLE VALVE: BEFORE TURNING ON THE POWER, OPEN THE ANGLE VALVE TO PROVIDE WATER FOR THE WHOLE MACHINE.



Note: After opening the angle valve, use a paper towel to dip the pipe connection to confirm that there is no leakage.

VALIDATION AND TEST RUN

1. CHECK WHETHER THERE IS EFFECTIVE GROUNDING

- You need to bring a power polarity line detector to check whether the socket at the customer's home is effectively grounded. This product is not allowed to be used without effective grounding. If the customer forces the use, all consequences will be borne by the customer.



ground

4. CHECK LIGHTING FUNCTION


- Short press the "Lighting" button on the remote control to turn on or off the lighting function.

5. CHECK THE POWER SAVING FUNCTION

- Short press the "Energy Saving" button on the remote control to turn on or off the power saving function.

2. CHECK THE POWER SUPPLY

- Confirm that the power plug is plugged in tightly, press reset, and the indicator light will be on. Press test, the power will be cut off, and the indicator light will go out, indicating that it is normal and can be put into use. Then you can press the "reset" button on the plug to power on. The system buzzer can be heard after power is turned on.

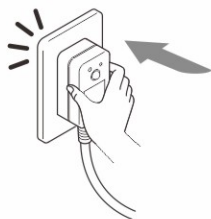

3. CHECK THE SEAT TEMPERATURE ADJUSTMENT FUNCTION

- Short press the seat temperature button on the remote control to adjust the seat temperature.

6. CHECK THE HUMAN BODY SEATING SENSOR FUNCTION


- Place wet wipes at the seating sensing position to simulate human sitting. When the system senses that someone is sitting (the buzzer beeps once), the cleaning spray bar will flow water out, and the system function can be activated.



3、DESCRIPTION OF SIDE BUTTON PARAMETER SETTING

When no one is seated: Turn counterclockwise briefly to turn on the nozzle self-cleaning, and turn clockwise briefly to turn on the ambient light. Press the knob briefly to perform flushing.

When seated: Turn counterclockwise briefly to turn on the women's wash, and turn clockwise briefly to turn on the butt wash. Short press the knob to stop the function or drying.

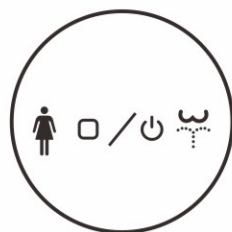


1. SIDE KNOB SETTING INSTRUCTIONS

1. After long-turning the "butt wash" button for 3 seconds, the system enters the pairing mode, and the display will all flash. At this time, press any button on the remote control, and the toilet will beep 2 times to complete the pairing.
2. Long-turn the "butt wash" button and then press the "stop" button: the radar switch (automatic flip-up) function can be set. The buzzer beeps once long when the function is turned on and short once when the function is turned off.
3. Long-turn the "Waste" button until it beeps once, then press the "Stop" button: the foam shield switch function can be set. The buzzer beeps once long when the function is turned on and short once when the function is turned off.
4. Long-turn the "Stop" button to turn off the machine, then turn the "Butt Wash" button for a long time and then press the "Stop" button: the system enters the aging mode.

SHORT PRESS TO CORRESPOND TO THE FUNCTION OF EACH BUTTON

2. SIDE BUTTON SETTING INSTRUCTIONS

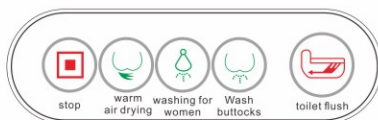

1. Long press the "drying" button: you can set the foam shield switch function. The buzzer beeps once long when the function is turned on and short once when the function is turned off.
2. Press and hold the "Women's Wash" button: you can set the automatic flushing switch function. The buzzer beeps once long when the function is turned on and short once when the function is turned off.
3. Long press the "butt wash" button: the system enters the code matching mode, and the display will all flash. At this time, press any key on the remote control to perform code matching. After the code is successfully matched, the display will return to normal display status.
4. Press and hold the "Stop" button: Press and hold the "Stop" button for the first time, the buzzer will sound, and the radar range setting state will be entered. At this time, you can press the "Buttocks" or "Women's Wash" button on the side or Move the nozzle forward and backward on the remote control to adjust the sensing distance of the radar. At the same time, the water temperature display area of the display will display the corresponding radar setting gear (range is 1~5). After the adjustment is completed, short press "Stop" again. " button will return to the screen displaying the set water temperature. If the radar gear is not adjusted within 10 seconds, it will automatically exit the radar gear adjustment state after 10 seconds and the screen will resume displaying the set water temperature.

Note: Level 1 has the shortest sensing distance, and Level 5 has the farthest sensing distance.


5. Press and hold the "Butt Wash" button and the "Drying" button at the same time: the system enters the aging mode.
6. Long press the "flush" button: Press and hold the "flush" button for the first time, the buzzer will sound once, and you will enter the flush time setting state. At this time, you can use the remote control to set the flush time. "Move nozzle forward" or "move nozzle back" keys to adjust the flushing time. At the same time, the water temperature display area of the display will display the current setting stage, seat temperature. The display area shows the flushing time. Press the "flush" button again to switch to the next stage of flushing time setting. The three stages are upper flushing, Flush and replenish water. After the setting is completed, press the "flush" button again to exit the setting state.
7. Short press the power saving button to turn on energy saving.

4、FUNCTION INTRODUCTION

Buttocks cleaning	When sitting down, turn the side knob clockwise or press the butt wash button on the remote control to turn on the butt wash function.
feminine cleansing	When sitting down, turn the side knob clockwise or press the bidet wash button on the remote control to turn on the bidet wash function.
position adjustment	During the cleaning process, you can short press the 2 buttons on the remote control to adjust.
mobile cleaning	During the cleaning process, you can short press the corresponding button to start mobile cleaning. (When washing the buttocks, press briefly to wash the buttocks; when washing the vagina, press the button briefly to wash the woman)
Water pressure adjustment	During the cleaning process, you can short press the 2 buttons of the remote control to adjust the water pressure.
Water temperature adjustment	You can short press the water temperature button on the remote control to adjust the water temperature. (Display 00 is normal temperature, no heating)
warm air drying	When sitting down, short press the side knob or short press the drying button on the remote control to turn on the drying function.
Air temperature adjustment	You can short press the air temperature button on the remote control to adjust the air temperature. (Display 00 is normal temperature, no heating)
Seat heating	When sitting down, short press the side knob or the seat temperature button on the remote control to turn on the drying function.
Seat temperature adjustment	You can short press the seat temperature button on the remote control to adjust the seat temperature. (Display 00 is normal temperature, no heating)
Seating sensor	After the human body sits down, it automatically senses that the toilet is ready for use.
Flushing during power outage	Even if the water supply is not cut off, it can be flushed during a power outage without affecting the use of the toilet.
Flush without sitting	After the user leaves the seat, the toilet will automatically start flushing.
Take a seat and moisten the wall	When the human body takes a seat, a section of water will be sprayed to moisten the inner wall of the toilet.
Intelligent diagnosis	Diagnose and provide prompts for abnormal phenomena in the toilet bowl from time to time.
remote control	Use the remote control to remotely control the corresponding functions of the toilet.
night light lighting	Equipped with a night light, when turned on, it emits soft light for easy use at night.
Boom cleaning	The spray boom extension function can be activated for manual cleaning and deeper cleaning of the spray boom.
Smart power saving	When energy-saving is turned on, the seat temperature will drop to 30 degrees before sitting down, and the screen will automatically turn off the ambient light knob light if no operation is performed for 5 minutes.
Self-cleaning nozzle	After the seating and disengagement are effective, the nozzle automatically sprays strong water flow to clean the nozzle.
Silent and slow descent	The seat ring and seat cover fall slowly to prevent making noise when landing.
digital display	Use numbers to display temperature and icons to display function status, allowing you to understand usage requirements more intuitively.
Leakage Protection	The product is equipped with a leakage protection device. When a leakage fault occurs in the product, the power supply will be cut off before the human body senses anything to protect personal safety.
Low temperature protection	When the sitting temperature is set to heating, after the human body sits down, the seat temperature automatically enters a specific control program to prevent low-temperature burns.
Radar sensing	When a person approaches the toilet, the lid will automatically open.
kick flush	When you kick the kick sensor of the product, the smart toilet automatically flushes.
Kick and turn	When you kick the kick sensor of the product, the smart toilet will automatically turn around.
bubble guard	After turning on this function, the toilet will automatically spray a layer of fine bubbles to cover the water seal, which can effectively inhibit bacteria and odor, and prevent water splashing.
Voice intelligent control	Through the set instructions, human-machine dialogue can be carried out, and the corresponding functions of the toilet can be turned on by speaking.
No water pressure limit	The product has a built-in water tank and pump pressure system, which is not affected by the amount of external water on the flushing effect.
Mobile phone intelligent control	After connecting to the mobile phone applet via Bluetooth, you can use the mobile phone interface to turn on the corresponding functions of the toilet.
Side buttons	There are multi-function buttons on the side of the product. If the remote control is out of power or malfunctions, the product can still be used.
Colorful knobs	The knob designed on the side of the product has different colors for different functions, making it easy to operate.

❖ Note: Products or configurations of different periods correspond to different functions, please refer to the actual product received.

5. REMOTE CONTROL PARAMETER SETTING INSTRUCTIONS

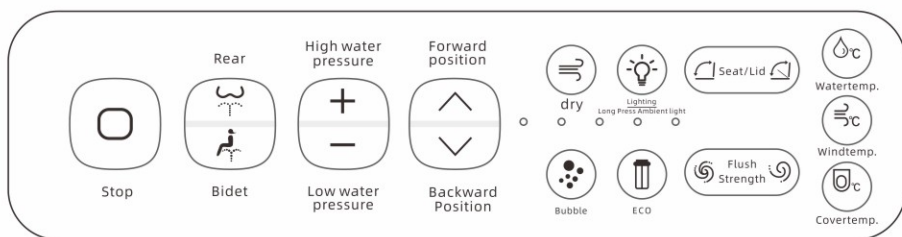

Note: For reference only, please refer to the actual remote control

2. REMOTE CONTROL SETTING INSTRUCTIONS

- Press and hold the "butt wash" button on the remote control for about 5 seconds: you can set the radar switch (automatic flip) function. When the function is turned on, the buzzer beeps once. The buzzer beeps briefly when the function is turned off.
- Press and hold the "Women's Wash" button on the remote control for about 5 seconds: you can set the automatic lid closing and flushing switch function. When the function is turned on, the buzzer beeps once. The buzzer beeps briefly when the function is turned off.
- Press and hold the "Drying" button on the remote control for about 5 seconds: the automatic foam shield switch function can be set. When the function is turned on, the buzzer beeps once. The buzzer beeps briefly when the function is turned off.
- Press and hold the "flush" button on the remote control for about 5 seconds: you can set the automatic flushing switch function when leaving the seat and closing the lid. When the function is turned on, the buzzer beeps once. The buzzer beeps briefly when the function is turned off.
- Press and hold the "water temperature" button on the remote control for about 5 seconds: you can set the wall moisturizing switch function. Beep when function is on. The buzzer beeps briefly when the function is turned off.
- Press and hold the "Air Temperature" button on the remote control: Press and hold the "Air Temperature" button for the first time, the buzzer will sound, and you will enter the radar distance gear setting state. At this time, you can adjust the radar's sensing distance through the "Nozzle Move Forward" and "Nozzle Move Back" keys on the remote control. At the same time, the water temperature is displayed on the display. The area will display the corresponding radar setting gear (range is 1-5). After the adjustment is completed, short press the "Stop" key again to exit the setting state. If the radar gear is not adjusted within 10S, it will automatically exit the setting state after 10S.

Note: Level 1 has the shortest sensing distance, and Level 5 has the farthest sensing distance.

- Press and hold the "Seat Temperature" button on the remote control: Press and hold the "Seat Temperature" button for the first time, the buzzer will sound, and you will enter the flushing time setting state. At this time, you can adjust the flushing time through the "Nozzle Move Forward" or "Nozzle Move Back" keys on the remote control, and at the same time, the water temperature display area on the display screen. The current setting stage will be displayed, and the seat temperature display area will display the flushing time. Press and hold the "seat temperature" key again to switch to the next stage of flushing. Water time setting, the three stages are 1 up flush, 2 down flush, 3 water replenishment, 4 wall moistening. After the setting is completed, long press the "seat temperature" button again. Then exit the setting state.
- Press and hold the "Flip and Turn" button on the remote control for about 5 seconds: the buzzer will sound 3 times continuously, and you can enter the flip-turn opening angle learning function.
 - At this time, the display will display the set virtual angle, with the cover on the left as a circle and the right as a circle. After 5 seconds, it will switch to display the real-time virtual angle;
 - Move the lid with your hand to adjust the digital change, and press the "Position <" key on the remote control to learn the lid opening angle;
 - Use your hand to move the seat ring to adjust the digital change, and press the "Position >" button on the remote control to learn the seat ring opening angle;
 - Press the stop button on the remote control to exit.

Note: After closing the cover and seat and then turning on the power, the system will automatically learn the closing angle without adjustment.

- Press and hold the "Move >" button on the remote control for about 5 seconds: you can set the automatic sterilization switch function. When the function is turned on, the buzzer beeps once. The buzzer beeps briefly when the function is turned off.
- Press and hold the "water pressure -" button on the remote control for about 5 seconds: start the small flush.
- Press and hold the "Position □" key or "Cleaning Position □" on the remote control for about 5 seconds: the automatic infrared physiotherapy switch function can be set. The buzzer beeps once long when the function is turned on and short once when the function is turned off.
- Short press the "Power Saving" button or long press the "Lighting" button for about 5 seconds: you can set the energy saving switch. When it is turned on, the buzzer will sound a long time. The buzzer beeps briefly when the function is turned off.

- Long press the "Power Save" button on the remote control for about 5 seconds or short press the "Bubble" button: you can manually start the foam shield to foam.

- Press and hold the "water pressure +" button or "bubble" button on the remote control for about 5 seconds: you can manually start the nozzle self-cleaning.

- Press and hold the "Stop" button on the remote control for about 5 seconds: you can manually set the system to turn on and off.

PS: When the energy-saving function is turned on, the seat temperature will drop to 30 degrees before sitting down, and the screen will automatically turn off the ambient light knob light if no operation is performed for 5 minutes.

PS: During the power-on process, press the stop button three times in succession, the sound will beep three times, and the factory default settings will be restored.

Before taking a seat, short press the wash button to manually turn on ultraviolet sterilization. While seated, press the bright button to start manual infrared physiotherapy.

Fault indication: Indicate component fault status through the number of flashes of the night light/or the display screen

Water temperature sensor failure	E1 Flash 1 time	Instant thermal module overheat protection	E6 Flash 6 time	Instant hot module strong current failure	E9 Flash 9 time
Seat temperature sensor failure	E2 Flash 2 times	Water heater failure	E7 Flash 7 times	Instant hot module communication failure	E4 Flash 4 times
Drying fan failure	E3 Flash 3 times	Cleaning water shortage problem	E8 Flash 8 times	Ambient temperature sensor failure	E5 Flash 5 times

6、VOICE WAKE-UP WORDS AND CONTROL COMMANDS

This is your toilet assist, wake me up by TT		
Wake word	Command word	Function/Announcement
hey toilet, hey ToyTe, hey TT		yes
volume up		volume up
volume down		volume down
seat open, seat up		seat open
seat close, seat down		seat close
cover open, cover up		cover open
cover close, cover down		cover close
flush water, clean toilet, flush toilet		toilet clean
water stop, flush stop, clean stop		clean stop
dryer on		dryer on
dryer off		dryer off
light on		light on
light off		light off
water temperature up, water hot		water hot
water temperature down, water cold		water cold
dryer temperature up, dryer hot		dryer hot
dryer temperature down, dryer cold		dryer cold
seat hot, seat temperature up		seat hot
seat cold, seat temperature down		seat cold
spray front, spray up		spray up
spray back, spray down		spray down
water more		water more
water less		water less
back clean, bottom clean		back clean
front clean, lady clean		front clean
auto clean		auto clean
child mode, easy mode, simple mode		easy mode
spray clean		spray clean
spray move		spray move
spray stop		spray stop
bubble on, bubble open		bubble on
bubble off, bubble close		bubble off
spa A on, spa A open, spa A start		spa A on
spa A off, spa A close, spa A stop		spa A off
volume on		volume on
volume off		volume off
spa B on, spa B open, spa B start		spa B on
spa B off, spa B close, spa B stop		spa B off

7、PRECAUTIONS

Please read this section carefully. The precautions listed here are important safety-related contents and must be followed. The logo and description are as follows:



warn

Indicates that if this sign is ignored and misuse is performed, serious injury or other accidents may result.



Notice

Indicates that if you ignore this sign and operate incorrectly, personal injury or property damage may occur.

 NOTICE	 Disassembly is prohibited	Never disassemble or modify the product Otherwise it may cause fire, electric shock and damage due to abnormal movement.
	 No splashing of water	Do not pour water on the product body and power plug. otherwise it may cause fire or electric shock.
	 MUST BE OBEYED	This product is an electrical product, so please do not place it in a place that is easily splashed by water or has high humidity. When using it in the bathroom, please install a ventilator fan to maintain good air circulation in the bathroom. Otherwise it may cause fire or electric shock.
		Please set the socket for power wiring as follows. Failure to follow the following requirements may cause a fire. 1. The load of the socket must be greater than 2KW; 2. The socket should be installed more than 0.8m above the ground and as far away from the bathtub or rain shower as possible.
		Do not use loose or faulty sockets as this may cause fire or electric shock.
		The grounding wire of this product has been grounded. Please be sure to connect it to the grounding wire. If it is not grounded, it may cause electric shock in the event of malfunction or leakage. Please make sure the power plug is plugged into the AC 220V/50Hz socket. Otherwise, it may cause machine failure or fire due to heat. The sequence of phase wires, neutral wires and ground wires in the power socket must be correct ground

7. PRECAUTIONS

 MUST BE OBEYED	BE CAREFUL ABOUT LOW TEMPERATURE BURNS - When sitting on the seat for a long time, please adjust the temperature of the seat to normal temperature. - When the following people use it, please adjust the seat temperature to normal temperature. •Children, the elderly and other people who cannot adjust the temperature to a suitable level by themselves; •Sick people, disabled people and other people with limited mobility; •Drowsy people who have taken sleep-inducing drugs (such as sleeping pills, cold medicine, etc.), drank heavily, and were overtired. Make sure the power plug is inserted in place If it is not fully inserted, it may cause electric shock or heat, resulting in a fire. Be sure to disconnect the power supply when cleaning.
	Do not insert or unplug the power plug with wet hands. otherwise it may cause electric shock.  Prohibition of wet hands
 NOTICE	DO NOT CONTINUE TO USE THE PRODUCT IF IT MALFUNCTIONS - In the following situations, please unplug the power plug and close the water inlet angle valve so-called malfunction •Water leaks from water pipes and inside the product •Unusual sounds and strange odors occur •The product is abnormally hot •Cracks appear on the product •The product smokes •The toilet is clogged - If you continue to use it when it is faulty, it may cause fire, electric shock, indoor water seepage and other problems. Do not damage or replace the power cord, power plug and connecting cable without permission Do not scratch, process, place near high temperatures, forcibly bend, twist, stretch, place heavy objects on, or bundle. - If it is still used if it is damaged, it may cause electric shock, short circuit, or fire; - The power cord of this product adopts Y-shaped connection. If the power cord is damaged, it must be replaced by our company or a professional service personnel authorized by our company. Do not use water sources other than tap water - Otherwise it will cause problems such as dermatitis; - If foreign matter is mixed in and accumulated in the piping, it may cause malfunction. Patients with pacemakers should not use this product Otherwise, electromagnetic interference will be generated, resulting in damage to the pacemaker function and life-threatening consequences. Do not put lit cigarettes into the toilet or place hot or flammable objects near the toilet Otherwise it may cause fire.  High temperature prohibited
	This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Unless they have been supervised or instructed in the use of the product by a person responsible for safety. Do not let children play on the seat ring or seat cover, and do not step on or sit on the seat cover. Otherwise, it may cause malfunction and safety accident. 

7、PRECAUTIONS

 PROHIBIT	Do not lean back on the seat cover Otherwise, the seat cover will be damaged. 
	Do not leave the product under strong light or direct exposure to sunlight for a long time. Otherwise, the plastic parts will become discolored and the temperature of the seat ring will be unstable. 
	Do not bend, twist or damage the water supply hose Otherwise, water leakage may occur due to loose connections. When closing the seat cover and seat ring, do not use excessive force, otherwise the product may be damaged.
	Do not use the toilet to flush anything other than excrement and toilet paper Otherwise, the toilet will be clogged, sewage will flow out and indoor water will seep.
	When taking out the filter screen of the angle valve, the angle valve must be closed first, otherwise water leakage will occur. Once the filter screen of the angle valve is taken out, it must be tightened when reinstalling it, otherwise it will cause water leakage.
	When the toilet is clogged, first cut off the power, and then use a commercially available pipe dredge to clear it. If the power is not cut off, the automatic flushing will continue to work, which may cause sewage overflow, indoor water seepage, etc.
	When the room temperature in the bathroom is low (zero degrees Celsius and below), please increase the indoor temperature Otherwise, the water pipes and the internal parts of the product may be damaged due to freezing, resulting in water leakage.
	Do not wipe the product body with dry cloth or toilet paper, otherwise it may cause scratches on the product.
	Do not use it when there is a power or water outage, otherwise the product functions will not be implemented and use will be affected.
	It is strictly prohibited to move the product from the cover, otherwise it may cause mechanical failure.
 NOTICE  MUST BE OBEYED	Do not pour urine on the toilet body and nozzle Failure to do so may cause malfunctions or stains such as pink and brown. 
	During thunder, please unplug the power plug, otherwise it may cause malfunction. 
	When traveling or not using it for a long time, please cut off the water and circuit, otherwise it may cause safety accidents. 

8、COMMON PHENOMENON HANDLING



WARN

Except for maintenance technicians, please do not disassemble, repair, or modify on your own.
(May cause fire or electric shock)

When the product works abnormally, please confirm the following items. If it still cannot be eliminated, please contact our company or the local after-sales service department.

1: BODY

Phenomenon	Confirmation matters	deal with
Can't turn on the machine	Is there a power outage?	Please wait until power is restored
	Is the power plug plugged in properly?	Please insert the power plug into the socket
	Is the power turned off?	Please turn on the power

2: WASH BUTTOCKS, WASH FOR WOMEN

Phenomenon	Confirmation matters	deal with
Cannot spray water	Whether to cut off water	Please wait until the water cutoff is lifted
	Is the angle valve closed?	Please open the angle valve
	Is the nozzle blocked by foreign matter?	Please clean the nozzle
	Is the human body sitting sensor switch in action?	Please adjust your sitting posture
Water temperature is not enough	Is the gear level too low?	Please reset the water temperature
	Whether it is set to "no heating" state	
Water cut off midway	Whether it will automatically stop when the cleaning time is up	Please activate the cleaning function again
	Is the human body sitting sensor switch in action?	Please adjust your sitting posture and restart
low water pressure	Is the water pressure strength at a weak position?	Please reset the water pressure
	Is the filter clogged?	Please clean the water inlet filter part
	Is the water pipe broken?	Restore pipeline status

8、COMMON PHENOMENON HANDLING

3: DRYING FUNCTION

phenomenon	Confirmation items	handle
Low warm air temperature	Is the gear too low	Please reset the air temperature
	Is it set to the "no heating" state	
Warm air stops midway	Is it automatic stop when the drying time is up	Please restart the drying function
	Is there any action of the human seat induction switch	Please adjust your sitting position and restart

4: SEAT HEATING

phenomenon	Confirmation items	handle
Insufficient seat temperature	Is the power-saving function enabled	Exit power-saving function
	Is the gear set too low	Reset the seat ring temperature

5: AUTOMATIC FLUSHING

phenomenon	Confirmation items	handle
Not automatically flushed	Whether to stop water supply	Please wait until the water cut is lifted
	Is the angle valve closed	Please open the angle valve
	Is the angle valve blocked	Please clean the angle valve filter screen
	Is the seating time shorter than 10 seconds	Please sit for more than 10 seconds
Power outage unable to flush water	Is the backup battery connected	Connect the backup battery
	Is the backup battery charged	Replace the backup battery

9、 DAILY MAINTENANCE



WARN

Before cleaning the surface of the product, please make sure to cut off the power supply.
Do not allow water or cleaning agents to flow into the interior of the product or onto the power plug.

- May cause electric shock, short circuit, fire.



Compulsory compliance

1.NOZZLE CLEANING


When powered on and the human body is away from the seat, short press the "wash" button on the remote control to activate the spray cleaning function. This wiping button can also be turned on in a counterclockwise direction. When the function is turned on, the spray rod will extend and be gently wiped with a soft cloth or toothbrush. Finally, press the "stop" button on the remote control to clean.



- Do not press or pull the nozzle forcefully, otherwise it may cause damage or malfunction.

2. CUT OFF THE POWER SUPPLY


Be sure to cut off the power before cleaning the product body.

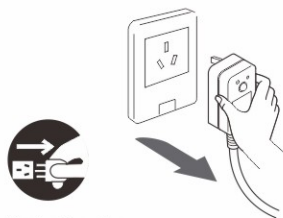

Unplug the plug


3. WIPE WITH A SOFT CLOTH SOAKED IN WATER AND WRUNG DRY

Difficult to clean dirt can be wiped with diluted neutral detergent. Do not use acidic or alkaline detergents, detergents, gasoline diluents, or other cleaning products.

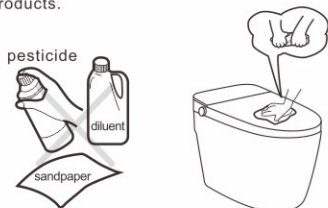

4. CLEAN THE FILTER SCREEN

When users feel that the water flow is less than normal during use, they should first close the angle valve, then dismantle the filter screen in the angle valve (can be twisted with a one yuan coin), and clean the filter screen under the faucet with a brush. During the cleaning process, the filter screen must be thoroughly separated from the water supply hose.

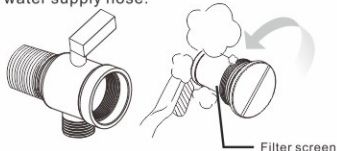

Thank you for choosing our company's smart toilet.
Please carefully read this manual and keep it safe
for proper use. Before use, be sure to read it carefully.
※ Note: This manual contains after-sales service guidelines