

ONVESSI

Noxa N1

Smart Interactive Massager

User Manual



Scan the QR code for more information

Safety Tips

- This product must not be washed or soaked directly in water. After use, please remove the telescopic silicone sleeve for cleaning. Do not wash or soak the device itself, as this may cause circuit damage or malfunction.
- This product is for personal use only and is not intended for use by other institutions or in public places.
- This product is designed for private, personal use only and should not be used for any other purposes.
- Do not modify, disassemble, or repair this product yourself.
- Avoid dropping or striking the product. Do not use the product if it is damaged.
- Use a sufficient amount of lubricant when using the product to avoid discomfort.
- The product must not be exposed to moisture or water. Warning: Do not use this device near water-filled bathtubs, showers, washbasins, or other containers.
- Do not pull on the power cord or use it to drag the product.
- Always use original Onvessi accessories compatible with this model.
- Do not place the product or its capacitor near high temperatures or heating devices such as sunlight, microwaves, heaters, or ovens. Overheating the capacitor may cause an explosion.
- Use this product within an ambient temperature range of 5°C to 35°C and store the product and its accessories within a temperature range of 5°C to 45°C.
- Store the product in a clean, dry place, away from direct sunlight, and out of reach of children.



For your health and well-being,
use this product in moderation.


Package Contents

- ① masturbator main unit x1
- ② USB-C charging cable x1
- ③ Vacuum Suction Cup x1
- ④ Cleaning Brush x1

Product Details


Product Model	Noxa N1
Materials	Silicone + ABS + TPE
Dimensions	94mm × 94mm × 260mm
Net Weight	953±10g (charging cable excluded)
Vibration Modes	6 modes
Suction Modes	4 modes
Onvessi App	Download from Onvessi website
Working Time	60—80 mins
Charging Time	100—140 mins
Noise Level	<60 dB

Onvessi App

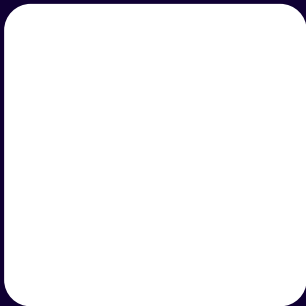

Scan the QR code to visit the Onvessi official website. Download the app based on your Android or Apple device. After successful registration, you can connect to all products in the series and enjoy more diverse features and synchronized interactive functions.

Instructions for Use

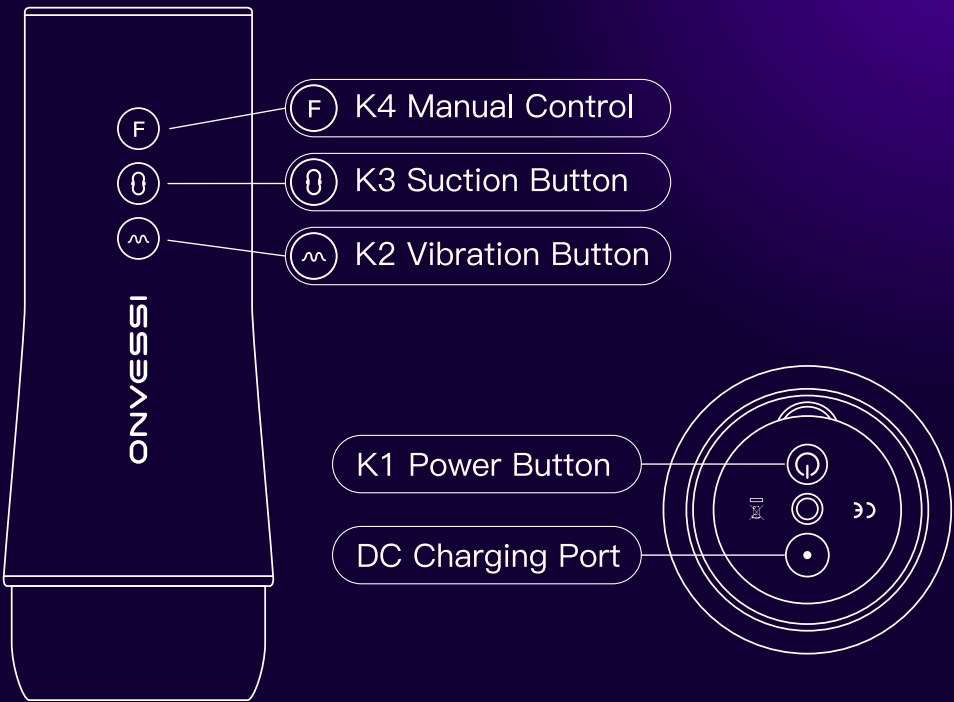


Button	Operation	Function
 K1 Power Button	Long press for 1sec (when powered off)	Power on&enter standby mode
	Long press for 1sec (when powered on)	Power off
	Auto power-off after 10 mins idle	Auto power-off
 K2 Vibration Button	Short press	Turn on / cycle through 6 vibration levels
	Long press for 1sec during vibration	Turn off vibration
 K3 Suction Button	Short press	Turn on suction with 4 modes & 4 intensity levels
	Long press to turn off suction	
 K3 Manual Suction	Hold to pump, release to deflate	Air suction & deflation adjustment

Indicator Light Description

- Charging: indicators 1–2–3 sequential breathing; fully charged: all solid on.
- Low Battery Protection: The device automatically powers off when its operating voltage drops below 3V. At low battery level, the bottom indicator glows red, and all LEDs flash 6 times before shutdown. Charging is required to reactivate the device for restart — even a minimal charge is sufficient.


Product Description

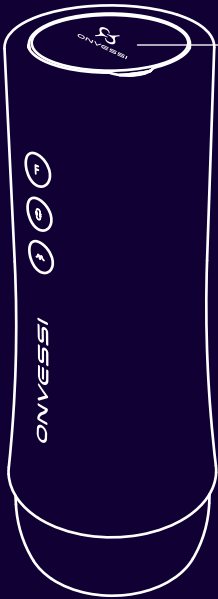


Private Unlock Key




Step 1: Take out the Private Unlock Key and place it onto the cap.

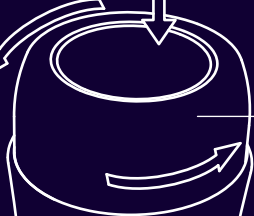

Step 2: Rotate the cap to open it for product use.

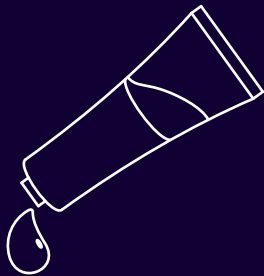

Use with sufficient lubricant.

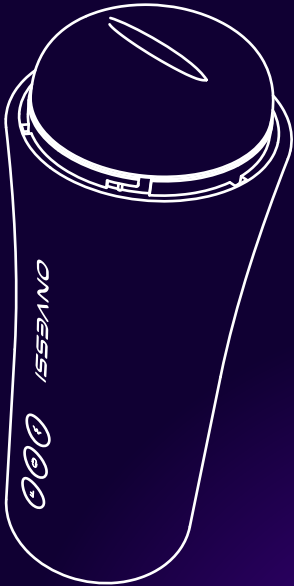

Precautions

First-time Use and Charging

- Before first use, fully charge the product.
- Correctly insert the configured USB-C charging cable into the charging port of the product for charging. During normal charging, the battery indicator light on the product screen will flash. When the battery is fully charged, the indicator light will stay on.
- Clean the product properly before use. Use warm water or a designated cleaner to wipe the parts that contact the body, then gently dry with a soft towel.

Applying Lubricant

- Apply a sufficient amount of lubricant on the soft silicone sleeve or the body contact areas for a comfortable and healthy experience. This product is only compatible with water-based, water-soluble lubricants.

Use Caution

- This product is not suitable for use on swollen or inflamed skin areas to avoid causing harm or exacerbating discomfort.

Cleaning


- After each use, remove the soft sleeve and wash it thoroughly with warm water and antibacterial soap, rinse with clean water, and gently dry with a towel. Do not immerse the entire device in water for cleaning.

Safety Precautions

- Do not operate the device while it is charging. Ensure the device is turned off during charging. Avoid charging near water sources.



Do not rinse the entire unit, as this may cause device damage.

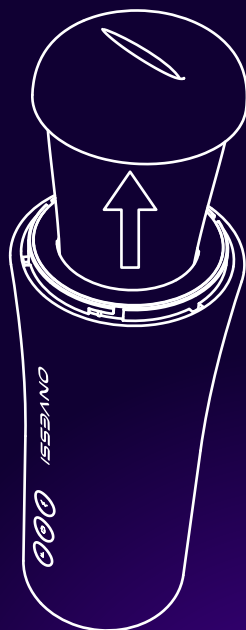

Remove the soft inner liner for cleaning.

FCC WARNING

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.
- The device has been evaluated to meet general RF exposure requirements. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

